

BIMM4 SERIES





M MODEL#45

#40 FLIP UP REAR SIGHT
WILL FIT SPECIAL 1700MAH 12V BATTERY
REINFORCED GEARBOX WITH 7MM BEARING
METAL HOP-UP CHAMBER SET
TACTICAL 3 POINT SLING




Always read through this manual before operation.

PARTS

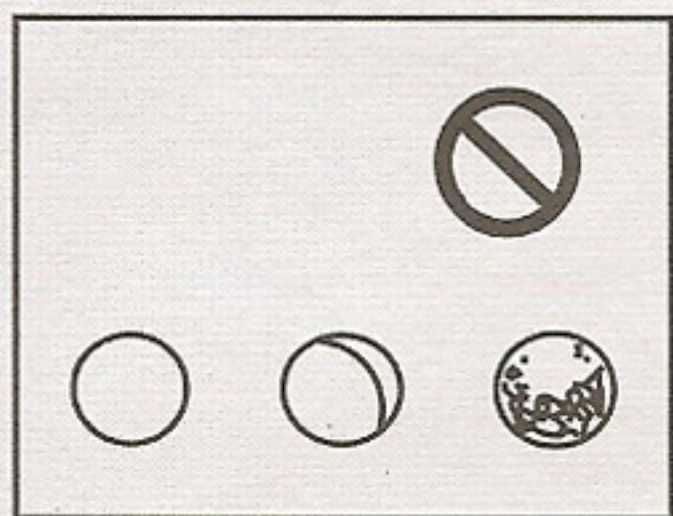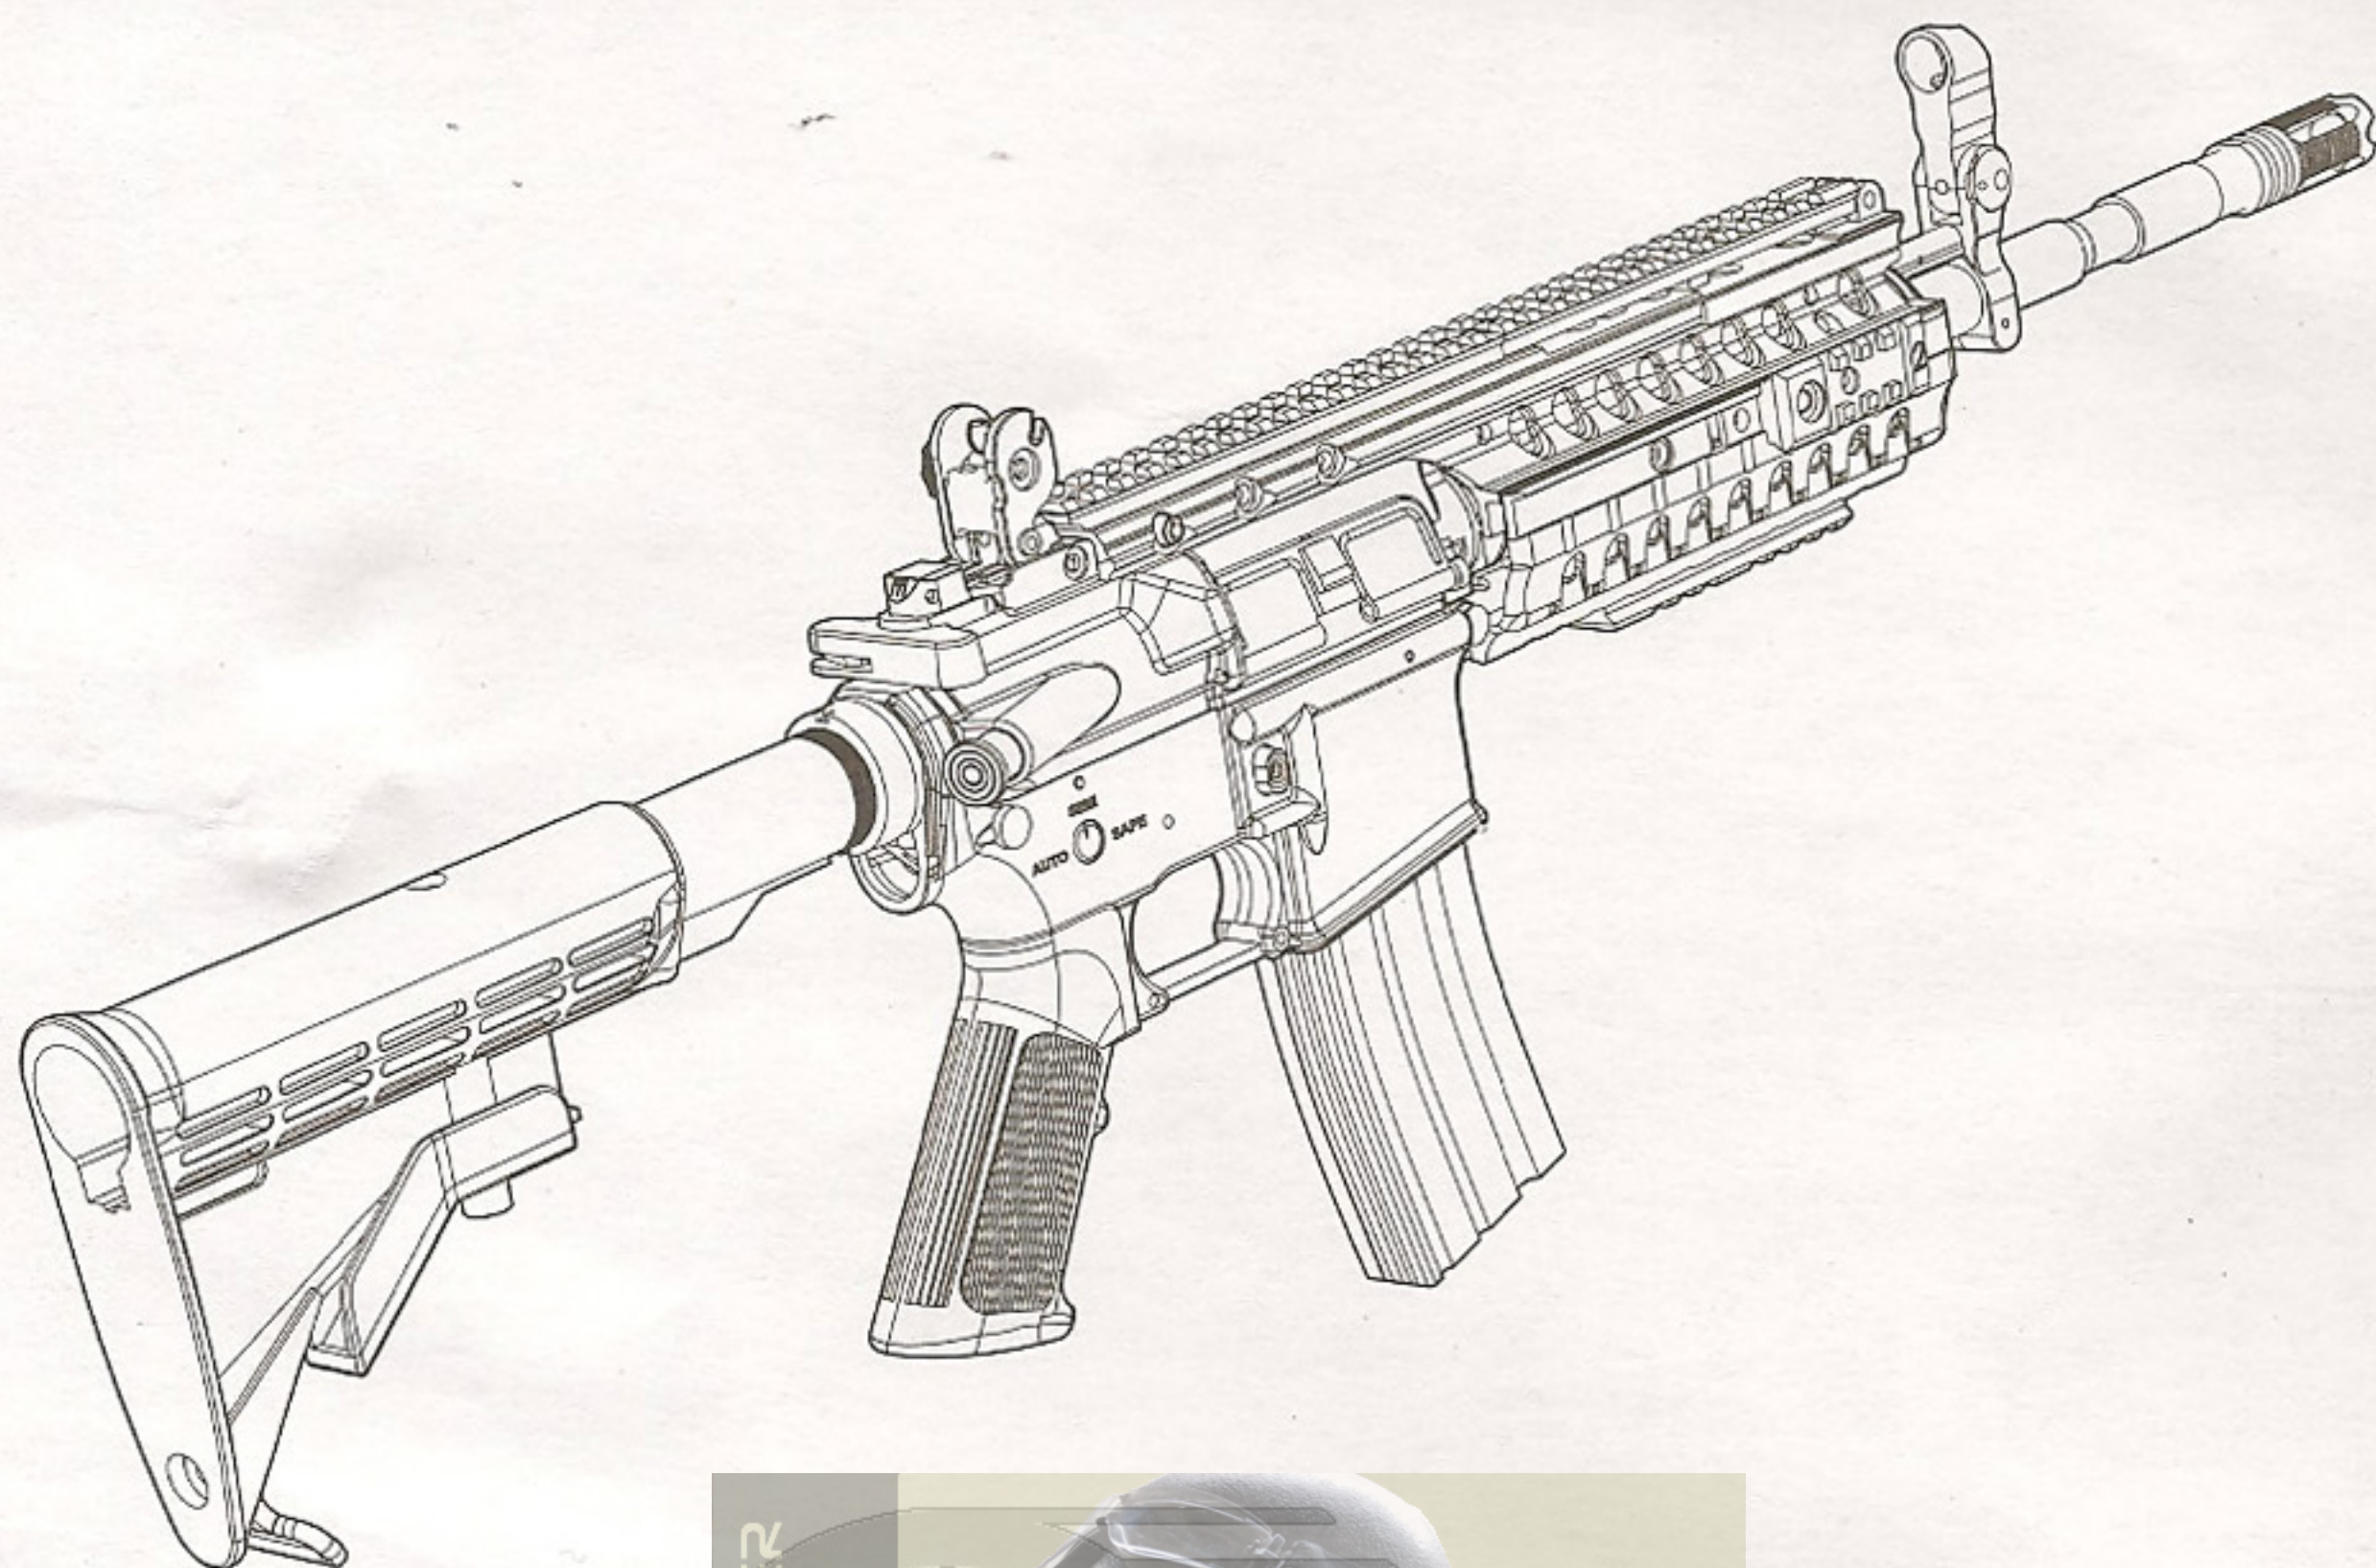

Always use precision BB Bullets for this air gun. Never use any used BB bullets.

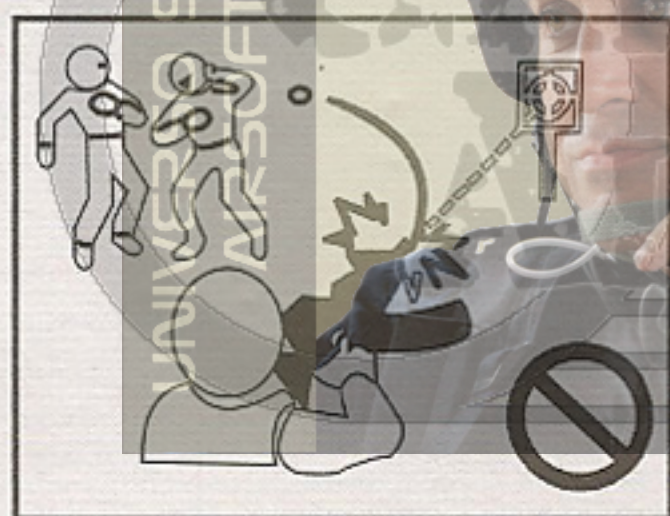

Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.




Pulling the trigger with the safety lever being set to SAFE may damage the gun



Don't disassemble beyond what is necessary. Or the gun may be damaged.




Never aim or shoot a person or animal as the target. Always set the selector on SAFE position except when you are ready to shoot a target.

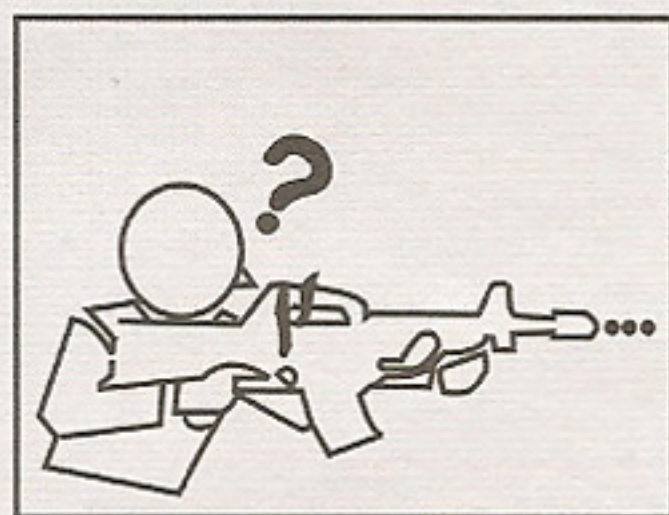


Smell may be generated from the motor for a while when a new air gun is operated, this is the normal operation of the gun.



Don't look directly into the gun barrel to avoid accidental discharge of BB.

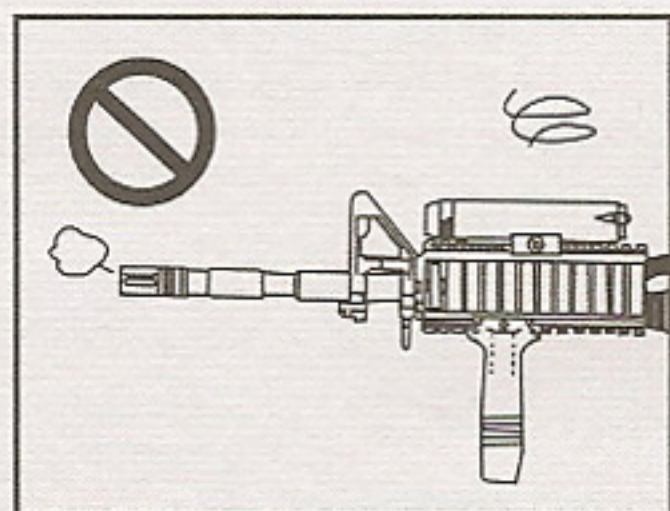


When bullets are clogged, immediately stop operation. Remove clogged bullets and then restart operation of the air gun.

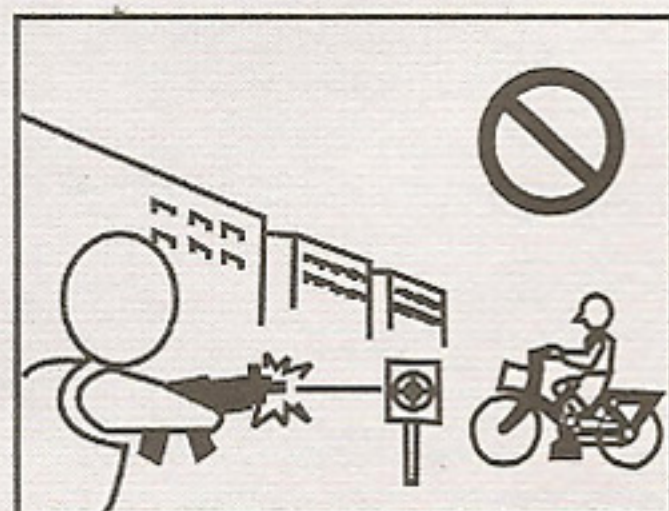


Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

WARNING

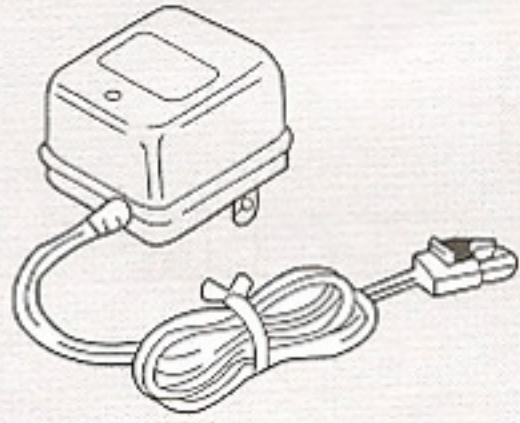

Special charger

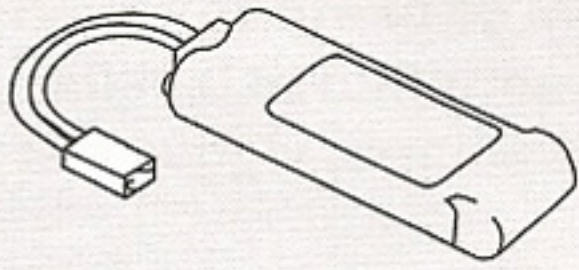

Rechargeable battery



TACTICAL 3 POINT SLING




Cleaning Rod

CAUTION


The magazine is done under the condition that it is removed. It turns so that the dent of 1a lock pin may be behind suitable, and a lock is canceled, and a hand guard is opened.

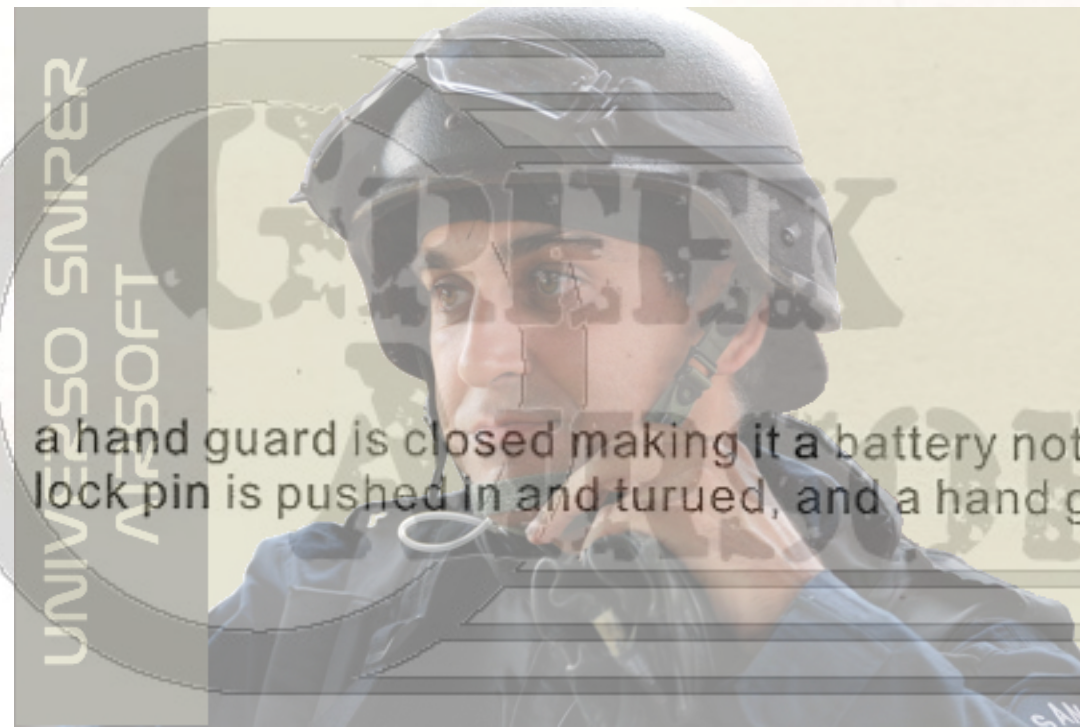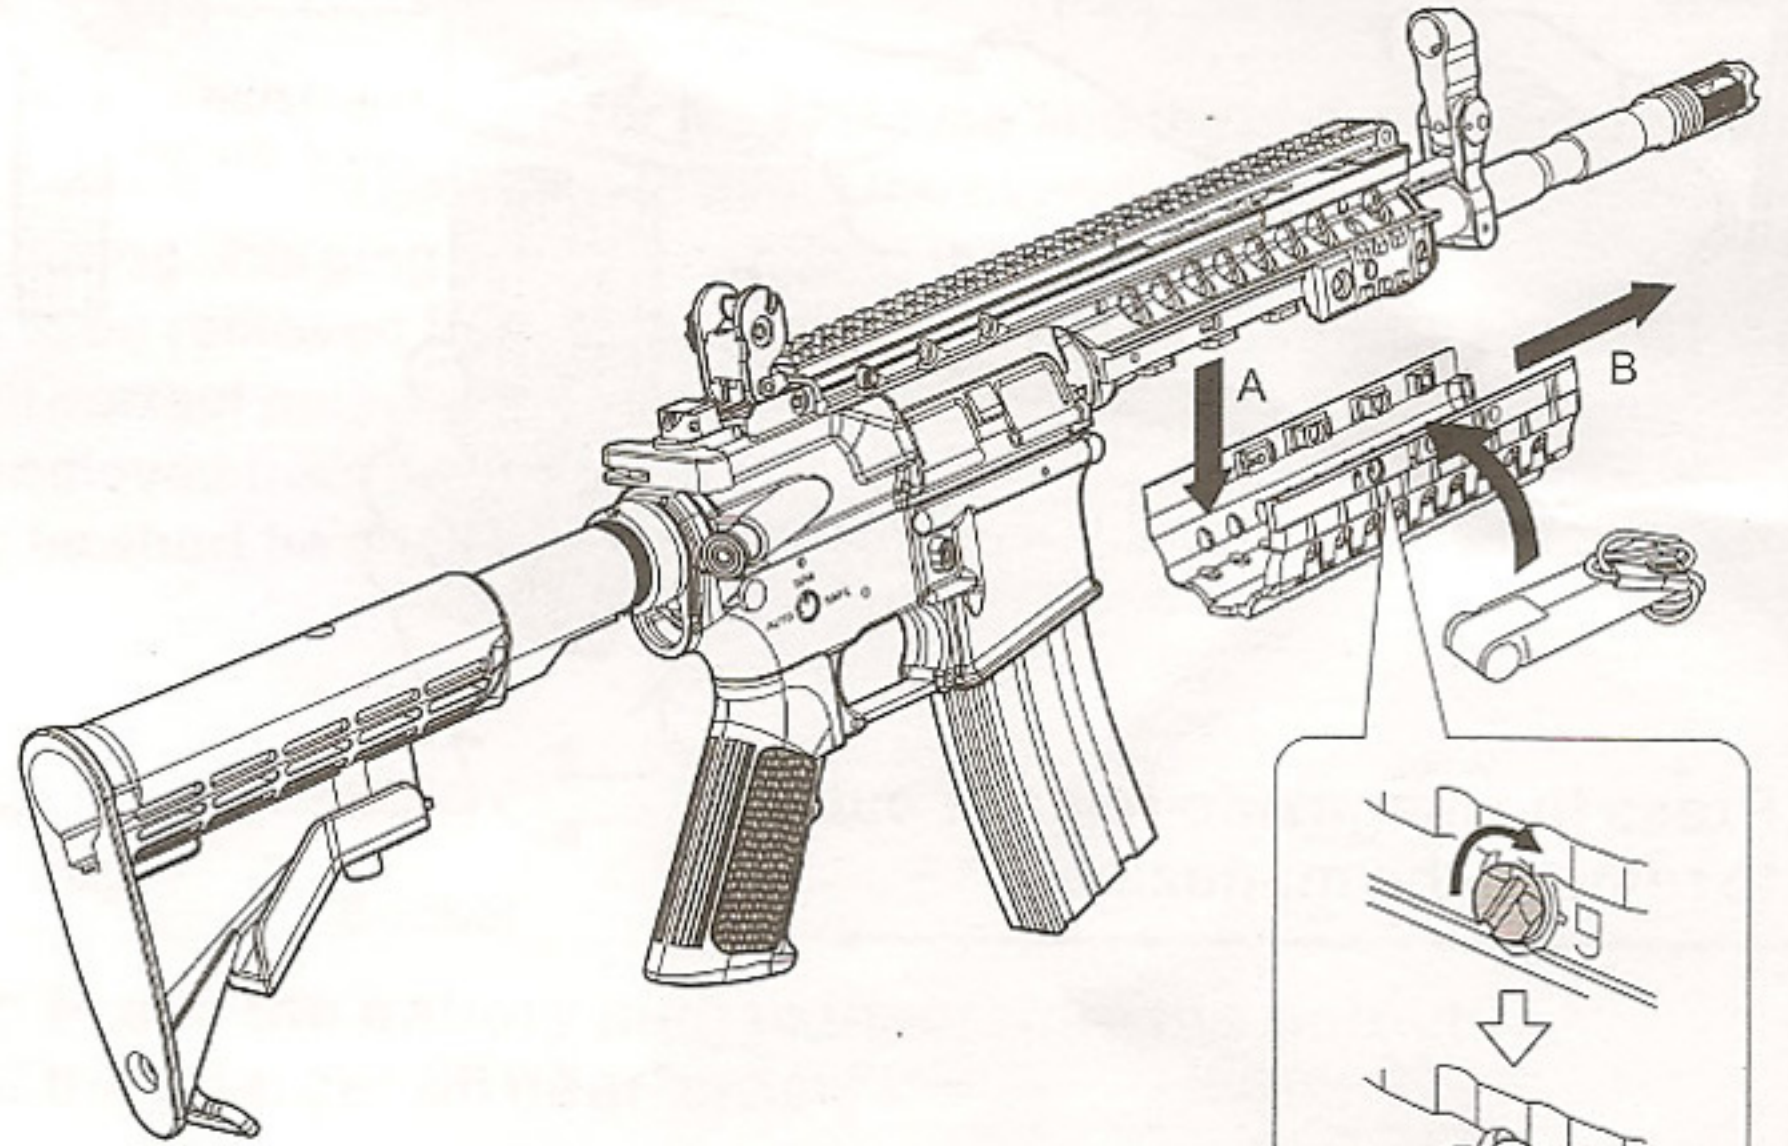


a hand guard is closed making it a battery not shift from the regular position, a lock pin is pushed in and turned, and a hand guard is locked.

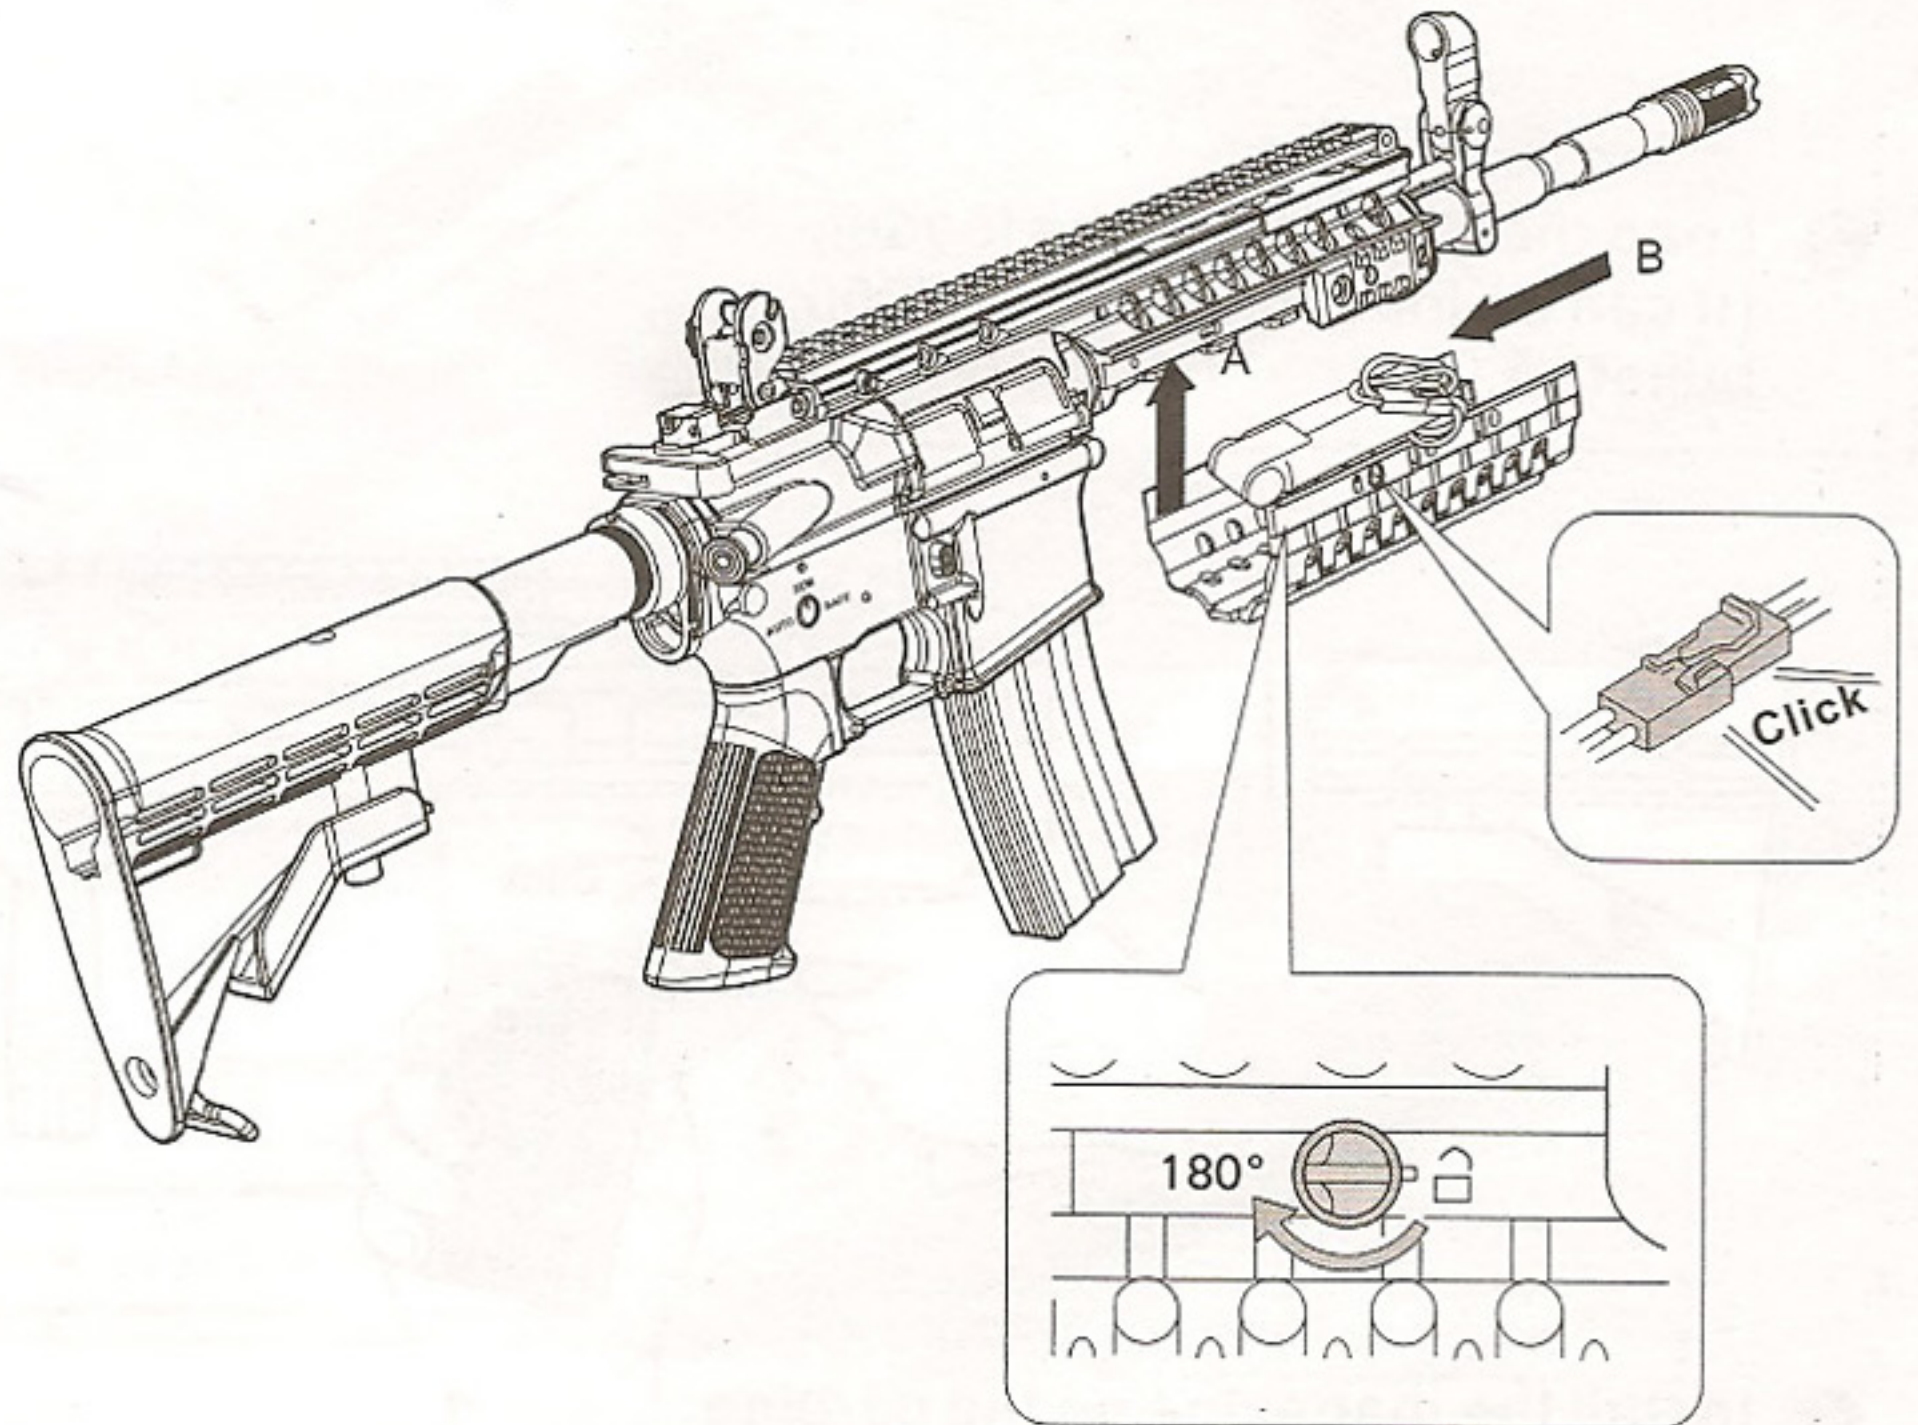


SETTING THE MAGAZINE

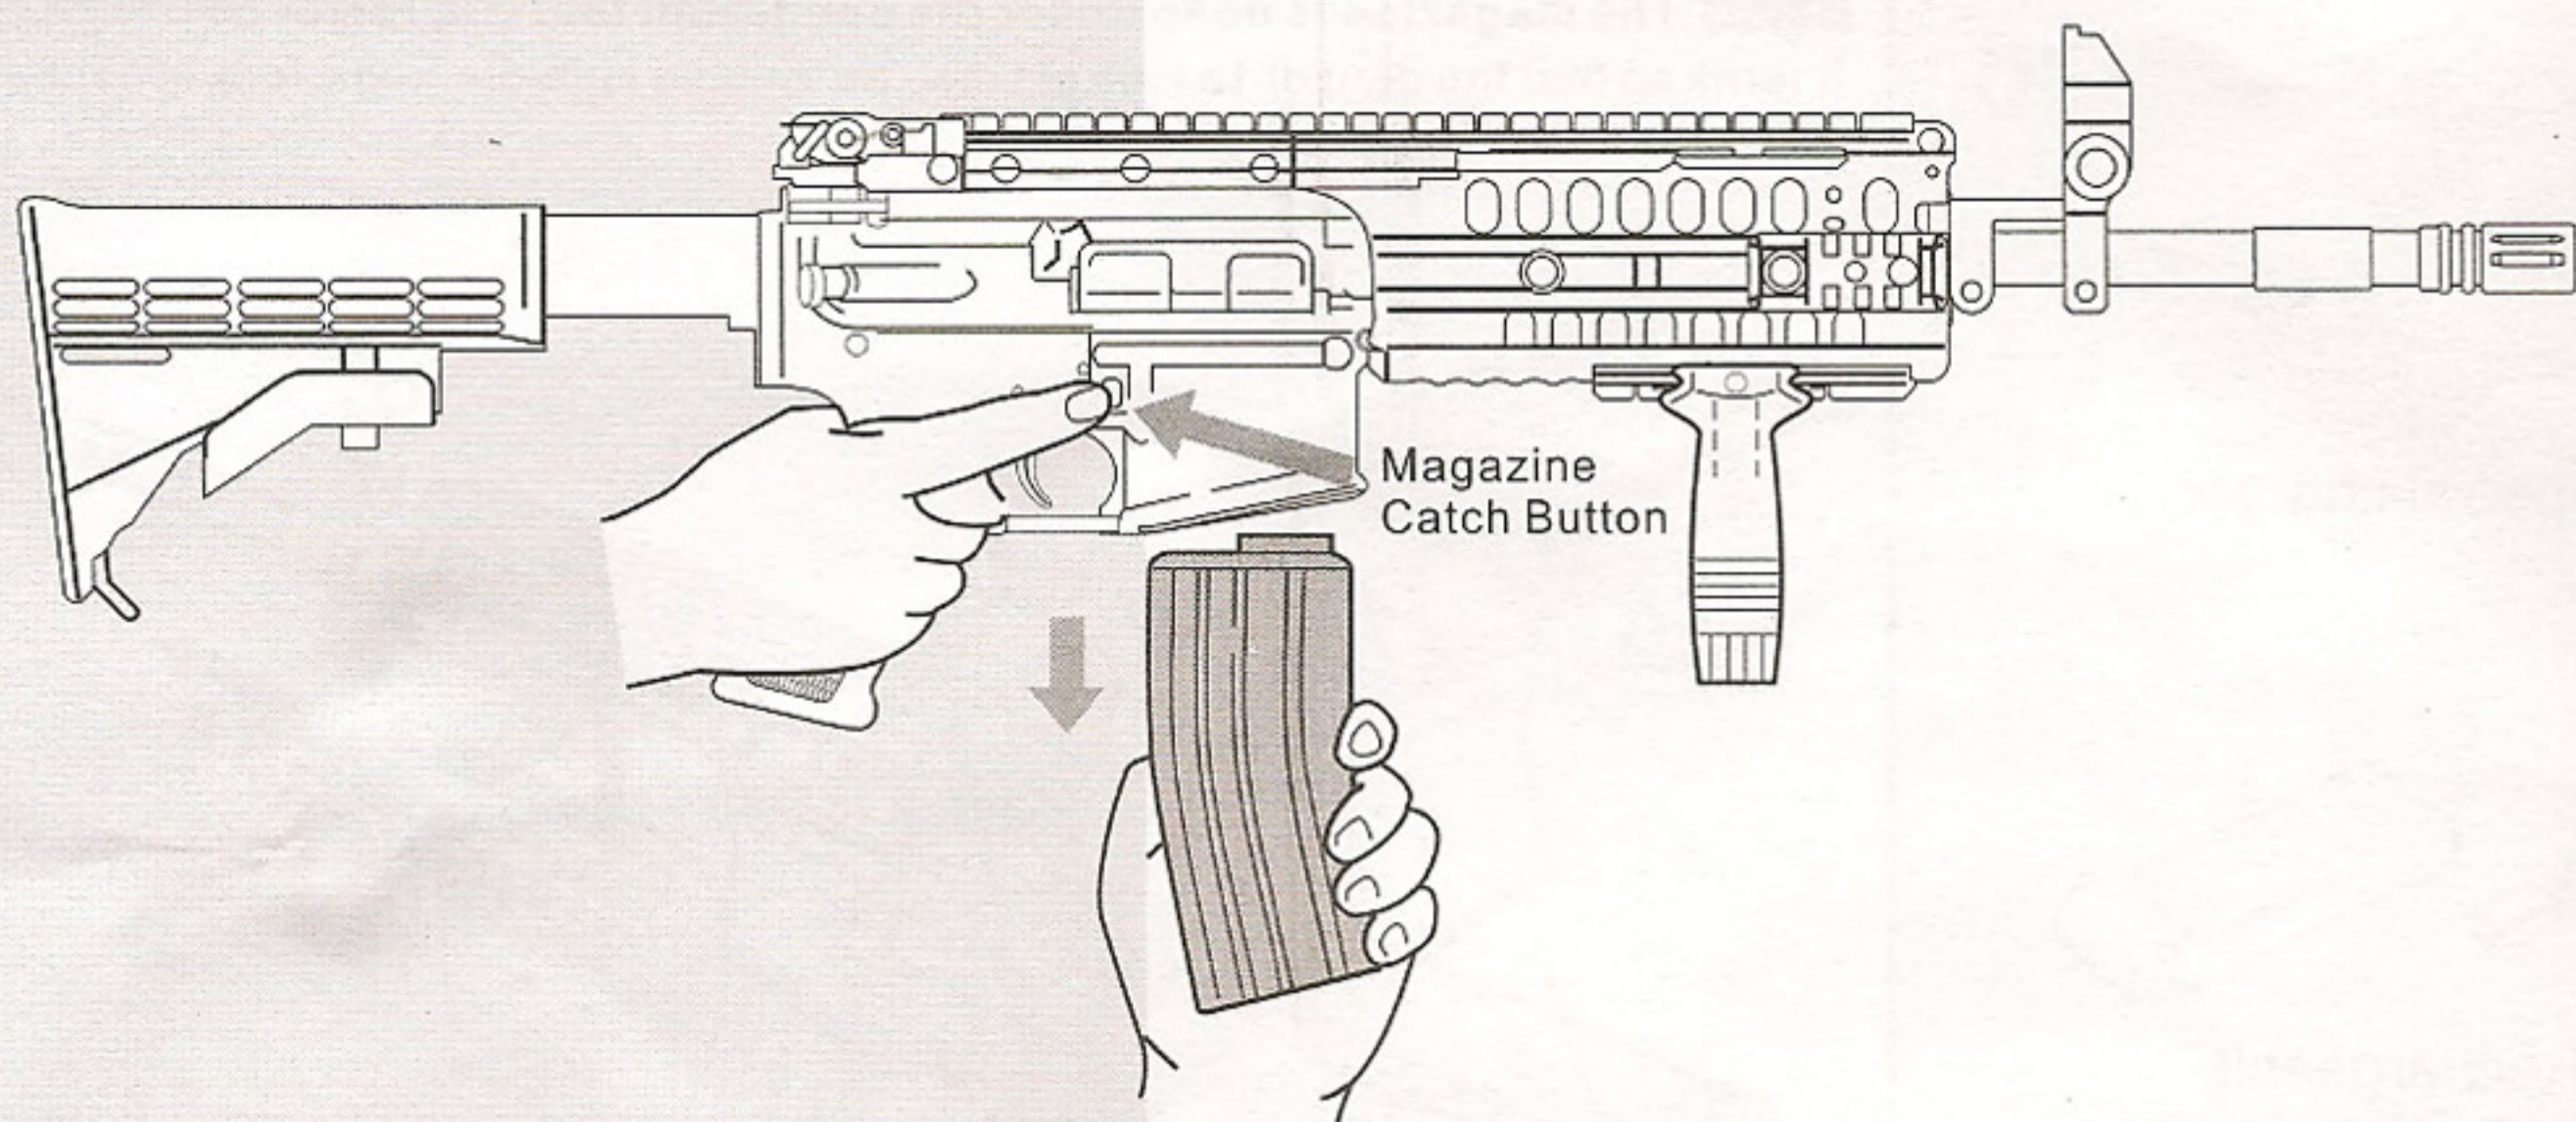

- 1 Press the magazine release button to remove the magazine

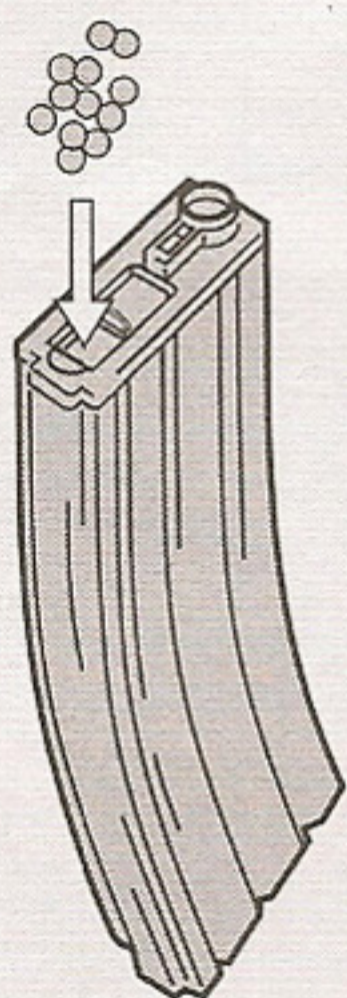


- 2 Load the Bullets into the loader. (It can be loaded with about 300 bullets.)

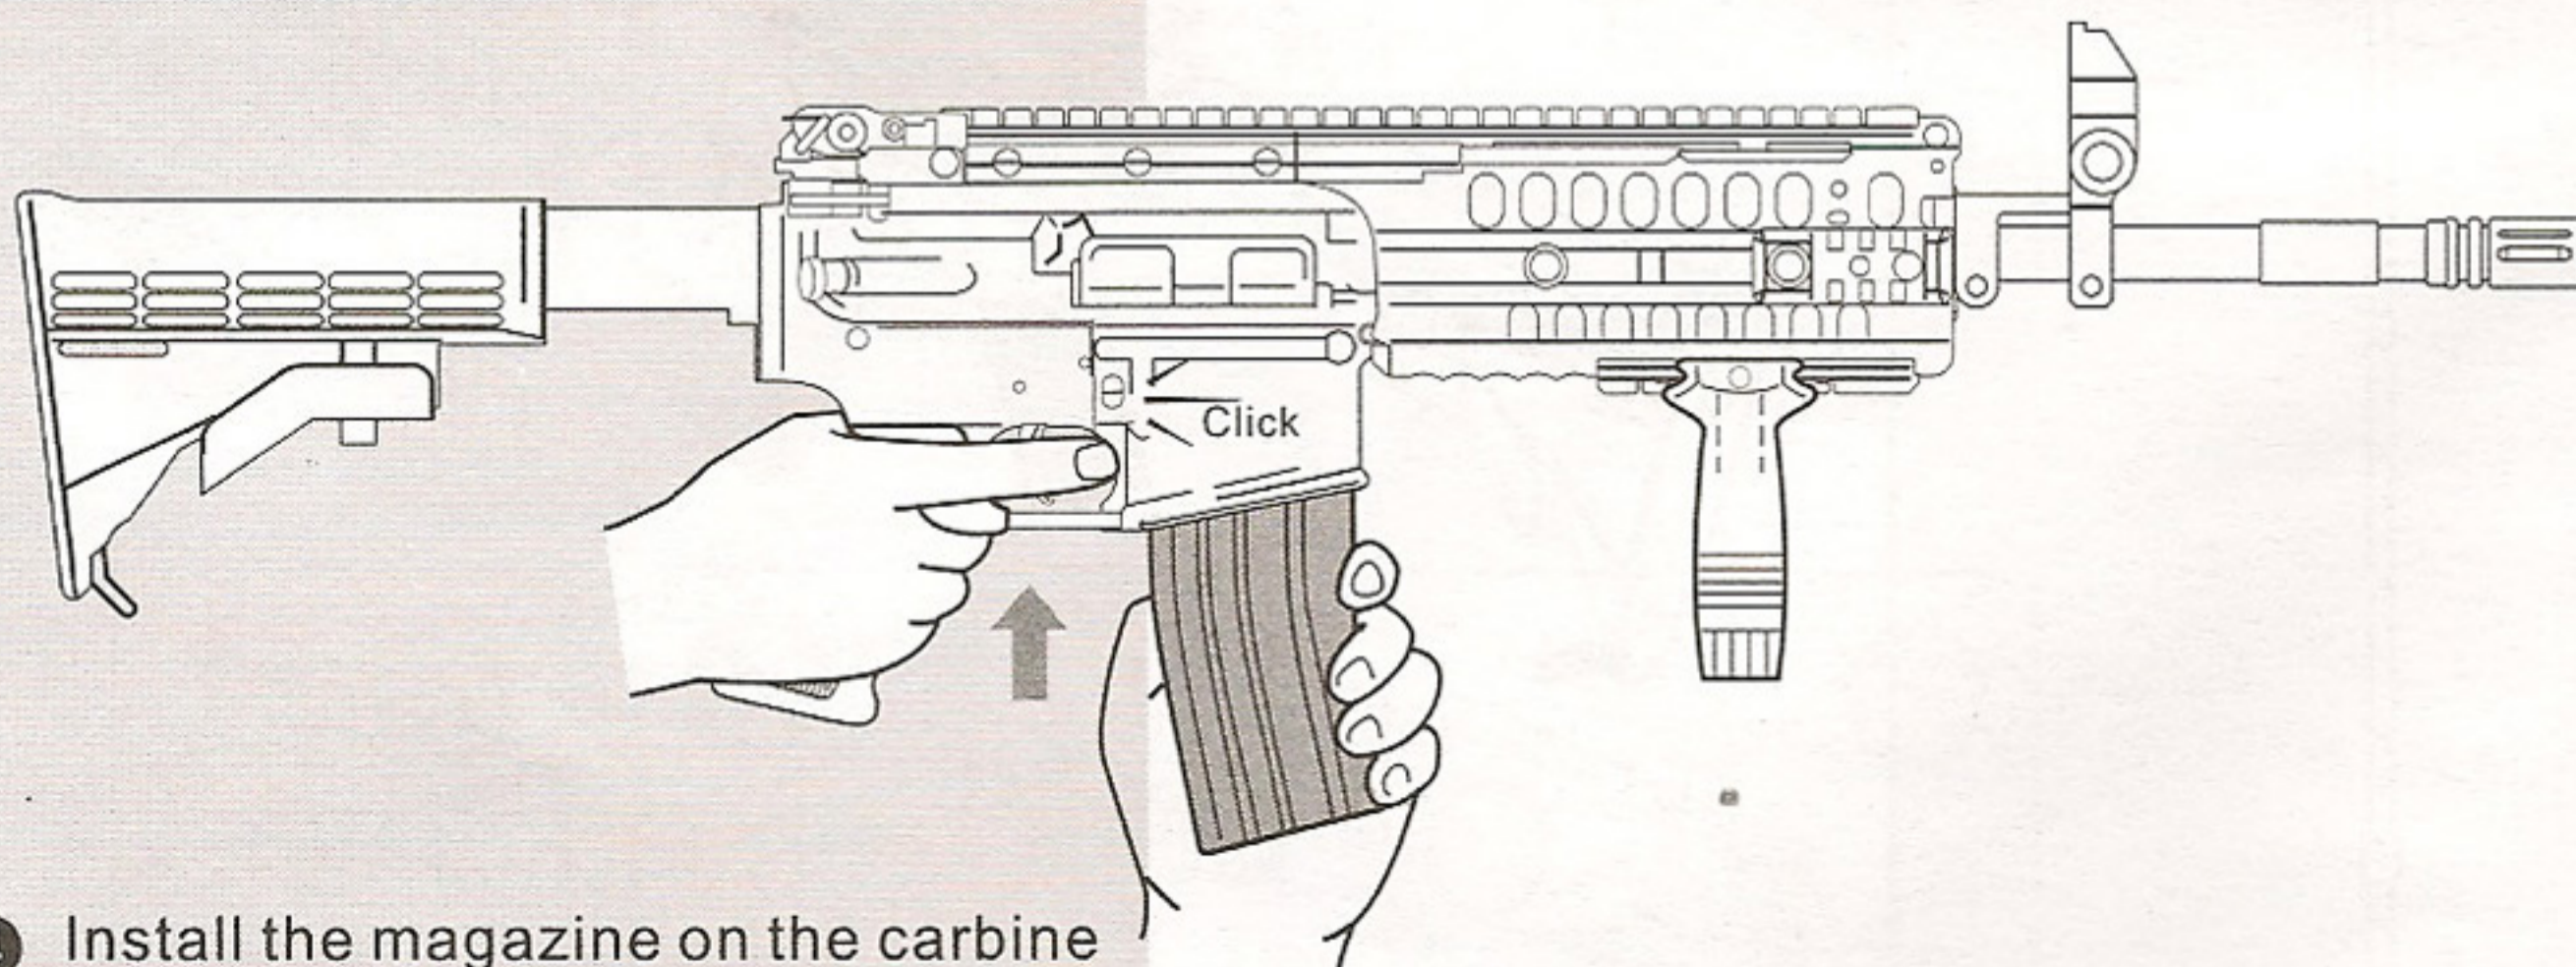


- 4 Install the magazine on the carbine till you hear the sound of "pata"

CHARGE THE POWERFUL BATTERY

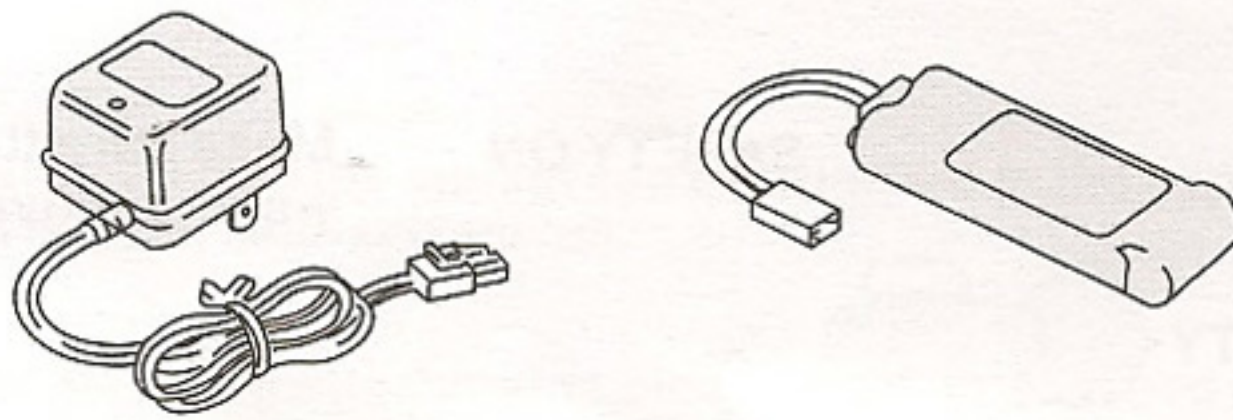

- Discharge the battery completely before charging it for the first time and the charging time is 12 hours.
- Battery charging time is about 7-8 hours, do not extra to avoid the over-charge.
- The temperature can't over 45 during charging or will damage to the battery.
- Rechargeable batteries air not to be removed from the toy before being recharged(if remove).
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short be short circuited.



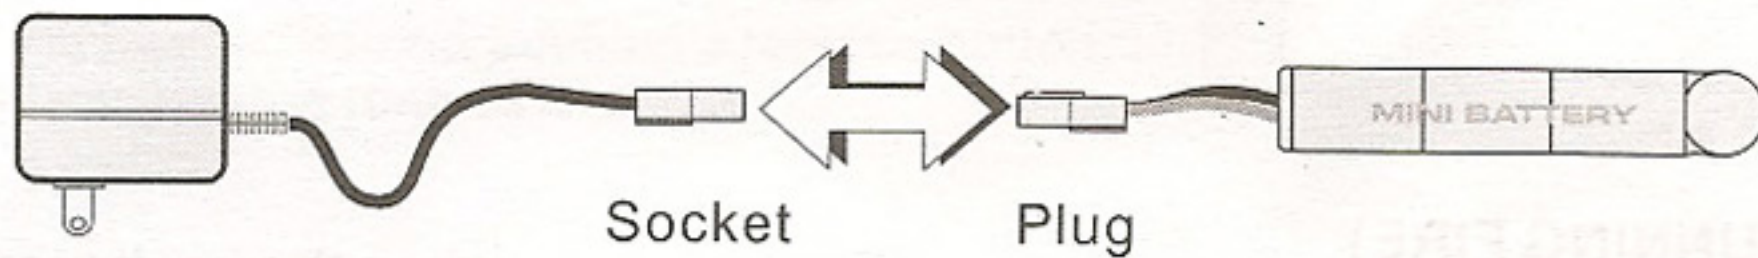


Connect: Press the battery plug to insert into the output socket of the charger till hear "crack".

MAINTENANCE WHEN BULLET SPEED BECOMES LOW REMOVING CLOGGED BULLET




Cut the cotton to the size shown.
Adjust the length accordingly so that it can be.

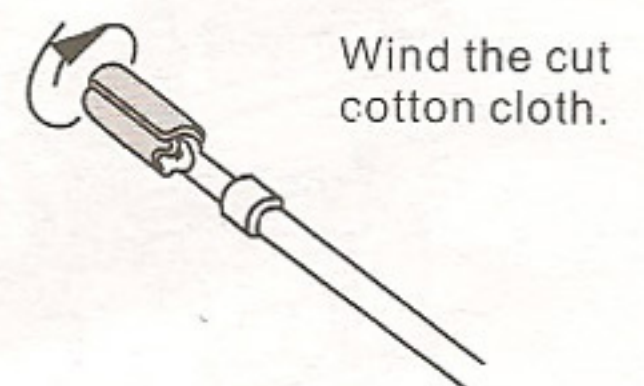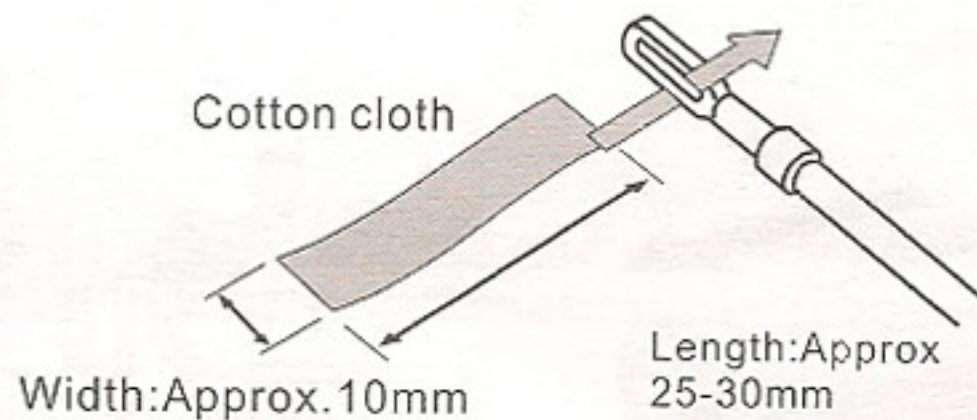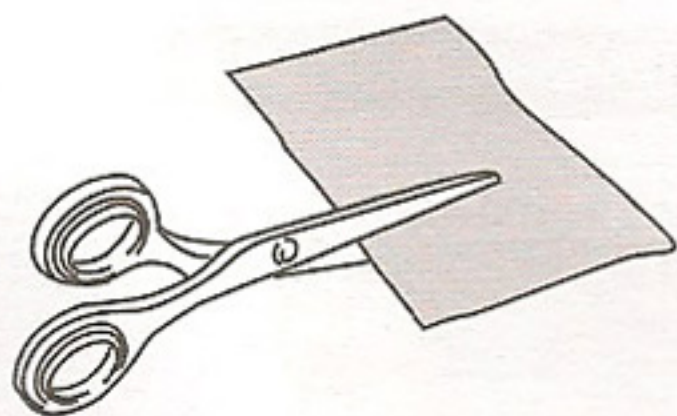

Hold at the leading end of the rod and insert the rod into the barrel while turning the rod.




Inserting the rod will be difficult if you hold rod at the end.

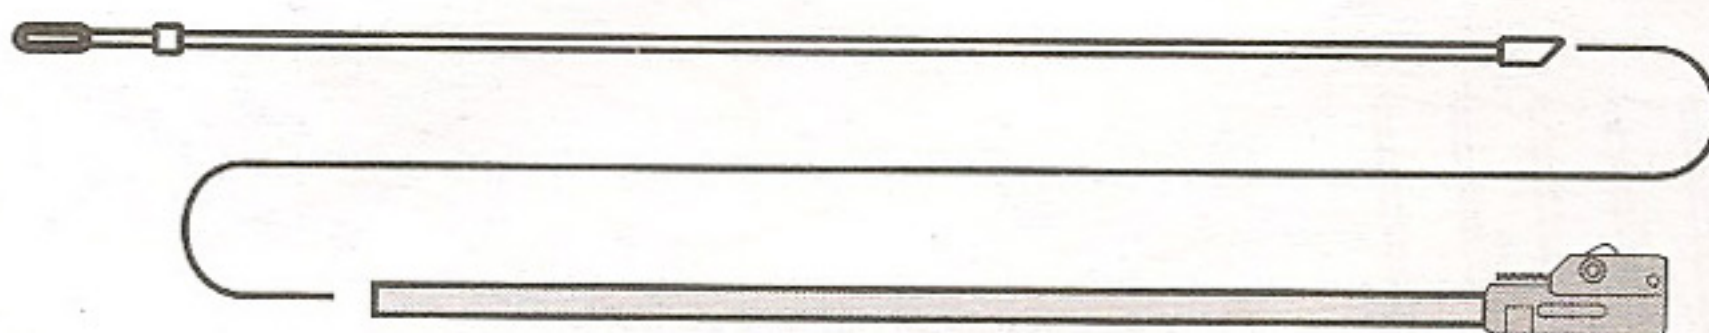

Insert the cleaning rod from the lead edge of the barrel.

Make sure to clean the barrel chamber wherever bullets are removed

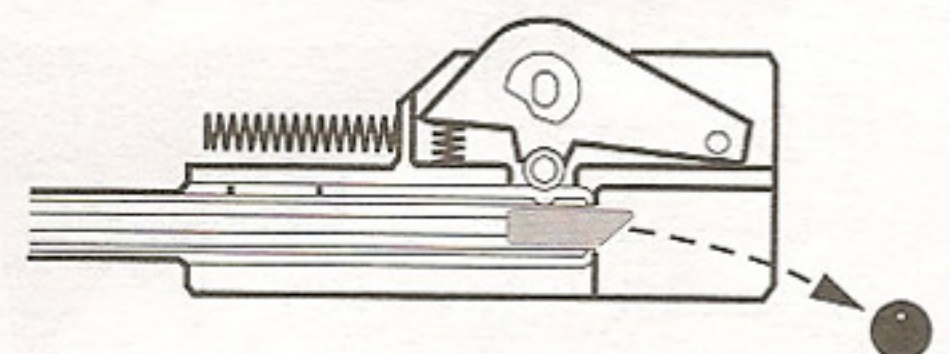

Be careful so that the angled part of the cleaning rod faces down, and remove clogged bullets

SELECTOR LEVER AND SAFETY SETTING


SAFETY SETTING



SAFETY ON

Make sure the knob for choosing shoot ways is moved to "SAFE" place.

SEMI(SINGLE-FIRE)

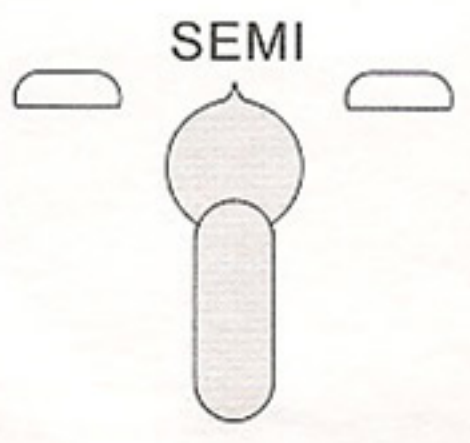

SAFETY OFF

When the knob moves to this place, you can only shoot one bullet each time.

AUTO(A RUNNING FIRE)





SAFETY OFF

when the knob moves to this place, you just buckle the trigger, and the bullets will be shot continuously.


RETRACTABLE STOCK

Enhanced butt STOCK

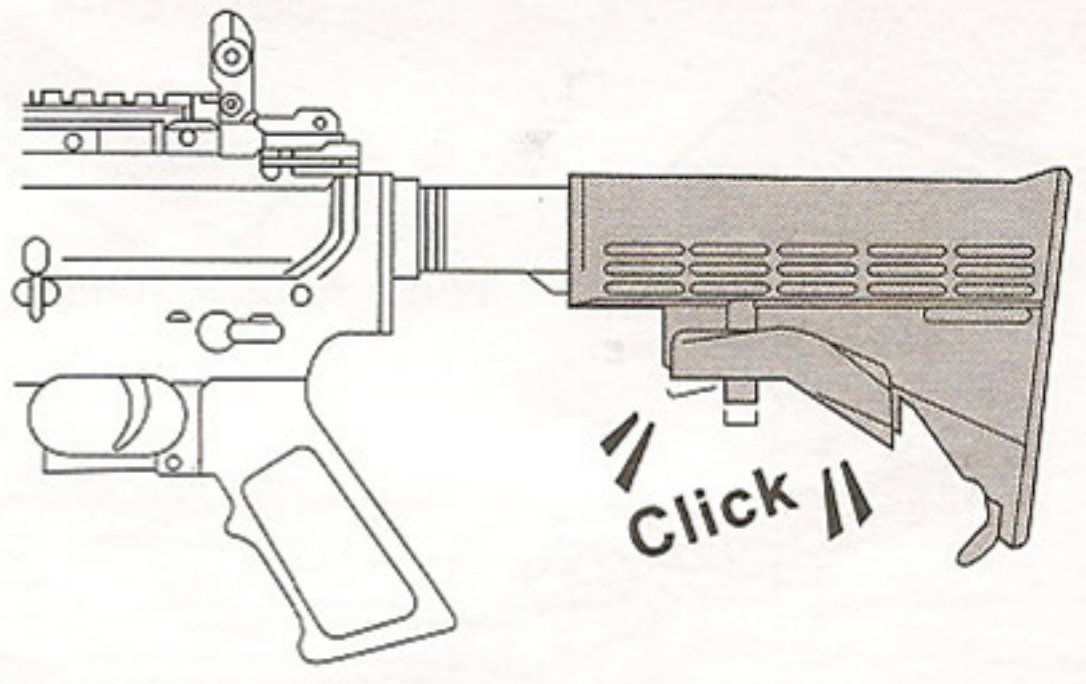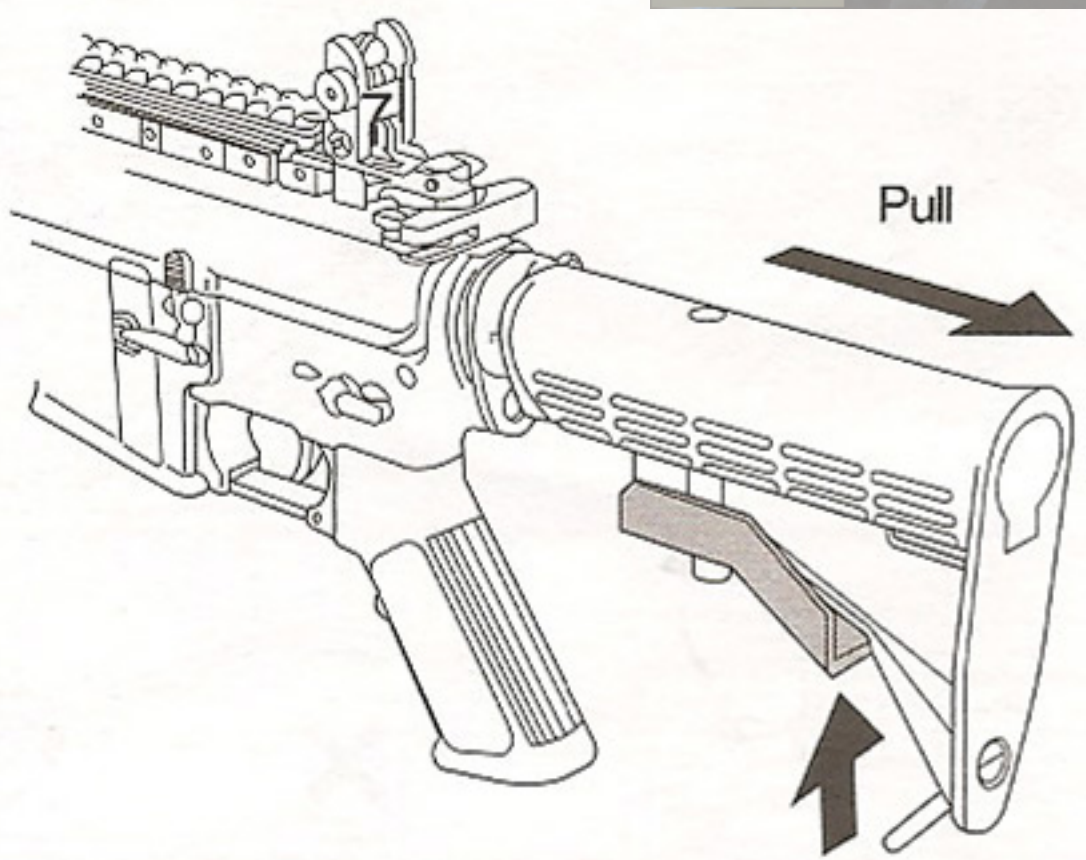

Push the release lever to unlock

The stock will stop at the first position(690m/m)if it is pulled without pushing in the release lever

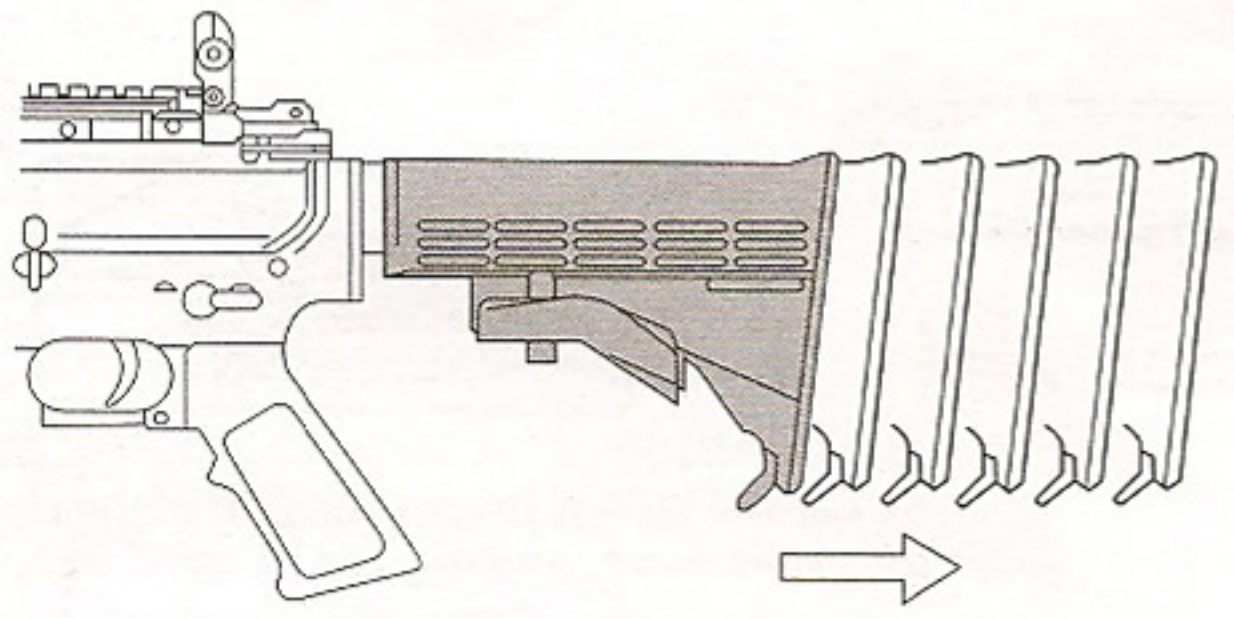

- Adjust length of 6 position.
- ✳ Adjust to the most comfortable position.

Front/rear sight and rail system

- Various part for 20 mm rail on the market can be attached to the upper-system rail under-system rail and side-system rail.
- Before mounting or adjusting attachments, please read an attached manual thoroughly.

When equipping an upper system rail with an option scope etc., A front sight and a rear sight are contained and used.


Front-up Front sight

A front sight base is toppled behind, pushing a release button. When rise, a front site base is rose as it is.




Flip-up rear sight

A hook is caused and a flip-up base is toppled, and a hook is hooked on a slot and it fixes. When rising, if a hook is caused, it will rise automatically by rebounding of a flip rise base spring.

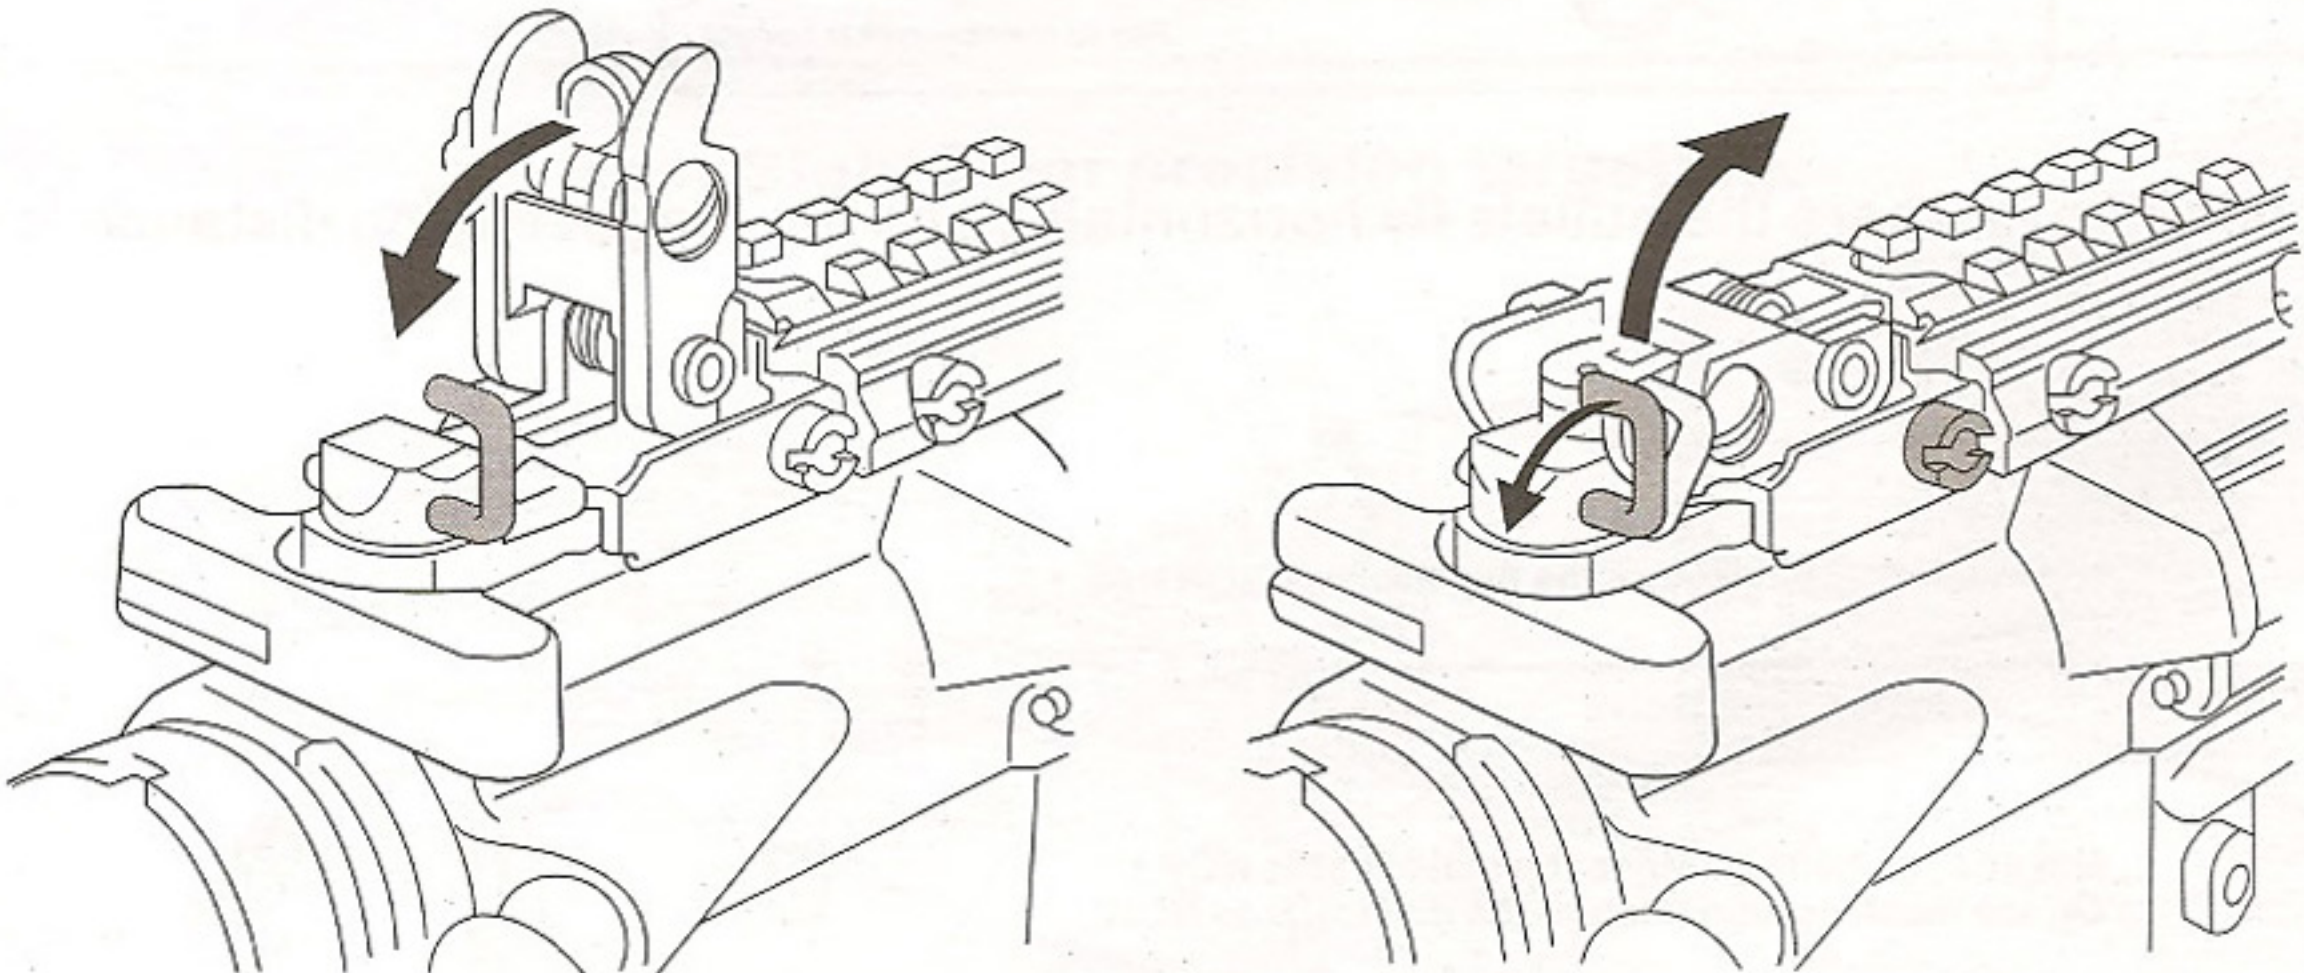

SETTING THE HOPUP


Pulling the charging handle will expose the hopup adjustment dial in part cover.

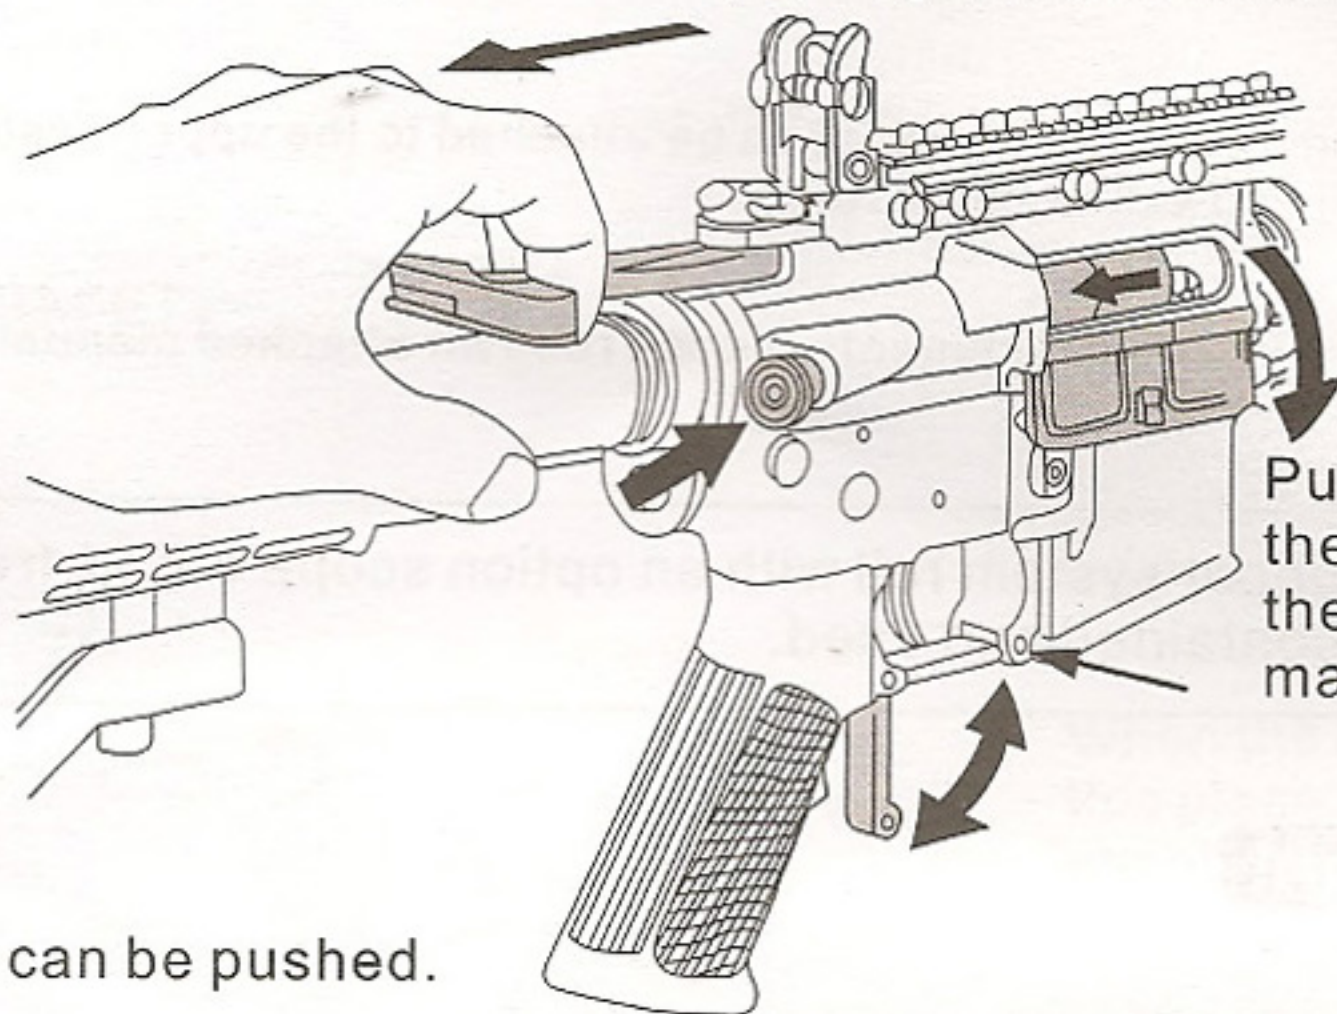

Pulling the charging handle opens the port cover. the port cover must be closed manually.


Forward assist knob can be pushed.

Trigger guard can be opened and closed. (used when you wear gloves in winter.)
Open with a pin like object.

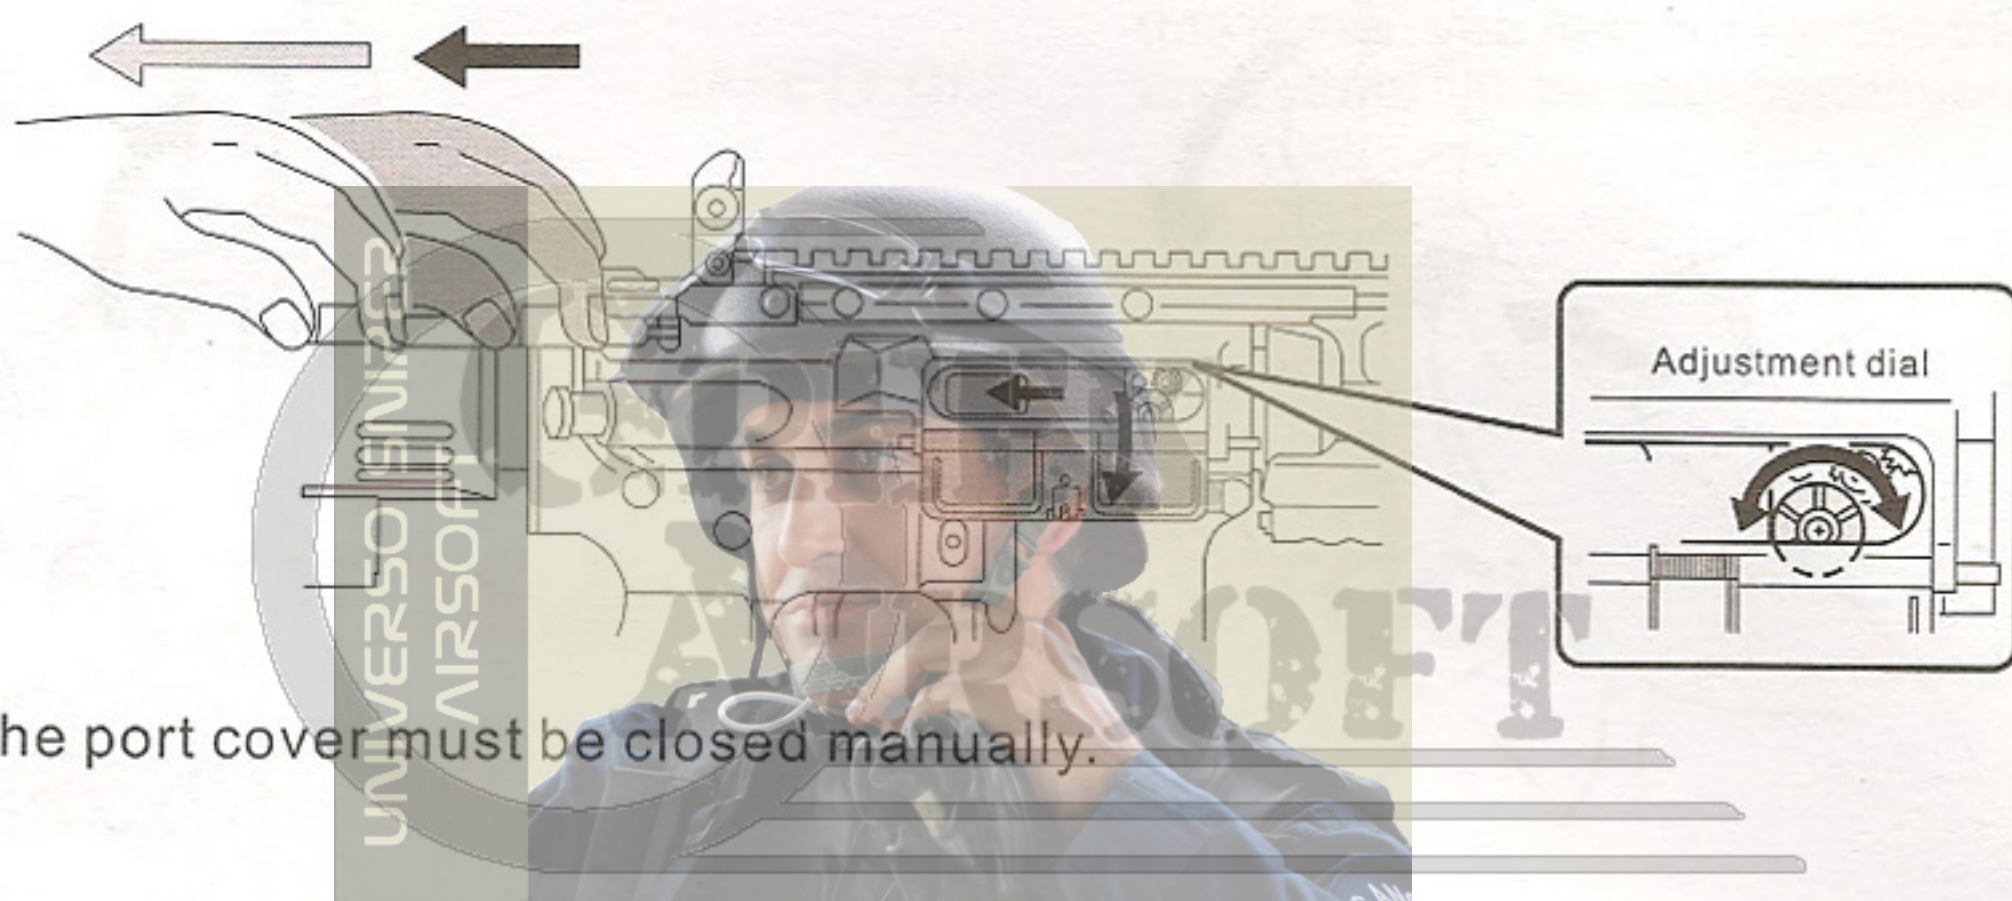


The port cover must be closed manually.

Be sure that the adjustment dial is never contaminated by dust and dirt.

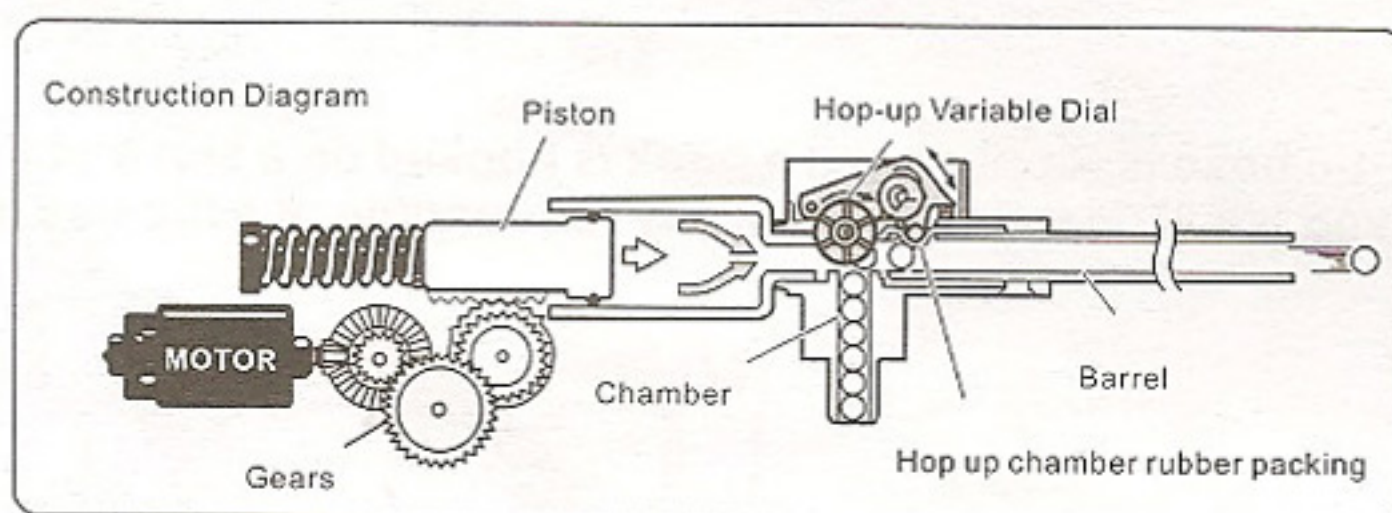

The best position is where the bullets fly horizontally, and the longest flying distance is obtained.

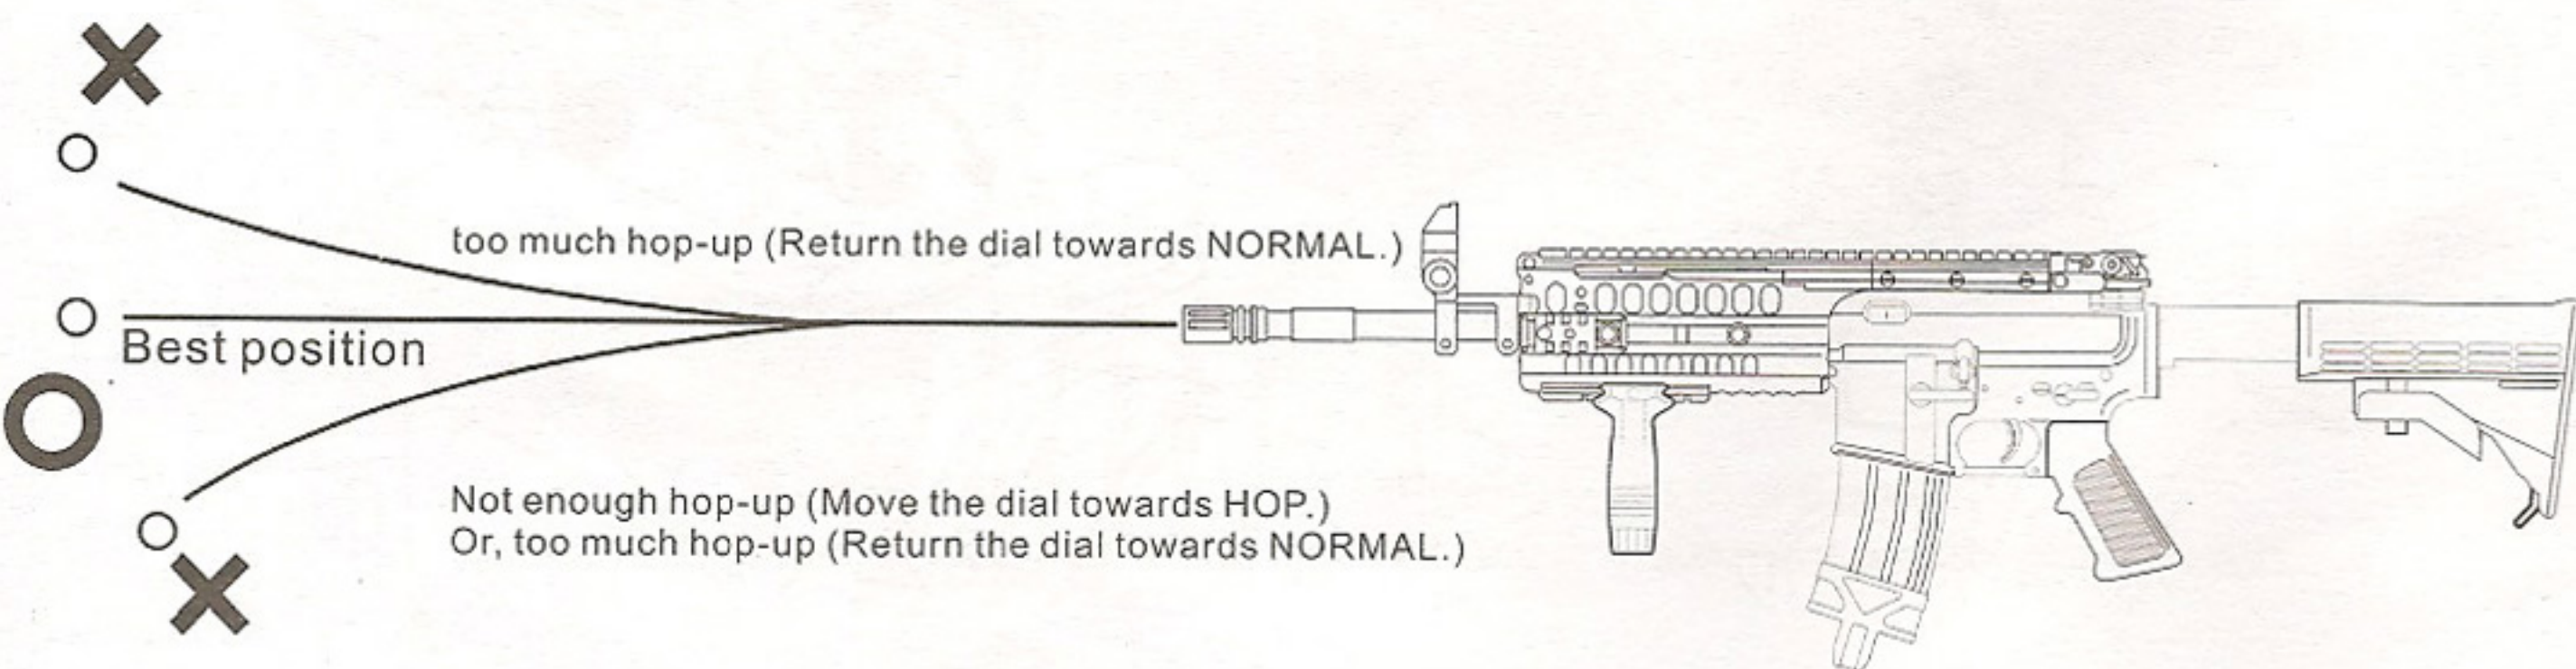


SETTING THE OPEN SIGHT

Front sight setting the bullet hitting point.


Cover the front sight with the adjustment tool and turn.

Turning counterclockwise:lowers the bullet hitting point
Turning clockwise:raises the bullet hitting point

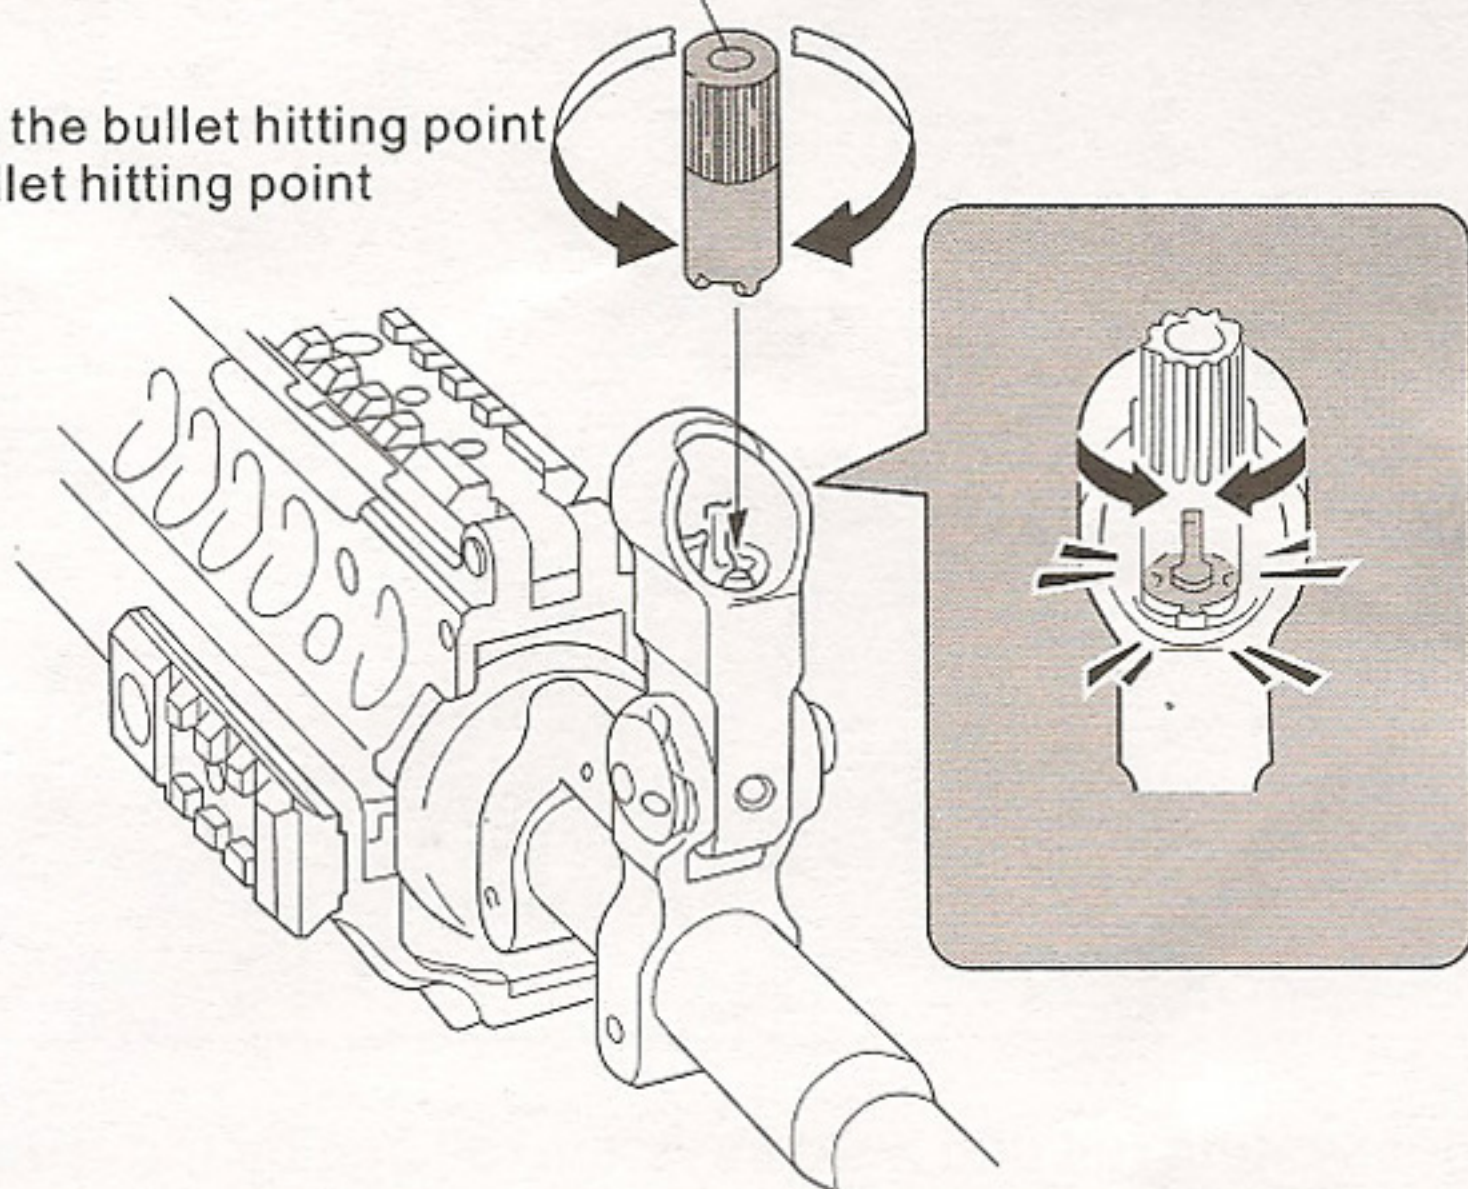


Rear Sight 1 For Left-right Adjustment

Turning the windage adjustment dial will move the bullet hitting point to the left or right.

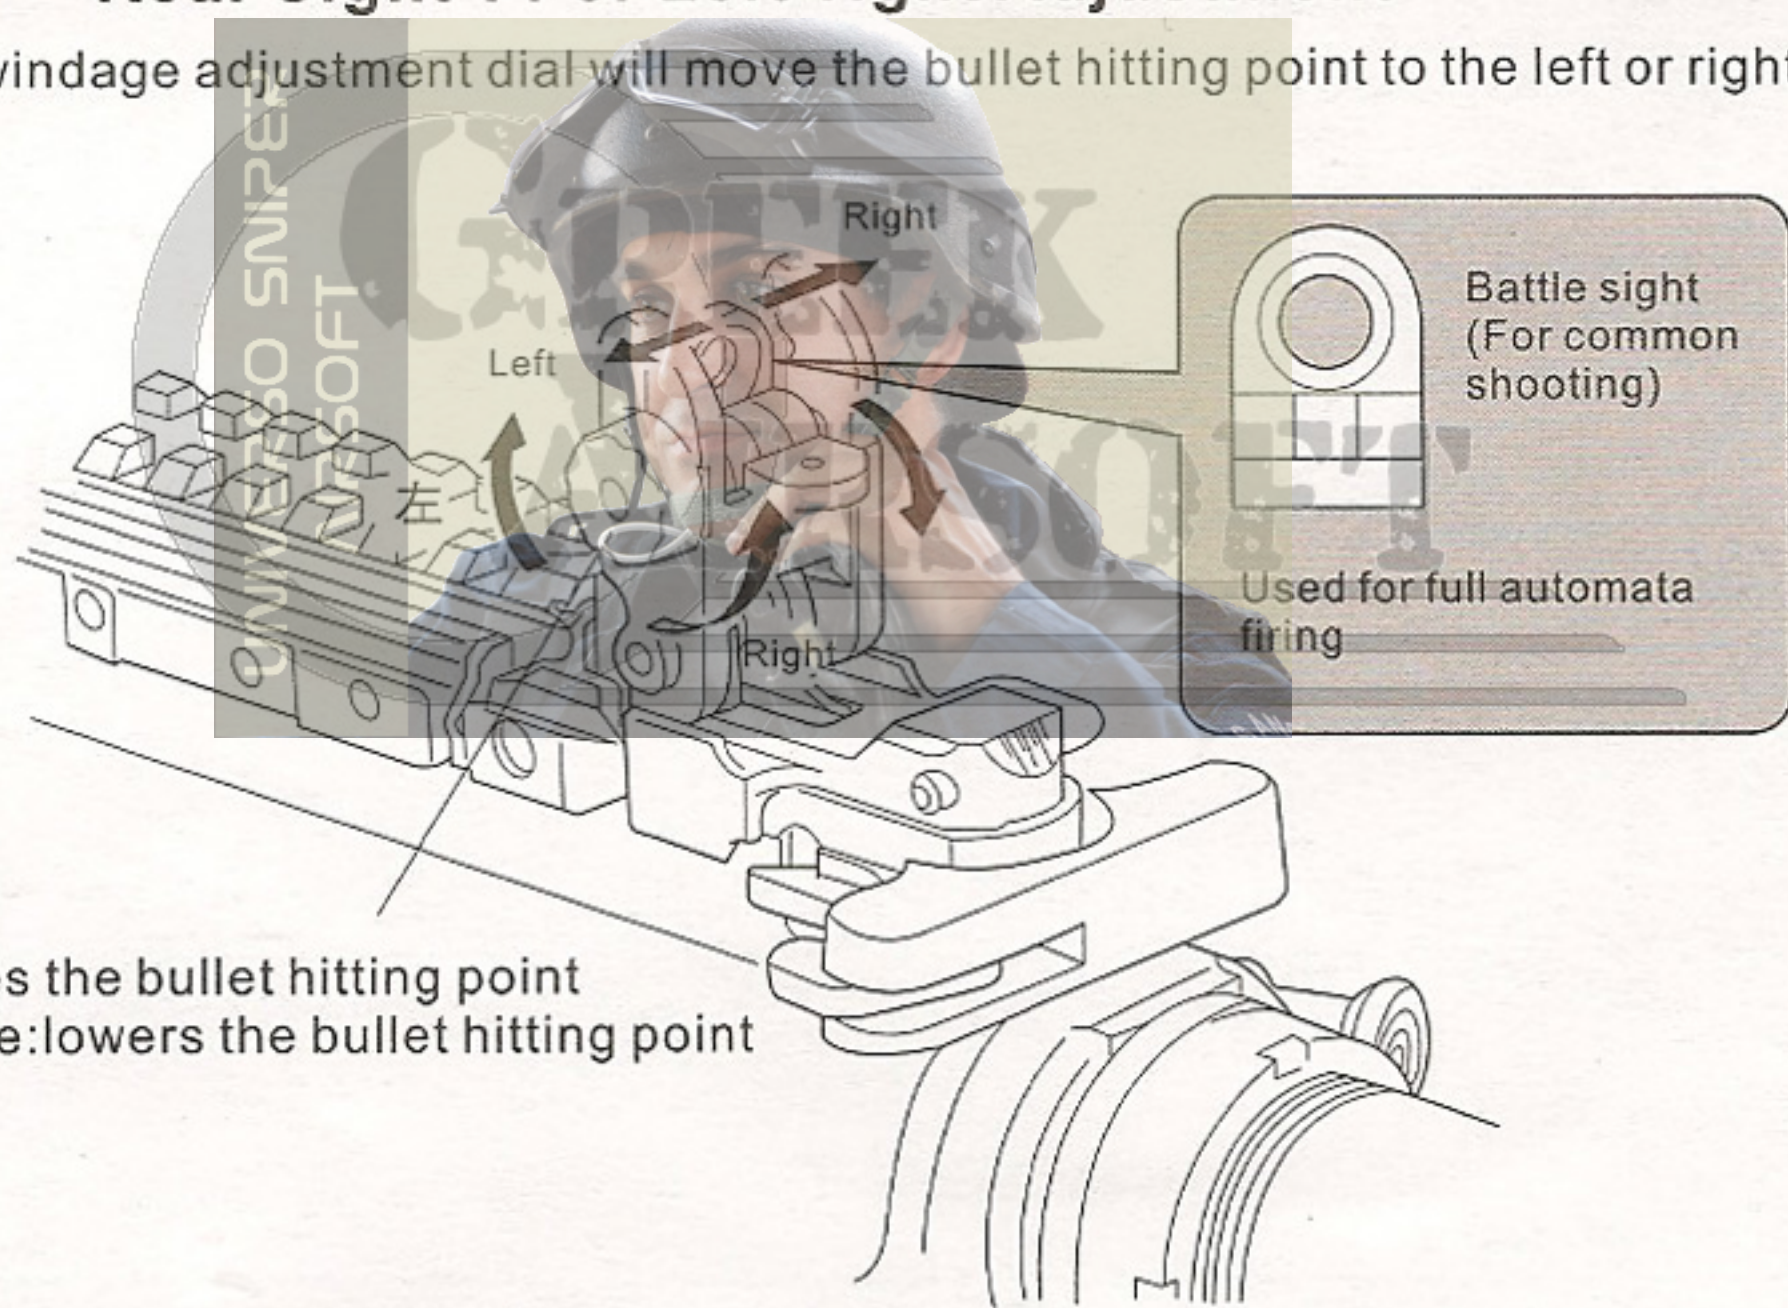

Turning clockwise:raises the bullet hitting point
Turning counterclockwise:lowers the bullet hitting point

Rear Sight 2 For precision targeting.

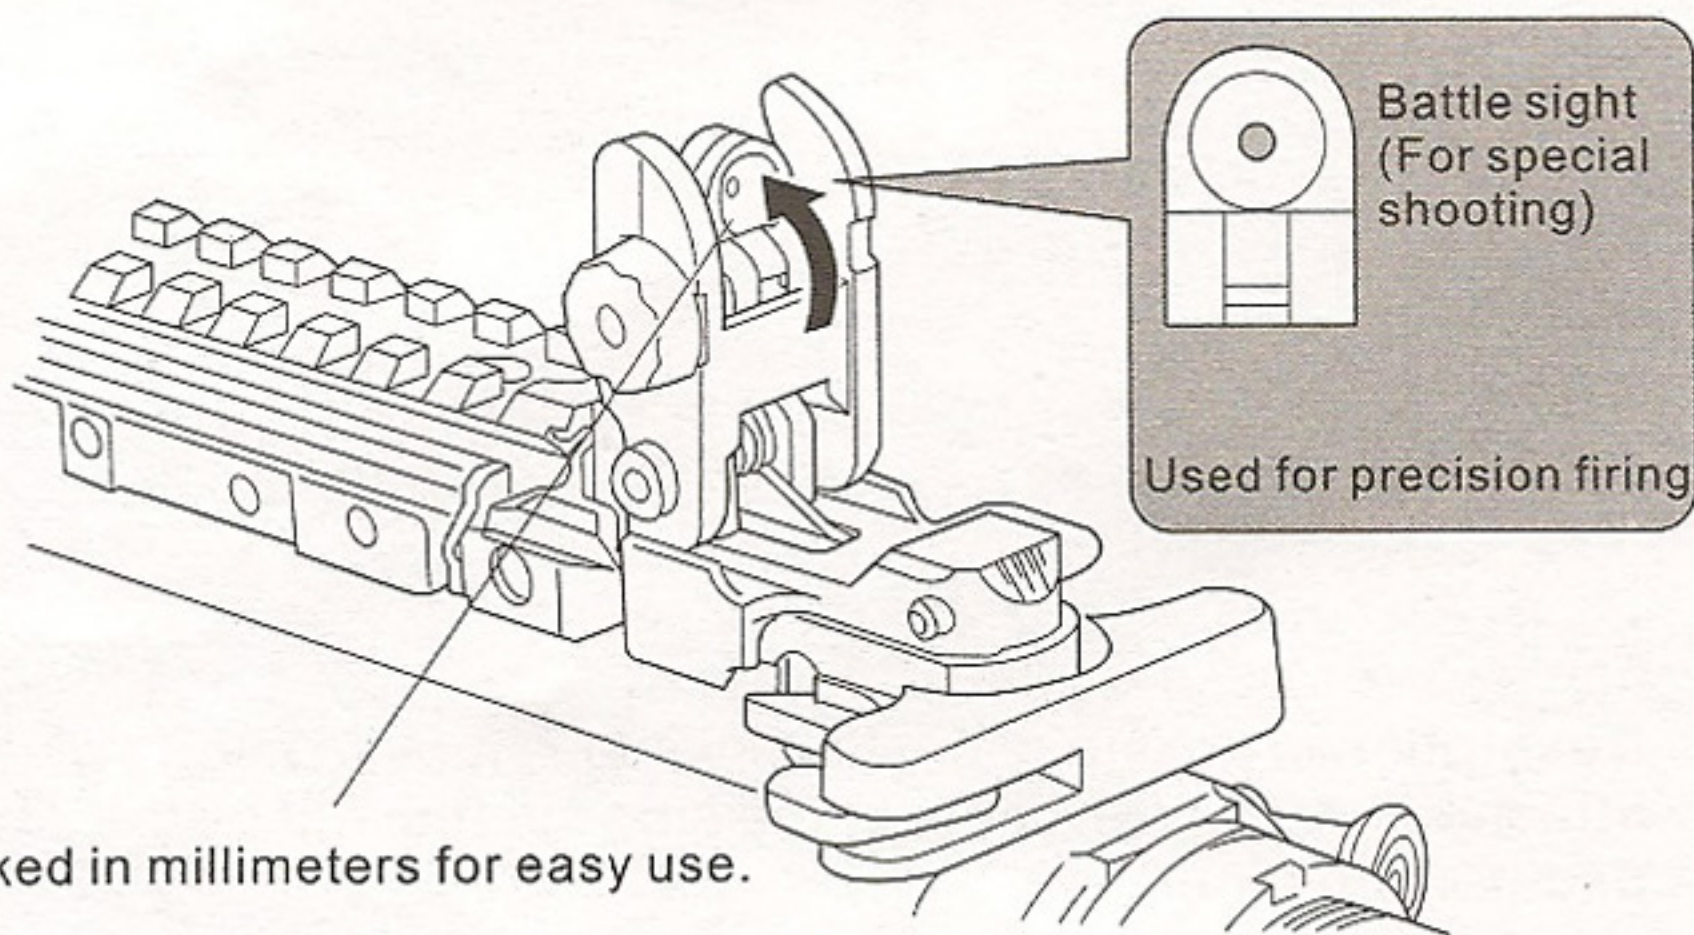


The sight assembly is marked in millimeters for easy use.

THE EXAMPLE OF OPTION WEARING


Professional scope zoom 3-9x40
(sold separately)

High-mount base for m4 series
(sold separately)

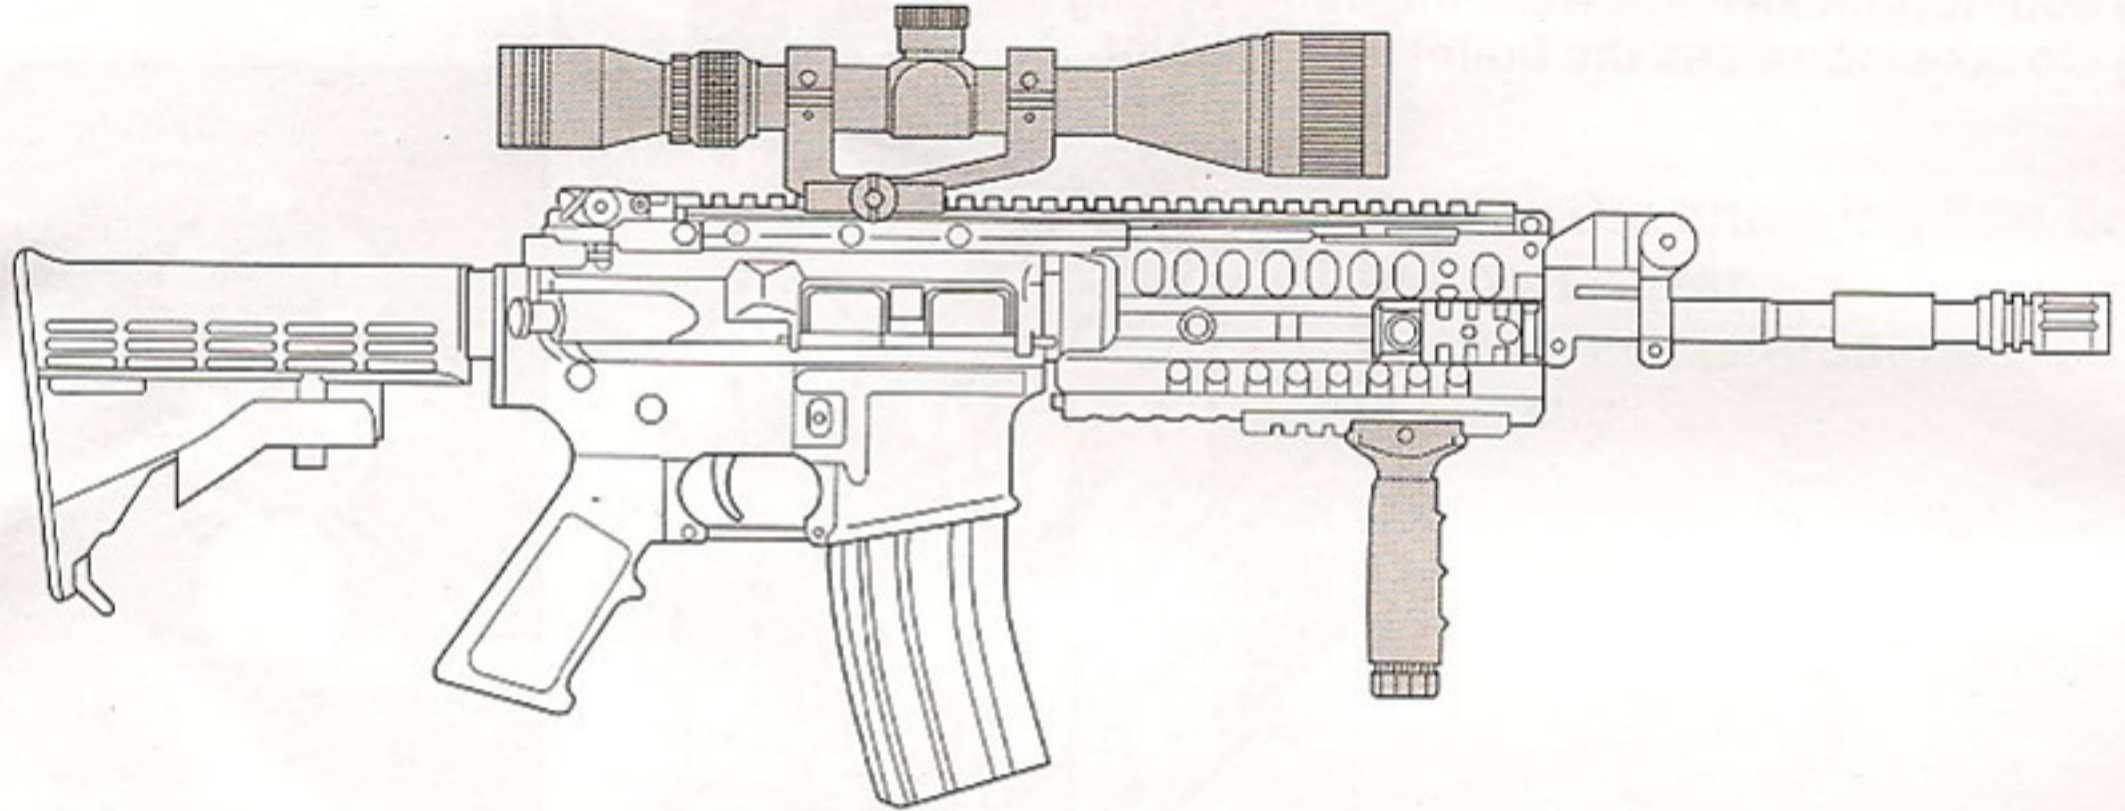


Under system rail and a side system rail can be moved and installed in the position of liking.

When moving a rail, two rail bolts are removed and it moves to the position of liking, and it fastens firmly and fixes. (if it loosens, please refasten again.)

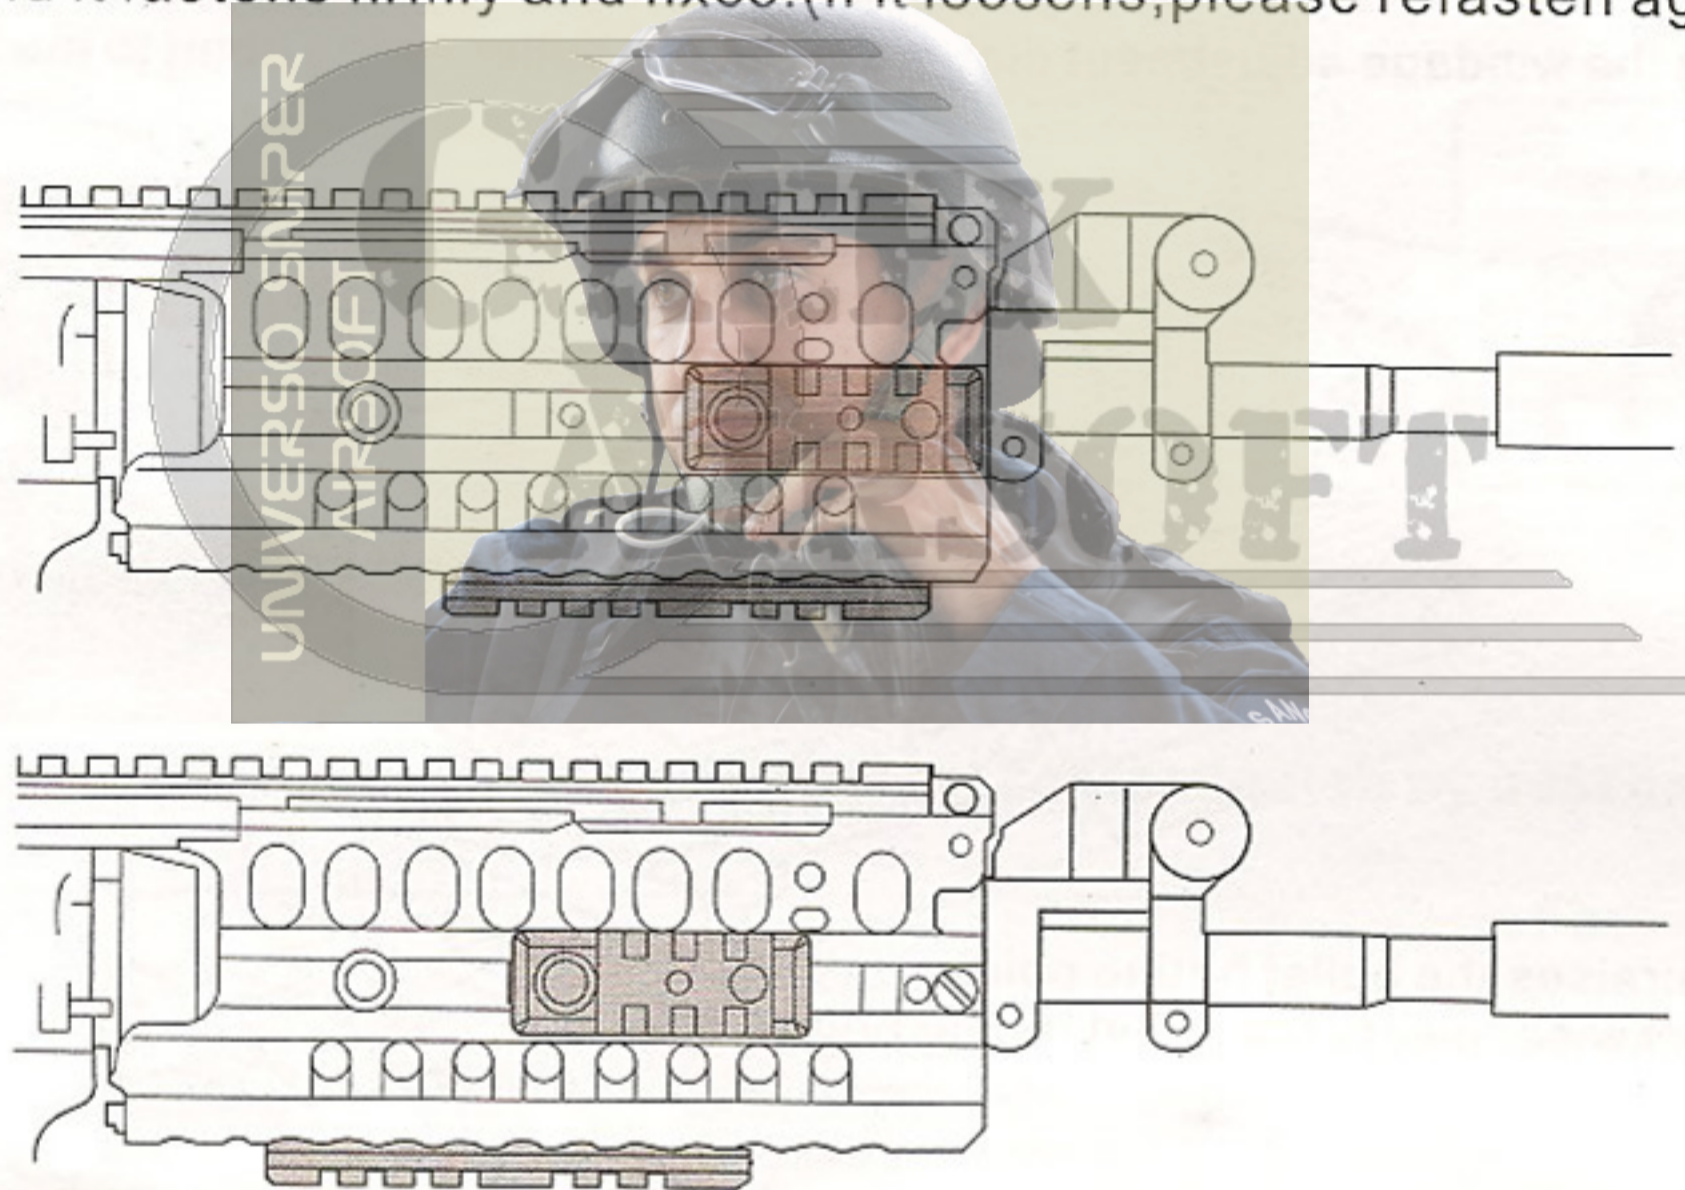


Attachment of sling swivel

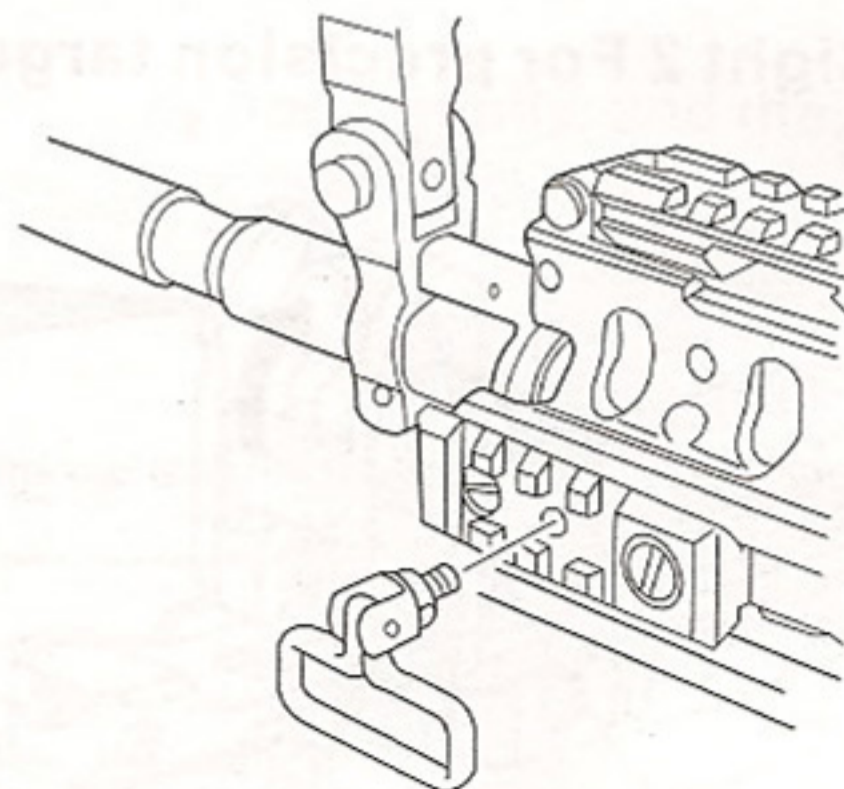

Desorption is possible for sling swivel. removed sling swivel can be moved and attached in the screw hole of the side system rail by the side of opposite, or an under system rail.

2006 NEW TYPE

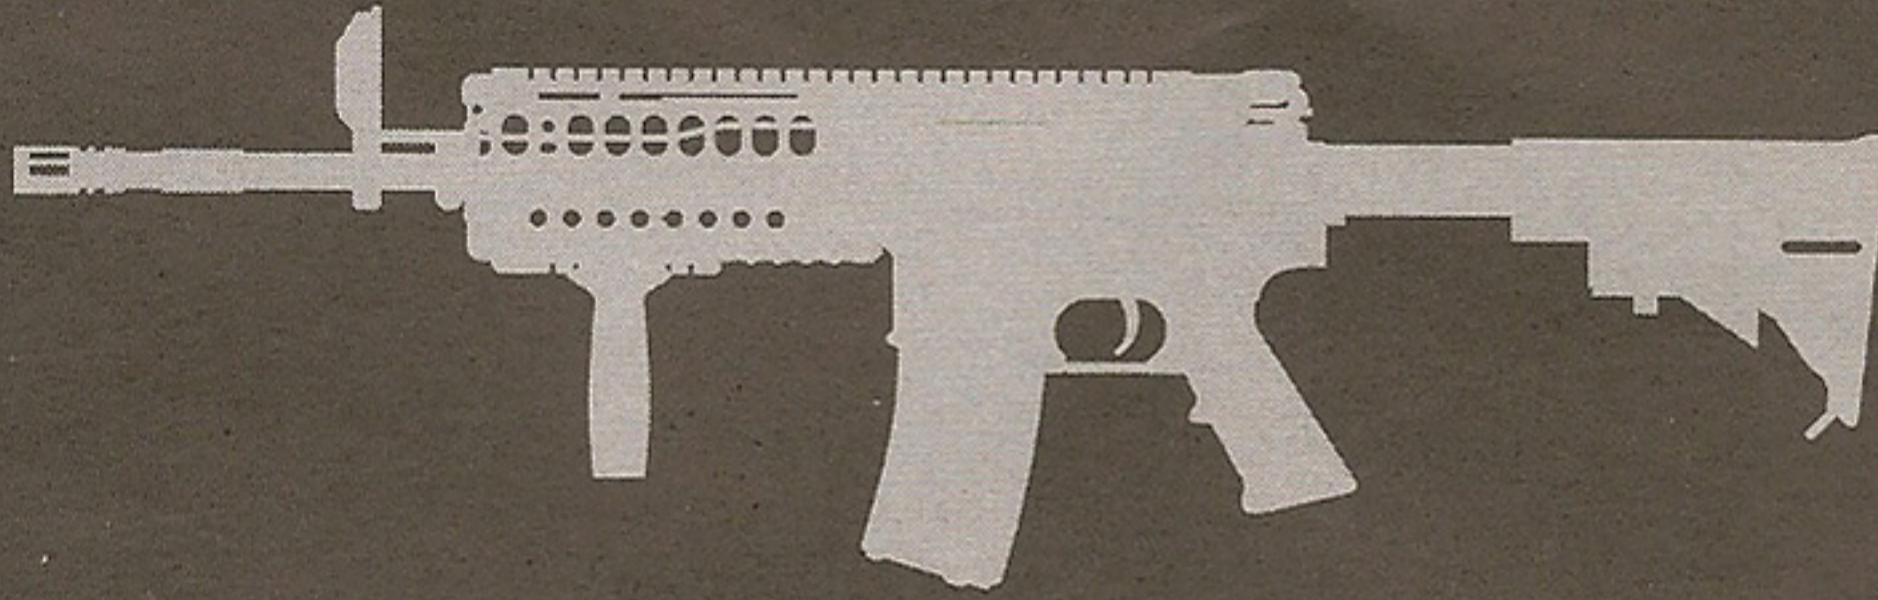

SIR#45 M4
BI-3381



CASV M4
BI-3581




NEW M4A1
BI-3681

UNIVERSO SNIPER
AIRSOFT



METAL BODY
● PLASTIC BODY

OUTER BARREL

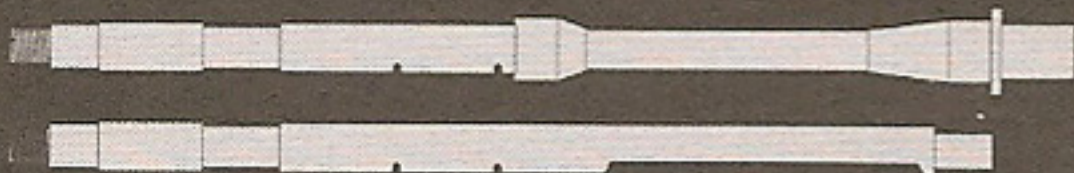


G&P TYPE
TM TYPE



D | BOYS

Parts
Accessories

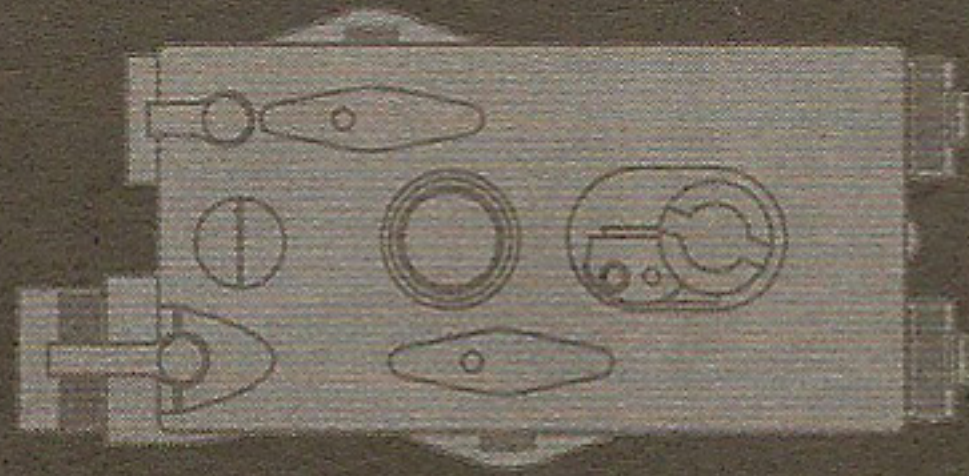

UNIVERSO SNIPER
AIRSOFT

