



Automatic Electric Gun (A.E.G.)
Adjustable Hop Up
Metal Gearbox
Pre-Upgraded Internals

PLAY SAFE

PLAY HARD

PLAY ECHO



BARRETT REC7 CQB

Read Through Manual Before Use

Visit us at:

WWW.ECHO1USA.COM

-WARNING-

This AEG is FOR AGES 18 and above.


This AIRSOFT gun can cause serious injury if misused. Full face protection is required.

Please read through the MANUAL BEFORE USE to avoid damages and injuries.

ECHO 1 User Manual

It is your **RESPONSIBILITY** to know your local and state laws regarding the **OWNERSHIP, USE and TRANSPORT** of your airsoft gun. If you are unsure of the laws, contact your local law enforcement agency or state government.


- Wear full eye and face protection at all times when handling or using an airsoft gun.
- Always keep your airsoft gun pointed in a safe direction.
- Always keep your airsoft gun unloaded until ready to use.
- Always keep your finger off the trigger until you are ready to shoot.
- Know your target and what is beyond it.
- Know how to operate you airsoft gun. (Refer to your owners manual)
- Use only the recommended BB's in your airsoft gun.
- Never use alcohol or over the counter, prescription or other drugs before or while shooting your airsoft gun.
- Store airsoft guns so they are not accessible to unauthorized persons.
- Make sure your airsoft gun is unloaded and battery has been removed prior to cleaning and storage.

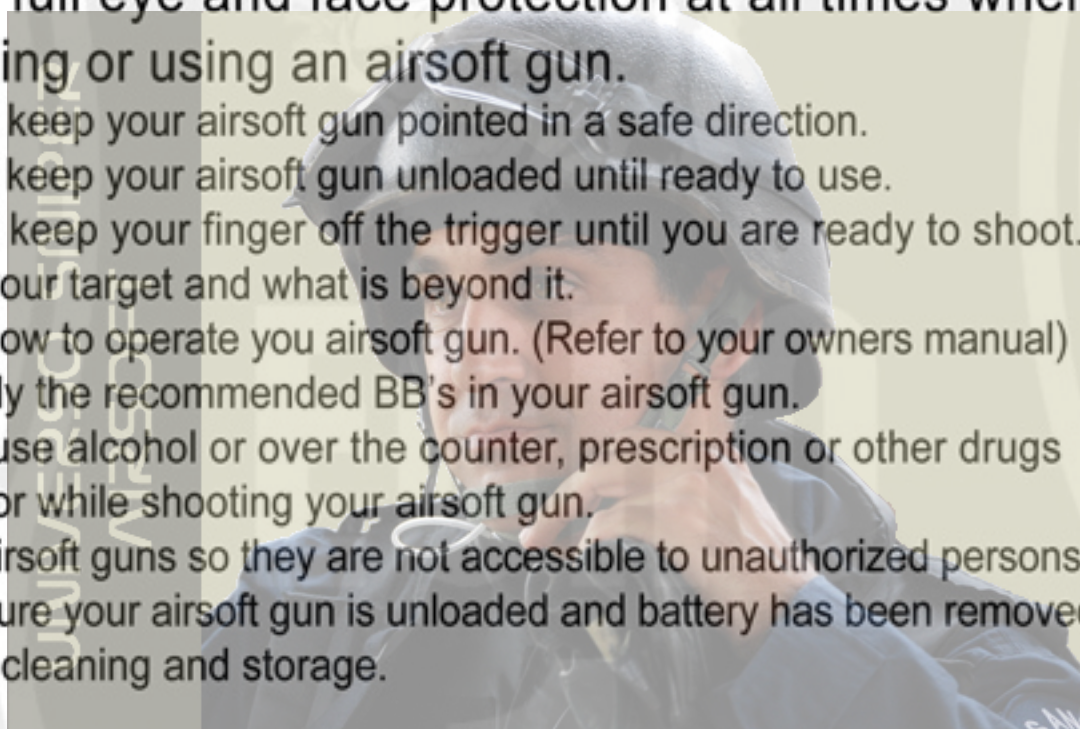

Parts of the Gun



Specs of the Gun

Name of Gun	REC7 CQB	
Weight	6.5lb	
Barrel Length	363mm	
Overall Length	800mm	
Barrel Caliber	6.08mm	
BB Capacity	300BB	
BB Size	6mm	
Feet Per Second	360-370 fps	
Battery Type	8.4v Custom	

Selector Modes



SAFE:

Trigger is secure and should not fire.



SEMI:

One BB will fire with each trigger pull.



AUTO:

Gun will fire continuously while trigger is pulled.

Battery

Charge the battery for 3 hours for the first time. When charging have the battery away from ALL COMBUSTIBLE MATERIALS and on cool hard surface. If battery becomes HOT remove from charger and let it COOL before use. When cycle rate becomes slow, STOP shooting and remove magazine. Shoot 2 times in SEMI to clear the gun, remove battery and recharge.

To install the battery in the stock follow these steps:



1. To access the battery compartment pull down on the tab and the door will unlock and open.
2. Gently pull the wire out and slide the battery in.
* Keep the wire and fuse at bottom of stock.
3. Connect the plugs, make sure they are secure. Slide the battery in the rest of the way.
4. Once the battery is inside, close the door and make sure it clicks and lock shut.

How to use the Magazine

Avoid getting dirt and debris into the magazine this can cause it to malfunction.


Tips for operation:

Use caution when mag seems empty. There are 30 bb's left in the loading tube. Wind/Turn the gear approximately 7-10 times, every 30-50 bb's fired.

1. Press the magazine release to remove the magazine.



2. Open the top hatch and pour bb's. About 300 bb's can be loaded, do not force bb's.

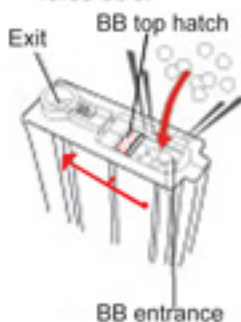

3. Close the hatch.



4. Hold the mag with the BB top hatch facing up and turn the gear. You will see BB move to the stopper lever. Once BB's have reached stopper lever continue to wind magazine for approximately 15 more turns.

For storage release the remaining BB's to ensure correct operation next time, by pulling gently back on the BB stopper lever.



Turn/Wind this GEAR

Charging Handle: Pull back gently

Bolt cover

Hop Up Adjustment Wheel

Pulling the charging handle opens the dust cover. Once opened it must be closed manually

When adjusting the hop up make sure your shooting area is clear and safe to shoot. If the hop up is too high it may jam and damage the gun.

Hop up Wheel

Turn OFF ON

Make sure dirt and debris does not get into the hop up.

Forward assist knob has no function

Too much hop-up (Return the lever towards NORMAL)

Best position

Not enough hop-up (Move the lever towards HOP) or, too much hop-up (Return the lever towards NORMAL)

The hop up settings will react differently with .20g, .25g. and above BB's. You will need to make minor adjustments depending on the weight of BB you choose to shoot. See illustration above.

Maintenance

How to clean the barrel

Wind the cloth

10mm

20mm

Cotton Cloth

IMPORTANT: Use only ECHO 1 BB's or BB's of equal quality consult your authorized ECHO 1 dealer for recommendations.

ECHO 1 6mm BB

6mm

Unpolished or used will jam

BB with mold will jam

BB other than 6mm will jam

Cut the cloth in the size as shown above and insert one end into the hole in the rod. Adjust the length of the cloth to smoothly enter the barrel.

CAUTION: Turn the hop up wheel to normal/OFF. (see Hop Up page)

CAUTION: The barrel is a precision part and firing used BB's will cause damage.



1. Spray silicon oil into the hop up chamber from the mag well for 1 sec. and fire 20-30 BB's to oil inner barrel and hop up parts.
 2. **IMPORTANT:** make sure the magazine and battery are removed from the gun before step 3.
 3. With a twisting motion gently push the cloth and rod down the barrel. May need to use 2-3 cloth strips.
- NOTE: If oil is still in barrel the BB trajectory will be unstable for 20-30 rounds.

Jammed BB

- If gun is jammed with a BB follow these steps.
1. Switch gun to SAFE, remove MAGAZINE and BATTERY.
 2. Turn hop up to NORMAL/OFF.
 3. Use the angled end of the cleaning rod to push the BB backwards and out through the loading chamber.
 4. Make sure to have the angled end as shown in figure, silicon oil will help loosen BB.
 5. Continuing firing with BB jammed will cause severe damage to your AEG.



ECHO 1 User Manual

Trouble Shooting

What is the gun doing?	How to fix
Gun is making a clicking noise but not shooting.	Use a fully charged battery to unlock the gears.
The trigger is stuck and won't pull back in SEMI.	Switch the selector to FULL, fire 2-3 rounds and switch back to SEMI.
No power or noise coming from the gun.	Fuse may be blown. Replace with a 20A or 25A fuse found at most auto stores.
Grindy/Scratchy noise when shooting.	Motor height is too high/low. Turn allen screw at bottom of motor grip left or right until sound goes away.
Jamming or not shooting BB's.	Barrel is jammed, please check page 3.
Not working after troubleshoot.	Contact info@echo1usa.com on our site for more help.

