


GC16 MOD 0 A1 BLK/DST

INSTRUCTION MANUAL



RETRACTABLE GOS-V2 STOCK

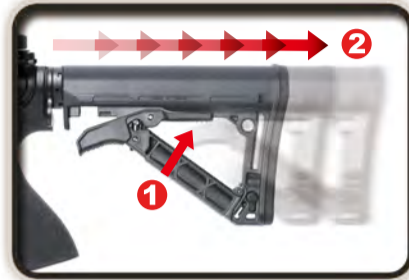

Pull the release lever to adjust the position of the stock. (6 positions)




Pull the locking lever until it clicks into place to secure the position of the stock.


MAINTENANCE



Remove the magazine.

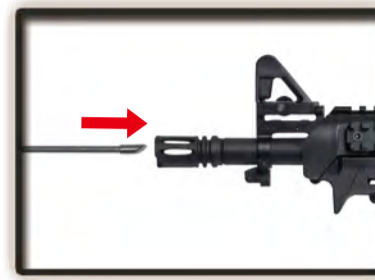

Return the hop up dial to normal position and insert the cleaning rod from the lead edge of the inner barrel.

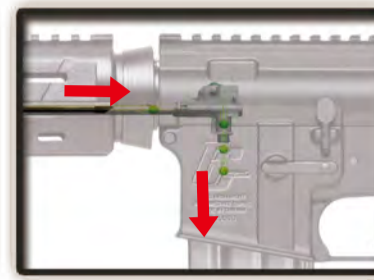

Be sure to have the rod facing down and reaching to the end. Remove clogged pellets.

TROUBLE SHOOTING



Adjust screw when the gear noise becomes shrilly. Use a screwdriver to adjust the screw at the bottom of the grip.



No operation. Check the wire set contact on the motor.



No operation. Make sure the battery is fully charged.

MOVABLE & OPTIONAL PARTS



Set to an appropriate position.




Fasten the knob.

FRONT SIGHT ADJUSTMENT



Turn the knob counterclockwise.

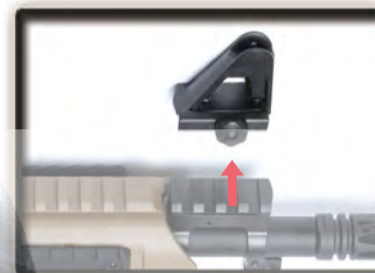


Remove the front sight.



You can install accessories onto the rail.

REAR SIGHT ADJUSTMENT

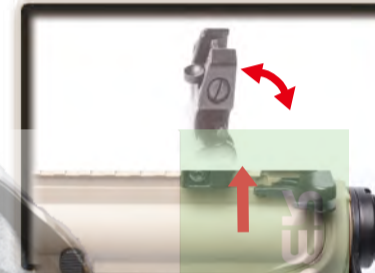

Press down the button to fold the rear sight.



Remove the screw by turning counterclockwise.



Pull the charging handle and remove the rear sight off your G&G gun.

PARTS LIST


- GC16 MOD0 - 01 Flash Suppressor
- GC16 MOD0 - 02 Lower Handguard Set
- GC16 MOD0 - 03 Upper Handguard Set
- GC16 MOD0 - 04 Outer Barrel Set
- GC16 MOD0 - 05 Hop Up Set
- GC16 MOD0 - 06 Delta Ring
- GC16 MOD0 - 07 Inner Barrel
- GC16 MOD0 - 08 Upper Receiver Set
- GC16 MOD0 - 09 Charging Handle Set
- GC16 MOD0 - 10 Port Cover Set
- GC16 MOD0 - 11 Front Frame Lock Pin Set

- GC16 MOD0 - 12 Bolt Catch Set
- GC16 MOD0 - 13 Selector Lever Set
- GC16 MOD0 - 14 Magazine Catch Set
- GC16 MOD0 - 15 Sling Swivel Mount
- GC16 MOD0 - 16 Stock Tube
- GC16 MOD0 - 17 Magazine
- GC16 MOD0 - 18 Lower Receiver Set
- GC16 MOD0 - 19 Trigger Guard Set
- GC16 MOD0 - 20 Selector Plate
- GC16 MOD0 - 21 Rear Frame Lock Pin Set
- GC16 MOD0 - 22 Grip Set

- GC16 MOD0 - 23 Motor
- GC16 MOD0 - 24 Grip Bottom Set
- GC16 MOD0 - 25 GOS-V2 Stock Set
- GC16 MOD0 - 26 Gear Box Set
- GC16 MOD0 - 27 Detachable Front Sight Set
- GC16 MOD0 - 28 Right Selector Cap
- GC16 MOD0 - 29 Wire
- GC16 MOD0 - 30 Rear Sight
- GC16 MOD0 - 31 Handguard Retainer
- GC16 MOD0 - 32 Imitation Gas Tube

TROUBLE SHOOTING

SYMPTOM	POTENTIAL	CORRECTIVE
No operation at all	Selector lever is set to safety.	Set the selector lever to Semi.
	Battery is not charged.	Charge the battery.
	Battery connector is disconnected.	Attach the connector.
	Battery connectors (+ and -) are reversed.	Connect the connector correctly(check the fuse)
Although motor is revolving, no pellet can be fired	Motor life expired (50,000 to 60,000 rounds) or poor electrical connection.	Replace the dead motor (can be purchased from local dealer or directly G&G). Check and repair the contacts.
	Pellets are clogged inside the magazine.	Insert the charging rod into the magazine and move up and down a few times to remove clogged pellets.
	Pellets are clogged in the chamber.	Remove clogged pellets by using the cleaning rod.
Shooting distance becomes shorter	Faulty gear.	Purchase the replacement gear from your dealer or G&G and repair.
	Damaged or worn chamber set.	Mount the replacement parts(Purchasing from your dealer or G&G).
	Damaged or worn piston set (O-ring,piston spring).	Mount the replacement parts(Purchasing from your dealer or G&G).
	Something is jammed in the inner barrel.	Use the cleaning rod and clean the inner barrel.
Too loud operating noise	Faulty BB pellets (too small or heavy).	Use the genuine G&G Pellets.
	Shortage of silicone oil.	Drops few drops of silicone oil from upper the chamber.
	Gear problem caused by too many blank firing.	Consult your dealer or G&G for overhaul maintenance, part replacement (gear,etc.) or repair.
Pellets being fallen out from barrel end	Gear problem caused by too many blank firing.	Consult your dealer or G&G for overhaul maintenance, part replacement (gear,etc.) or repair.
	Damaged or worn chamber set.	Mount the replacement parts(Purchasing from your dealer or G&G).
	No hop setting.	Turn the hop adjustment lever toward Hop.
If gun gets wet	Faulty BB Pellets (too small or heavy).	Use the G&G Pellets.
	Stop operation immediately, disconnect the battery, wipe off water from inside the main body and the battery. After completely dry, carry out trial firing. If the unit is not operational, please contact your local dealer for repair.	

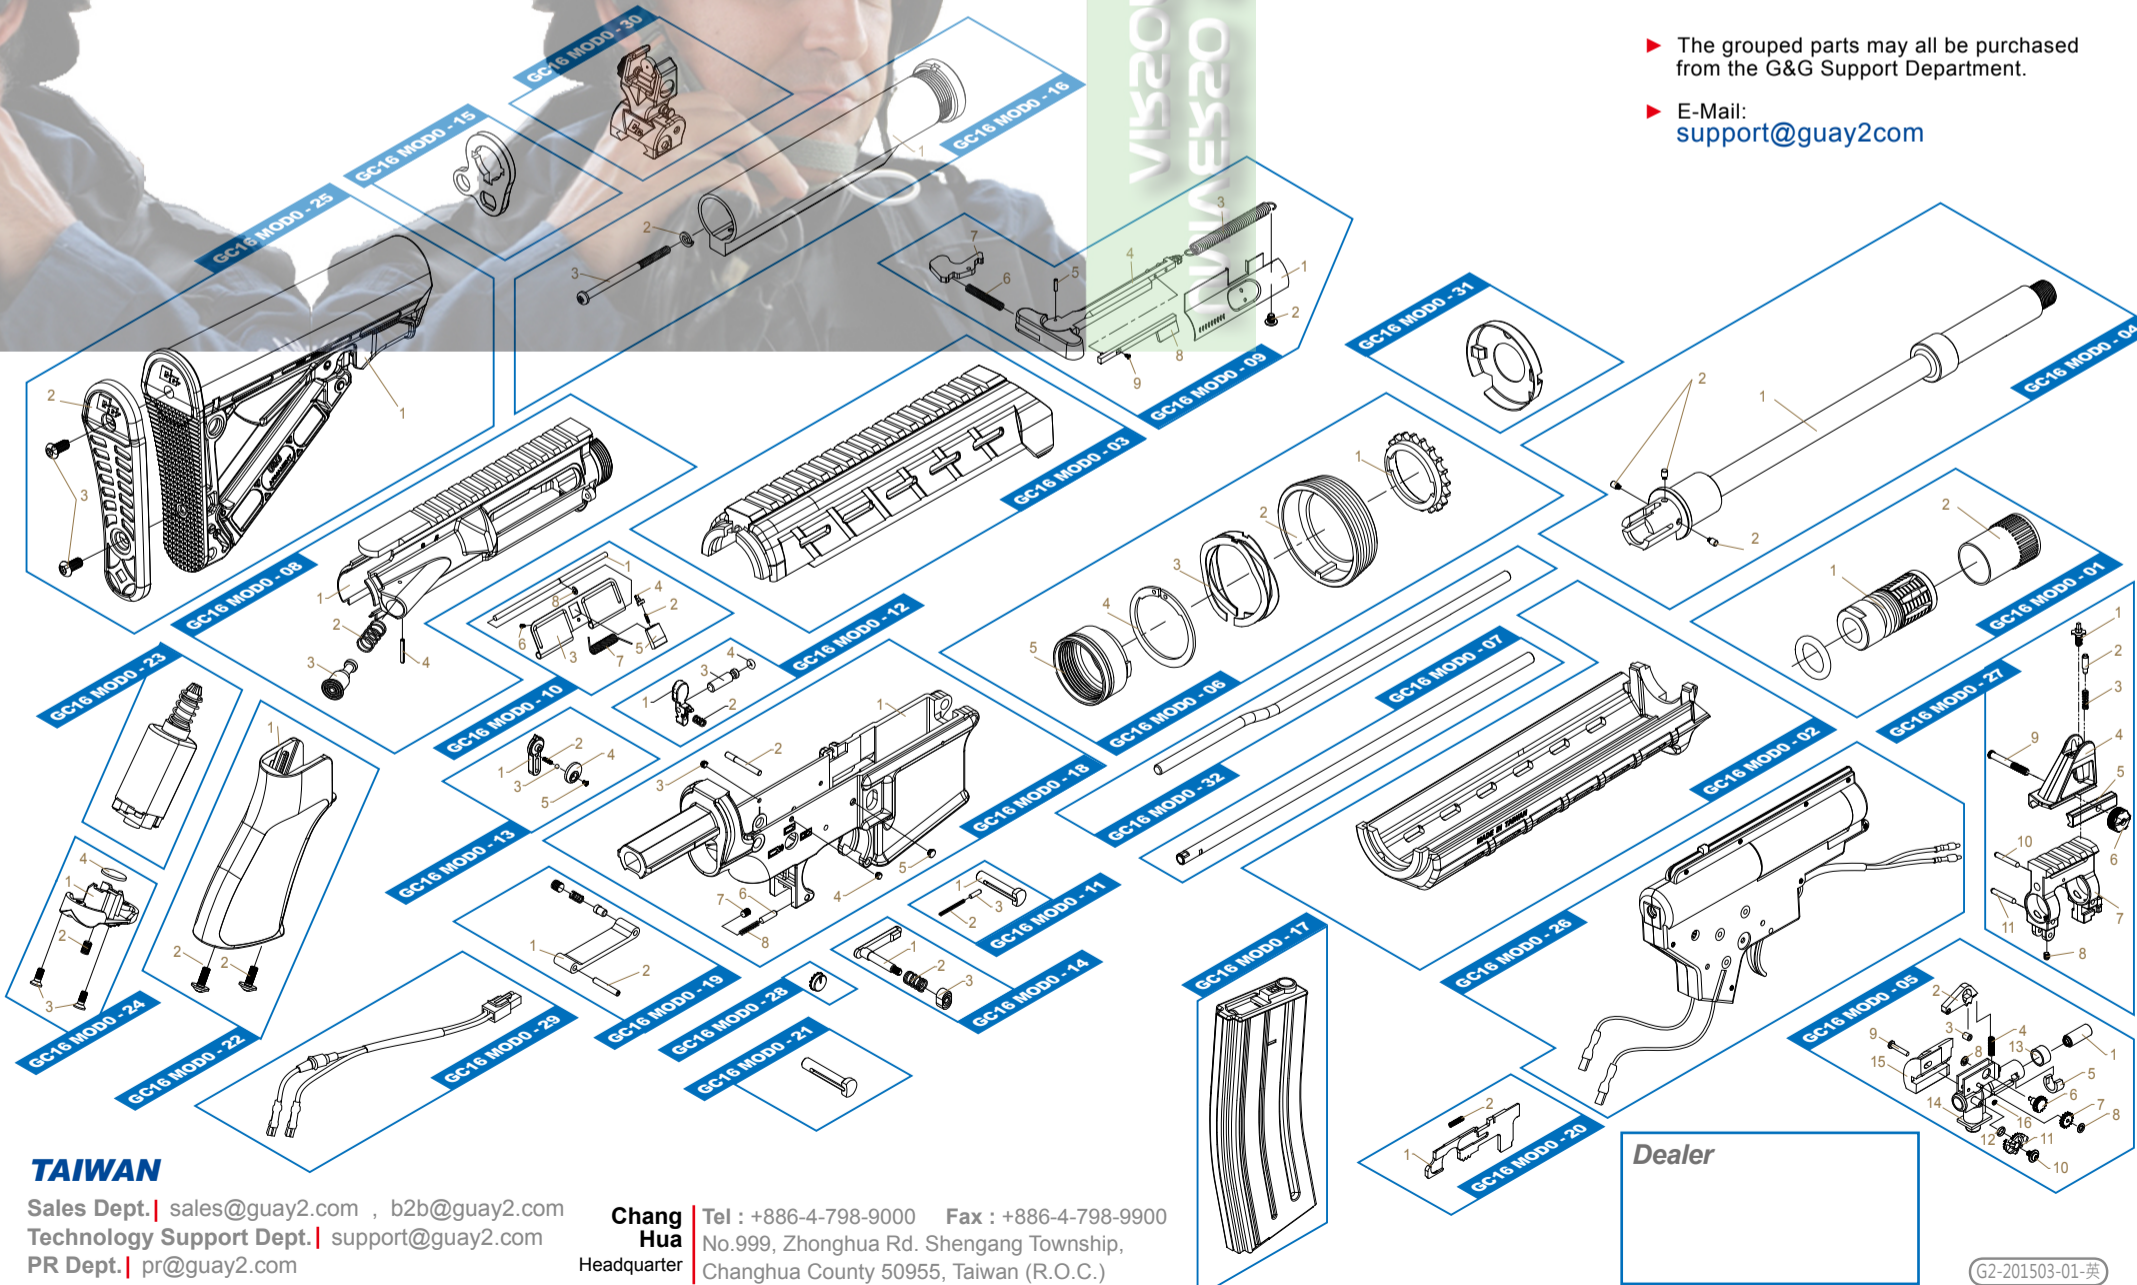

- ▶ The grouped parts may all be purchased from the G&G Support Department.
- ▶ E-Mail: support@guay2.com

TAIWAN

Sales Dept. | sales@guay2.com , b2b@guay2.com
 Technology Support Dept. | support@guay2.com
 PR Dept. | pr@guay2.com

Chang Hua
Headquarter

Tel : +886-4-798-9000 Fax : +886-4-798-9900
 No.999, Zhonghua Rd. Shengang Township,
 Changhua County 50955, Taiwan (R.O.C.)

Dealer