

MANUFACTURED BY GUAY GUAY TRADING CO., LTD.  
MADE IN TAIWAN  
WWW.GUAY2.COM  
AIRSOFT GUNS & ACCESSORIES  
**G&G ARMAMENT**



**G&G ARMAMENT**  
AIRSOFT GUNS & ACCESSORIES



**WARNING**

HANDLING CAUTIONS & INSTRUCTION MANUAL  
Always read through the manual before operation.




**AK47**  
6mm Electric Semi / Full Auto System

**INSTRUCTION MANUAL**

**AK47**  
SERIES  
**6mm Electric Semi / Full Auto System**  
**CONTENTS**


- P02.03.04.05 ▶ **WARNING**
- P06.07 ▶ Components
- P08.09 ▶ Battery setting and battery type
  - P10 ▶ Magazine loading
  - P11 ▶ Magazine insert and magazine release
  - P12 ▶ Firing mode and safety
  - P13 ▶ Front sight and rear sight adjustment
  - P14 ▶ HOP-UP adjusting
  - P15 ▶ Motor gear engagement adjustment
- P16.17.18.19 ▶ Field stripping
  - P20 ▶ SPEC. for RK47
  - P21 ▶ **CAUTION**

 **警告**  
WARNING

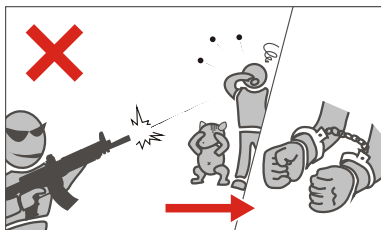


You may be liable for damaging public or personal property or for injuring a person or an animal even if you only meant to shoot as a "practical joke". Always observe good manners and enjoy fun sport shooting.

 **警告**  
WARNING

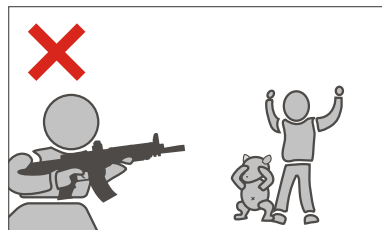


Never direct the muzzle towards a person, and animal or any other dangerous direction.

 **警告**  
WARNING

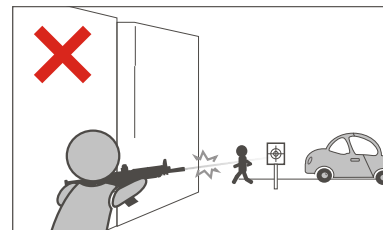


Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

 **警告**  
WARNING

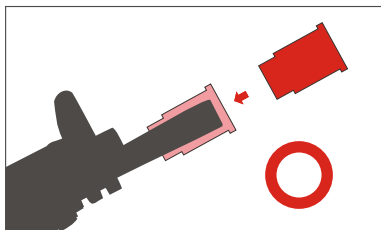


Make sure to attach the barrel and safety cap to the muzzle, except when you are shooting. Do this to prevent accidental, sudden discharge and also for dust protection purposes. NEVER pull the trigger while the barrel and the safety cap is attached.

 **警告**  
WARNING

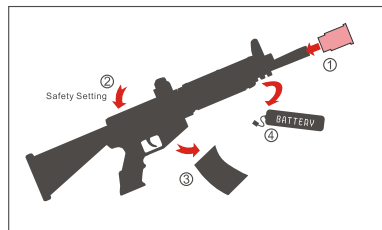


Safety procedure:  
1 - Attach the safety cap to the muzzle.  
2 - Set the selector lever to the safety position.  
3 - Remove the magazine.  
4 - Remove the battery.

 **警告**  
WARNING

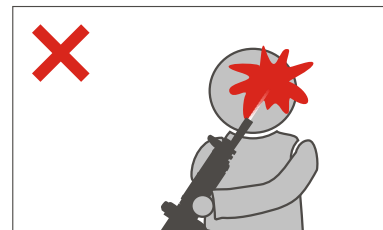

Looking into the muzzle is extremely dangerous regardless of BB's having been installed or not. If you get hit in the eye by a BB bullet, you may in worst case, loose your eye sight.

 **警告**  
WARNING

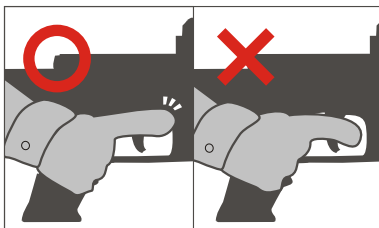


Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless the safety cap is removed and you are ready to shoot a target.

**警告**  
WARNING




When shooting the air guns for target practice or in a game situation, you and all participants must wear goggles or other eye protective gear. Also, pay attention to ricochets. It is important to pay attention to third parties other than the participants.

 **警告**  
WARNING

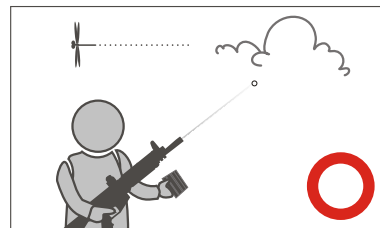


There may be cases where some BBs remain in the gun after the magazine has been disconnected. After removal of the magazine, direct the muzzle towards a safe direction and pull the trigger to confirm that no BBs remain in the gun, then attach the safety cap.

 **警告**  
WARNING

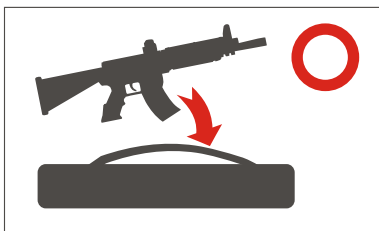


When you carry the air gun, attach the safety cap, set the selector lever to the safety position and always put it in a case or bag.

 **警告**  
WARNING

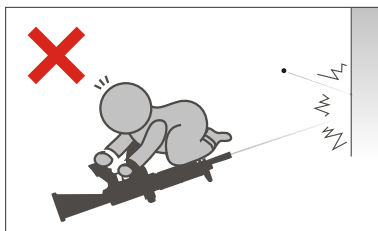

Always attach the safety cap to the muzzle, remove the battery and store the air gun in a case or bag and at a place out of reach by children.

 **警告**  
WARNING

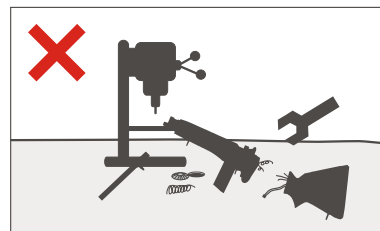


Disassembling or modifying the gun may adversely affect the performance and make it dangerous.



## Components

 **G&G ARMAMENT**  
AIRSOFT GUNS & ACCESSORIES

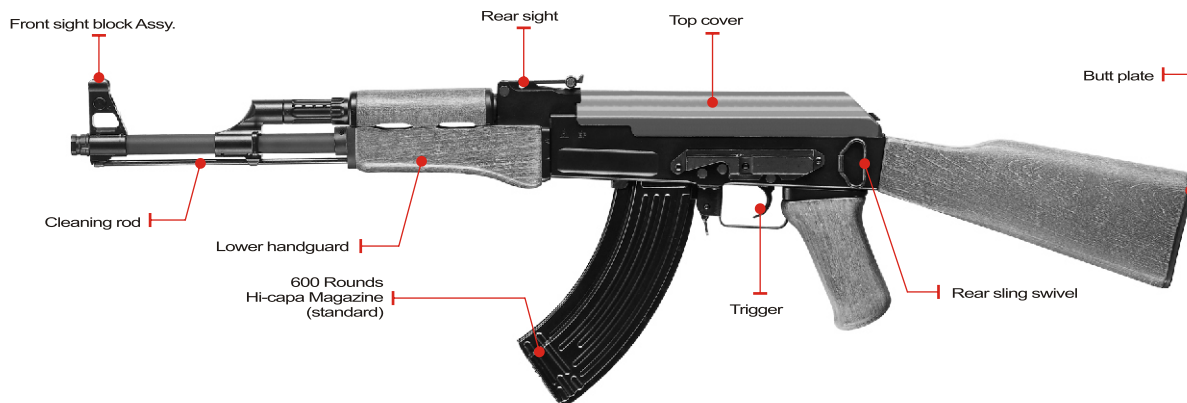


**AK47**  
6mm Electric Semi / Full Auto System

Components

## ■ Battery setting and battery type

 **G&G ARMAMENT**  
AIRSOFT GUNS & ACCESSORIES

1

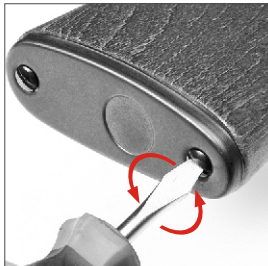

Unscrew the butt plate fixing screws and remove the butt plate.

 
2



3



Insert battery into the buttstock and connecting the connector then close the butt plate.

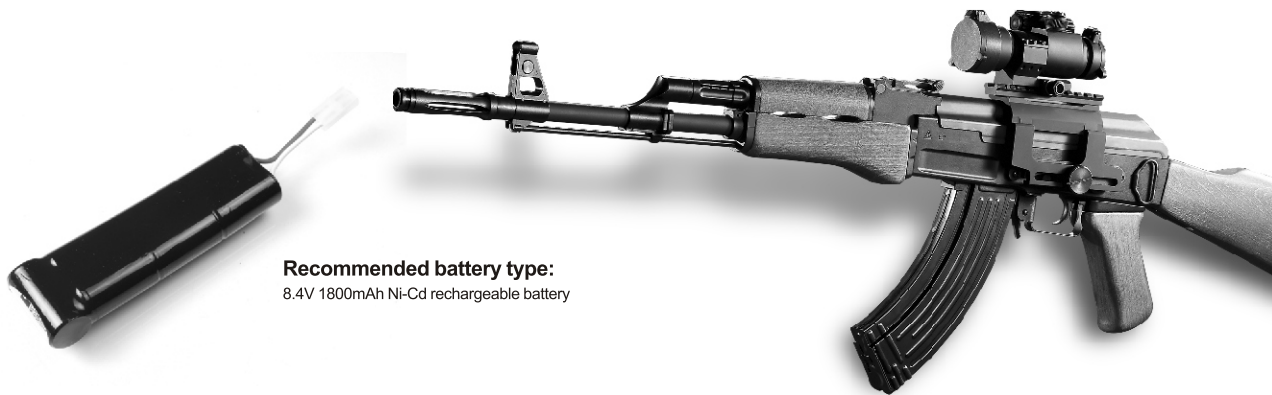

**Recommended battery type:**  
8.4V 1800mAh Ni-Cd rechargeable battery


**AK47**  
6mm Electric Semi / Full Auto System

■ Battery setting and battery type


## ■ Magazine loading

 **G&G ARMAMENT**  
AIRSOFT GUNS & ACCESSORIES

1

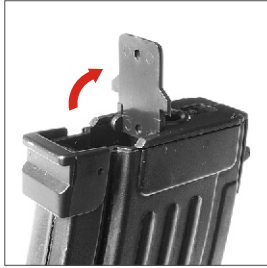

 Open the cover on the top of the magazine.

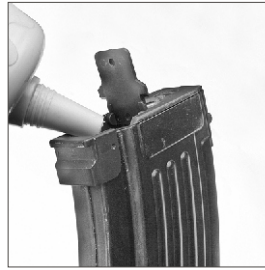


Feed the BBs till it's full.

3



Close the cover and turn the gear at the bottom all the way till the clicking sound changes.

 
1

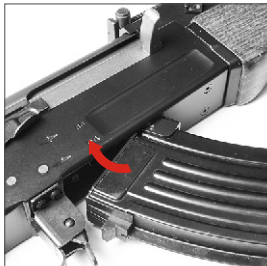

**To set the magazine:**

Set the magazine upward and connect firmly till a "**click**" sound is heard.

 2

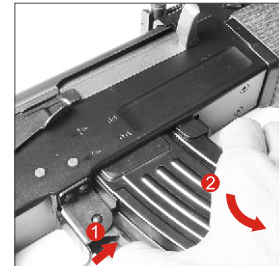

**To release the magazine:**

hold the magazine then push the magazine catch and pull out the magazine out.

## ■ Firing mode and safety

**G&G ARMAMENT**  
AIRSOFT GUNS & ACCESSORIES



 
**Safety on:**  
Trigger can not be pulled and gun will not fire.





**Full auto:**  
Automatic firing when trigger remains pulled.



**Semi auto:**  
One shot each time when the trigger is pulled.

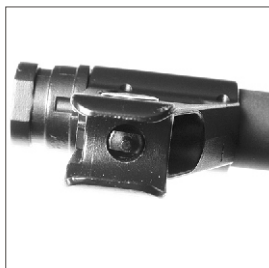

  Insert the front sight adjust tool into the front sight block and turn for adjustment.

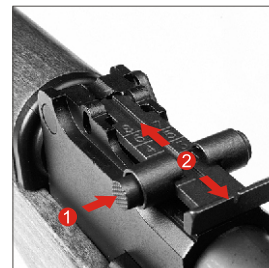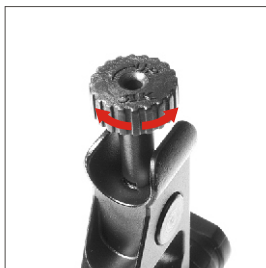

Press the button and slide forward or backward for adjustment.

## ▪ HOP-UP adjusting

**G&G ARMAMENT**  
AIRSOFT GUNS & ACCESSORIES

1



 
Pull to open the bolt.

2




Hold the bolt.

3

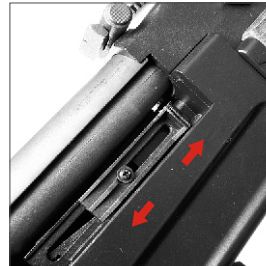

Sliding the Hop-up adjustment piece forward or backward to change the Hop-up effect.

 1

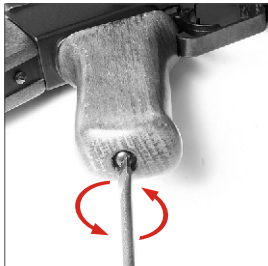


Unscrew the fixing screw on the bottom of the grip.

2



Remove the grip.

 
3

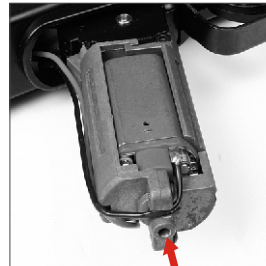

Adjusting with hexagon key.


**NOTE: Only when the gear noise become shrilly.**

 1

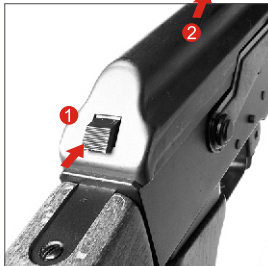

Push the rear-end of spring guide to remove the top cover.

 2

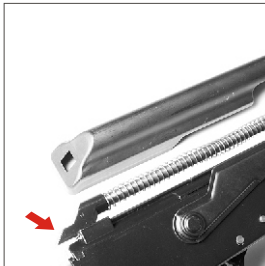


Move the spring guide forward and pull up to release the spring.

3




 4

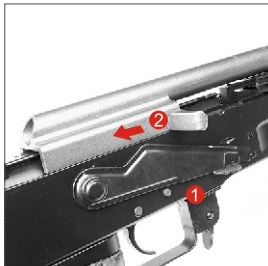

Set the selector lever on full auto position and pull the bolt out.

 5

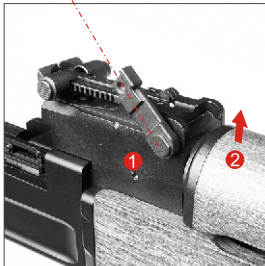

Turn the locking lever upward and pull up the upper handguard.

6



 
Pull the cleaning rod out.

7



Turn the locking lever.

8

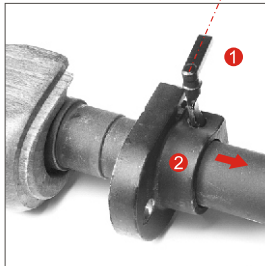

Move the lower handguard retainer forward.

9



Remove the lower handguard.



**⚠ WARNING !!**

Please be careful, do not catch your fingers when removing parts.

Always remove the magazine and battery first when assemble or disassemble the gun.

**G&G ARMAMENT**  
AIRSOFT GUNS & ACCESSORIES

**AK47**  
SERIES  
6mm Electric Semi / Full Auto System

**SPEC.**

- Built material: **AL6061 / Magnesium / Plastic / Wood**
- Magazine capacity: **600 rounds (standard)**
- Overall length: **890mm**
- Inner barrel length: **407mm**
- Weight: **3180g**
- Muzzle velocity: **90 m/sec with 0.2g BB**

## **CAUTION**

Always attach the safety cap and disconnect the magazine to avoid sudden operation upon connecting the battery.

Be careful so as not to catch your fingers in the movable parts.

Always set the lever to "safe" before firing.

Do not disassemble beyond what is necessary, or the gun may be damaged.

Always use "G&G ARMAMENT" BBs for this gun. We shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.

Since a tight barrel is used, use of dirty BBs or those with burrs causes jamming and possible fatal damage to the gear box.

Turning hop-up dial excessively causes clogging of BB.  
Keeping pulling the trigger with BB clogged damages the piston and gears.

Never hold the gun sideways as BB will curve right or left.

We shall not be held responsible for any damage or accidents arising from the wrong operation or modification of the gun.

Disassembly is designed for appropriate maintenance, not for modification.





**G&G ARMAMENT**  
AIRSOFT GUNS & ACCESSORIES

**WWW.GUAY2.COM**

MANUFACTURED BY GUAY GUAY TRADING CO., LTD.  
MADE IN TAIWAN

DEALER

PDF POR SNIPER  
MATADORES AIRSOFT CLUB  
[www.matadoresairsoft.com](http://www.matadoresairsoft.com)

Please consult your dealer or G&G for overhaul maintenance  
and technical guidance.