



3) 拆除螺絲及零件
 Remove screws and parts



4) 分開前部
 Detach the front assembly

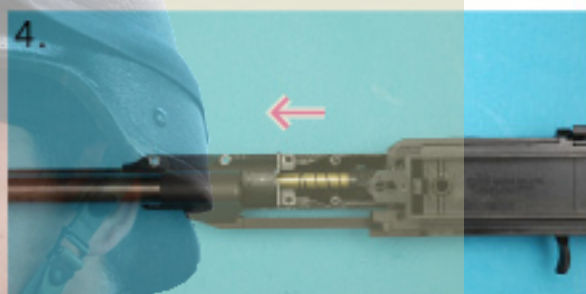

5) 分解
 Loosen screws and separate the handguard

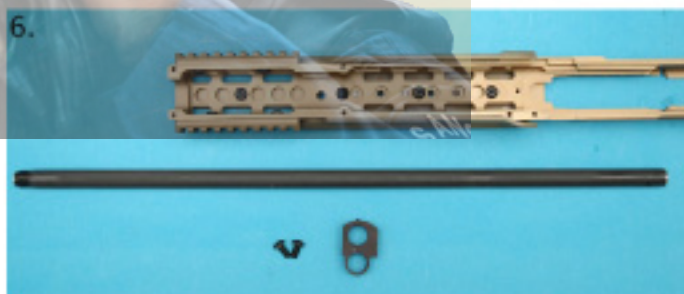

6) 分解
 Loosen screws and separate the barrel



7) 安裝上旋組件套入G&P附加槍管
 Install the hop up set to the supplied barrel




8) 安裝附加槍管組套入槍機
 Install barrel assembly



9) 安裝螺絲及零件 (程序3)
 Reinstall screws and parts removed from step 3



11) 拆除電線
 Remove the motor and power cords

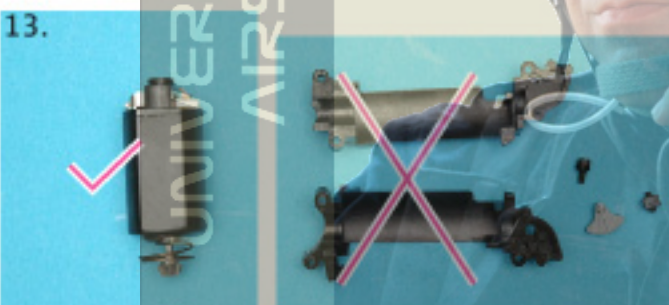

Leave motor only


13) 只保留原裝馬達



15) 留意部件方向
 Pay attention the highlighted parts




10) 拆除馬達電線
 Remove the motor and power cords

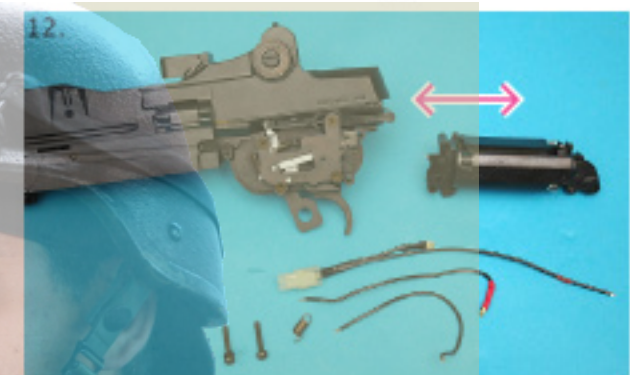

12) 馬達和槍機分開
 Remove the motor and housing



14) 安裝G&P附加馬達殼
 Assemble G&P motor housing

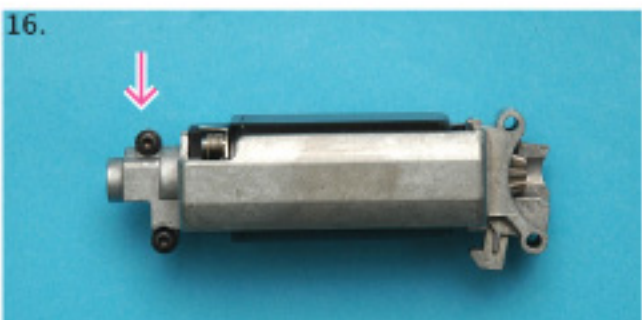

16) 安裝螺絲鎖緊馬達
 Install and fasten the screws



17) 重新安裝馬達
 Assemble motor housing into receiver




18) 安裝電線
 Connect power and motor cords



19) 電線向馬達後方桿接
 Connect rear power cables



20) 調教馬達
 Fine tune gear engagement with motor

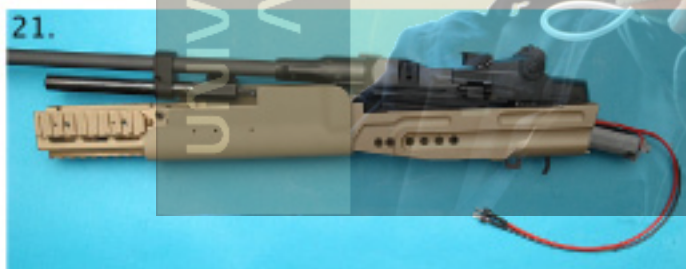


21) 槍機及槍身安裝
 Separate grip and lower handguard



22) 把槍機及G&P護環安裝
 Reinstall trigger guard



23) 安裝尾柄及槍帶扣
 Install butt stock and sling plate

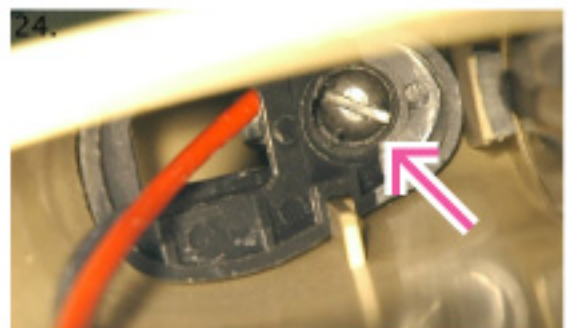


24) 鎖緊螺絲
 Fasten the butt stock screw




25) 鎖緊準星座和零件
 Fasten front assembly and small parts



26) 安裝頂機
 Install the upper receiver

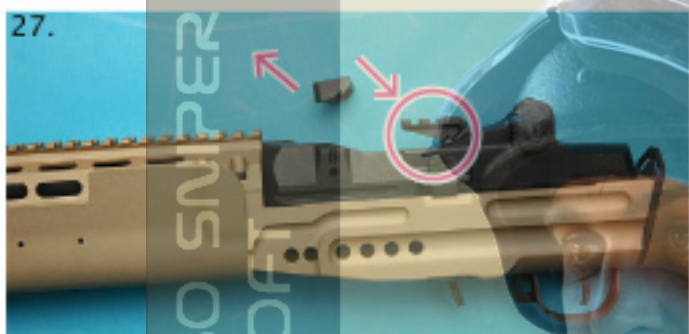

27) 更換鏡台座
 Replace rear scope mount base

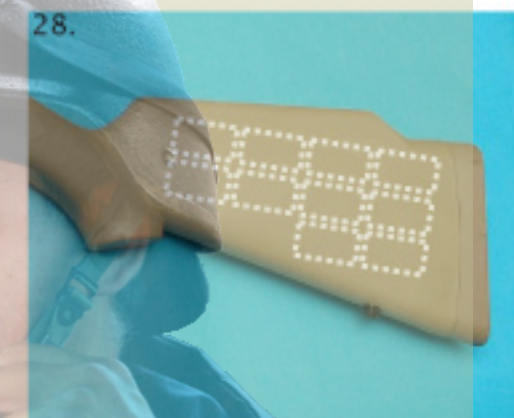

28) 尾柄最多可放置12v 3000mah
 (D型) 電
 Stock maximum holds 12v 3000mah
 (D size) battery

29) 安裝完成 Install completed



30) 可配合G&P M3瞄準鏡 (GP151)

Install with G&P M3 scope

