



# DMP



www.gp-web.com



## DELUXE COMPLETED MODEL

# Instruction Guide

**Butt pad layers can be removed for butt's length adjustment.**

**Losen stock screws for cheek pad's height adjustment.**

**Turn to adjust the rear sight to up or down**

**Turn to adjust the rear sight to right or left**

**Losen screw to adjust mount base level (if need)**

**Turn to adjust the rear sight to right or left**

**Losen two butt's screws to install batteries**

**Too much hop**

**Fit**

**Not enough hop**

**More hop**

**Lesser hop**

**Semi**

**Auto**

**Press to release magazine**

**Safety ON Safety OFF**

**Batteries type recommendations**

- 9.6V
- 8.4V
- 7.2V

**"Play with safety" is very important to avoid any unexpected occur, some rules you need to pay attention in mind.**



**Disconnect the battery while not play**

**Ensure the power is cut to avoid unexpected shoot**

**Never touch the trigger while not ready to shoot**

**Always with goggles protected during operations**

**Don't try to disassemble this toy without related experience**

**Keeps this toy stored in bag or case while not play, to keep out of reach from not invited**