Instruction Manual

Changhua Headquarters / No. 999, Zhonghua Rd., Shengang Township, Changhua County 50952, Taiwan
Taipei Office / 11F-3,NO.27,Lane 169,Kangning St,Shijr City, Taipei County 22180,Taiwan
Warehouse in USA / 1122 Coiner Court City of Industry, CA91748 U.S.A.

Sales Department / sales@guay2.com | b2b@guay2.com Technology support Department | support@guay2.com Warehouse in USA | sales101@guay2.com

/ 886-4-798-9000 (

Taipei Office / 886-2-2692-2000 Warehouse in USA / (1) 626.581.0101

rs / 886-4-798-9900 **Taipei Office** / 886-2-2692-4000 Warehouse in USA / (1) 626.581.1011





G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES





Contents

- **01** Introduction
- **02** Components
- **03** Warning
- 05 Selector and safety setting
- 06 Installing CO2 cartridge
- **07** Sight adjustment
- 08 Removing the bolt & Hop-up adjustment
- 09 Loading the magazine
- 10 Installing the rifle sling
- 11 Parts list
- **13** Maintenance
- **14** Trouble shooting

Introduction

G980 was derived from an earlier rifle (The Karabiner 98 Kurz).

The Karabiner 98 Kurz (often abbreviated Kar98k, K98, or K98k) was a bolt action rifle chambered for the 8x57mm IS/7.92×57mm IS cartridge that was adopted as the standard service rifle in 1935 by the German Wehrmacht. It was one of the final developments in the long line of Mauser military rifles. Although supplemented by semi- and fully automatic rifles during World War II, it remained the primary German service rifle until the end of World War II in 1945.

G&G is constantly researching new ways to innovate in designs and materials to ensure the best quality of our products. All G&G products are designed and built with computer assisted design tools such as Computer Numerical Control (CNC) turning operation to ensure tight precision and quality.

G&G values our customer's feedback, as we incorporate improvements and upgrades to our future products. All G&G products are proudly made in Taiwan.





Orange tip disclaimer

All G&G Airsoft products come with a permanently affixed blaze orange tip required by United States law to comply with any and all safety

A If you alter, remove, or modify the orange tip, the warranty will be Void.

......

You may be liable for damaging public or personal property as well as injuring a person or animal. Even if you only meant to shoot it as a "Practical Joke."Always observe Safety First and Good Manners when enjoying the fun sport of shooting



Safety procedures:

- 1.Attach the safety cap to the muzzle.
- 2.Set the selector lever to the safety position.
- 3. Remove the magazine.
- 4. Remove CO2 cartridge.

When shooting the air guns for target practice or in a game situation, you and all participants must wear safety goggles or other eye protective gear. Also, pay attention to ricochets. It is very important to pay attention to third parties other then

yourself.





For more product information

please visit our website

When you carry the air gun, attach the safety cap, set the selector lever to the safety position and always put the air gun in a case or bag.



Select a safe place for operating the air gun, and avoid places where people and cars are around.



Always attach the safety cap to the muzzle and store the air gun in a case or bag in a safe place that is out of reach by children.



All products employ high precision 6.04mm barrel. Use with

regulating the usage and the ownership of airsoft guns.

precision 5.95mm BB pellets is highly recommended. Damage to

the product due by faulty BB pellets voids the warranty. Use with

A The buyer and the user of this product shall adhere to all local laws

Adult supervision required. May be hazardous up to 50 meters.

A Read all instructions before using this product.

A Always wear safety goggles when using this product

A Misuse or careless handling of this product may cause injury.


A This product is intended for users 18 years or older.

Never direct the muzzle towards a person or animal. This may cause harm or serious injury if an accident was to occur.

caution.



Looking into the muzzle is extremely dangerous! Regardless if BB's have been loaded or not.If you get hit in the eve by a BB, you may in worst case, lose your eye

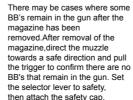





Make sure to always put the safety cap on the muzzle when you are not shooting Do this to prevent accident, discharge of BB's and also for dust protection purposes. Never pull the trigger while the safety cap is attached to the muzzle



Activating the trigger carelessly is extremely dangerous. Never put your finger on the trigger unless the safety cap is removed and you are ready to shoot a target



Disassembling or modifying the gun may adversely affect the performance of the gun and be dangerous. It also may Void the warranty and in some areas it might be against the Law.



Selector and safety setting 5 Select





- Never operate the selector while pulling the trigger. Otherwise, malfunctions may occur.
- ▶ Pulling the trigger with the selector being set at safe mode may damage the airsoft gun.



A Before using the selector setting, Please follow the steps below:

- 1.Pull the bolt handle up.
- 2. Slide the bolt handle back.
- 3. Then Slide the bolt handle forward.
- 4. Pull the bolt handle down to lock it into place.
- 5. Then use your selector setting



Semi mode The gun will fire one shot each time the trigger is pulled.



Safety setting mode

When you are not firing the gun always set the selector to the safe position and attach the protective cap on the

You should also do this whenever you are storing your gun in a case.



Sight adjustment 17

Front sight adjustment









Turning the screw will move the pellet hitting point to the left or right.

Rear sight adjustment

Press the button and slide forward or backward for adjustment.









- 1. Move the bolt stop away.
- 2.Remove the bolt handle.

Warning

- ▶ Never hold the gun sideways as the BB pellets will curve right or left.
- ▶ This is due to the HOP-UP system.

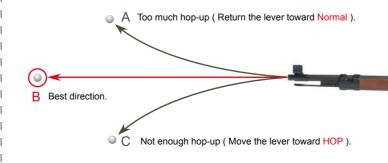

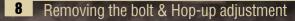




Push the left side receiver button.



Turning hop-up dial for desired flight pattern of the BB pellet. The hop-up dial can be turned to a certain degree. Turning it too much will damage the unit.





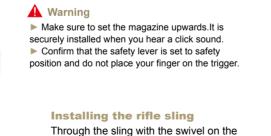

right side of the rifle





Slide the end of the sling with holes through the butt stock




Slide the sling through the buckle and over the stud.



Push the stud up through the desired hole in the sling.



Place the buckle properly in the butt stock as shown in the picture.

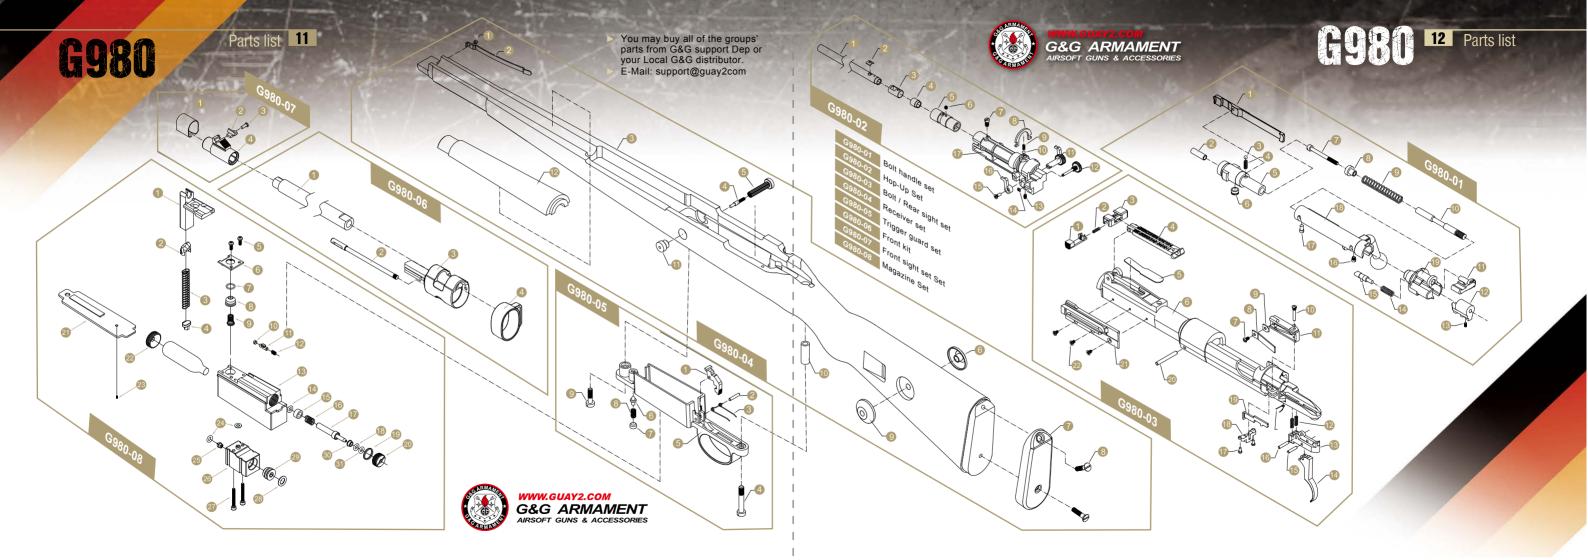



G&G ARMAMENT AIRSOFT GUNS & ACCESSORIES

14 Trouble shooting

- 1 Check to ensure that your lubricant reservoir is at the required level for optimal operation. This can cause mechanical malfunctions if not properly maintained.
- 2 Point the muzzle in a safe direction and inspect the chamber or feed tube if the weapon doesn't fire. Typically, a pellet or BB may jam inside the chamber, causing the airsoft gun not to fire, or other debris may be inside the barrel or chamber. Place the airsoft gun on "Safe." Look inside the chamber or feed tube to locate and remove the jam or debris. A slender pointed tool or tweezers can be used to grab jammed ammunition or other debris.
- **3** Check all O-rings, air seals and pistons if the weapon isn't shooting at its indicated velocity range. Low air pressure causes poor range performance. Consult your specific manual to access the O-rings, seals and pistons. Look for any visible damage or worn spots. Replace the items if needed.
- 4 Check the CO2 cartridge, if the gun is so equipped. Often, poor performance is caused by low CO2 levels. You may hear a loud burping sound, or the airsoft gun won't fire properly when the CO2 is low or empty. Ensure that the CO2 cartridge is properly installed and sealed correctly. Installing a fresh cartridge generally corrects this problem.
- 5 Adjust your sights or scope if the airsoft gun isn't firing on target accurately. If no other problems are evident, fine tuning the sights or scope will bring your shots back on target. Often, the sights can become out of tune through transport, improper storage or dropping the weapon. Consult your specific manual for detailed sight adjustment procedures.

When Hopping Up is improper

SYMPTOM	POTENTIAL	CORRECTIVE
Pellets flying upwards	Too much hop setting.	Gradually return adjustment lever towards backward.
Short flying distance of pellets (less hopping up effect)	Too much hop setting.	Gradually return adjustment lever towards forward.
	Hop packing contaminated by oil or dirt.	Fire pellets equivalent to 4 to 5 magazine or clean the chamber using cleaning rod.
	Dirt inside a barrel.	
	Worn or damaged hop packing.	Purchase the replacement part at your dealer or from G&G and replace it.
Cannot adjust	Damaged adjustment lever or other pasts.	Purchase the replacement part at your dealer or from G&G and replace it.
Frequent pellet clogging	Too much hop setting.	Gradually return adjustment lever towards Normal.
	Improper size BB pellets.	Use the BB pellet supplied by G&G Armament.
	Dirty hop packing.	Clean using the cleaning rod or consult your dealer or G&G for repair.