

1 各部名稱 Component names



*每一款槍型基本配備不同依實際出貨為主。圖片僅供參考。
The components/accessories for each model may have kind of differences depending on the actual goods. Images are only for reference.

ICS-51 Proline



ICS-52 Proline

ICS-55 Proline

ICS-56 Proline

ICS-53 Proline

ICS-54 Proline


ICS-153 Proline

ICS-152 Proline

ICS-151 Proline

ICS-154 Proline

2 單連發選擇方式 Selector lever and safety setting

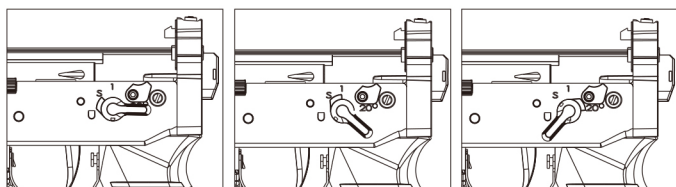

保險 Safety setting


單發 Semi automatic

連發 Full automatic


3 戰術軌道調整 Tactical rail adjustment

1 使用六角扳手將止付螺絲上旋鬆開
Loosen the hex screw by allen key.

3 先卡進前方鳩尾槽並將頂銷對準錐形孔
再使用C形扳手逆時針方向將頂銷轉緊
Insert the rail into the dovetail joint with
Swiss shell mark. Tighten the pin by a
wrench.

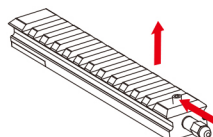

2 將頂銷旋至最底
Screw the pin to the end.

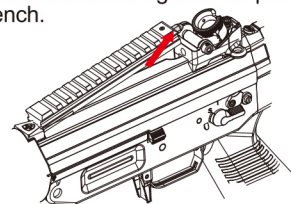

4

齒輪箱拆解 Disassemble Gear-box

1 拉出槍身插銷，卸下護木
(為了安全，請同時將電池取下
並確定槍機已覆位)
Disconnect battery and
release charging handle

Pull out pin and remove
handguard

2 按壓槍身固定卡榫，
將上槍身往前推出
Press instant
disassembly
button Pull
upper receiver

3 旋下螺絲，取下握把底蓋
Screw off the grip bottom cap

4 取下馬達
Take off motor

8 BOX 往上拉即可取出
Lift off the box

將折疊托往後拉開
Pull back the folding
stock

7 將槍身兩側槍身螺絲旋下
Screw off the screw

5 準星調整方式 Front sight adjustments

切換夜間準星
Switch to night front sight

準星左右調整
Windage correction

6

裝電池方法 Battery fitting method

1

1. 拉開槍身插銷
Pull the pin

2. 將下護木往後推
Pull lower
handguard

2

1. 將上護木往上拉開
Lift upper
handguard

2. 將下護木往前推
Push forward lower
handguard

3. 將下護木往下取出
Take off lower handguard

3

將電池裝入護木
並接上電線
Install battery
and connect

4

依拆卸步驟反向
將護木裝好
Assemble handguard
by reversed way

7

折疊托調整 Folding stock


1

按壓槍托卡榫
即可折疊
Push the butt
catch and
fold the butt


2

8

貼腮調整 Cheek Rest Installation Guides

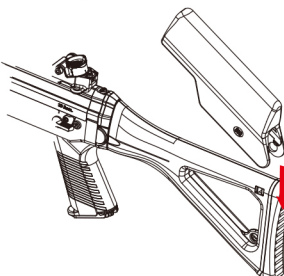


先將貼腮後端卡入槍托尾端
Insert the bottom of ICS cheek
rest into SIG rear stock first.

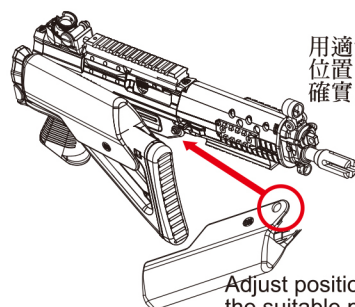


用適當工具前後調整
位置，使貼腮開孔能
確實閉閉槍身插銷

Adjust position to
the suitable position where
the cheek rest won't interfere
with stock folding.


9 H-UP彈道調整 H-UP adjustment

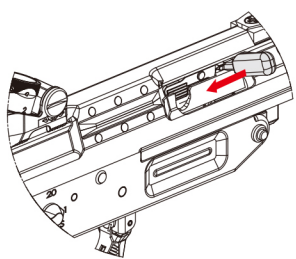


拉柄往後拉
Pull changing handle to the end

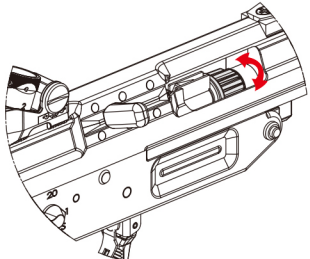


調整
Adjust H-UP

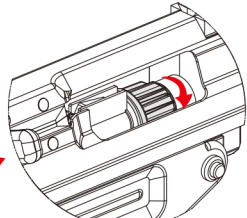

下墜 Increase Hop adjustment

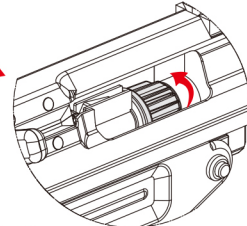


上飄 Decrease Hop adjustment

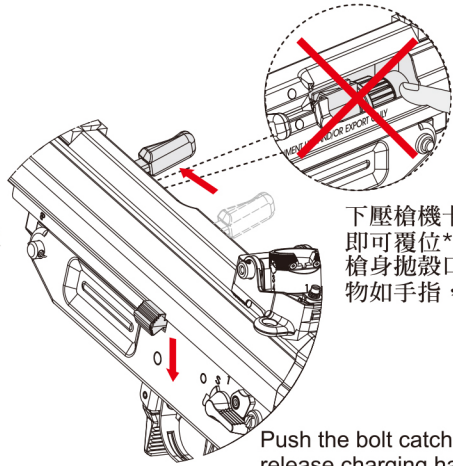

下壓槍機卡榫，槍機即可覆位*(注意右側槍身拋殼口是否有異物如手指，避免夾傷)
Push the bolt catch up to release charging handle. Don't put anything or finger in chamber.


10 覘孔調整方式 Rear sight and adjustments

覘孔左右調整 Rear sight left-right adjustment

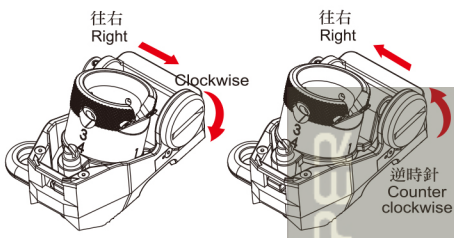


依旋鈕方向旋轉，即可將覘孔組左右調整
To adjust for windage by turning windage correction screw

覘孔高度調整 Rear sight up-down adjustment

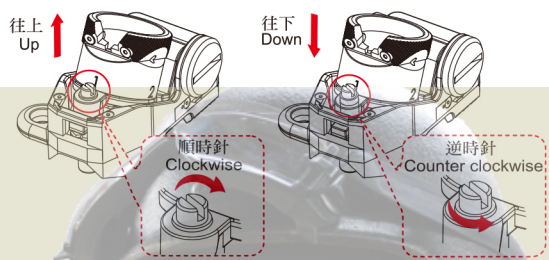


將調整鈕依順時針轉動可提高覘孔組
將調整鈕依逆時針轉動可降低覘孔組
Elevate rear sight by turning the screw CW
lower rear sight by turning the screw CCW

精密射擊調整 Rear sight precision targeting adjustment

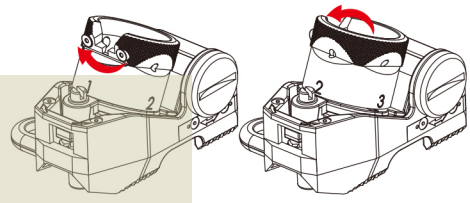


將覘孔依順時或逆時方向旋轉，可變換遠距或近距射擊。
According to firing range to adjust rear sight drum


11 槍管調整方式 Barrel system install

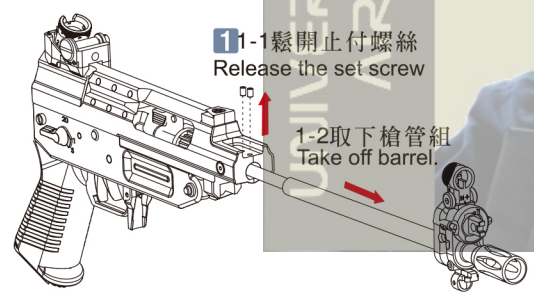


1-1 鬆開止付螺絲
Release the set screw
1-2 取下槍管組
Take off barrel.

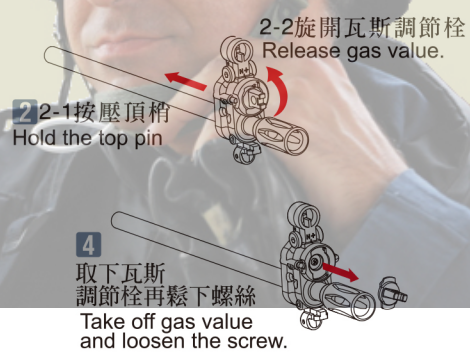


2-1 按壓頂梢
Hold the top pin
2-2 旋開瓦斯調節栓
Release gas value.

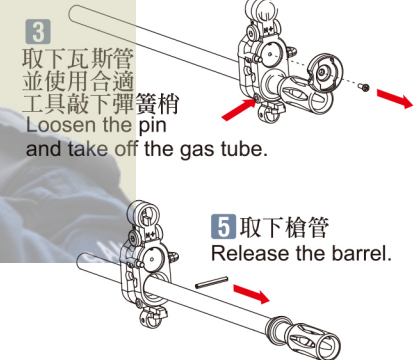


3 取下瓦斯管並使用合適工具敲下彈簧梢
Loosen the pin and take off the gas tube.

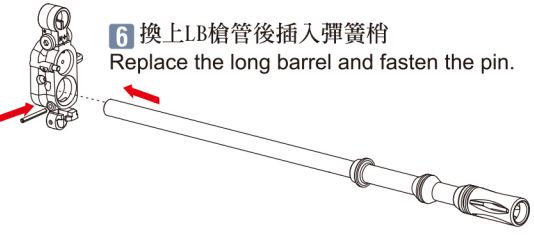


5 取下槍管
Release the barrel.

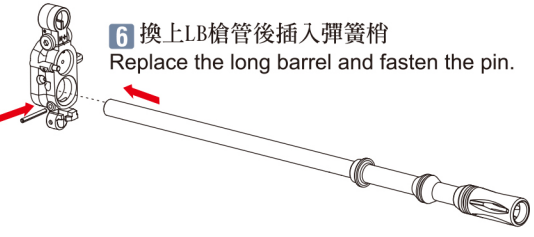

6 換上LB槍管後插入彈簧梢
Replace the long barrel and fasten the pin.

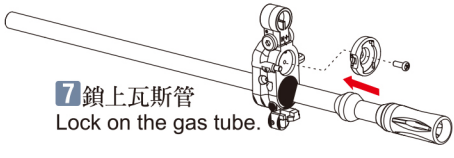


7 鎖上瓦斯管
Lock on the gas tube.

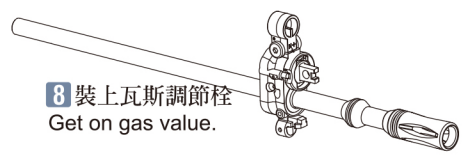


8 裝上瓦斯調節栓
Get on gas value.

12 腳架座調整方式 Bayonet system install

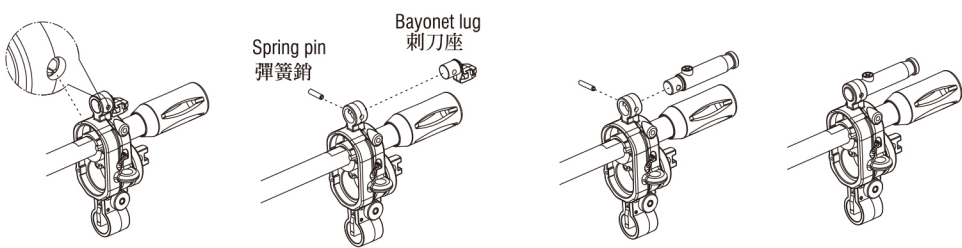

Bayonet lug 刺刀座
Spring pin 彈簧銷


1. 使用合適工具敲下彈簧銷
1. Loosen the pin
2. 卸下刺刀座
2. Release bayonet lug
3. 先裝上腳架座再插入固定銷
3. Install bayonet lug and spring pin
4. 完成圖
4. Finished

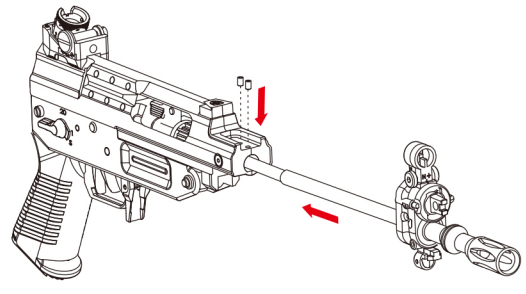

9 將槍管裝上成槍(可依護木調整位置)鎖上止付螺絲
Install the gun tube to the main part and adjust the position according to handguard.

13 各部零件說明 Description

■ ICS-51 Proline

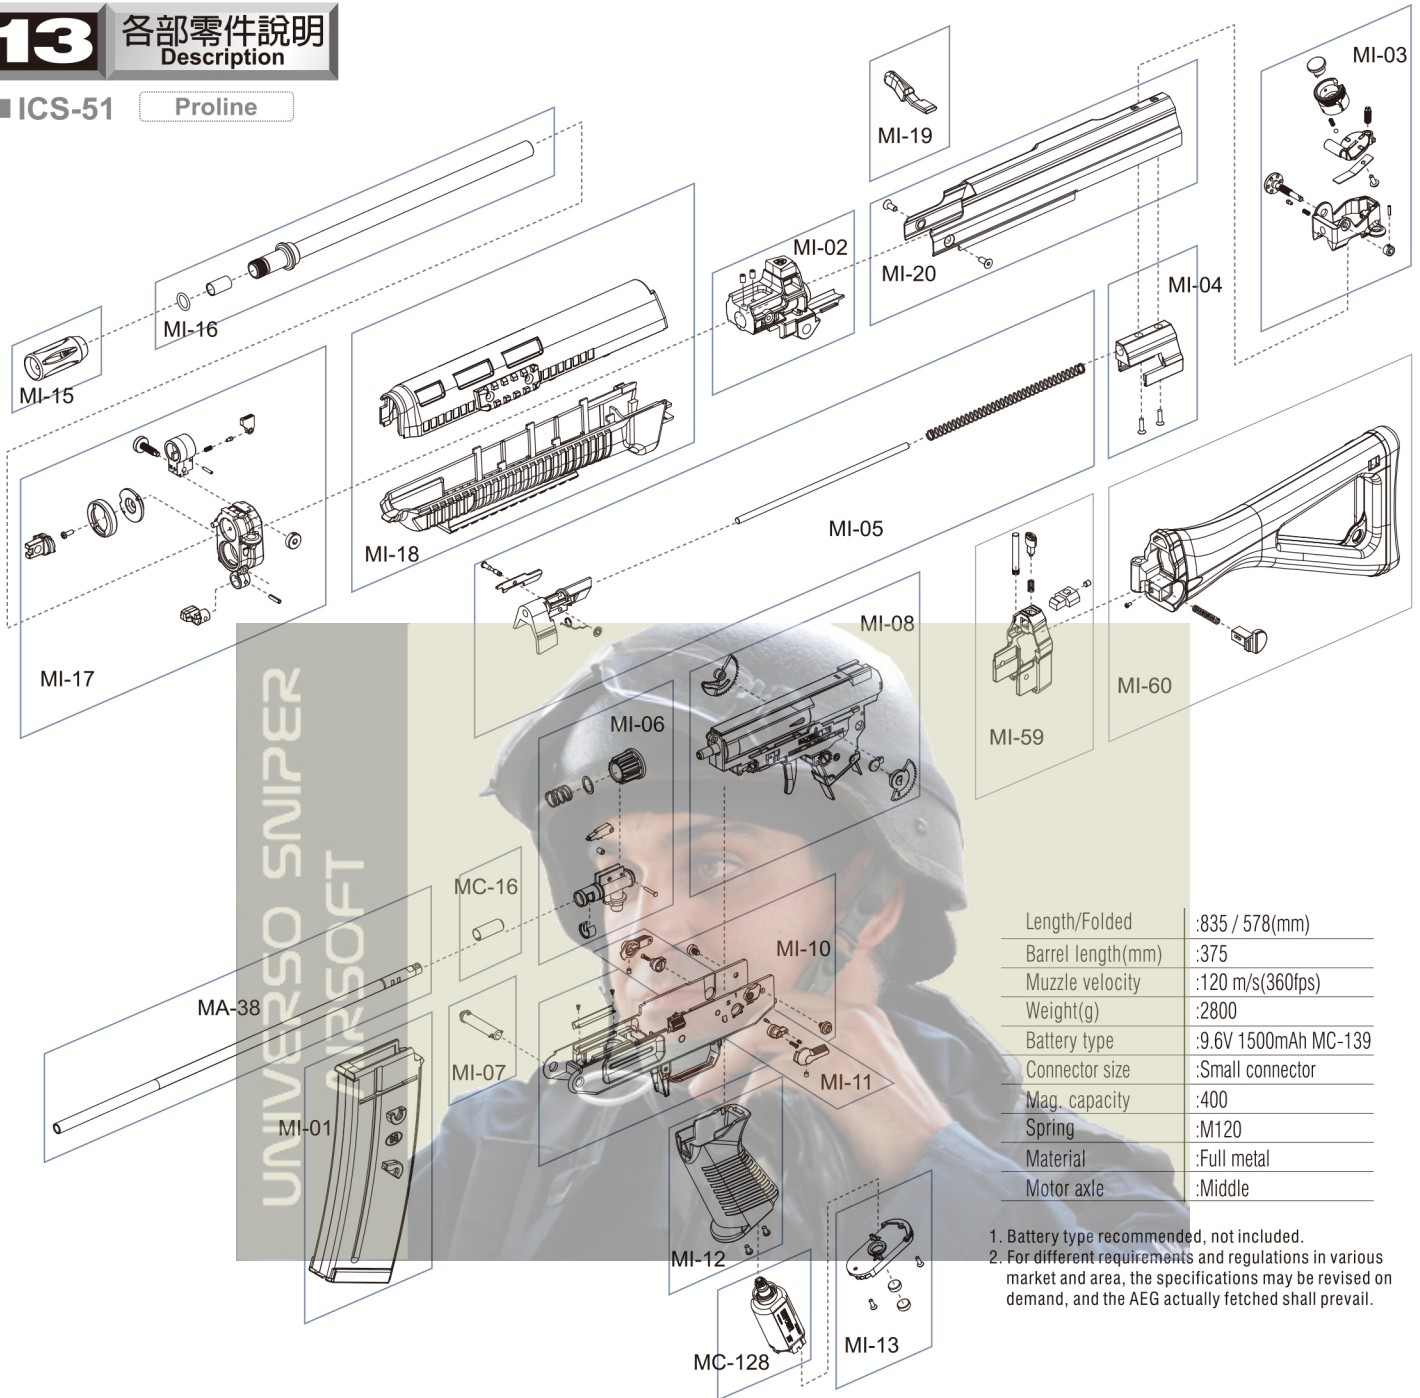


| | |
|-------------------|----------------------|
| Length/Folded | :835 / 578(mm) |
| Barrel length(mm) | :375 |
| Muzzle velocity | :120 m/s(360fps) |
| Weight(g) | :2800 |
| Battery type | :9.6V 1500mAh MC-139 |
| Connector size | :Small connector |
| Mag. capacity | :400 |
| Spring | :M120 |
| Material | :Full metal |
| Motor axle | :Middle |

1. Battery type recommended, not included.
2. For different requirements and regulations in various market and area, the specifications may be revised on demand, and the AEG actually fetched shall prevail.

WARNING 警告 電槍使用之注意事項 Maintenance

1. 請勿使用回收及劣質的 BB 彈，以減少槍管損耗與避免卡彈的情形發生。
Do not use recycle or low quality BB pellets to reduce the barrel damage and prevent from jams.
 2. 如發現有卡彈的情形，應立即停止射擊，如卡彈後再勉強射擊，則會增加齒輪損耗。請使用內附通槍條，將卡彈清除後才可繼續使用。若完成通槍基本故障排除後仍無法使用時，請回原採購店家或專業經銷商尋求維修服務。
When a BB pellet is jammed, cease fire immediately. Firing under jam may cause damage on gears. Please use the cleaning rod that came with your airsoft gun to push it into the barrel by moving down gently until the jammed BB pellet comes out. If the jam still cannot be solved, please contact your original purchase retailer or ask for professional agent for repair service.
Note: No need to remove the barrel when eliminating jam.
 3. 使用前請先確定您的電池已充滿電，當使用中發覺電池即將用盡或射擊速度降低時，應立即更換電池。
Please make sure the battery is fully charged before using. When the battery is run out or firing speed is decreasing, new battery has to be replaced immediately.
 4. 請定期使用通槍條清潔槍管，以保持槍支射擊時的準確性及減少卡彈的情形發生。
Please use cleaning rod periodically to clean the barrel to ensure the firing precision and reduce jam.
 5. 請勿經常空槍射擊，以減少BOX及齒輪不必要的損耗。
Do not dry fire the airsoft gun at any time to reduce damage to the gearbox.
- 使用前請務必詳閱此說明書限18歲以上使用
Always read through this manual before operation.
User restricted to 18 years of age or older.

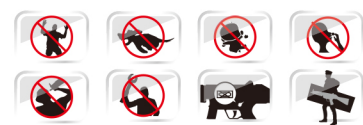

WWW.ICSBBS.COM