

1 CXP系列各部名稱 CXP Series component names



■ ICS-60 CXP.08 Proline



■ ICS-121 Proline



■ ICS-144 Sportlines

■ IMT-060-1 Proline



■ IPT-160-1 Sportlines

■ ICS-60 CXP.08 Proline




■ ICS-160 Sportlines

2 精確射擊調整動作 Ironsight adjustment


2-1 視孔調整方式 Open sight adjustment

A: 精密射擊調整 Rear sight precision targeting adjustment

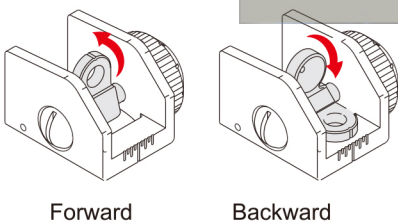


近距將視孔往前推 / 遠距將視孔往後推
Common/close-range low-light shooting.
Push forward to engage battle sight.
Precision daylight shooting.
Push backward to engage peep hole.

B: 視孔高度調整 Rear sight up-down adjustment

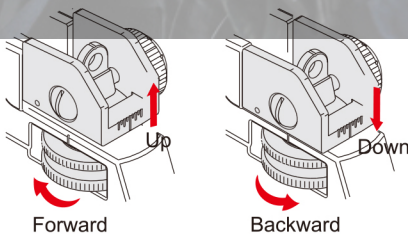


將調整鈕往前轉即可升高視孔組，
將調整鈕往後轉即可降低視孔組。
Turn the dial forward to raise the hitting point.
Turn the dial backward to lower the hitting point.

C: 視孔左右調整 Rear sight left-right adjustment

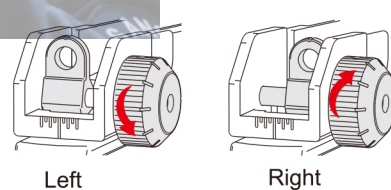


依旋鈕方向旋轉即可將視孔組左右調整
Turn clockwise to aim right.
Turn counter clockwise to aim left.


2-2 單連發選擇方式 Selector lever setting

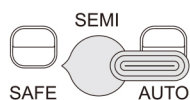

保險 Safety setting

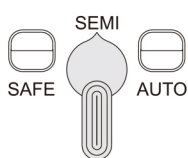


單發 Semi automatic

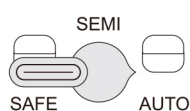

連發 Fully automatic


2-3 準星高度調整 Front sight adjustment

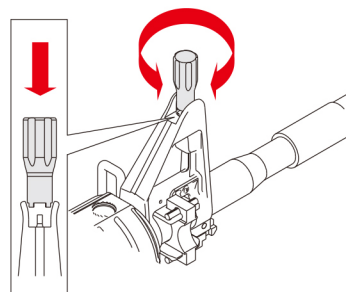

將準星調整桿壓入定位
轉動即可調整高低
Push and turn clockwise
to raise B.B. hitting point.
Turn counter clockwise to
lower B.B. hitting point.


3 可動部的說明 Movable parts

3-1 可作動作 Movable parts

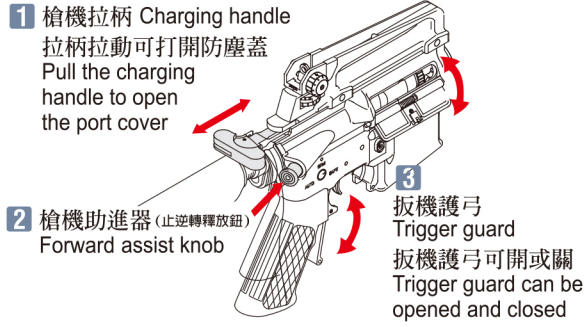


1. 槍枝使用完畢請轉至單發狀態下發射2~3下後再按止逆轉釋放鈕，可將活塞彈簧回覆至原處。
 2. 槍身做分解時，必須先釋放活塞彈簧，才可做分解動作。
1. After playing, fire 2-3 in single position, then push the forward assist knob to release the spring tension before storage.
 2. Push the forward assist knob before you assemble the gear box.

3-2 伸縮托調整 Retractable stock adjustments

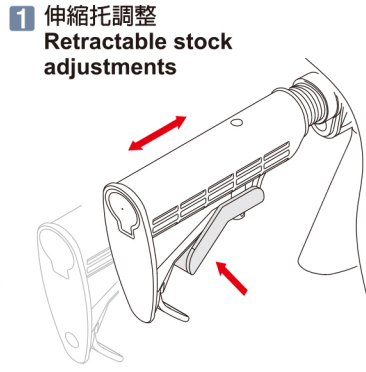

按下卡榫，即可將伸縮托向後拉或向前推，共有6段可供調整長度。
Push the stock release lever to unlock. Adjust the 6 position retractable stock to the most comfortable position.


2 伸縮托長度調整 Variable retractable stock length

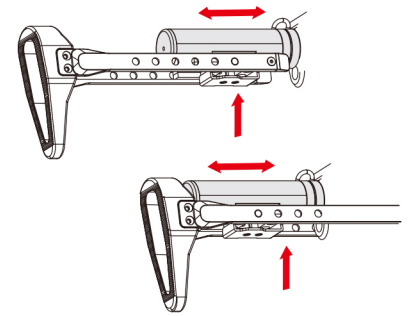

按下卡榫，即可將伸縮托向後拉或向前推，共有6段可供調整長度。
Push the stock release lever to unlock. Adjust the 6 position retractable stock to the most comfortable position.

3-3 The correct position of No.3 gear before reassembling

槍身結合 3 號齒正確位置圖

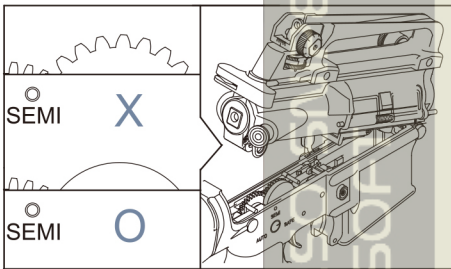

3號齒在槍身結合時，必須轉到正確位置，才可將上槍身蓋下。Make sure No.3 gear is turned to the correct position before you reassemble the receiver/gearbox.

3-4 馬達間隙調整 Fine adjustment of gear engagement


用六角板手調整馬達間隙螺絲 (出廠時已調整好)



Adjust the gap between the motor and the gear by an allen key (Original factory setting is for 9.6v battery)

3-5 下護木拆卸方式 Remove the lower handguard

先把固定螺帽拆下，再把前槍背帶扣環抽出，即可把下護木推出。

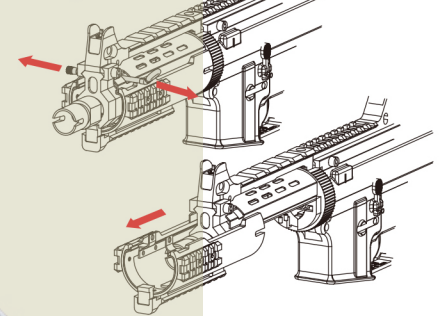

Release 2 pins can remove hand guard

4 彈匣使用方式 Magazine attachment

4-1 load BBs 裝BB彈方式

將彈匣上蓋依箭頭方向推開再倒入B.B.彈
Open the cover to load BBs. Please use ICS 6mm caliber BBs for optimum Performance.




建議使用ICS 6mm BB彈
Suggest to ICS 6mm BBs

依箭頭方向旋緊彈匣底下旋鈕，即可將 B.B. 彈順利送出。
To charge BB feed spring, please wind magazine.

4-2 Magazine loading and unloading


彈匣上下方式

按下彈匣卡榫即可將彈匣裝入或拆下
Press the magazine release lever to load or unload the magazine.

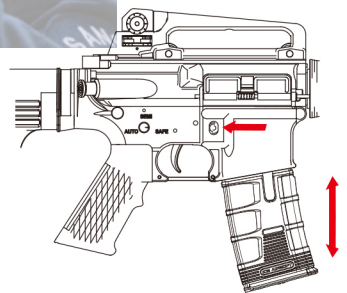

5 H-UP彈道調整 H-UP adjustment


1. 調整撥盤向上使子彈下降
1. Rotate the dial counter-clockwise to make the pellet go down.
2. 調整撥盤向下使子彈上升
2. Rotate the dial clockwise to make the pellet go up.

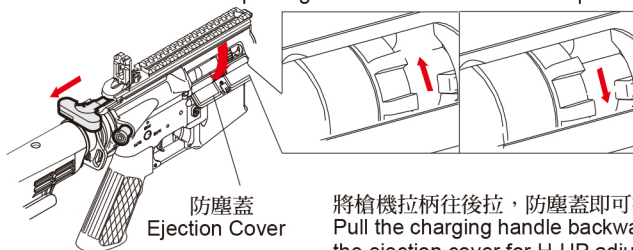

防塵蓋
Ejection Cover

將槍機拉柄往後拉，防塵蓋即可打開。
Pull the charging handle backward to open the ejection cover for H-UP adjustment.






H-UP調整：
子彈過於上飄，請調整撥盤向上旋轉。子彈過於下墜，請調整撥盤向下旋轉。BB彈呈現一直線的彈道才是正確射法。

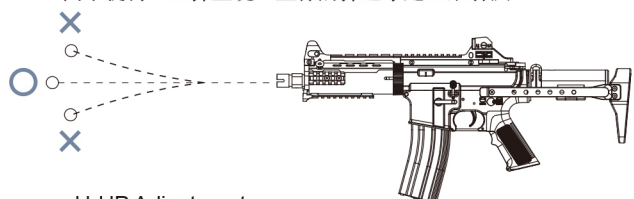





H-UP Adjustment:
When the BB pellet rises up, rotate the dial counter-clockwise to lower trajectory down. When the BB pellet falls down, rotate the dial clockwise to raise the trajectory up. Make sure the trajectory of BB pellet to be straight.

6 裝電池方法 Battery fitting method

6-1 Battery box fitting method 電池盒安裝方式

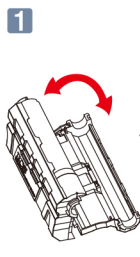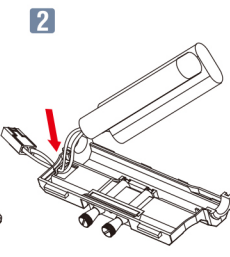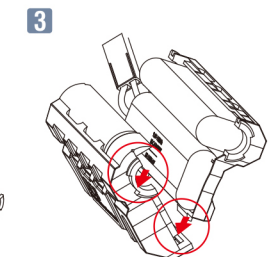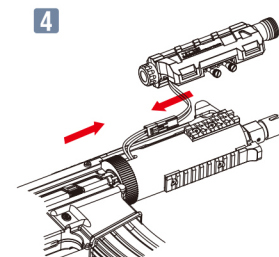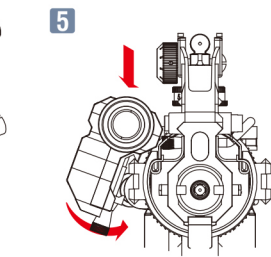-  電池插頭穿過電池盒缺口
Insert wire into battery end tunnel
-  卡榫對準缺口插入再合起來
Combine both side cover and on right position
-  將電池盒與槍身線路互插好
Connect battery to the receiver
-  依勢坎入
Mount on battery box
-  螺絲向右鎖緊即可
Turn screw right to lock

6-2 Battery fitting method (Handguard) 電池安裝方式(護木)

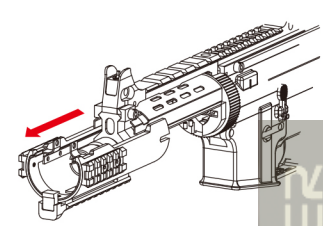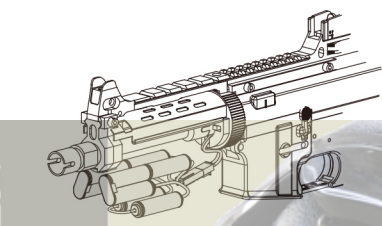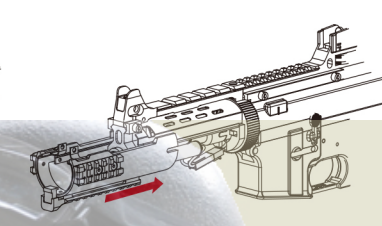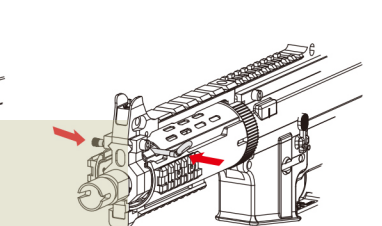
-  1 將下護木推出
Remove the lower handguard
-  2 將電池裝入接上電線
Insert the battery under the barrel and connect the battery.
-  3 將電池盒與電線定位好並把下護木推回
Manage battery wire and put off handguard.
-  4 再把前槍背帶扣環固定
To fixed the front sling swivel

7 齒輪箱拆解 Disassemble Gear-box

7-1 Remove the upper Gearbox 上槍身拆卸


注意 CAUTION ※重新組裝時，必須依反向動作組合
Reassembly is the reverse of disassemblys procedures.

- 1 使用起子依方向將槍身結合銷推出即可打開上槍身
To open upper receiver, use a screwdriver to push out frame lock pins.

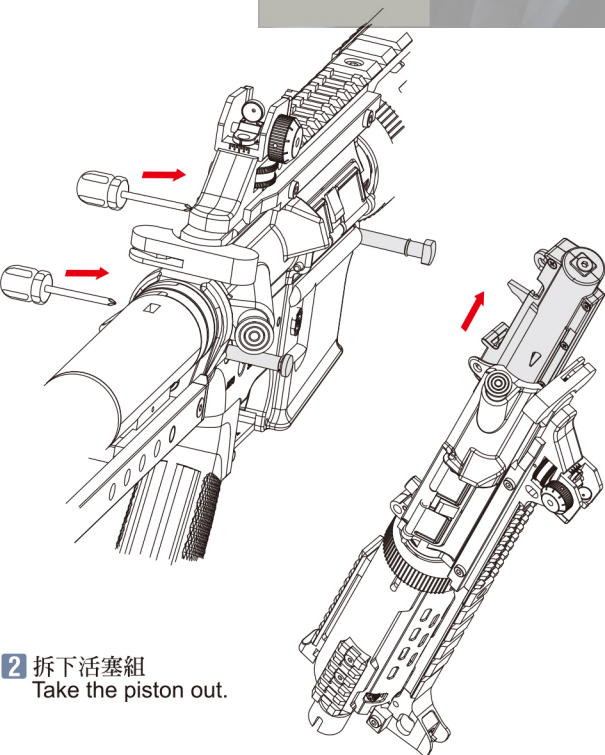

7-2 Remove the lower Gearbox 下槍身拆卸


- 1 旋開馬達底蓋螺絲
Take out the screws on the plate.
- 2 將馬達拆下
Take the motor out.
- 3 旋開握把內螺絲
Take out inner screw in the pistol grip.
- 4 旋開線槽螺絲
Take out the screw of wire from concavity.
- 5 旋開彈匣卡榫螺絲
Take out magazine release lever.
- 6 將下Box取出
Remove the gearbox

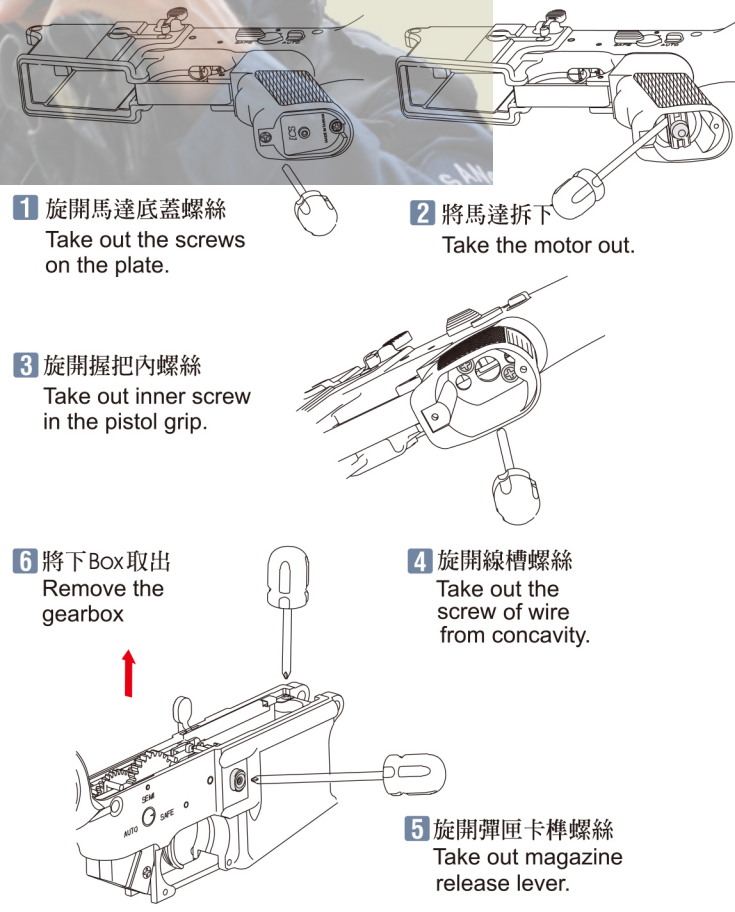

8 各部零件說明 Description

*每一款槍型基本配備不同依實際出貨為主。圖片僅供參考。
The components/accessories for each model may have kind of differences depending on the actual goods. Images are only for reference.

■ ICS-60
ICS-160

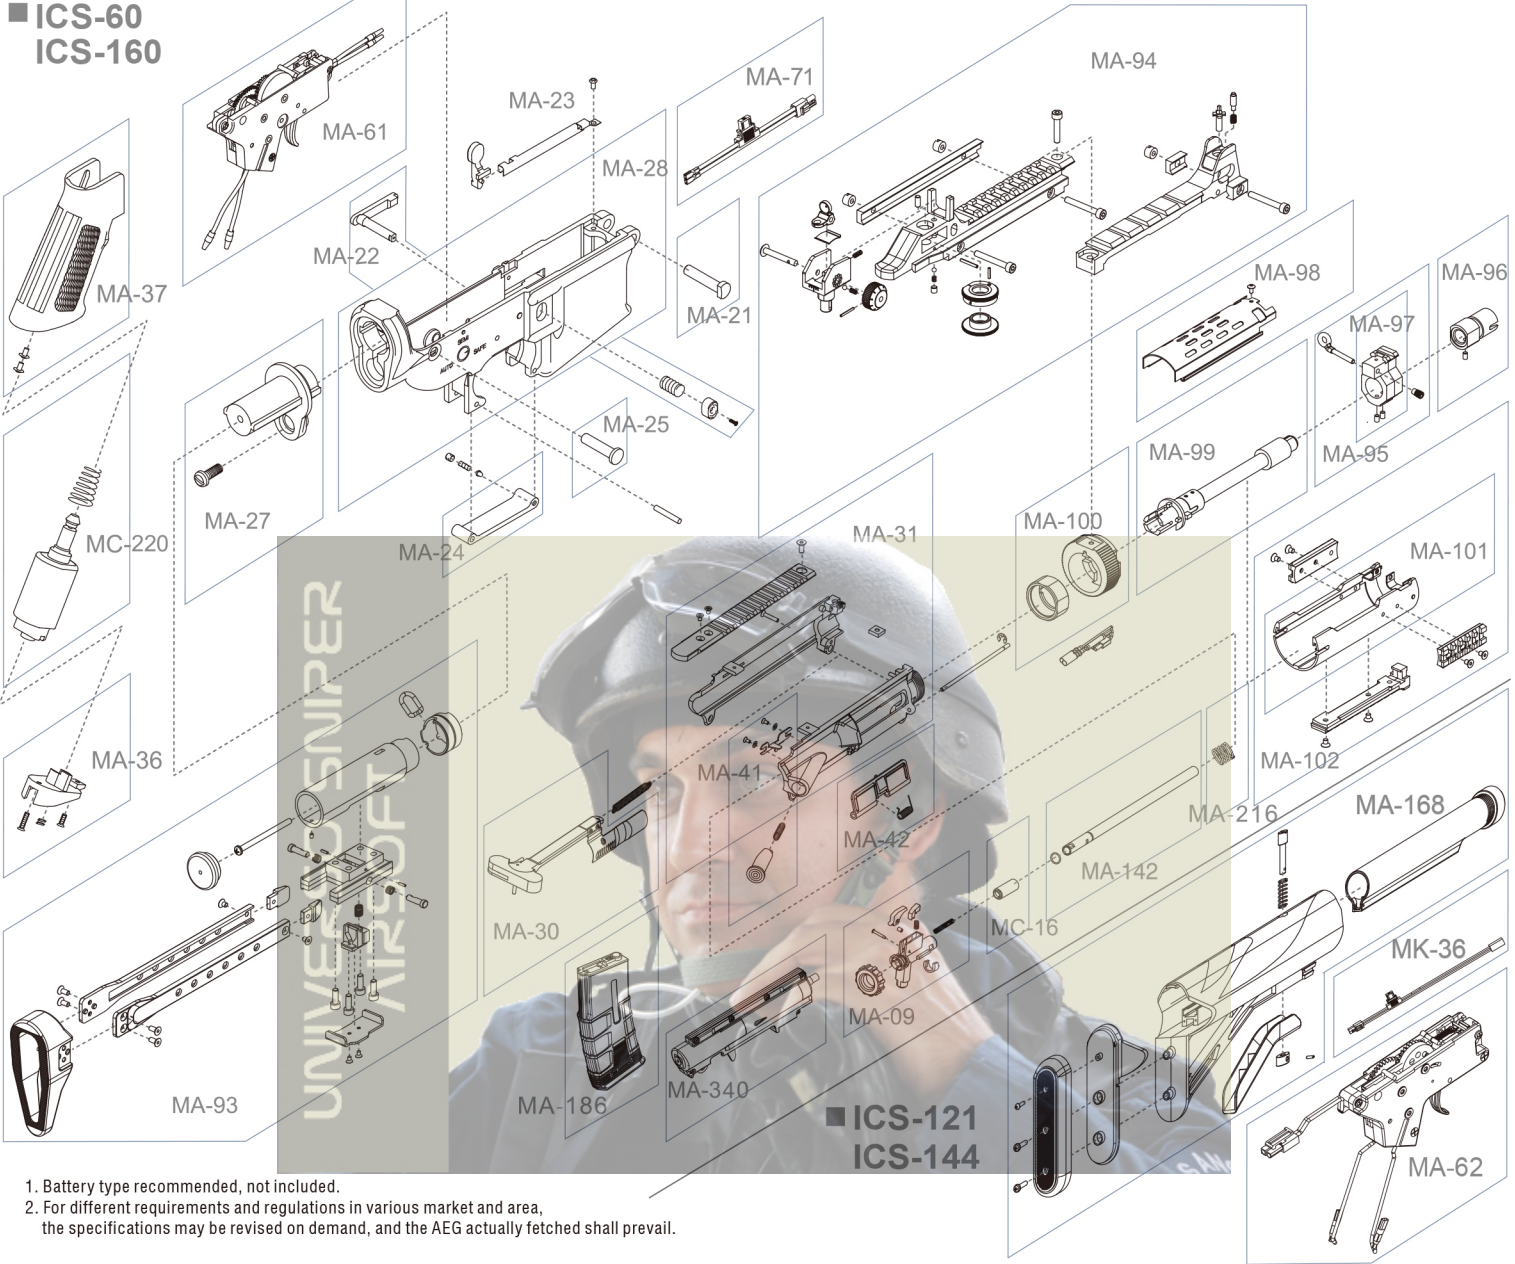

1. Battery type recommended, not included.
2. For different requirements and regulations in various market and area, the specifications may be revised on demand, and the AEG actually fetched shall prevail.

Patents acquired: R.O.C. M244431 / US7077117B1 / R.O.C. D159178 / USD706880S / EM002246579-0001 / R.O.C. M320468 / R.O.C. M351340 / R.O.C. D124836 / USD607078S

WARNING 警告 電槍使用之注意事項 Maintenance

1. 請勿使用回收及劣質的 BB 彈，以減少槍管損耗與避免卡彈的情形發生。
 2. 如發現有卡彈的情形，應立即停止射擊，如卡彈後再勉強射擊，則會增加齒輪損耗。請使用內附通槍條，將卡彈清除後才可繼續使用。若完成通槍基本故障排除後仍無法使用時，請回原採購店家或專業經銷商尋求維修服務。
 3. 使用前請先確定您的電池已充滿電，當使用中發覺電池即將用盡或射擊速度降低時，應立即更換電池。
 4. 請定期使用通槍條清潔槍管，以保持槍支射擊時的準確性及減少卡彈的情形發生。
 5. 請勿經常空槍射擊，以減少BOX及齒輪不必要的損耗。
- 使用前請務必詳閱此說明書限18歲以上使用
Always read through this manual before operation.
User restricted to 18 years of age or older.
1. Do not use recycle or low quality BB pellets to reduce the barrel damage and prevent from jams.
 2. When a BB pellet is jammed, cease fire immediately. Firing under jam may cause damage on gears. Please use the cleaning rod that came with your airsoft gun to push it into the barrel by moving down gently until the jammed BB pellet comes out. If the jam still cannot be solved, please contact your original purchase retailer or ask for professional agent for repair service.
Note: No need to remove the barrel when eliminating jam.
 3. Please make sure the battery is fully charged before using. When the battery is run out or firing speed is decreasing, new battery has to be replaced immediately.
 4. Please use cleaning rod periodically to clean the barrel to ensure the firing precision and reduce jam.
 5. Do not dry fire the airsoft gun at any time to reduce damage to the gearbox.



WWW.ICSBBS.COM