

1 CXP系列各部名稱 CXP Series component names



■ ICS-171 Proline



■ ICS-170 Sportline



■ ICS-171 Proline



■ ICS-172 Sportline



■ ICS-173 Proline



■ ICS-174 Sportline




■ ICS-175 Proline



2 精確射擊調整動作 Sight adjustment

2-1 準星 / 覘孔可扳動 Front/Rear sight adjustment



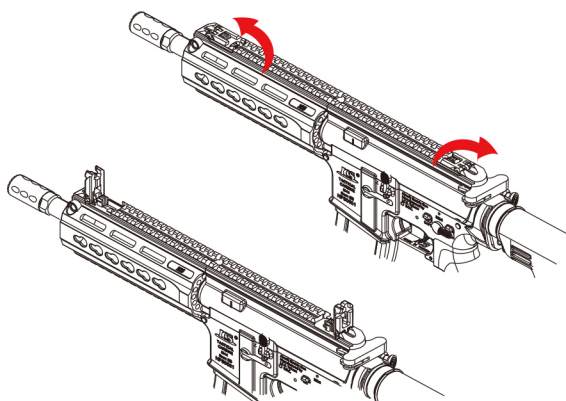


2-2 單連發選擇方式 Shooting mode setting

保險 Safety

單發 Semi

  連發 Full Auto

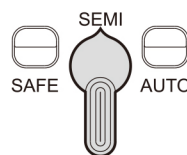


1. 槍枝使用完畢轉至單發狀態下發射2~3下後再關保險。
2. 槍身做分解時，必須先釋放活塞彈簧，才可做分解動作。
1. After playing, fire 2-3 by using semi, then switch the selector lever to safety position.
2. Before disassembling the gearbox, always release the spring by pressing the forward assist knob.

3 可動部的說明 Movable parts

3-1 可作動作 Movable parts

1 槍機拉柄 Charging handle
拉柄拉動可打開防塵蓋
Pull the charging handle to open the port cover

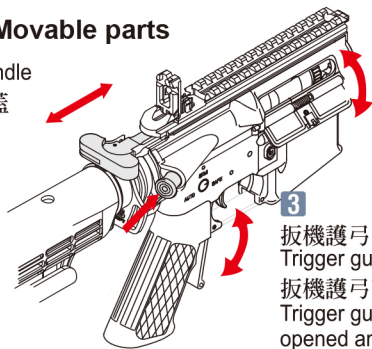


2 槍機助進器 (止逆轉釋放鈕)
Forward assist knob

3 扳機護弓
Trigger guard
扳機護弓可開或關
Trigger guard can be opened and closed


1. 槍枝使用完畢轉至單發狀態下發射2~3下後再按壓槍機助進器，可將活塞彈簧回覆至原處。
2. 槍身做分解時，必須先釋放活塞彈簧，才可做分解動作。
1. After playing, fire 2-3 by using semi, then press the forward assist knob to release the spring tension before storage.
2. Before disassembling the gearbox, always release the spring by pressing the forward assist knob.

3-3 槍身結合 3 號齒正確位置圖 The correct position of sector gear before reassembling

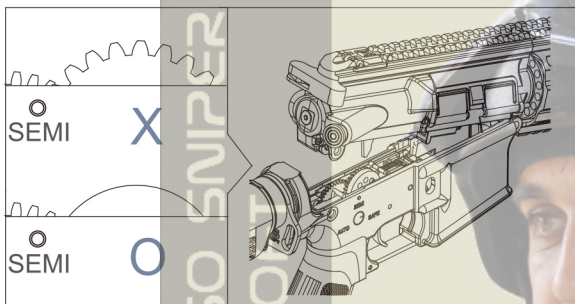

3 號齒在槍身結合時，必須轉到正確位置，才可將上槍身蓋下。
Make sure sector gear is turned to the correct position before reassembling the receiver/gearbox.


3-2 調整伸縮托/海豹托長度 Adjust retractable stock / crane stock length

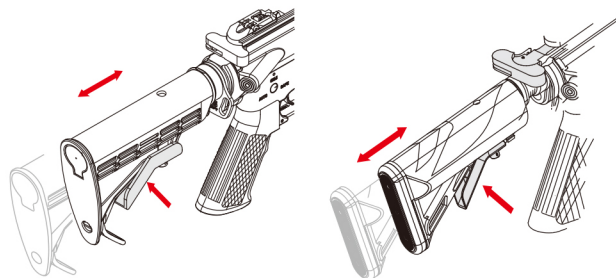

按下卡榫，即可將伸縮托向後拉或向前推，共有6段可供調整長度。

Press the stock release lever to pull or push the stock for length adjustment. 6-position available.

3-4 馬達間隙調整 Motor gap adjustment

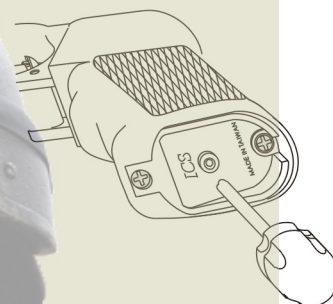


使用4mm六角扳手來進行馬達傘齒間隙調整(出廠前已調整好)。
Use the Allen key to make the fine-tune adjustment when needed. (Adjust when needed. Already made before out of factory)

4 彈匣使用方式 Magazine attachment

4-1 裝BB彈方式 Load BB's

將彈匣上蓋依箭頭方向推開再倒入B.B.彈
Open the cover to load BB's.

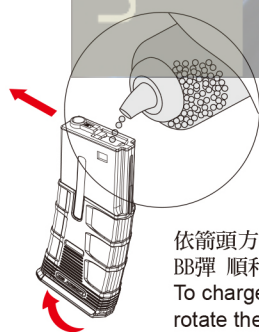


建議使用 ICS 6mm BB彈
ICS 6mm caliber BB's are recommended for optimum performance.

依箭頭方向旋緊彈匣底下旋鈕，即可將BB彈順利送出。
To charge BB feed spring, please rotate the gear under the magazine.


4-2 裝卸彈匣 Magazine loading and unloading

直接將彈匣插入槍身彈匣插槽；
按彈匣釋放鈕以卸除彈匣。
Directly insert magazine into magazine slot; unload the magazine by pressing the magazine catch button.

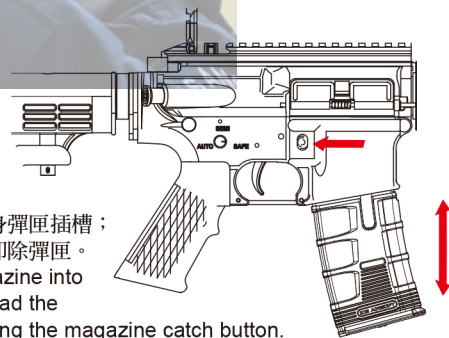

5 H-UP 彈道調整 H-UP adjustment


1. 調整撥盤向上使子彈下降
1. Rotate the dial counter-clockwise to make the pellet go down.
2. 調整撥盤向下使子彈上升
2. Rotate the dial clockwise to make the pellet go up.

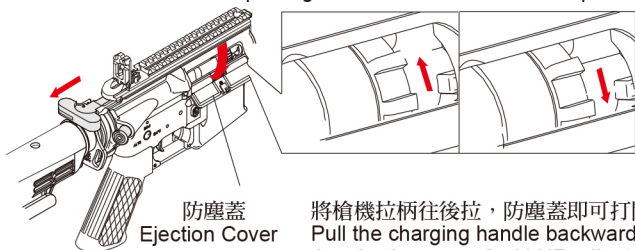

防塵蓋
Ejection Cover

將槍機拉柄往後拉，防塵蓋即可打開。
Pull the charging handle backward to open the ejection cover for H-UP adjustment.

H-UP調整：
子彈過於上飄，請調整撥盤向上旋轉。子彈過於下墜，請調整撥盤向下旋轉。BB彈呈現一直線的彈道才是正確射法。

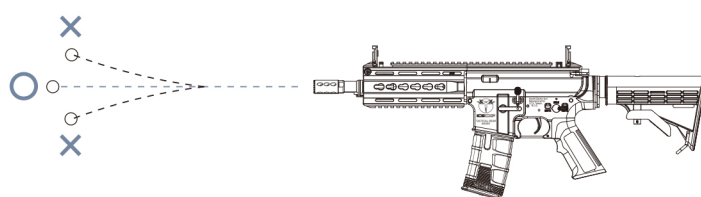


H-UP Adjustment:
When the BB pellet rises up, rotate the dial counter-clockwise to lower trajectory down. When the BB pellet falls down, rotate the dial clockwise to raise the trajectory up. Make sure the trajectory of BB pellet to be straight.

6


電池及護木的拆裝方法 Batteries and handguard installation

■ ICS-170 ■ ICS-171 ■ ICS-172 ■ ICS-173

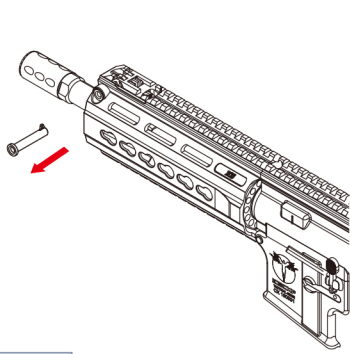


6-1

拉出護木固定梢
Pull out the handguard pin.

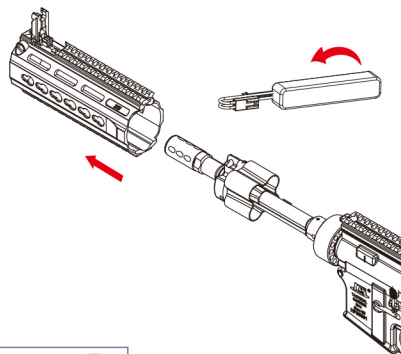

6-2

取下護木，裝入電池後接上電線
Pull out the handguard to install batteries.

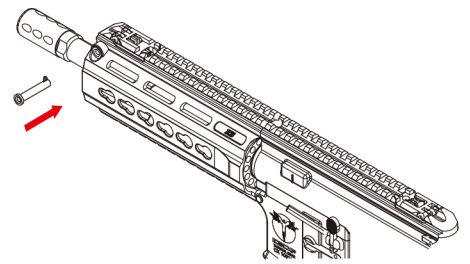

6-3


裝回護木及護木固定梢
Install the handguard back in place and insert the pin back into the handguard.

安裝電池 Battery Installation

■ ICS-174 ■ ICS-175

1. 旋開槍托底部螺絲
 2. 分開槍托底板
 3. 即可安裝電池
 4. 將槍托調整桿向下拉開後取出槍托
1. Release the screws on the butt plate.
2. Remove the butt plate.
3. Install battery.
4. The stock can also be removed by pressing and holding the stock release lever to install battery.

註：若您的電槍採用M100或以下規格的彈簧(初速低於360FPS或110m/s)，僅可使用電壓低於7.4V Li-Po 或 9.6V Ni-Mh的電池。
Note: For AEG with M100 or below spring setting (velocity setting below 360FPS or 110m/s), it is recommended to use voltage 7.4V Li-Po or below 9.6V Ni-Mh batteries only.

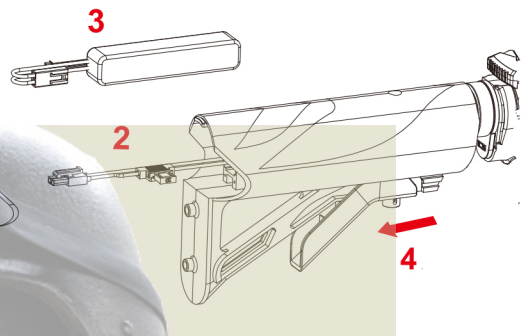

7

齒輪箱拆解 Disassemble gearbox

7-1 Remove the upper gearbox 上槍身拆卸

注意 CAUTION ※ 重新組裝時，必須依反向動作組合
Reassembly is the reverse of disassembly procedures.


- 1 使用起子依方向將槍身結合銷推出即可打開上槍身
To open upper receiver, use a screwdriver to push out receiver pins.

- 2 卸除上齒輪箱
Take out the upper gearbox.

7-2 Remove lower gearbox 下槍身拆卸


- 1 旋開馬達底蓋螺絲
Release the screws on the motor plate

- 2 將馬達拆下
Take the motor out.

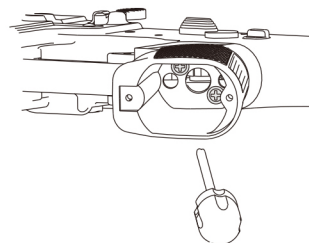

- 6 取出下齒輪箱
Remove the lower gearbox

- 4 旋開線槽螺絲
Remove the screw on the wire guard assembly

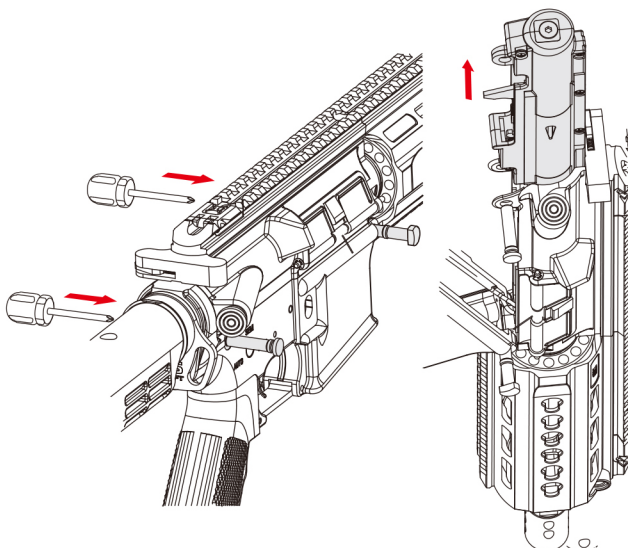

- 3 旋開握把內螺絲
Release the screws in the pistol grip




- 5 旋開彈匣卡榫螺絲
Remove the screw to take out the magazine release button

8 各部零件說明 Description

*每一款槍型基本配備不同依實際出貨為主。圖片僅供參考。
The components/accessories for each model may have kind of differences depending on the actual goods. Images are only for reference.

ICS-170 Sportlines

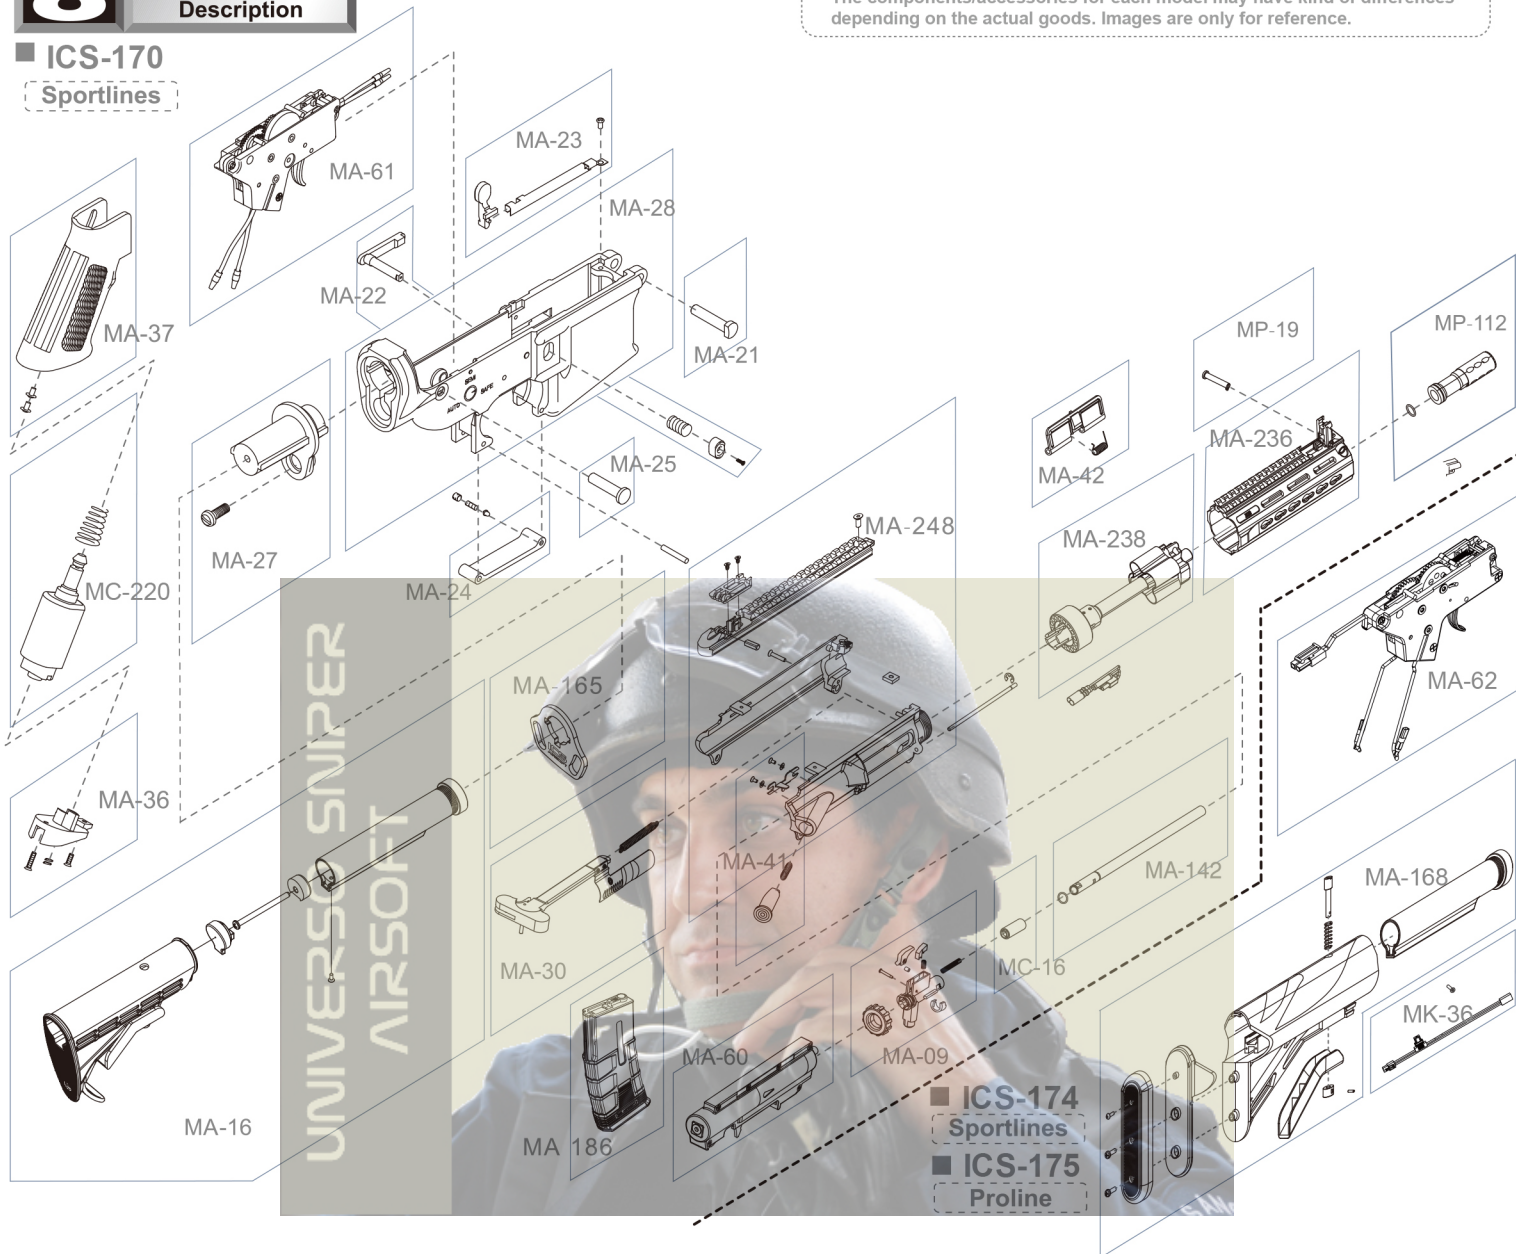

Patents acquired: R.O.C. M244431 / US7077117B1 / R.O.C. D159178 / USD706880S / R.O.C. M320468 / R.O.C. M351340 / EM002246579-0001

WARNING 警告 電槍使用之注意事項 Maintenance

- 請勿使用回收及劣質的 BB 彈，以減少槍管損耗與避免卡彈的情形發生。
 - 如發現有卡彈的情形，應立即停止射擊，如卡彈後再勉強射擊，則會增加齒輪損耗。請使用內附通槍條，將卡彈清除後才可繼續使用。若完成通槍基本故障排除後仍無法使用時，請回原採購店家或專業經銷商尋求維修服務。
 - 使用前請先確定您的電池已充滿電，當使用中發覺電池即將用盡或射擊速度降低時，應立即更換電池。
 - 請定期使用通槍條清潔槍管，以保持槍支射擊時的準確性及減少卡彈的情形發生。
 - 請勿經常空槍射擊，以減少BOX及齒輪不必要的損耗。
- 使用前請務必詳閱此說明書限18歲以上使用
Always read through this manual before operation.
User restricted to 18 years of age or older.
- Do not use recycle or low quality BB pellets to reduce the barrel damage and prevent from jams.
 - When a BB pellet is jammed, cease fire immediately. Firing under jam may cause damage on gears. Please use the cleaning rod that came with your airsoft gun to push it into the barrel by moving down gently until the jammed BB pellet comes out. If the jam still cannot be solved, please contact your original purchase retailer or ask for professional agent for repair service.
Note: No need to remove the barrel when eliminating jam.
 - Please make sure the battery is fully charged before using. When the battery is run out or firing speed is decreasing, new battery has to be replaced immediately.
 - Please use cleaning rod periodically to clean the barrel to ensure the firing precision and reduce jam.
 - Do not dry fire the airsoft gun at any time to reduce damage to the gearbox.



WWW.ICSBBS.COM