



<http://www.icsbb.com>



ICS-60 CXP.08



 
 
INSTRUCTIONS

Always read through this manual before operation user restricted to 18 year of age or older

1

各部名稱


Component names

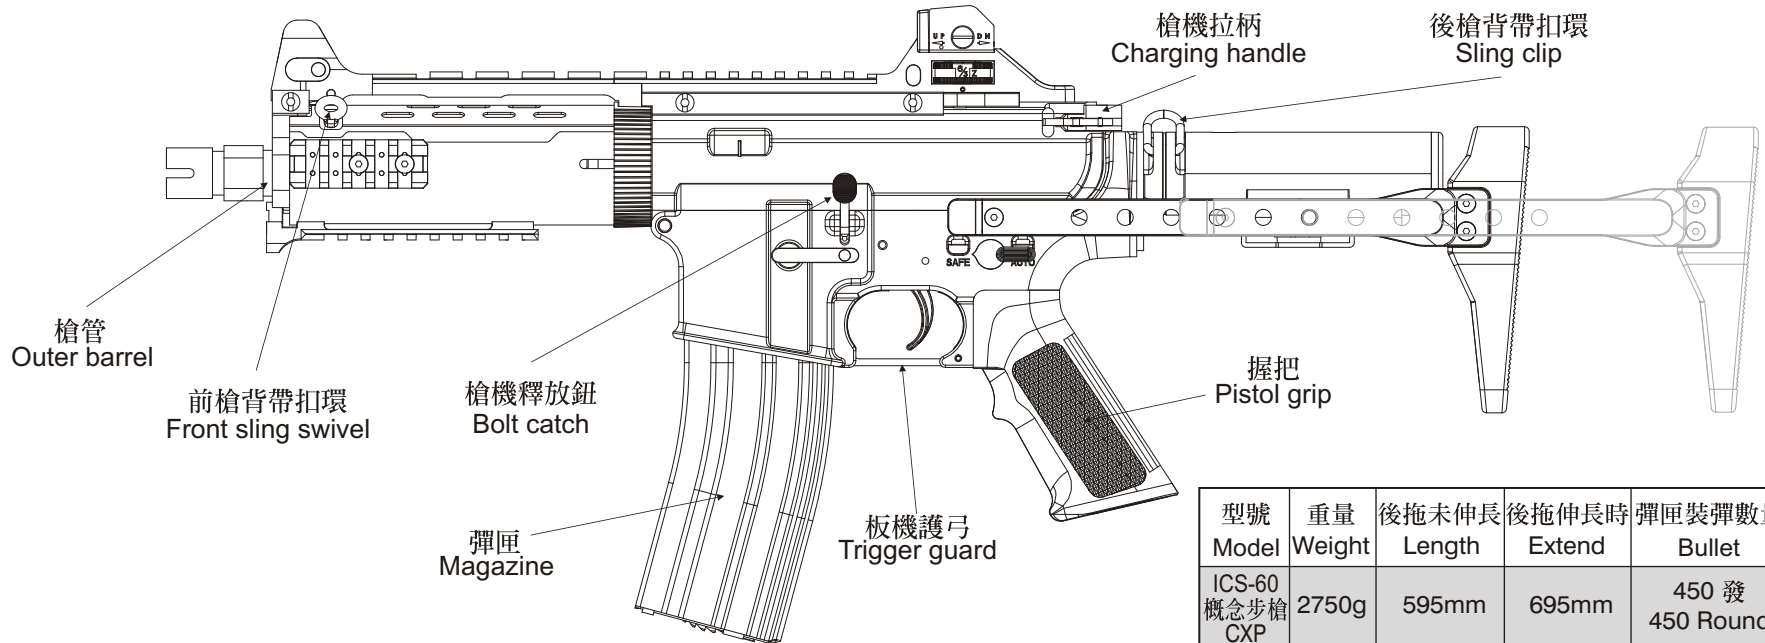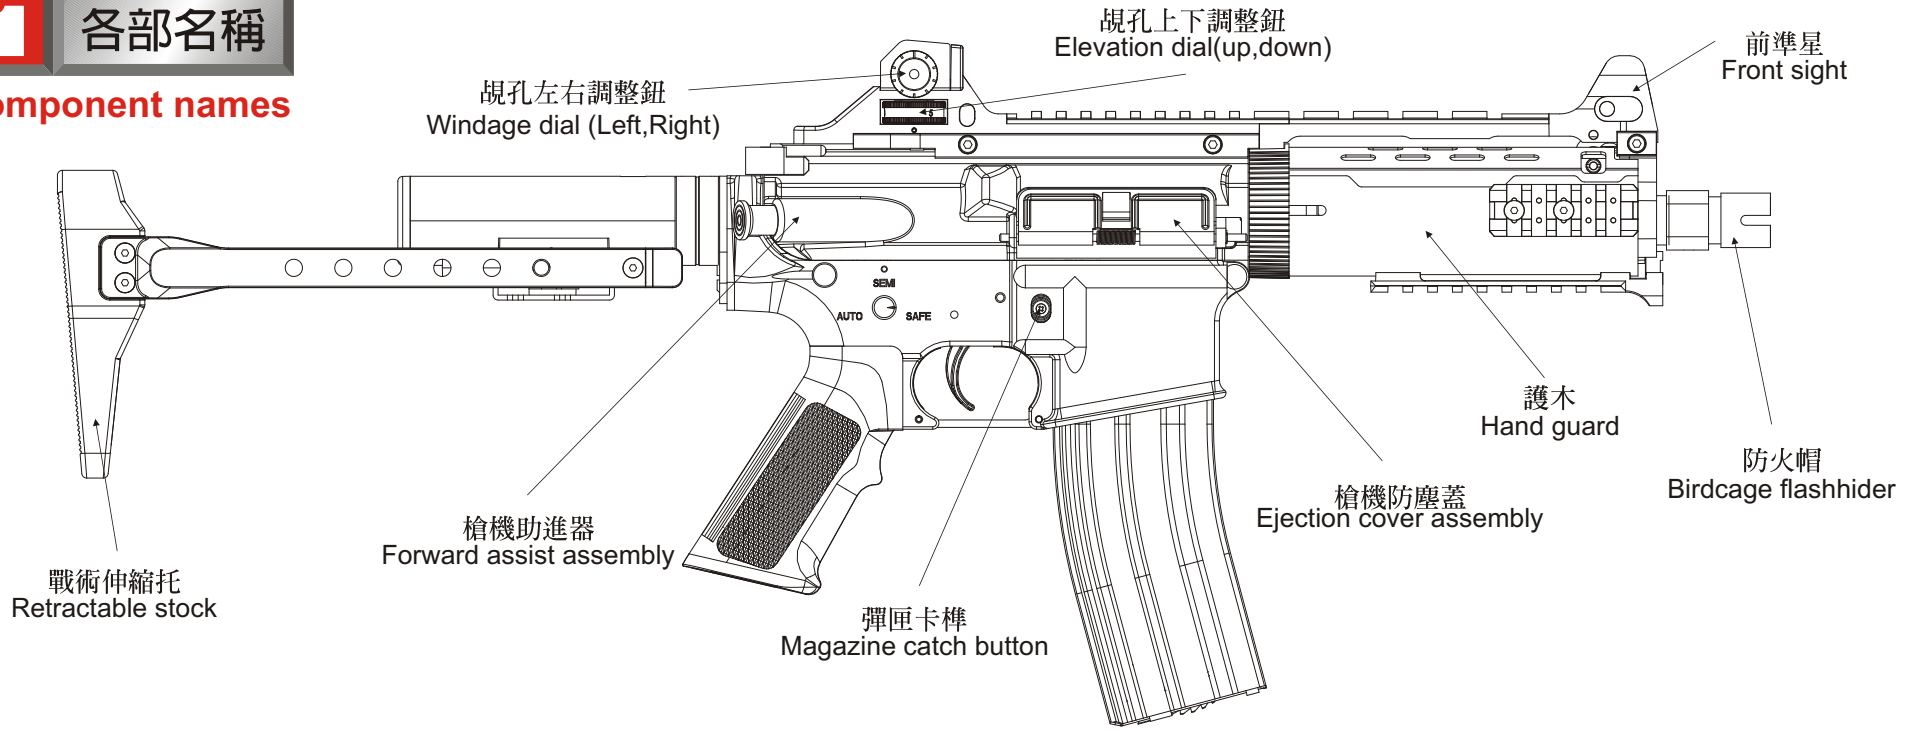

型號 Model	重量 Weight	後拖未伸長 Length	後拖伸長時 Extend	彈匣裝彈數量 Bullet	初速 Velocity	子彈 Caliber
ICS-60 概念步槍 CXP	2750g	595mm	695mm	450 發 450 Round	90-100公尺/秒 90-100 M/S	6 mm BB

2 裝電池方法

 
2-1 Compact Battery & Laser Module 電池及雷射安裝方式

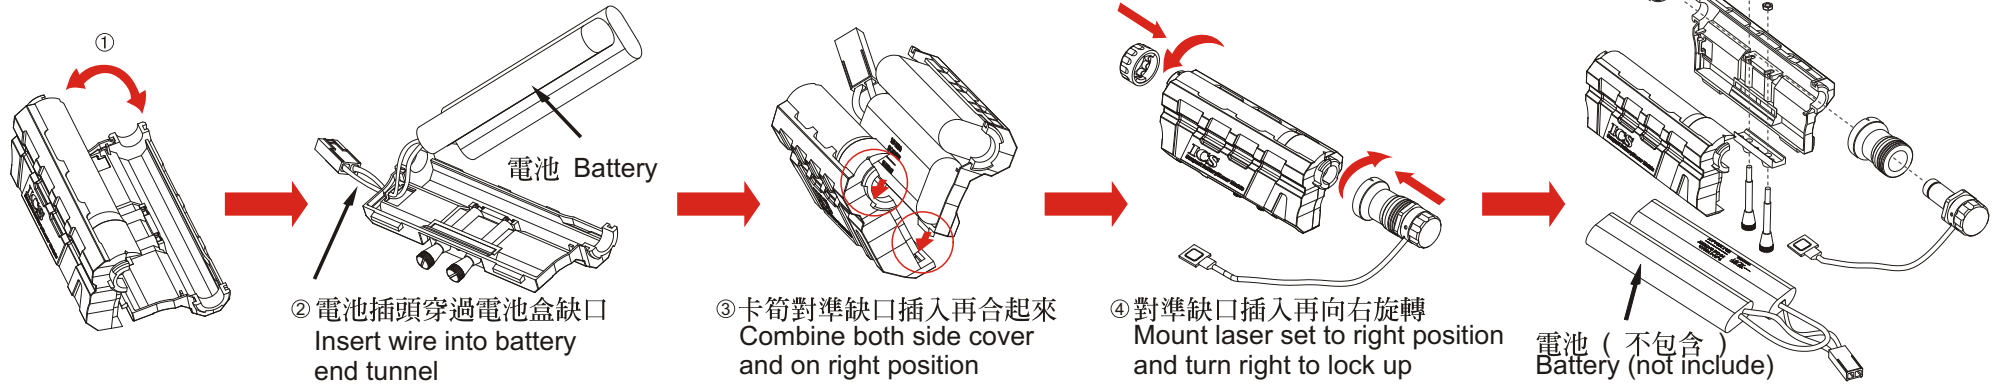



2-2 Battery box fitting method 電池盒安裝方式

⑤ 將電池盒與槍身線路互插好
Connect battery to the receiver

 ⑥ 依勢坎入
Mount on battery box

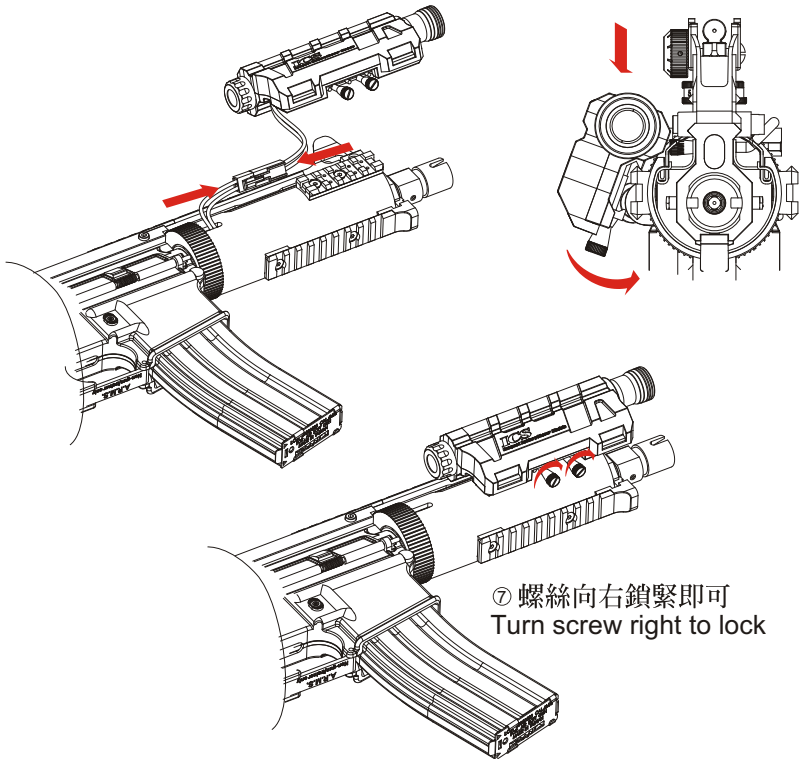

 
 
2-3 Battery fitting method (Handguard) 電池安裝方式(護木)

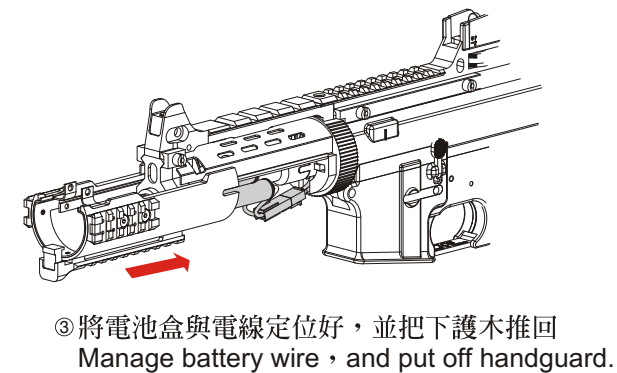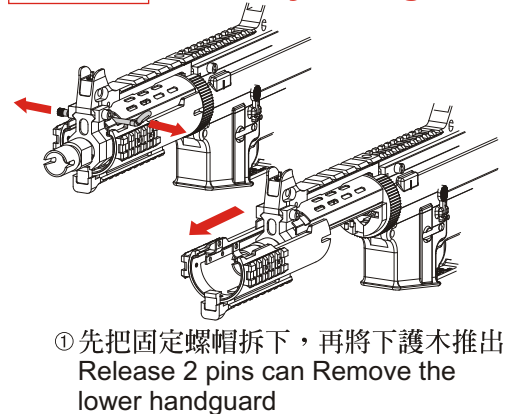


3

精確射擊調整動作 Ironsight adjustment

  
3-1 單連發選擇方式 Selector lever setting

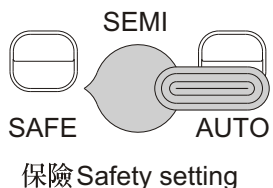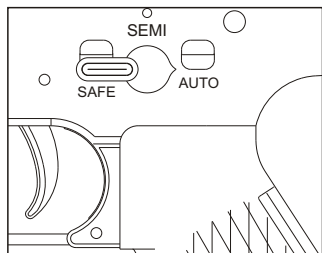

保險 Safety setting

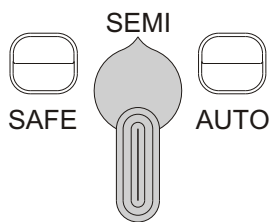 


單發 Semi automatic

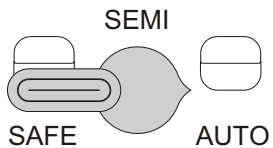 

連發 Fully automatic

3-2 覘孔調整方式 Open sight adjustment

 
A: 精密射擊調整 Rear sight precision targeting adjustment

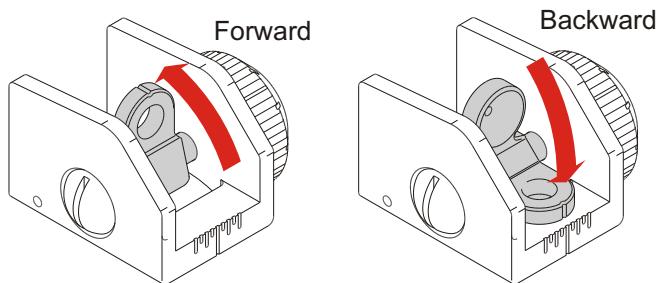

近距
將覘孔往前推
Common/close-range/
low-light shooting.
Push forward to engage
battle sight.


遠距
將覘孔往後推
Precision daylight shooting.
Push backward to engage
peep hole.

 C: 覘孔左右調整 Rear sight left-right adjustment

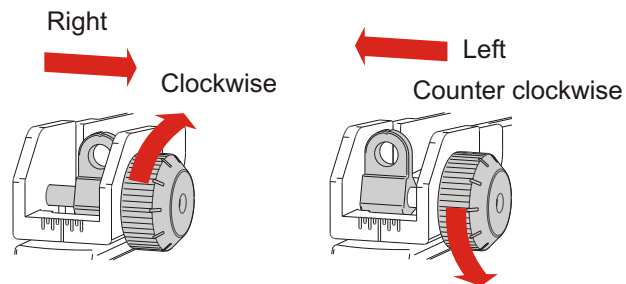


依旋鈕方向旋轉即可將覘孔組左右調整
Turn clockwise to aim right.
Turn counter clockwise to aim left.

 B: 覘孔高度調整 Rear sight up-down adjustment

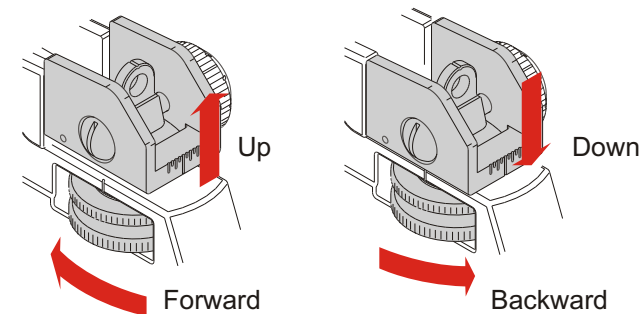

將調整鈕往前轉即可升高覘孔組，
將調整鈕往後轉即可降低覘孔組。
Turn the dial forward to raise the hitting point.
Turn the dial backward to lower the hitting point.

 3-3 準星高度調整 Front sight adjustment

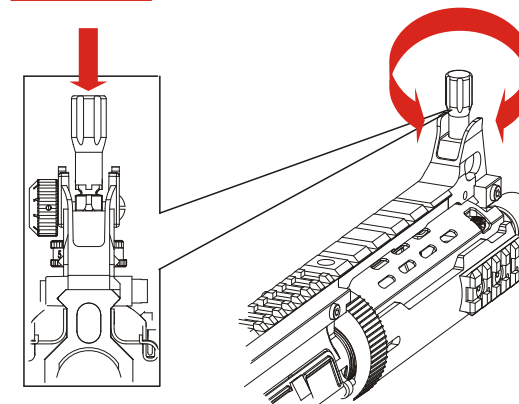

將準星調整桿壓入定位轉動即可調整高低
Turn clockwise to raise B.B. hitting point.
Turn counter clockwise to lower B.B. hitting point.

 
4

可動部的說明

Movable parts

4-1

伸縮托長度調整
Variable retractable stock length

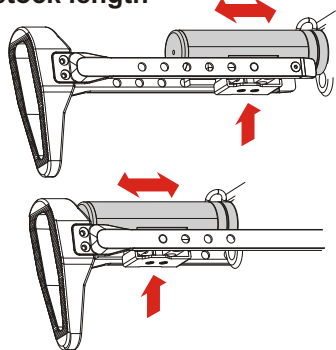


按下卡榫，即可將伸縮托向後拉或向前推，共有 6 段可供調整長度。

Push the stock release lever to unlock. Adjust the 6 position retractable stock to the most comfortable position.

4-4

可作動作
Movable parts

 ① 槍機拉柄 Charging handle
拉柄拉動可打開防塵蓋
Pull the charging handle to open the port cover

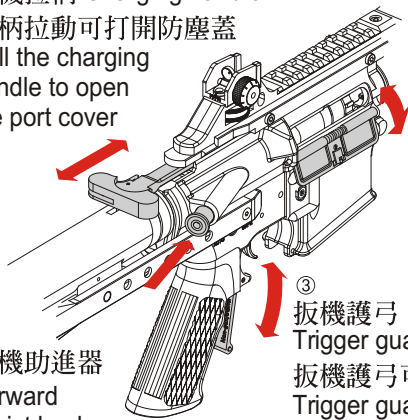


② 槍機助進器
Forward assist knob
槍機助進器能夠推動
Forward assist knob can be

③ 扳機護弓
Trigger guard
扳機護弓可開或關
Trigger guard can be opened and closed

4-2

 下護木拆卸方式
Remove the lower handguard

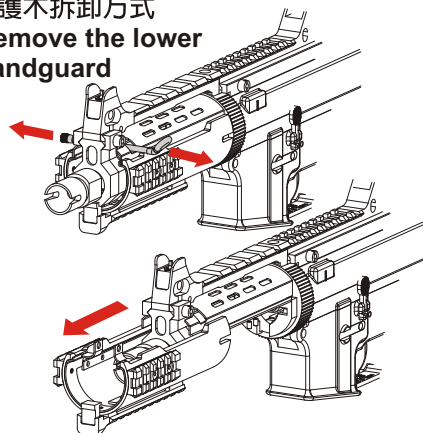


先把固定螺帽拆下，再把前槍背帶扣環抽出，即可把下護木推出。

Release 2 pins can remove hand guard

4-5

 
止逆轉釋放鈕
Forward assist knob

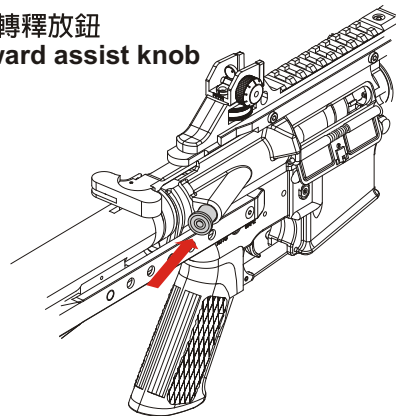

- 1 收槍前及不使用時按止逆轉釋放鈕，可將活塞彈簧回覆至原處。
 - 2 槍身做分解時，必須先釋放活塞彈簧，才可做分解動作。
1. Push the forward assist knob to release the spring tension before storage.
2. Push the forward assist knob before you assemble the gear box.

4-3

 馬達間隙調整
Fine adjustment of gear engagement

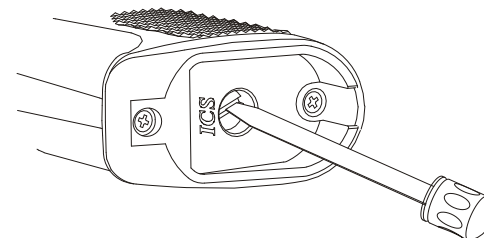


以一字起子將馬達齒輪間隙調整到最佳位置。（出廠前已調整好）若無特殊需求時，請勿自行調整。

Using a screw driver to fine tune the engagement between motor and gear.

4-6

 槍身結合 3 號齒正確位置圖
The correct position of No.3 gear before reassembling

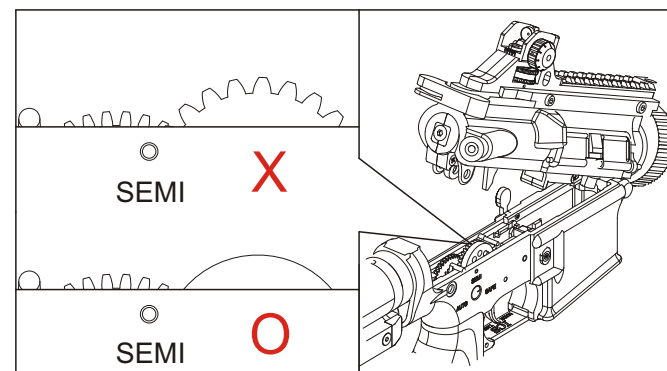

3 號齒在槍身結合時，必須轉到正確位置，才可將上槍身蓋下。

 
Make sure No.3 gear is turned to the correct position before you reassemble the receiver/gearbox.

5

彈匣使用方式 Magazine

5-1

裝BB彈方式
load BBs

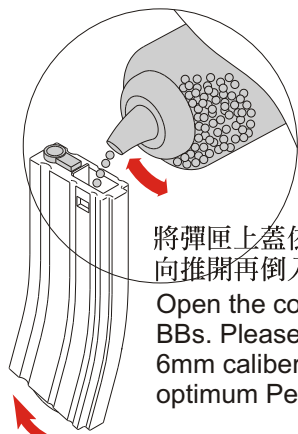


將彈匣上蓋依箭頭方向推開再倒入 B.B.彈
Open the cover to load BBs. Please use ICS 6mm caliber BBs for optimum Performance.

依箭頭方向旋緊彈匣底下旋鈕，即可將 B.B. 彈順利送出。
To charge BB feed spring, please wind magazine.

5-2

 彈匣上下方式
Magazine loading and unloading

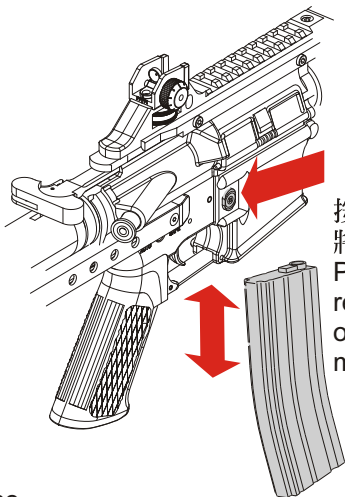


按下彈匣卡榫即可將彈匣裝入或拆下
Press the magazine release lever to load or unload the magazine.

6

HOP-UP 彈道調整 Hop-up adjustment

 6-1

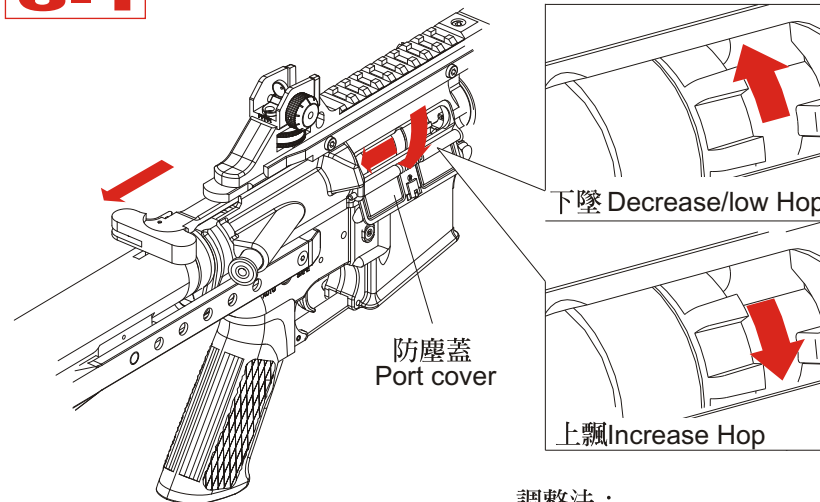

防塵蓋
Port cover

 
 
下墜 Decrease/low Hop

上飄 Increase Hop

將槍機拉柄向後拉，防塵蓋即打開
Pull backward the charging handle opens the bolt covers for adjustment of Hop-up unit.

調整法：
子彈如果向上飄，將 Hop - up 環向上旋轉，如果向下墜就要向下旋轉，讓 B.B. 彈呈一直線的射出才是正確的位置。

Adjustment
Pull back the charging handle this opens the bolt covers for adjustment of Hop-up unit.

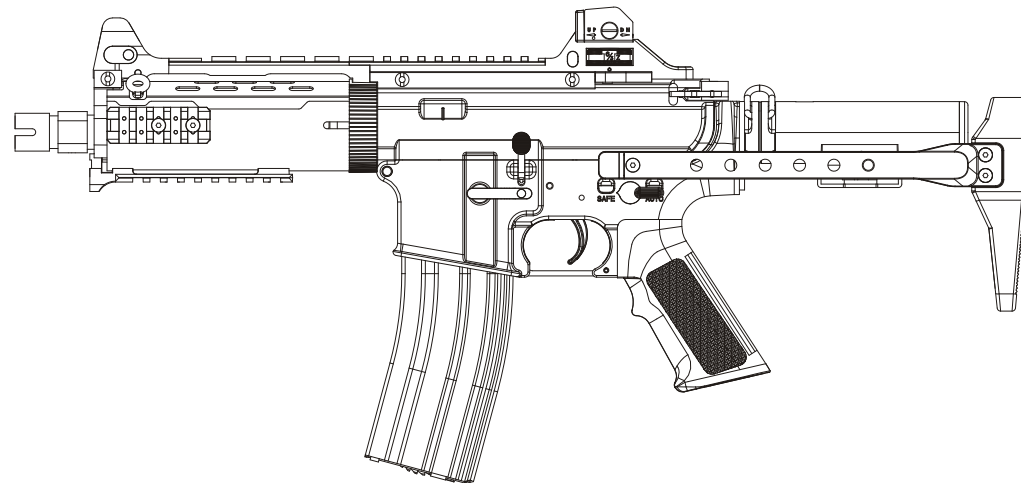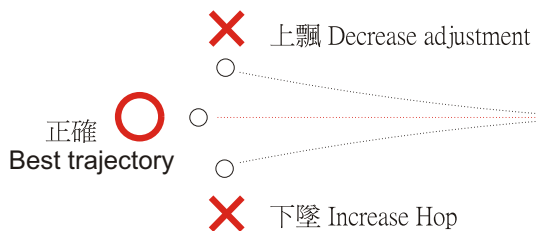

7

齒輪箱拆解

Disassemble Gear-box



 
注意
CAUTION

※重新組裝時，必須依反向動作組合


Reassembly is the reverse of disassemblys procedures.

7-1 Remove the upper Gearbox 上槍身拆卸


- ① 使用起子依方向將槍身結合銷推出即可打開上槍身
To open upper receiver, use a screwdriver to push out frame lock pins.

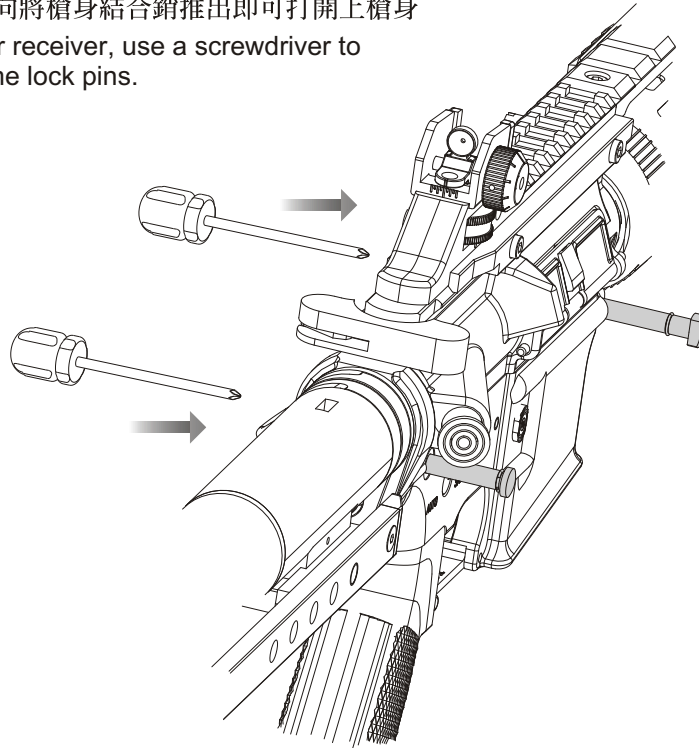


- ② 拆下活塞組
Take the piston out.

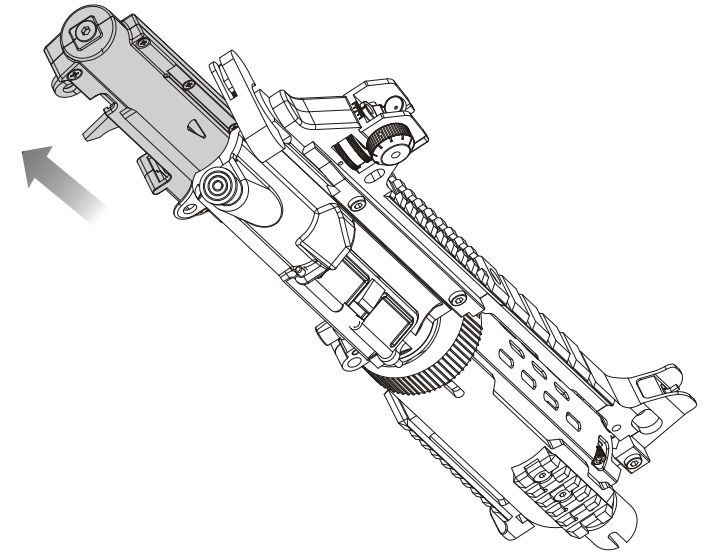 


7-2 Remove the lower Gearbox 下槍身拆卸

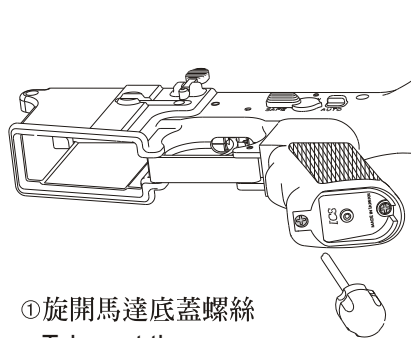 

 
- ① 旋開馬達底蓋螺絲
Take out the screws on the plate.

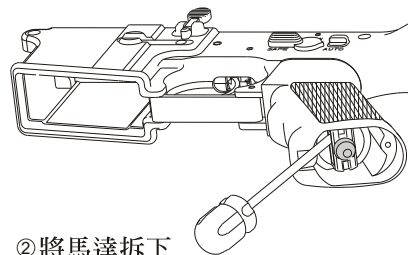

- ② 將馬達拆下
Take the motor out.

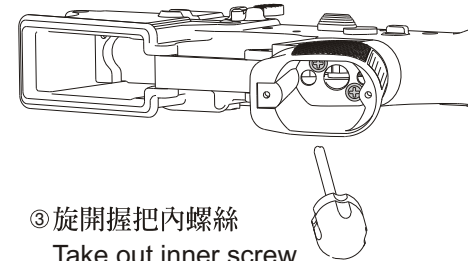 

 - ③ 旋開握把內螺絲
Take out inner screw in the pistol grip.

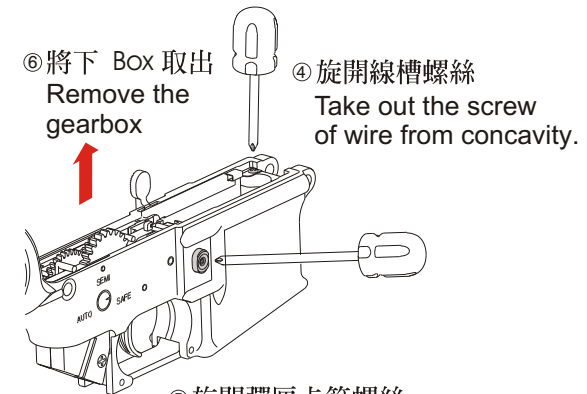



- ④ 旋開線槽螺絲
Take out the screw of wire from concavity.
- ⑥ 將下 Box 取出
Remove the gearbox

- ⑤ 旋開彈匣卡筭螺絲
Take out magazine release lever.

8 各部零件説明

  8-1 Description

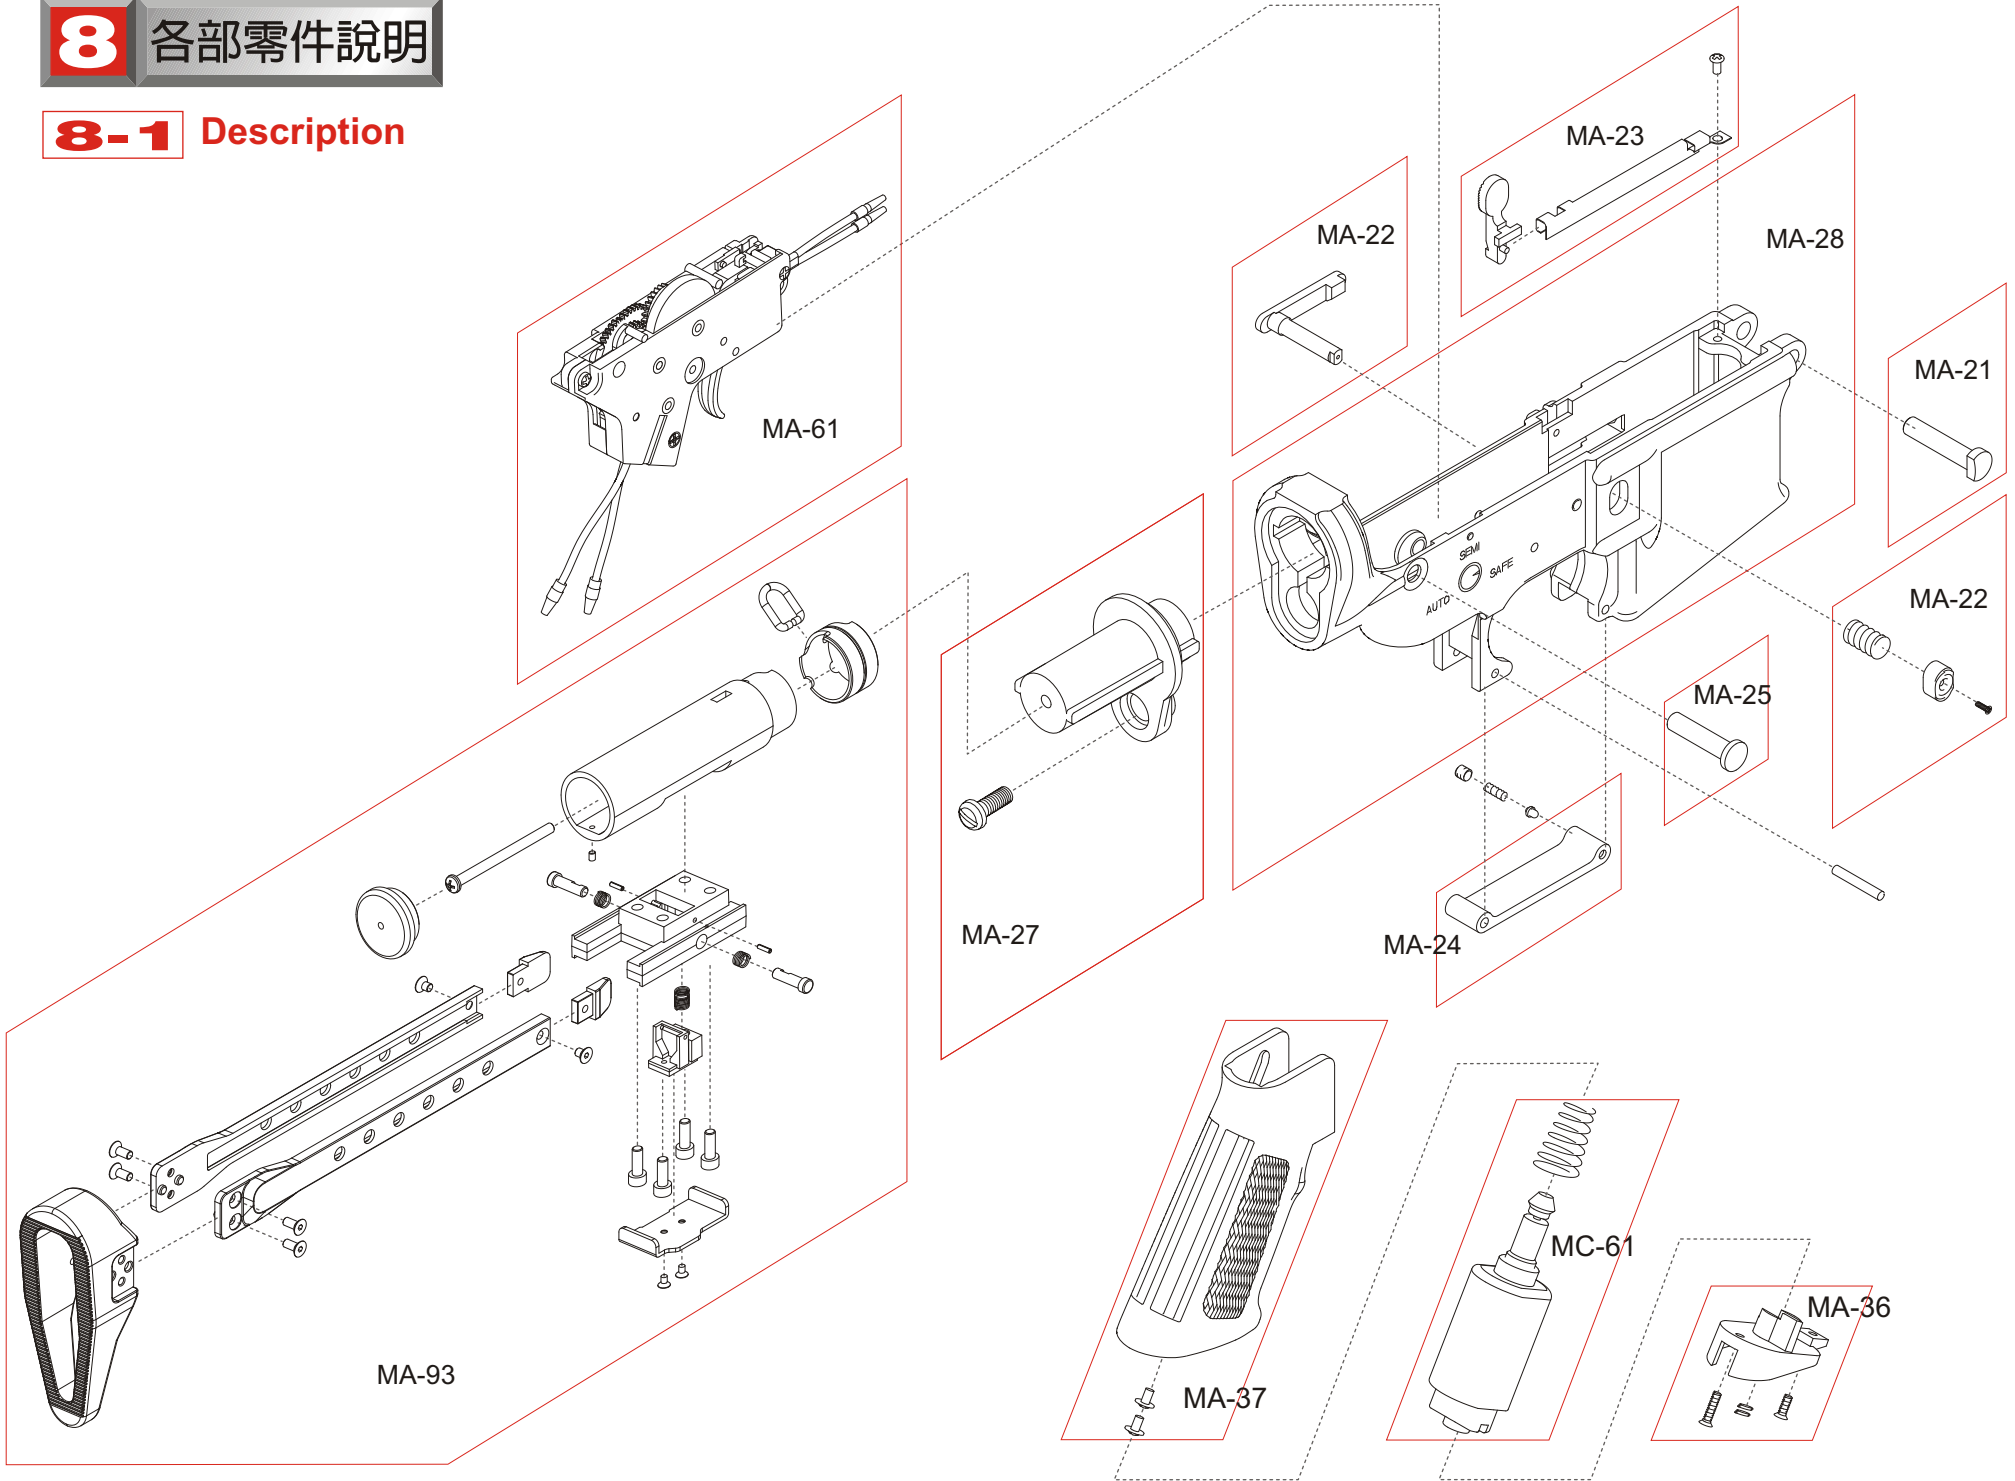

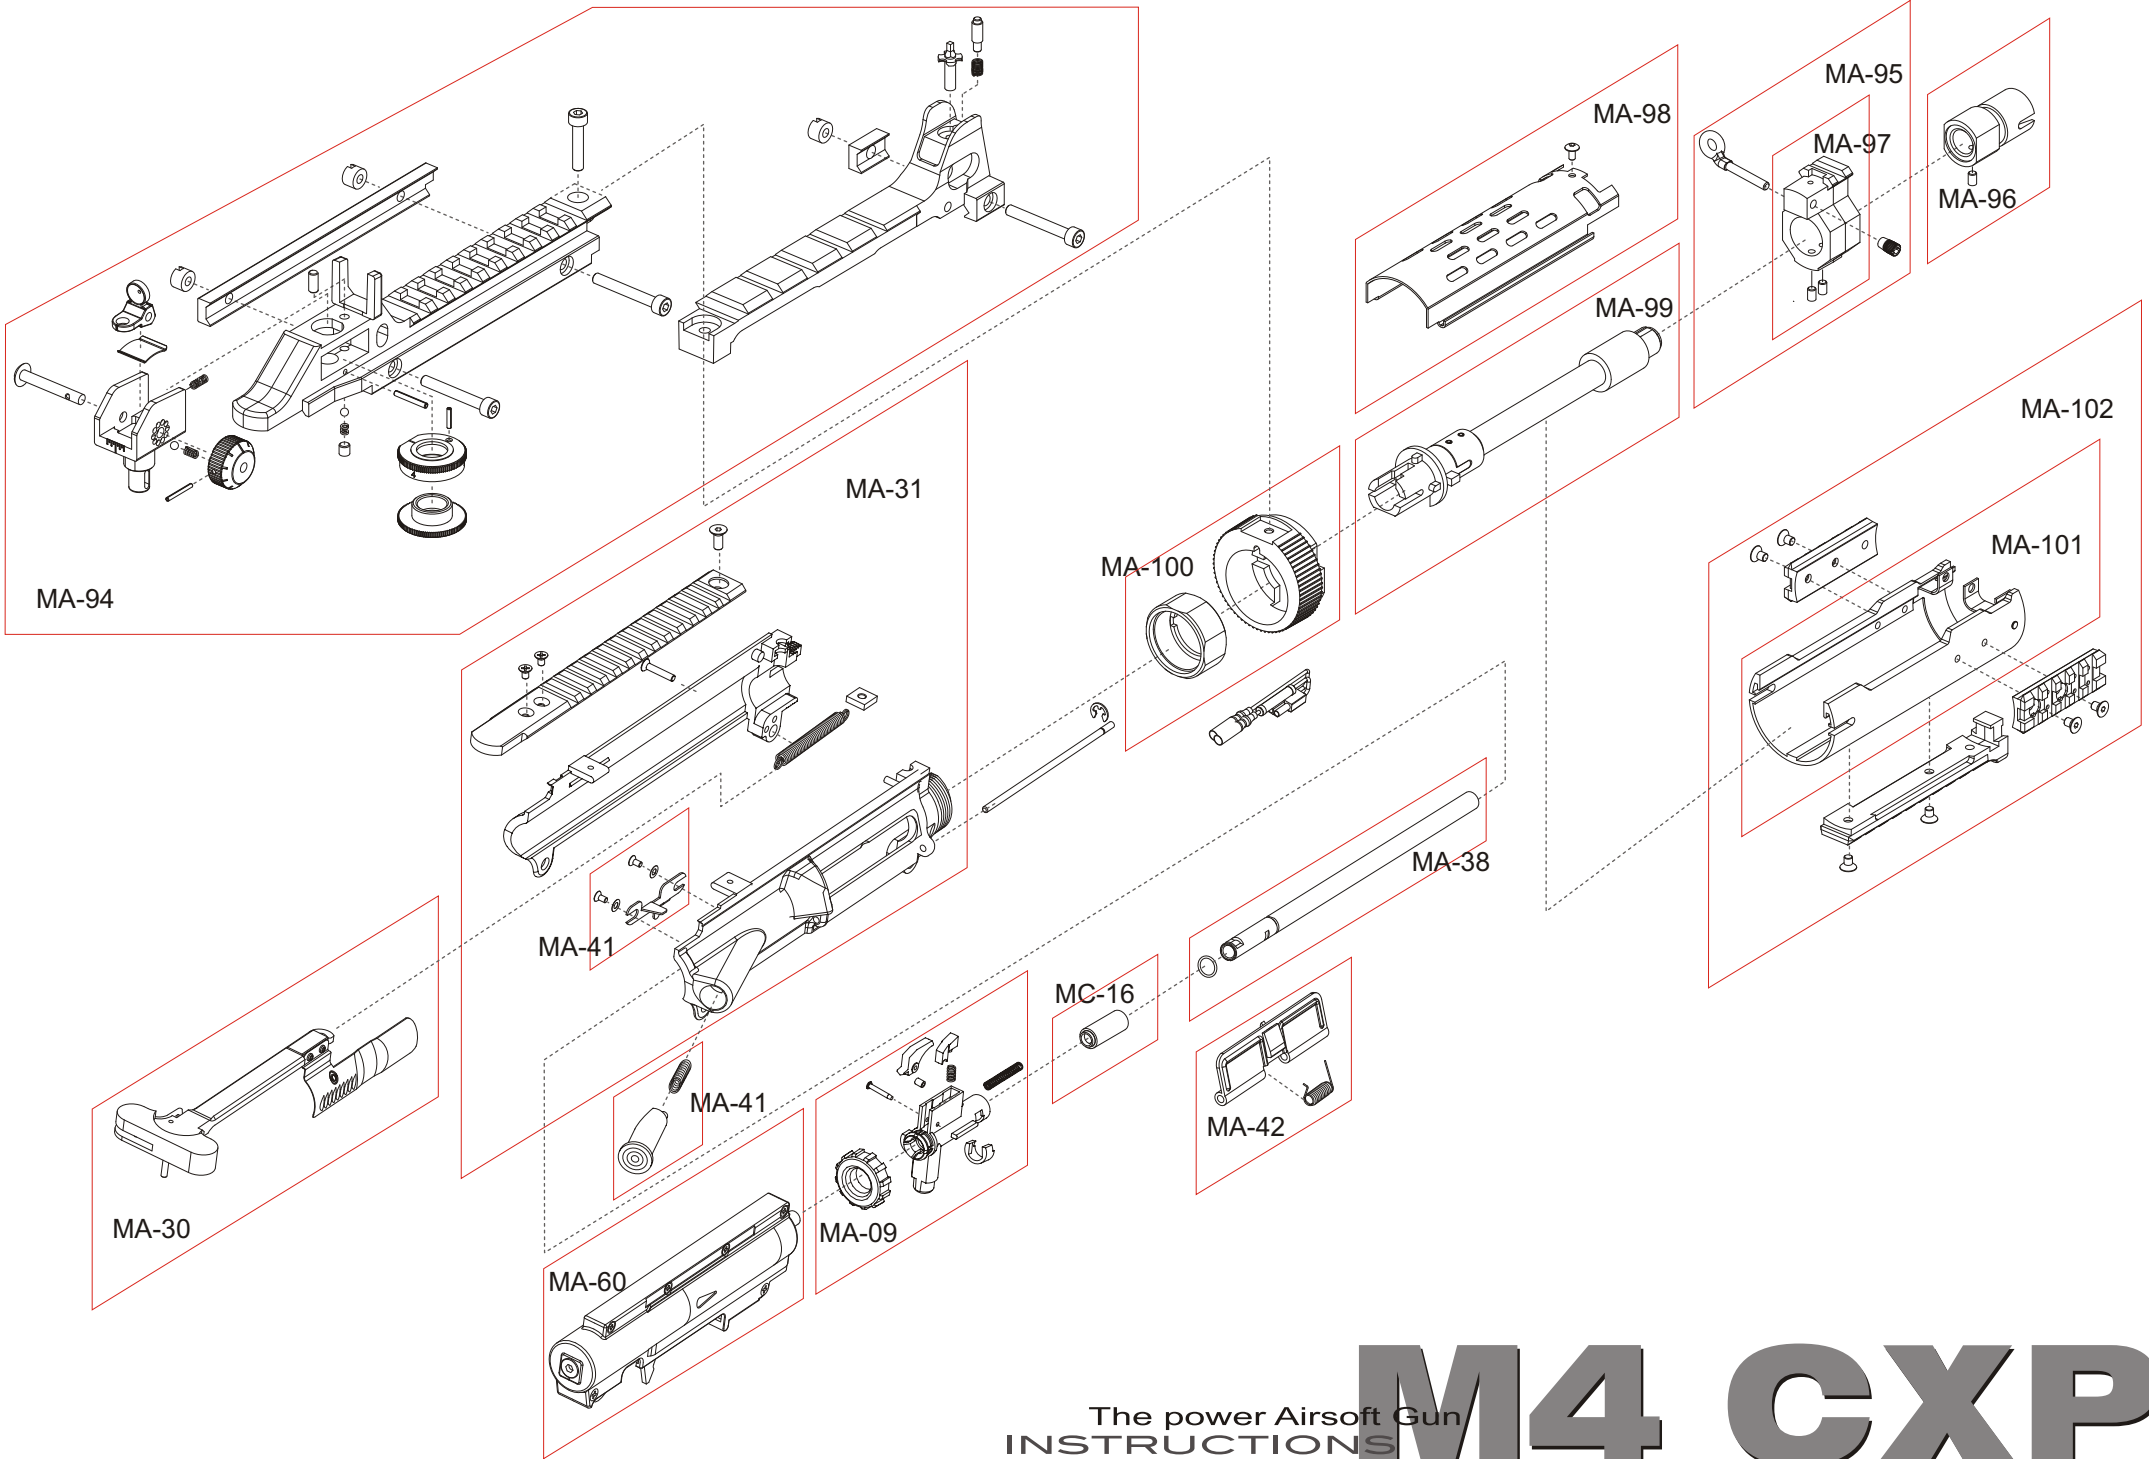

The power Airsoft Gun
INSTRUCTIONS M4 CXP