


Users Restricted
to 18 Years of age
or older

適合年齡：18歲以上

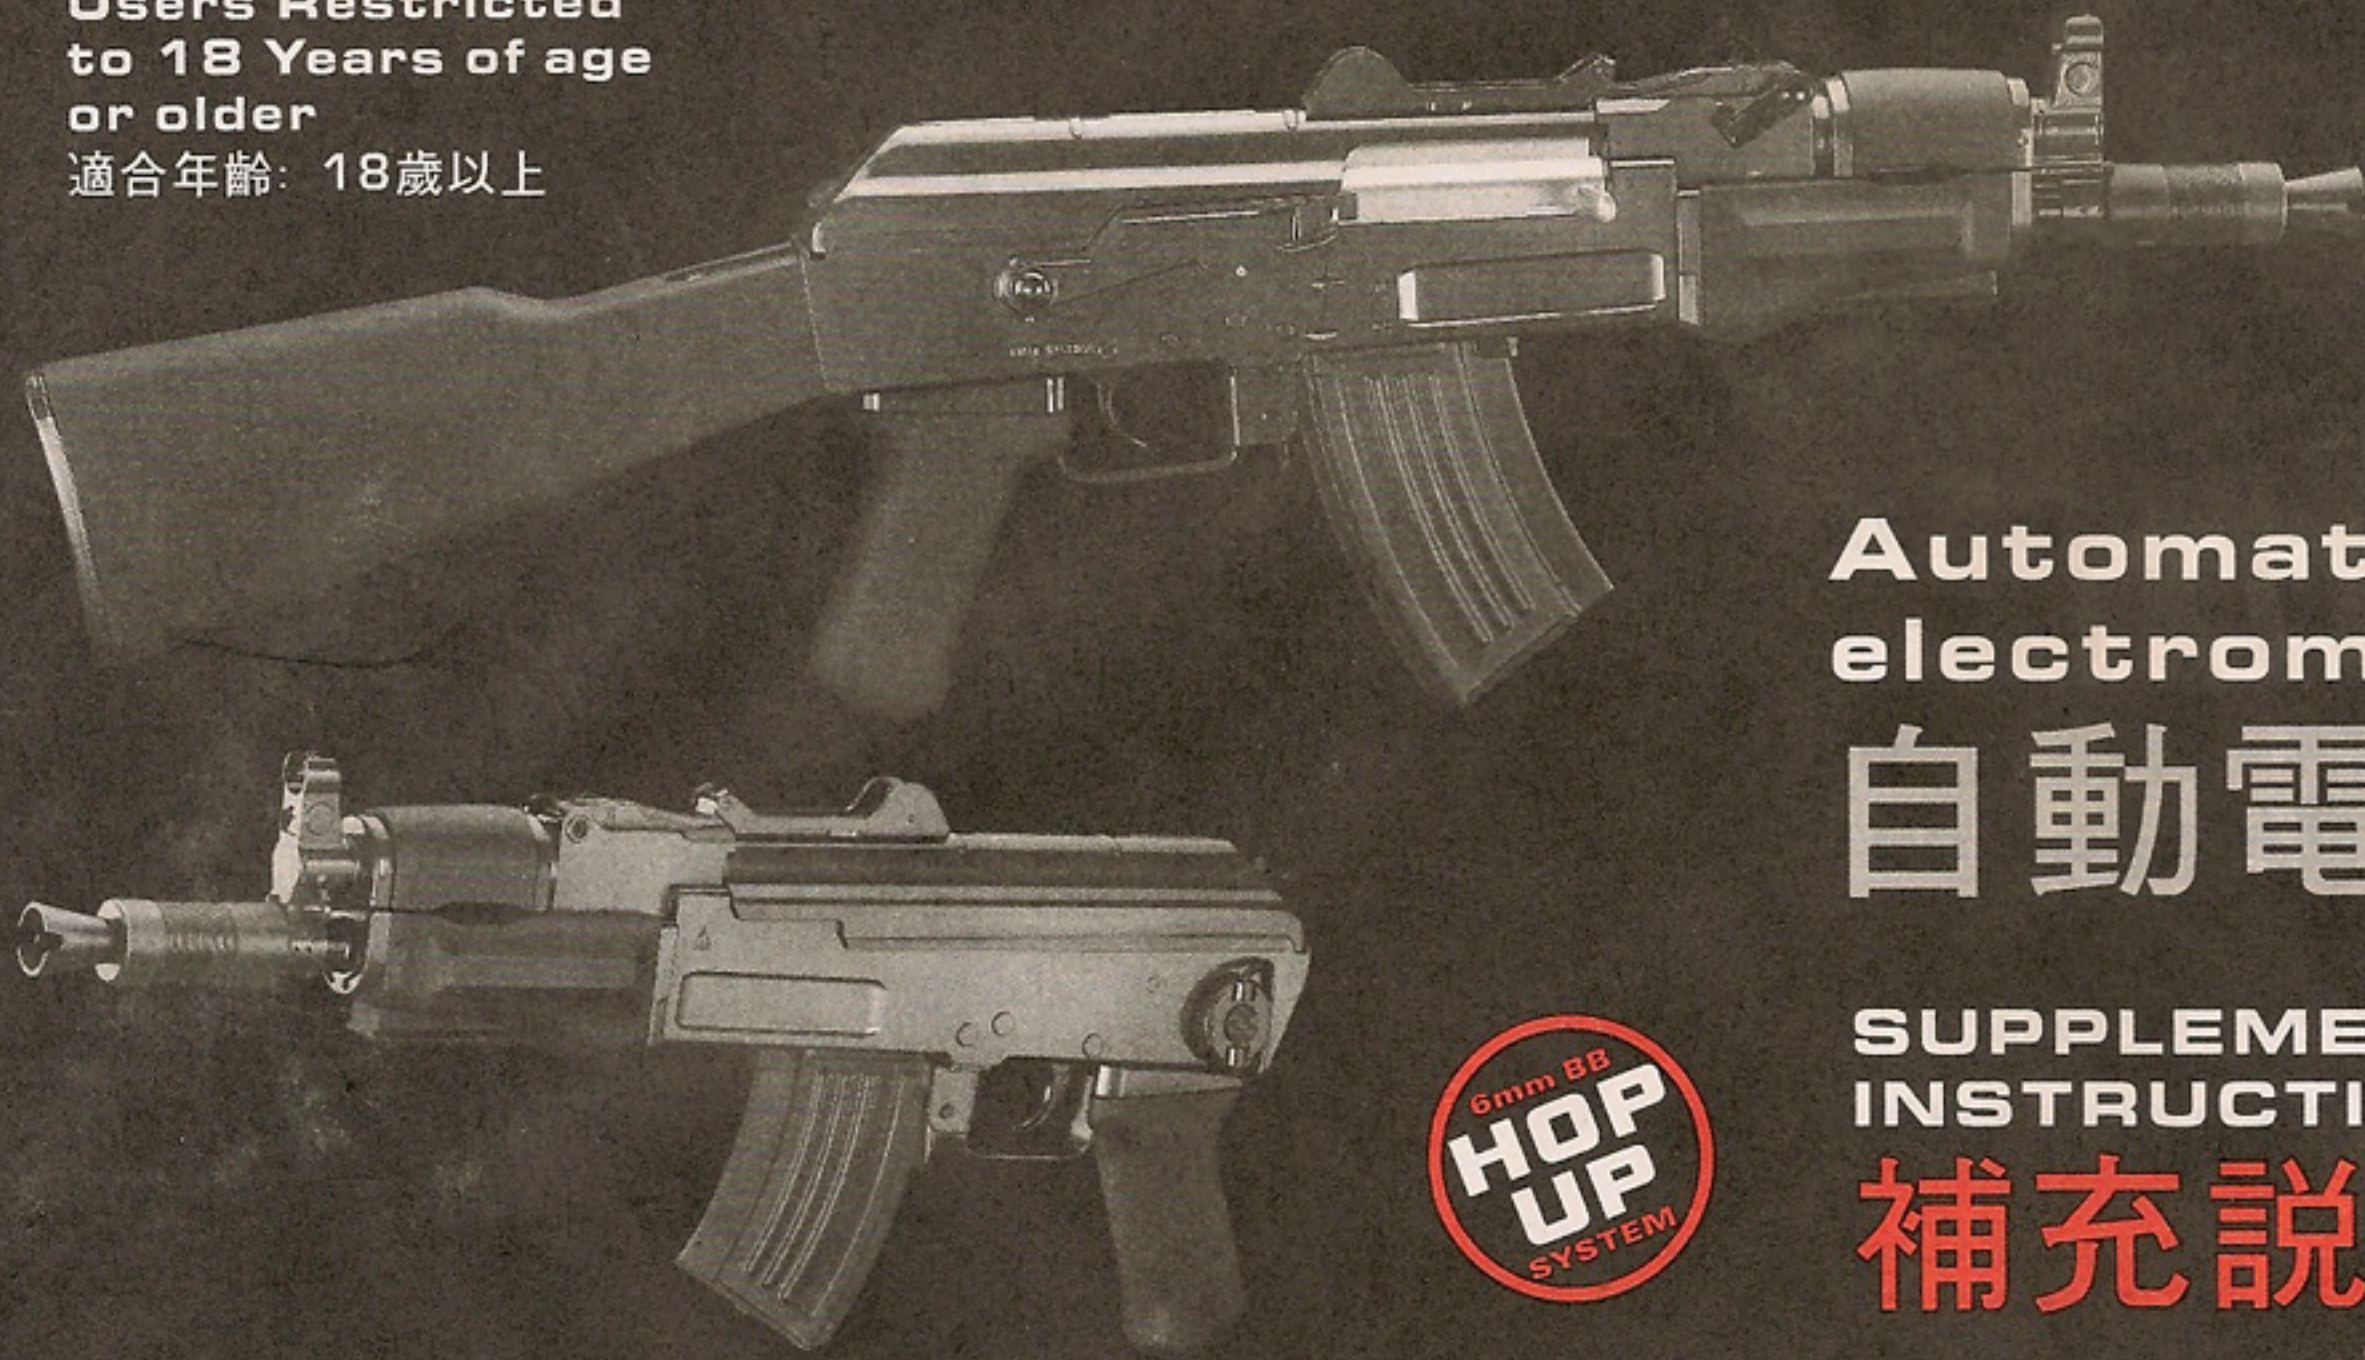

Automatism electromotion gun 自動電動槍

SUPPLEMENT INSTRUCTION MANUAL 補充說明書



Always read through this manual together with the A47&A47S Instruction Manual before beginning operation.

使用之前請務必閱讀A47&A47S說明書。

1 Battery and charger are sold separately. 電池、充電器另購


The battery used is the same as the A47. Consult the A47&A47S instruction Manual for details. (See on page 3.)
使用的電池和A47是通用，詳細請參照A47&A47S說明書P3。

- Always use the 8.4V, 1800mAh Hyper Command Battery, a genuine part specified. Never use batteries of other companies or those not specified.
- 本產品請使用指定的8.4V1800MAH HYPER COMMAND電池。其它公司及指定以外的電池（安培數異常高及低劣的電池）絕對不能使用，因有引起波箱破損的危險。

2 Component names



(Component names are explained in the A47 instruction Manual.)

各配件的名稱（各配件的操作請詳細看A47說明書及補充說明書的各頁條目）。

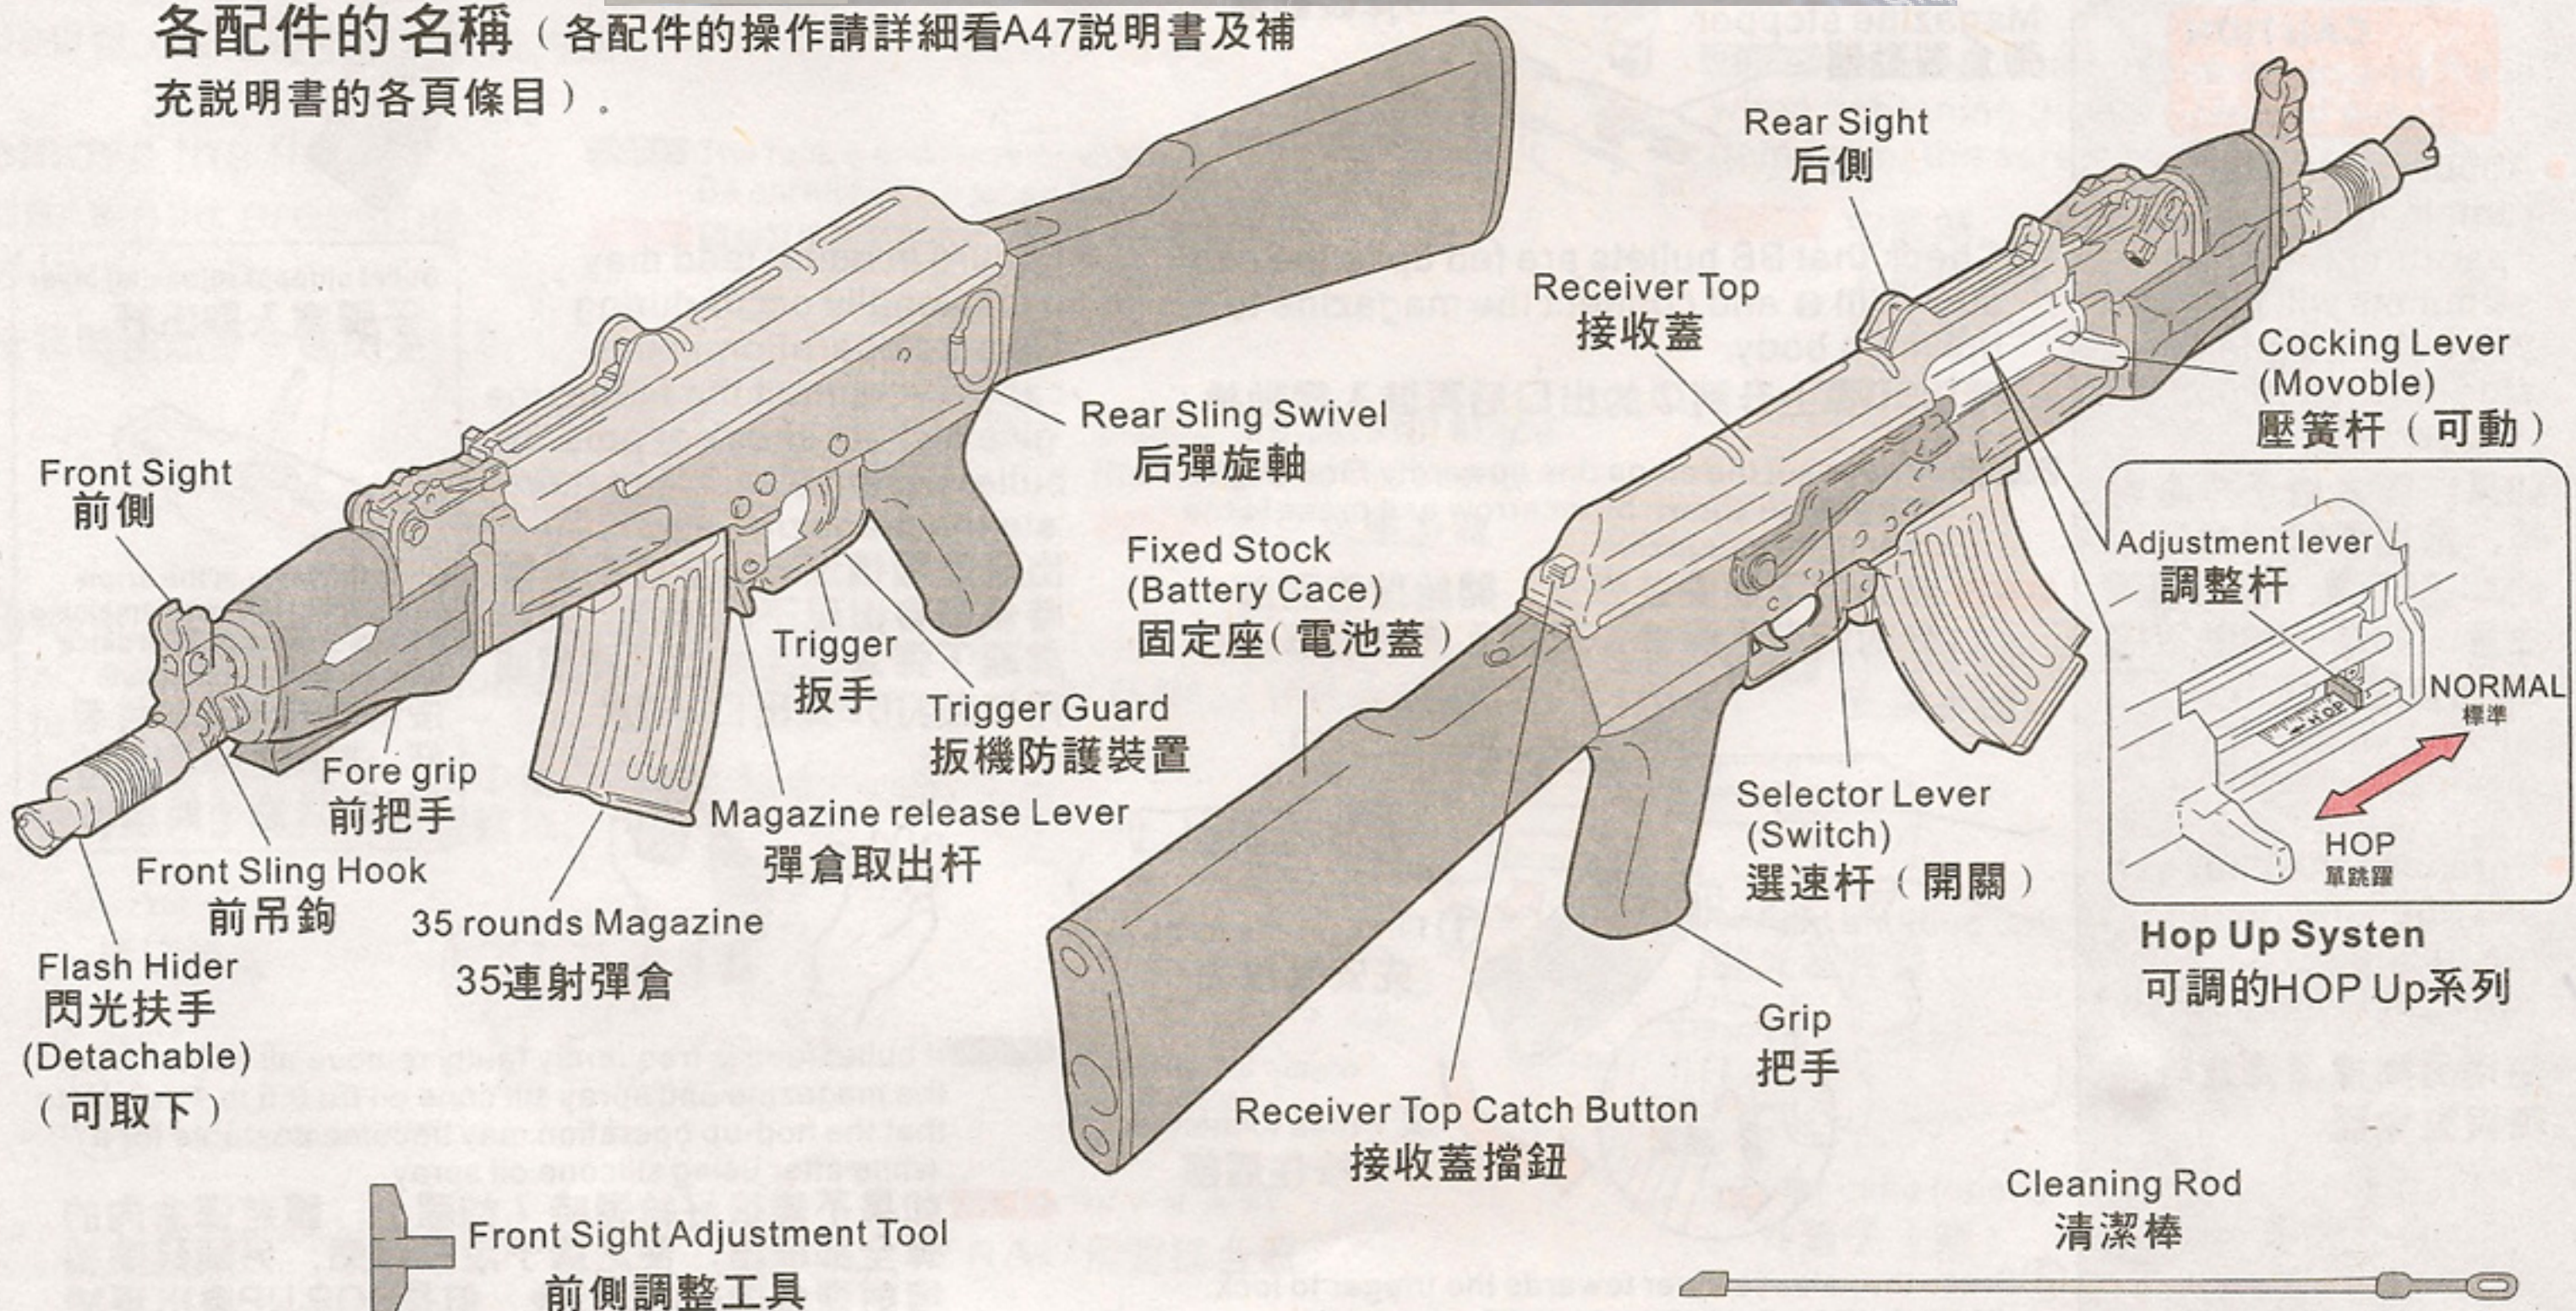

3 Rear Sight and Mount rail explanation.

后側、裝配口之說明

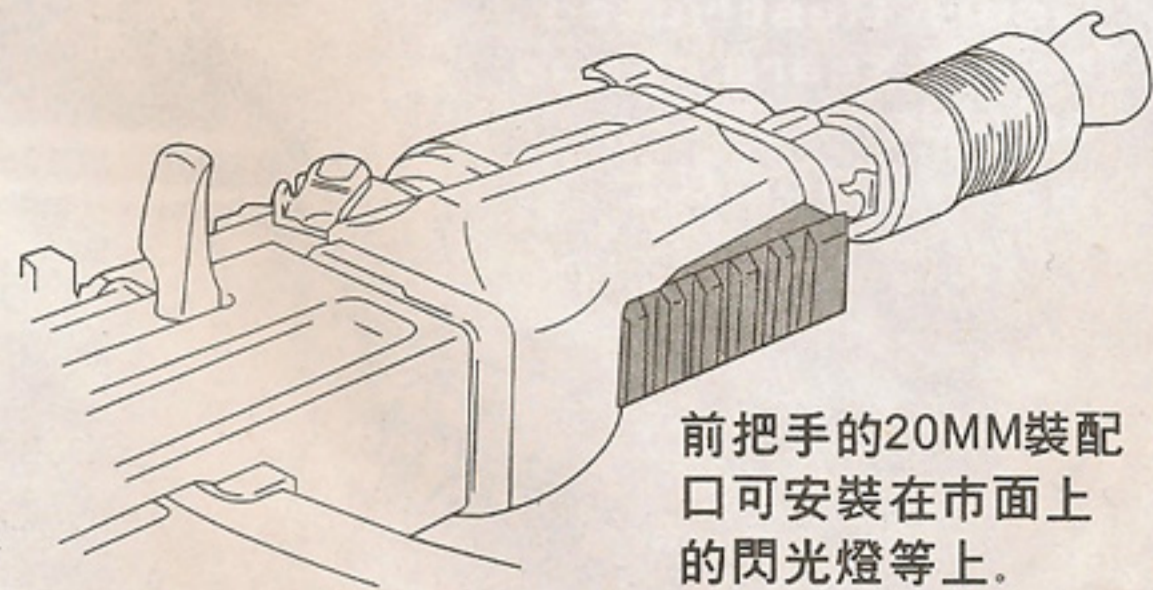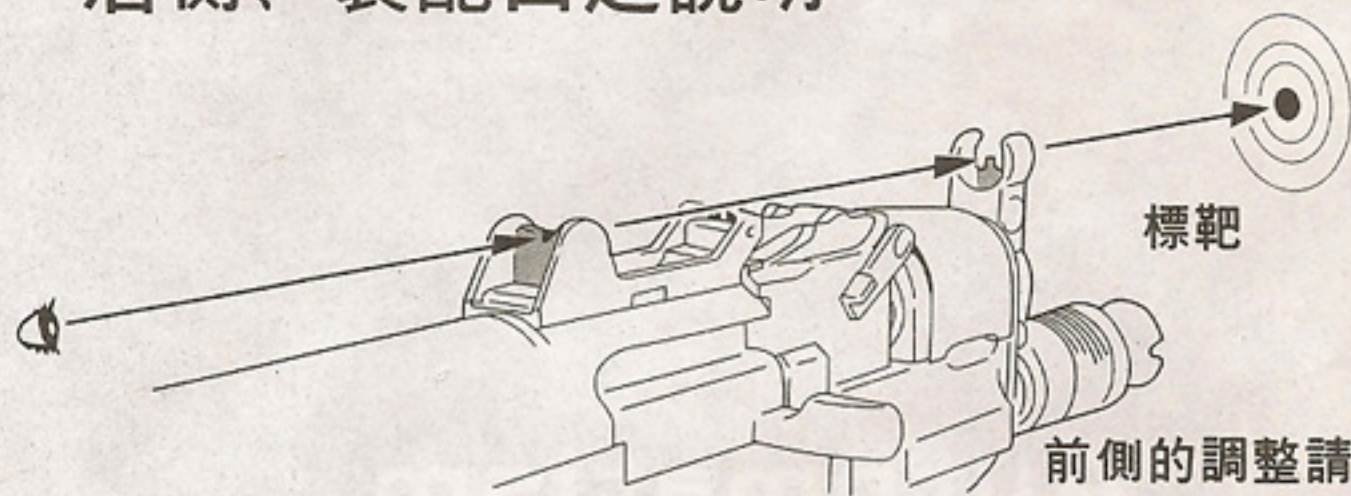

CAUTION 注意

- Always use the Marui BB Bullet for this air gun. We shall not be responsible for any damage and accidents arising from use of bullets supplied by other companies. 此槍務必使用特製的BB彈，如果使用其它公司製的BB彈，本公司一概不負責任。

BB Bullet (0.2g) (0.25g)
BB子彈 (0.2G) (0.25G)

BB bullet of other company
其它公司的BB彈



CAUTION 注意



- About 20 bullets remain in the duct after operation. Be careful as bullets will fire out if you hold the gun upside-down and pull the trigger.

如果將彈倉處于垂直射擊，最后導管中會殘留約20發BB彈。但是還需注意，如果一扣動扳機，BB彈會飛射而出。


- Purchase the charger set when the normal magazine. (Each sold separately) 使用另購標準彈倉時需購買充電器。

4 Setting the Magazine 彈倉的安裝

- Press the magazine catch button to remove the magazine. 按彈倉控制杆撥出彈倉。

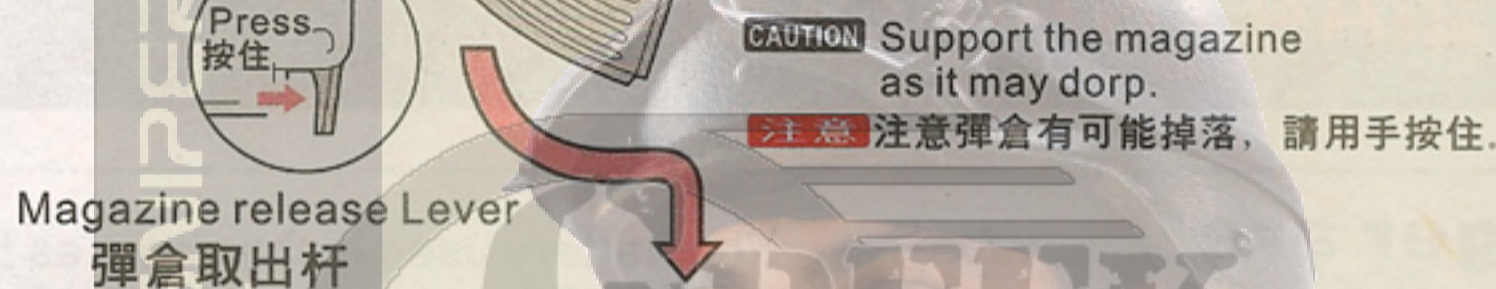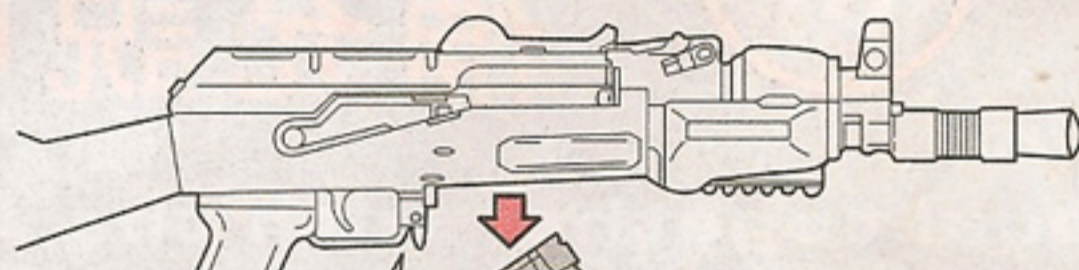


- Insert the charger into the magazine. 將裝彈器插入彈倉。
Insert the BB bullet stopper horizontally when inserting the charger into the magazine, to avoid interference with the magazine stopper the magazine. 將裝彈器插入彈倉時，請將BB彈製動器放入側面。一和彈倉內的彈倉製動器相碰撞，就有折斷的危險。

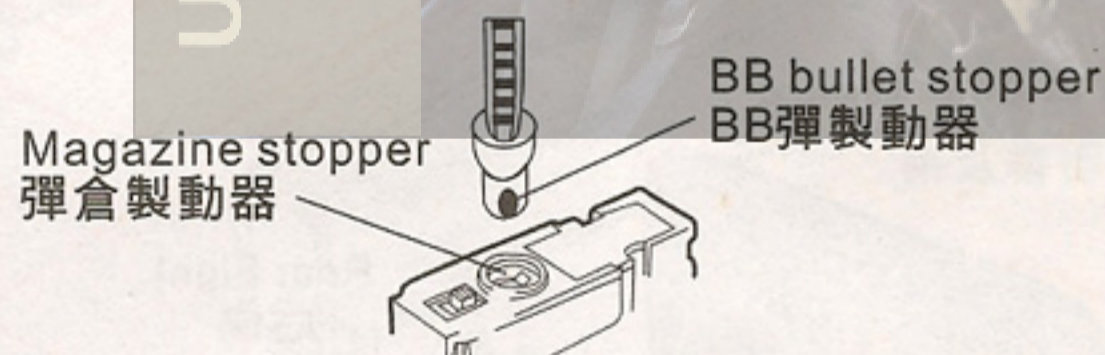

- Check that BB bullets are fed up to the exit shown in ② and connect the magazine to the main body. 確認BB彈上升到②的出口后再裝入電動槍。

CAUTION Always set the magazine upwardly. First align to the groove shown by an arrow and press in the rear of the magazine.

- 務必從下面安裝彈倉。開始按箭頭部分的鉤裝入彈倉，再按入彈倉后部。

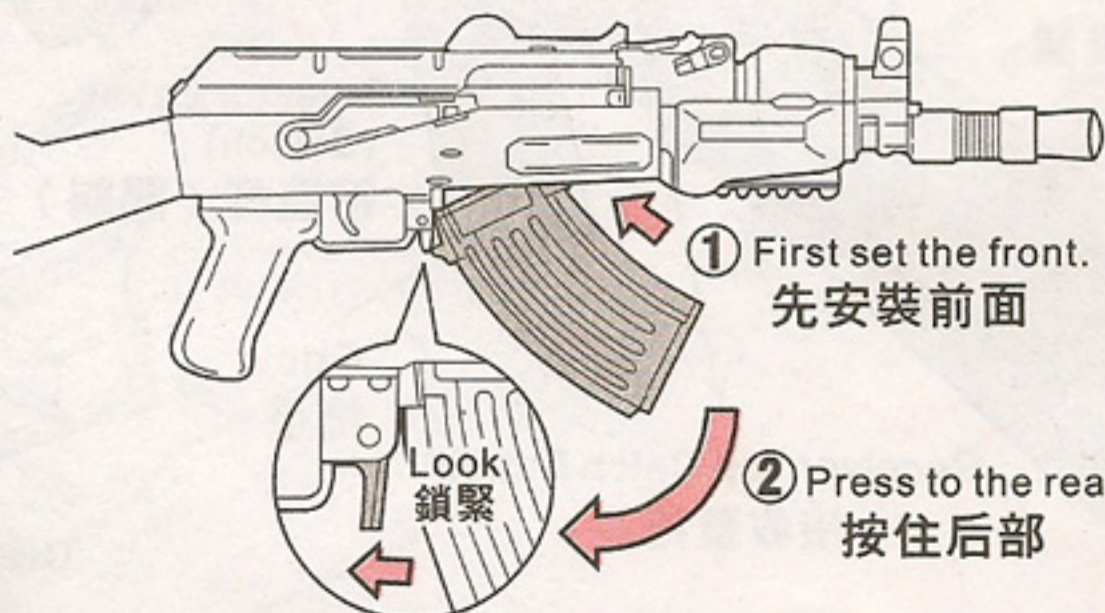


- Press the release lever towards the trigger to lock. 將取出杆按入扳機側並鎖緊。


CAUTION Check that the selector lever is on Safety and that your finger is not on the trigger.

- 注意 注意確認安全位置，手指不能插入扳機中。

- Insert 6mm BB bullets supplied by marui into the charger. (35 bullets may be inserted.) 請將本公司的6mmBB彈放入裝彈器中。(可放入35顆)。

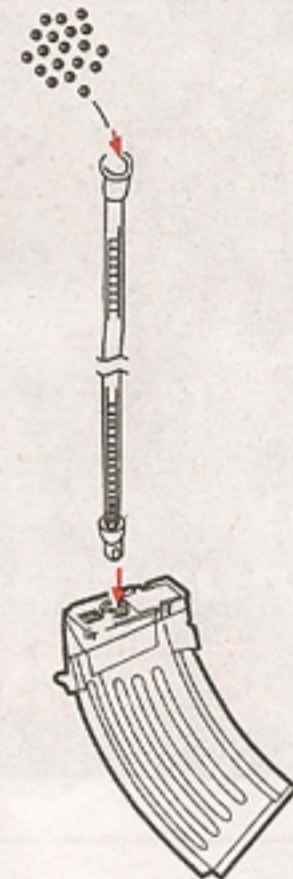

- Press in bullets using the charging rod. 使用充電杆將BB彈裝入彈倉

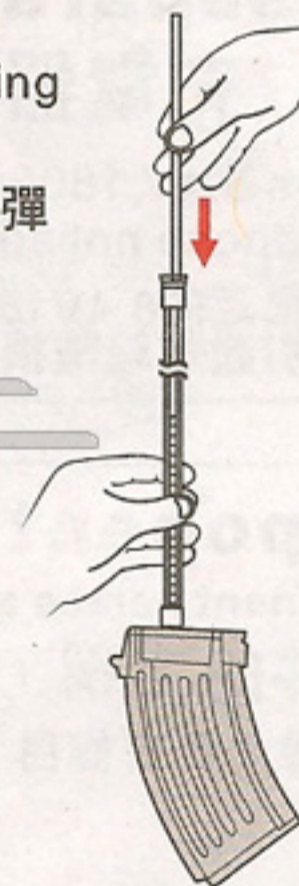

- Failure in bullet feed may occasionally occur during full auto operation. In this case disconnect the magazine, give a slight shock or pole BB bullets using a stick and then reinsert the magazine again. 出現這種情況時---全自動射擊時偶爾會出現不能給彈。此時，請取下彈倉，(如圖)沖撞或用棒敲打BB彈出口2~3次。



CAUTION If bullet feed is frequently faulty remove all bullet from the magazine and spray sill cone oil fro 0.5 to 1 sec. Note that the hop-up operation may become unstable for a while after using silicone oil spray.

- 如果不能很好給彈時(如圖)，請將彈倉內的彈全部取出，使之處于沒彈狀態，另購硅噴槍噴射彈倉內部0.5~1秒。但是HOP UP會出現短暫不安定。

Bullet stopper releasing lever 子彈塞入取出杆



Slide the lever in the arrow direction to remove remaining BB bullets. (Be careful since BB bullets may jump out. 按箭頭方向滑動控制杆，取出射擊剩下的BB彈(注意不能飛出)。



Always carry out maintenance AFTER returning the hop up lever to the Normal position. (Hop-OFF)

務必將HOP調整杆返回到標準位置 (HOP OFF) 后才能進行保養。

Since the chamber is a precision component avoid use of used BB bullets.

因(槍)膛內非常機密, 請勿使用已用過的BB彈。


The Flash Suppressor is fixed by reverse thread as in the case of the real gun.

閃光扶手和真槍一樣, 使用反螺絲安裝。

5 Supplement Maintenance Manual. 保養的補充說明

As shown in the A47 manual, rotate the cotton wound cleaning rod slowly when inserting it into the barrel.

按A47說明書取出綿製品的一端, 拿住清潔杆前端部分, 邊旋轉邊裝入管內。

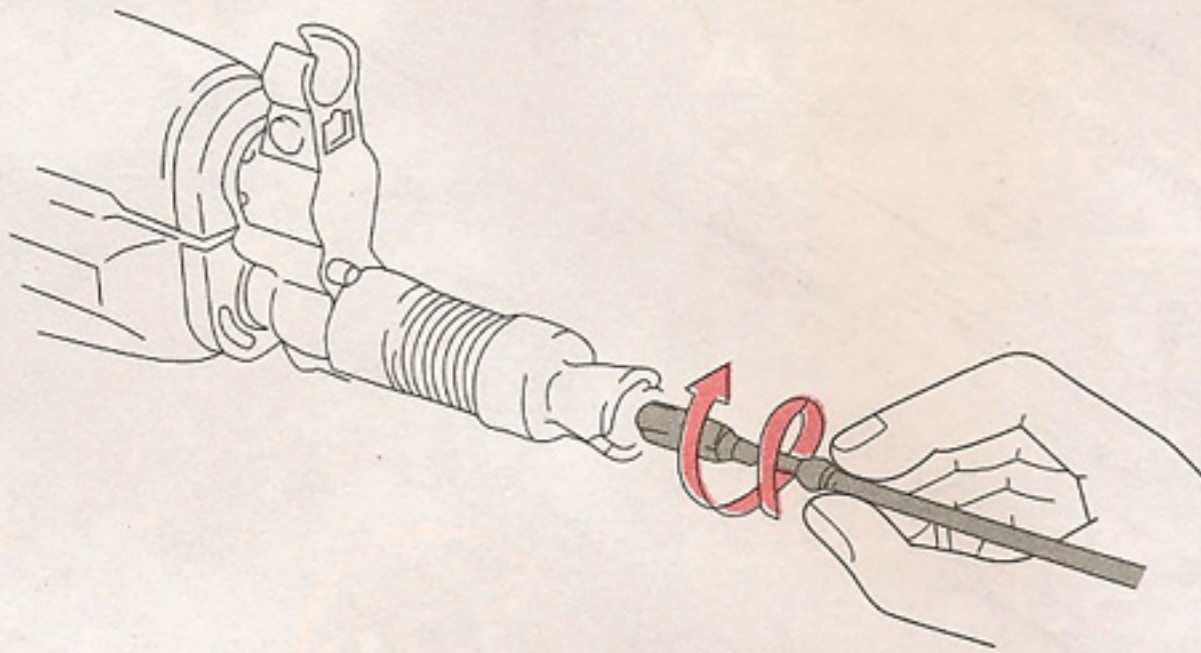

Hop chamber packing. HOP (槍)膛的包裝



Apply a few drops of sill cone or Teflon oil. 滴入數滴硅油或特氟隆油。

CAUTION Refer to the A47 & 47S manual. (See 11, 2, 3 on page 8)

注意 請同時閱讀A47&47S8P 11 2,3.

CAUTION (Read the instructions below when you want to install the optional full-auto tracer.)

注意 (僅安裝全自動發光裝置時才能使用。)


Installing the Full-Auto Tracer Adapter BB彈發光裝置變壓器的安裝方法

Remove the flash hider while pressing the lock button.

邊按鎖緊按鈕邊安裝閃光扶手。

CAUTION The lock button is removable. Be careful not to loose it.

注意 因鎖緊按鈕是抽取式, 注意不能丟失。

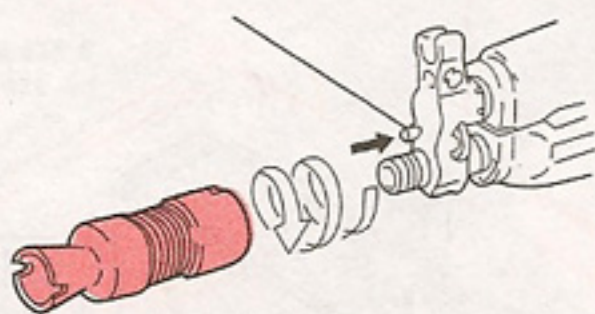

CAUTION Be careful since the thread is reversed.


注意 請注意是逆轉

CAUTION Be careful not to use excessive force when tightening the set screw, to avoid damage of the screw thread.

注意 安裝時, 如果用力過度可能會使裝入的螺絲和接合器破損, 所以一定要注意。

1 Remove the silencer lid and tighten set screws for 1 muzzle guide and 2 coupler in this order.


取出消音器的蓋子, 按1槍口護蓋2接合器的順序安裝, 並固定螺絲。

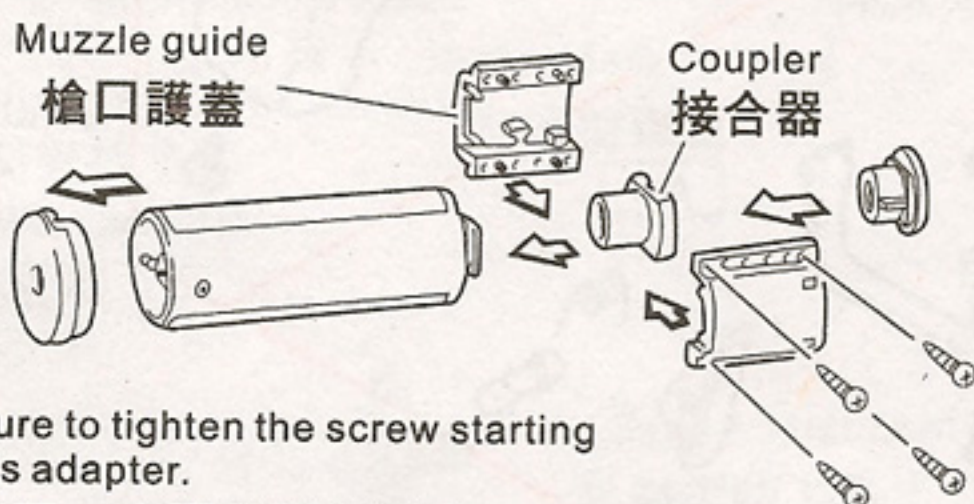

Make sure to tighten the screw starting from this adapter.

此接合器一定要用螺絲固定。

2 Fix four 2X10 pan head screw 請用4粒2X10螺絲固定

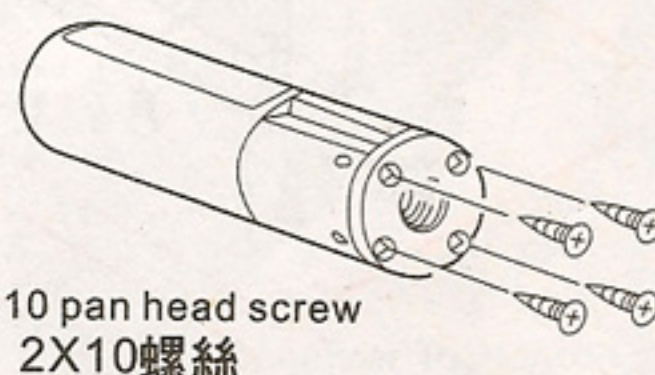


Adapter for V-N, A-47 V N A47用的接合器

2X8 pan head screw 2X8螺絲

3 Install the tracer. 安裝手槍

Be careful since the thread is reversed.

請注意是逆轉。

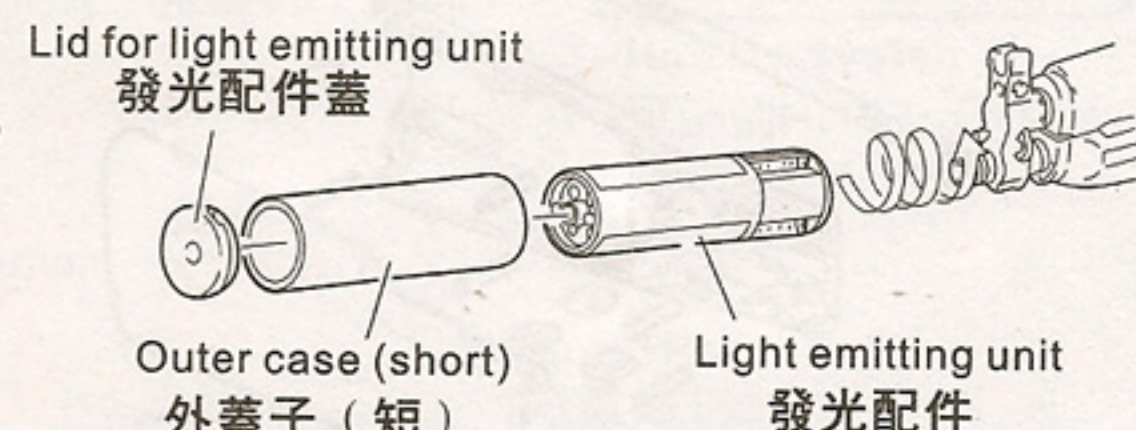

Outer case (short) 外蓋子 (短)

Light emitting unit 發光配件

