

RIFLE WI6-2

AUTOMATIC ELECTRIC GUN SERIES

WI6-4

适合年龄18岁以上使用

Users Restricted to 18 Years of age or older

HANDLING CAUTIONS AND INSTRUCTION MANUAL

操作手册指导手册



操作之前先阅读这本手册

Always read through this manual before operation.



WARNING



Only for 18 years old or up

Operation of this air gun for competition use is restricted to users younger than 18 years old.



Injury caution

Since the field of fire can be about 50 to 60 meters, careless shooting may cause eye damage or other injuries.



Careful reading of Handling cautions and Instruction manual

Always read through this HANDLING CAUTIONS AND INSTRUCTION MANUAL carefully before operation. Operate the air gun with full recognition of warnings and cautions.

Always read this manual before using.



ATTENTION 注意

<INSTRUCTION> PLEASE READ IT BEFORE USE IT.
<使用注意書> 使用之前請務必閱讀。

It is for your to enjoy the fun of shoot that this soft ballistic gun is made. Various kinds of guns have their own features, So you should have sound comprehension before you enjoy the fun of safe shooting. The BB bullets can flight a distance Of 50-60m. If it is not properly used, there would be some risk. So you have read the instructions carefully before using it, And strictly follow them while using it, and then, you can enjoy the fun of shooting.

製作此軟彈槍，是爲了讓您享受射擊遊戲的樂趣。各種各樣槍的特點，使用時的注意事項應詳細了解后才能享受安全運動射擊的樂趣發射的BB彈能飛出約50~60M。如果使用不當，就有受傷的危險使。用之前，一定要仔細閱讀注意事項（使用說明書），而且要嚴守規定，才能享受運動射擊的樂趣。

ATTENTION Please pay attention: you would probably be hurt because of carelessness or shooting mistake.
注意 如果稍不留神或發射錯誤都有可能引起受傷的危險，請萬分注意！

 
ATTENTION MAKE SURE TO WEAR PROTECTION GLASSES TO PROTECT YOUR EYES.
注意 一定要戴護目鏡以保護眼睛。



Make sure to wear protection glasses while shooting BB bullets or playing game. What's more, the BB bullet will go back once it hits hard object, (attention: please don't train on people.)


發射BB彈或遊戲時，一定要戴護目鏡以保護眼睛。而且，BB彈一撞到硬的物體可能會反彈（注意一定不能對著人發射BB彈）。

ATTENTION DON'T TRAIN ON PEOPLE AND ANIMALS.
注意 不能對著人或動物發射。

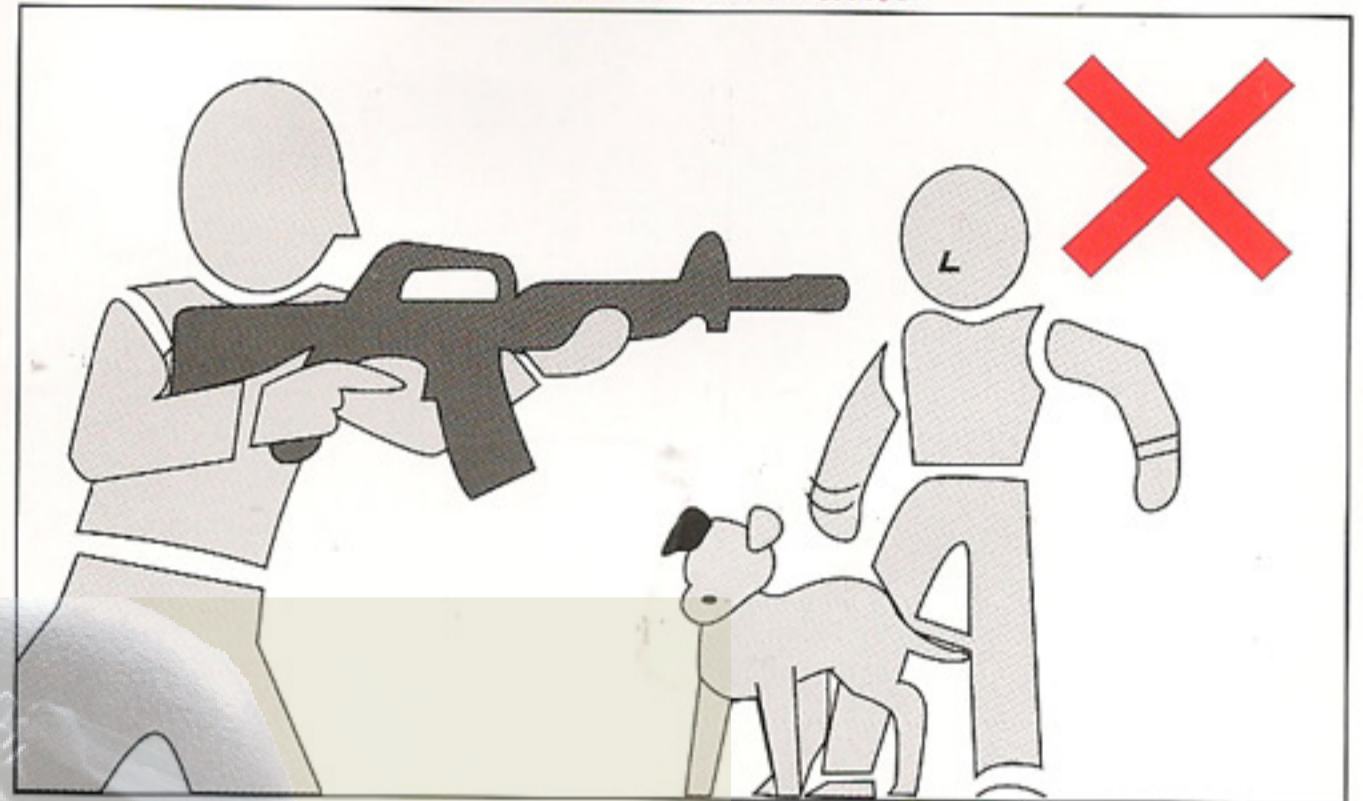

Please don't train the soft ballistic gun on people or animals. Please cover the muzzle with the safe lid, if you are not shooting. 請不要將軟彈槍對著人或動物發射。除了對準目標發射后，請將安全蓋蓋在發射口上。

 ATTENTION YOU WILL BE PUNISHED IF YOU SHOOT MISCHIEVOUSLY.
注意 如果胡亂發射，可能會受到懲罰。

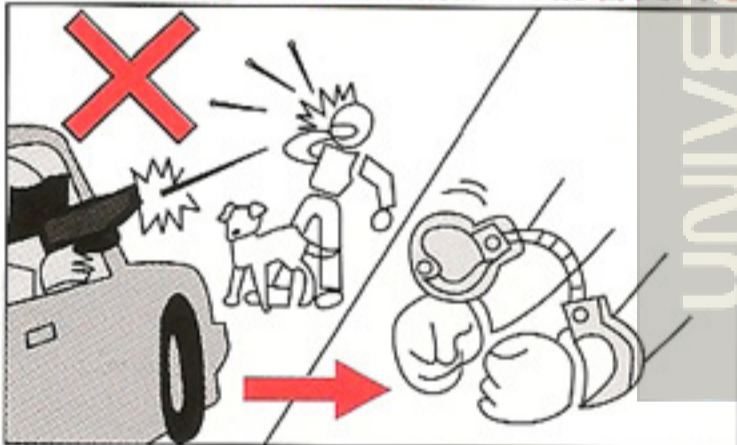

Those who shoot mischievously or train the gun on people or animals will probably be punished by law. 諸如胡亂發射，對著人或動物發射就有可能射傷他人，因此也有可能受到法律的懲罰。

ATTENTION THE SAFE LID SHOULD COVER THE MUZZLE.
注意 安全蓋一定要蓋住發射口。



Please cover the muzzle with the safe lid, so that the BB bullets won't be shot randomly. 爲了使BB彈不會隨意發出，發射口一定要蓋上安全蓋。

ATTENTION DON'T LOOK CLOSE TO THE MUZZLE AT ANY TIME.
注意 無論什麼時候都不能窺看發射口。



Your eyes will be hurt if the BB bullets shoots your eyes by chance, it is very dangerous. So don't look close to the muzzle at any time. 如果BB彈剛好射中眼睛，可能會使眼睛受傷，非常危險。因此，無論什麼時候都不能窺看發射口。

ATTENTION DON'T SHOOT CASUALLY.
注意 不能隨意扣動扳機。



Shoot casually will cause great danger, so please shoot before you take away the lid, and aim at the object. 不加注意而扣動扳機會引起極大危險。一定要取下安全蓋，對準目標后才能扣動扳機。

ATTENTION THE MUZZLE SHOULD BE DIRECTION AT THE SAFE DIRECTION.
注意 發射口，一定要對準安全的方向。



The muzzle should not train on people or animals or any where that would cause danger. Please cover the lid except shooting. 發射口，絕對不能對準人、動物或其它危險的方向。除發射時以外，安全蓋一定要蓋住發射口。

ATTENTION DON'T SHOOT WHERE THERE ARE PEOPLE OR TRANSPORTATION.
注意 決不能在人或車通過的場所發射。



The soft ballistic shooting place should be in the safe arena., those places where there are people or transportation are not allowed to shoot. 發射軟彈的場所，一定要在安全的場所。像人或車通過的場所，或周圍有人的場所決不能發射。

■ YOU HAVE TO READ THE INSTRUCTION CAREFULLY BEFORE USING IT BECAUSE THE OPERATION IS DIFFERENT FROM THE NORMAL GUN.

 
■ 因使用方法和一般的槍不同，所以一定要詳細了解后才能使用。

■ THOSE INCIDENT, DANGER, HURT, REPAIR CAUSED BY THE WRONG WAY OF OPERATION, READJUSTMENT, DISMANTLE ARE CLAIMED TO BE THE RESPONSIBILITY.

■ 錯誤的使用方法、操作、改裝、拆散等引起的事故、危險、損傷、維修等都不是經銷商的責任。


Always read through this manual before operation. 在操作之前必需讀熟這些說明書

ATTENTION 注意 PLEASE PUT IT IN A BAG OR BOX WHILE CARRYING IT.
攜帶著走路時,一定要裝入盒子或包子。

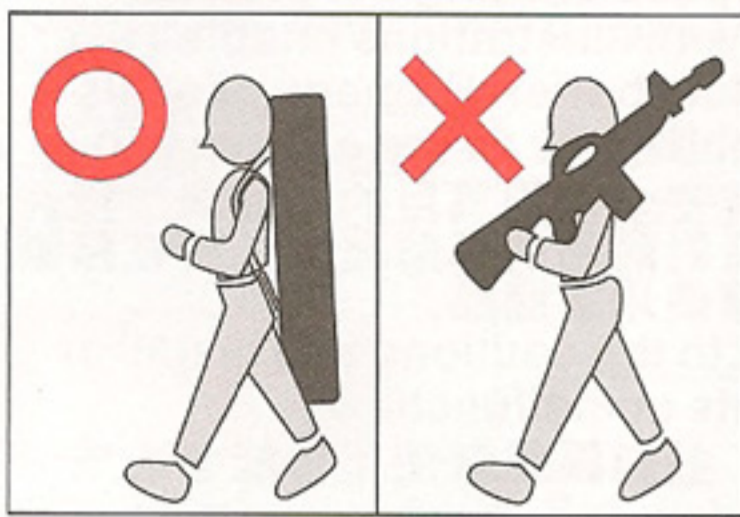


While carrying the soft ballistic gun, make sure the muzzle is tightly covered by the lid, and should be put in the bag or box.
攜帶軟彈槍走路時,安全蓋子一定要蓋住發射口,並貼緊,而且一定要裝入盒子或包子內。

 ATTENTION 注意 KEEP IT OUT OF THE TOUCH OF THE LITTLE KIDS.
請保管在小孩觸手不及的場所。

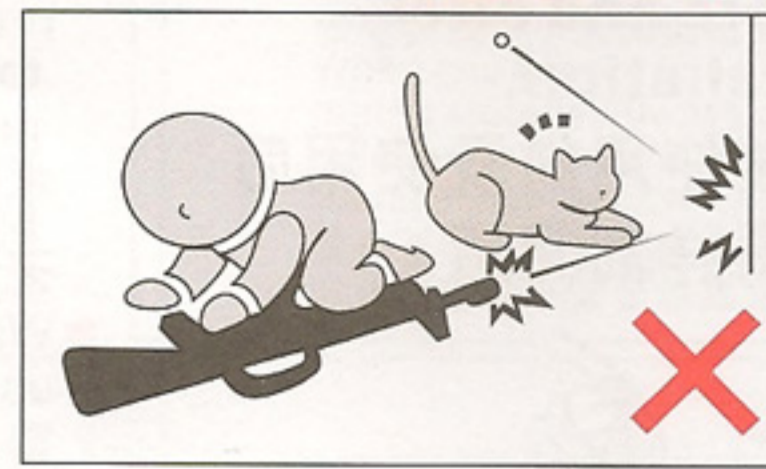


Please put it in the bag or box with the safe lid covered while not using it. And make sure to keep it out of the touch of kids that below 10.
不使用時,一定要將安全蓋蓋住發射口,放入盒子或包子中,並請保管在未滿10歲小孩觸手不及之處。

 ATTENTION 注意 YOU CAN CONDUCT BB BALLETS EVEN THOUGH THE BALLISTIC BOX.
即使取下子彈匣,也有可能發射BB彈。

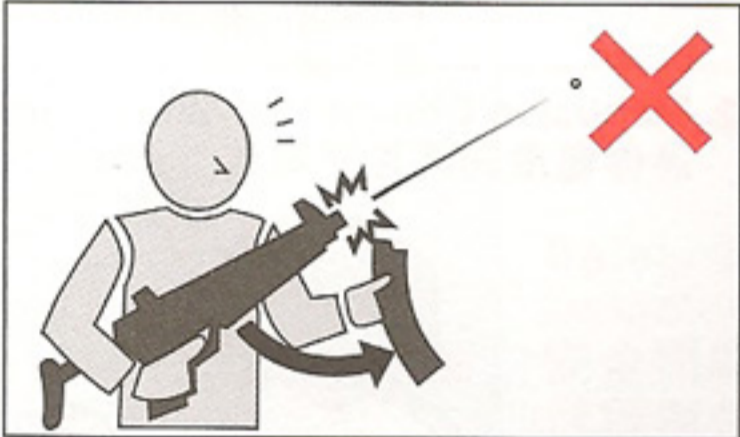


The BB bullets may probably leave in the gun body even you take away the ballistic box, which is very dangerous. So please cover the muzzle with the safe lid after taking away the ballistic box.
即使取下子彈匣, BB彈也有可能殘留在槍機中,非常危險。取下子彈匣后,請將安全蓋蓋住發射口。

 ATTENTION 注意 PLEASE COVER IT WITH STICKY TAPE.
請將膠紙封住。

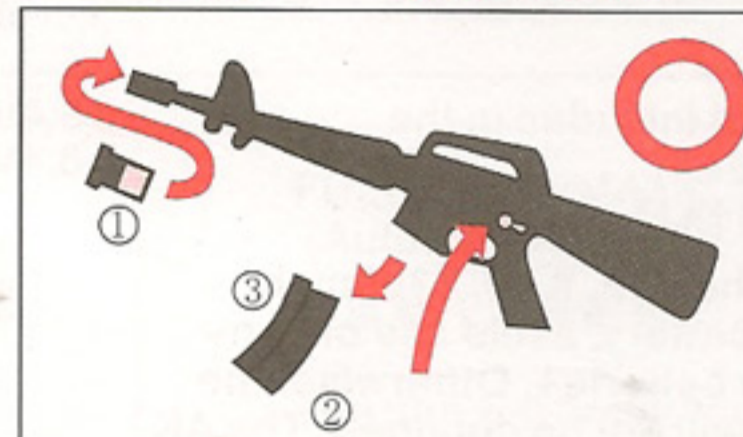

Cover the muzzle with the safe lid. Attach the sticky paper to anywhere that is possible to conduct shooting. Please take away the ballistic box.
① 將安全蓋蓋住發射口。
② 在有可能造成發射之處貼上膠紙。
③ 請取下子彈匣。

 ATTENTION 注意 DON'T PULL THE TRIGGER EXPECT YOU WANT TO SHOOT.
除發射時以外,手指不能扣動扳機。

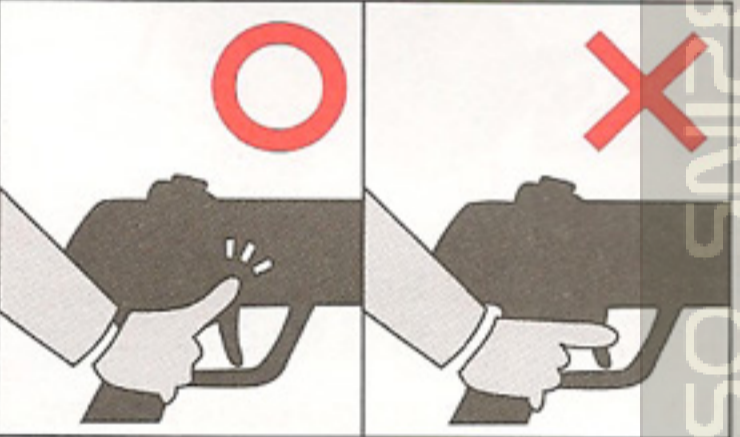

Don't pull the trigger expect you want to shoot. It is very danger if pull trigger because of spring.
除發射時以外,手指不能扣動扳機。如果因為彈力而扣動扳機時,將會非常危險。

ATTENTION 注意 DON'T DISMANTLE THE GUN BODY.
請不要拆散槍機。



The dismantlement of the gun body would easily cause trouble, incident, which is really dangerous. So please don't dismantle the gun body.
拆散槍機很容易造成故障、事故,非常危險。請絕對不能拆散槍機。

ATTENTION 注意

- THIS SOFT BALLISTIC GUN IS INSTALLED WITH 6MM BB BALLETS WHICH CAN SHOOT IN A DISTANCE OF 50-60M. WHILE USING THIS GUN, YOU HAVE TO CONCERN ALL KINDS OF RISKS, MAKE SURE TO USE IT IN A ABSOLUTE SAFE CONDITION.
- WHILE PLAYING GAMES, PLEASE MAKE SURE THE SAFE CONDITION WHERE THE BB BALLETS MAY POSSIBLY REACH. MAKE SURE THE SECURITY OF THAT THOSE WHO DON'T WEAR PROTECTION GLASSES OR THE SPECTATORS.
- THE MUZZLE SHOULD NOT BE DIRECTED AT GLASS, BULB, FLUORESCENT LAMP, OR HOUSE MACHINE, TEA SET, OR PLATE, FURNITURE, GAS BOTTLE ETC. BECAUSE OF THE DANGER CAUSE BY BROKEN.
- EXCEPT BB BALLETS, NOTHING CAN BE PUT INTO BALLISTIC BOX AND SHOOTING MACHINE.
- THE FINGER CAN INSERT INTO CERTAIN SPOT ACCORDING TO THE SHAPE OF GUN, BUT PLEASE DON'T PUT YOUR FINGER INTO THE GAP OF THE GUN BODY.
- MAKE SURE THE GUN IS PLACE IN THOSE PLACE WHERE IS NOT EASY TO FALL, AND SHOULD BE OUT OF THE REACH OF THE KIDS BELOW 10. WHAT'S MORE, IN ORDER TO PREVENT THE NAUGHTY KIDS, THE MUZZLE SHOULD BE COVERED WITH SAFE LID, AND SHOULD BE PUT IN BAG OR BOX.
- WHEN YOU FOLLOW THE RIGHT WAYS (ACCORDING TO THE INSTRUCTION), BUT STILL CAN SHOOT BB BALLETS; OR WHEN YOU CAN REPAIR BECAUSE OF THE BREAKDOWN CAUSED BY THE GETTING OLD, OR THE FALL DOWN CAUSED BY THE WRONG OPERATION, PLEASE SEND TO THE STORE WHERE YOU GET IT OR MAIL IT TO TO HAVE IT REPAIRED.
- IF YOU OPERATE PROPERLY, IT CAN CONDUCT 1000 ROUNDS OF BALLETS, AND THE ACCESSORIES CAN BE REPLACED. IF YOU CAN'T DO IT, THAT MEANS THERE IS SOMETHING WRONG IN IT. PLEASE SEND IT TO THE STORE WHERE YOU GET IT OR MAIL IT TO HAVE IT EXAMINED OR CHANGE THE PARTS.
- 此軟彈槍安裝的6毫米的BB彈能飛出50~60米。使用時要考慮各種危險,應在十分安全下才能使用。
- 玩遊戲時,要確認BB彈可能射到之處的安全。注意沒有戴護目鏡的人和不參加遊戲的人的安全。
- 因有破碎、損壞的危險,發射口絕對不能對著玻璃、日光燈、電燈、家庭用電氣品、茶具及盤子等、家具、自動、氣瓶等發射。
- 子彈匣和發射器,除BB彈外不能放入其他物品
- 此槍機的形狀,手指等可能插入某處。請注意手指一定不能插入槍機的間隙。
- 擺放槍機的地方一定是不易掉落或滾落,並保管在未滿18歲小孩觸手不及之處。另外,為防止小孩搗蛋,發射口一定要用安全蓋蓋住,而且要裝進袋子或盒子內。
- 正確使用方法(按說明書),但不能發射BB彈時,可因變舊而引起的故障,錯誤使用引起的掉落等自己無法修改時,請務必拿到所購買的商店維修。
- 正確使用此槍機約能發1000發,還能更換配件。如果不能的話說明裡面有故障。請拿到所購買的商店檢查或更換配件。

Please read it carefully before and after installation.

組裝使用前及使用后必須詳細閱讀。



About the instruction 關於使用說明書的表示

- This instruction is written for the purpose of using our product properly and safely. The instruction with illustrations enables users to understand and operate the product better. Properly use this product after you read it carefully and know all the notices in it. 本說明書是根據商品的正確使用及其安全使用為目的所編寫，操作以上以圖示配合文字說明來加深使用者對商品的理解運用。請在熟讀本說明書后注意各提示內容后再正確使用本商品。
- Warning: If you don't pay attention to the cautions and install or use it wrongly, it may cause accidents or malfunctions. 警告：如果無視各注意事項的提示、並錯誤組裝使用可能會造成受傷事故或商品故障等危險情況！
- We shall not be responsible for any damage or malfunction of the gun caused by wrongful operation stated in the instruction. 如果不參照本說明書所述方法進行組裝使用而導致槍支破損以及故障發生，本公司恕不承擔責任！

Necessary goods, which are not included in the complete set (goods not included)
配套以外的必要物品 (另購物品)

Use the specified battery for the gun, 8.4v, 1300mah hyper command so type mini battery, avoid use of non-standard or other brand name batteries. Otherwise, the originally designed functions will not be obtained. The AK and Mini Batteries cannot be used.

對於該氣槍，請使用指定的電池8.4V 1300mAh增強控制的SD型迷你電池。避免使用不標準的或其它品牌的電池。否則，將無法操作原設計的功能。不能使用AK或迷你電池。

WARNING 警告 Do not use undesignated batteries made by other companies. In such case, it may press the barrel that reduces the speed of shot or lowers hit probability.

不能使用其他公司製造的非指定的電池。否則，將會擠壓槍管降低射擊速度或者降低命中率。

Use the specified battery charger which is applicable to the above battery, The charger Exclusive Type. 使用指定的適用於上述電池的電池充電器。專用的電池充電器。

 
Use the correct battery and charger according to respective instruction manuals. We will not be held responsible for any accident or damage caused by wrongful operation or usage of non-specified batteries.

根據各自的使用說明書正確地使用電池和充電器。如果因錯誤操作或使用非指定電池而引起的任何事故或受傷，我方概不負責。



● 8.4V SD TYPE Mini Battery Pack
8.4V SD 型迷你電池組



● Exclusive Charger for Mini Battery
迷你電池的專用充電器

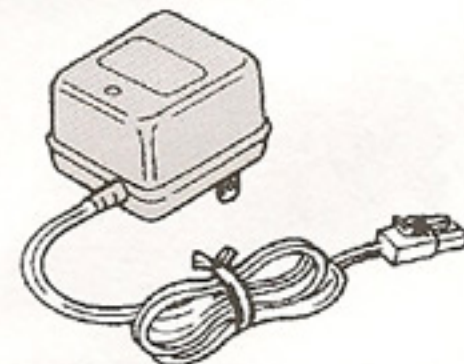


● Ni-cd Battery Discharger
鎳鎘電池放電器

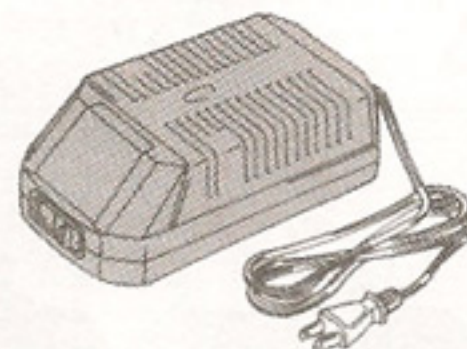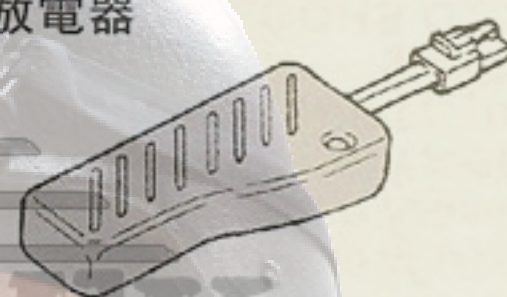  

● Speed charger
快速充電器

 The battery's capacity power is increased with use of the Ni-cd battery Discharger (Sold separately) 使用鎳鎘電池放電器可增強電池的電量。(另購)

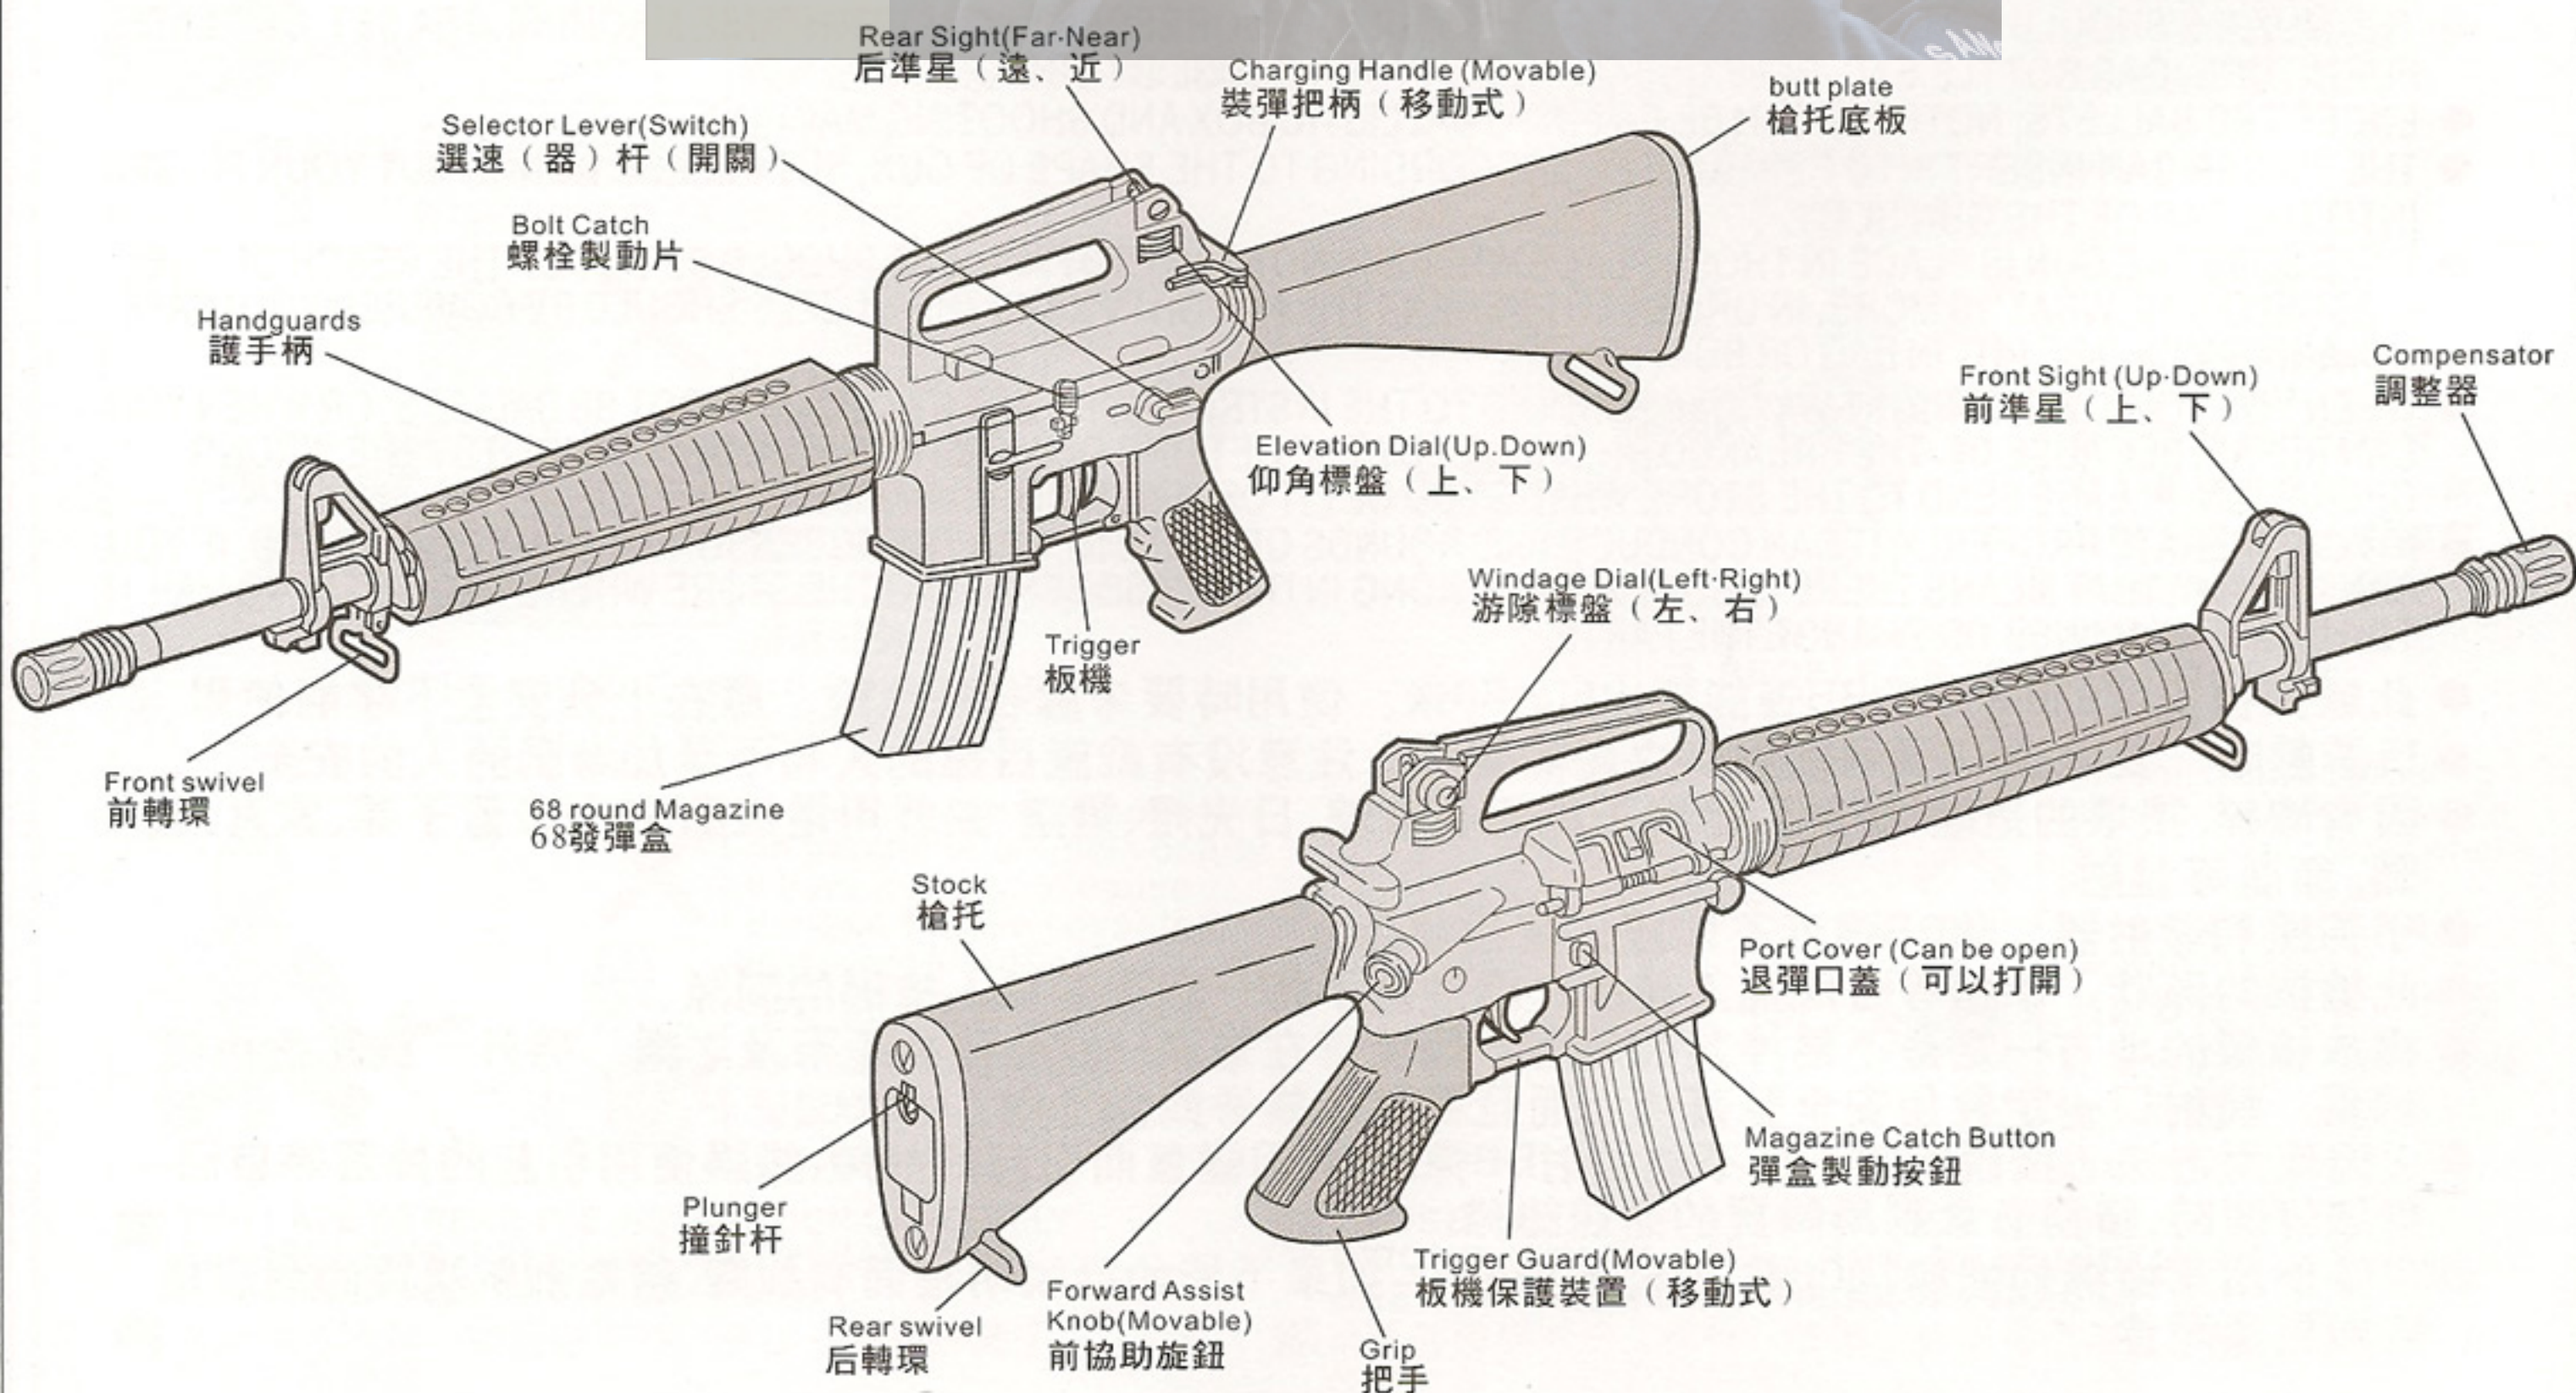



- Never operate the selector while pulling the trigger. Otherwise, malfunctions are possible, resulting in accidents.
- 選擇器設置在安全狀態時扣動扳機可能會對氣槍造成損壞。



- Pulling the trigger with the Selector being set to safe may damage the gun.
- 在扣動扳機時，務必不要操作選擇器，否則可能會造成故障，導致事故。

1 Selector and Safety Setting (Always set the safety lever to SAFE until immediately before firing.)

選擇器及安全設置(在即將射擊之前,請始終將安全杆設置在安全位置)



Set the selector correctly in position; otherwise, malfunction may occur.
將選擇器設置在正確位置，否則將引起故障。

Safety switch ON
Selector position
安全開關
選擇器位置



SAFETY Setting The trigger cannot be pulled.
安全設置: 不能扣動扳機。
When you are not firing the gun or during storage, Always set the selector to the Safe position and attach the protective cap.
當你不開槍或存放該槍時,請始終將選擇器設置在安全位置並系上保護帽。

Safety switch OFF
Selector position
安全開關
選擇器位置



SEMI AUTOMATIC (Single Shot)
半自動(單發)
The gun will fire one shot each time the trigger is pulled.
每次扣動扳機將射出一發子彈。

 
Safety switch OFF
Selector position
安全開關
選擇器位置



FULLY AUTOMATIC (Automatic Firing)
全自動(自動射擊)
The gun will fire automatically while the trigger remains pulled.
按緊扳機時,該槍將自動射擊。



- Always attach the protective cap and disconnect the magazine to avoid sudden operation upon connecting the connector the battery.
- 連接電池和連接器時,請始終系上保護蓋並拆下子彈盒以避免意外操作。

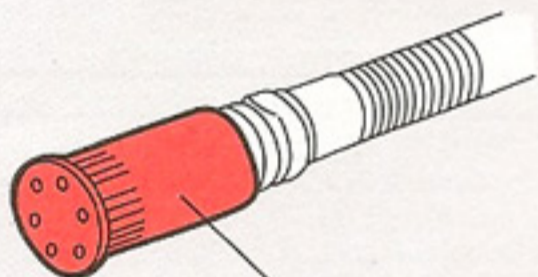



Protective cap
保護蓋

2 Setting the Battery (Conduct operations hereafter after charging the battery.)

安裝電池(將電池充電后再執行該操作)



① Lower the butt plate nail and open the cover.
按下槍托底板的固定釘以打開電池蓋。

  ② Pull out the connector. (Do not pull out the fuse box.)
拉出連接器。(不要取出保險絲盒。)

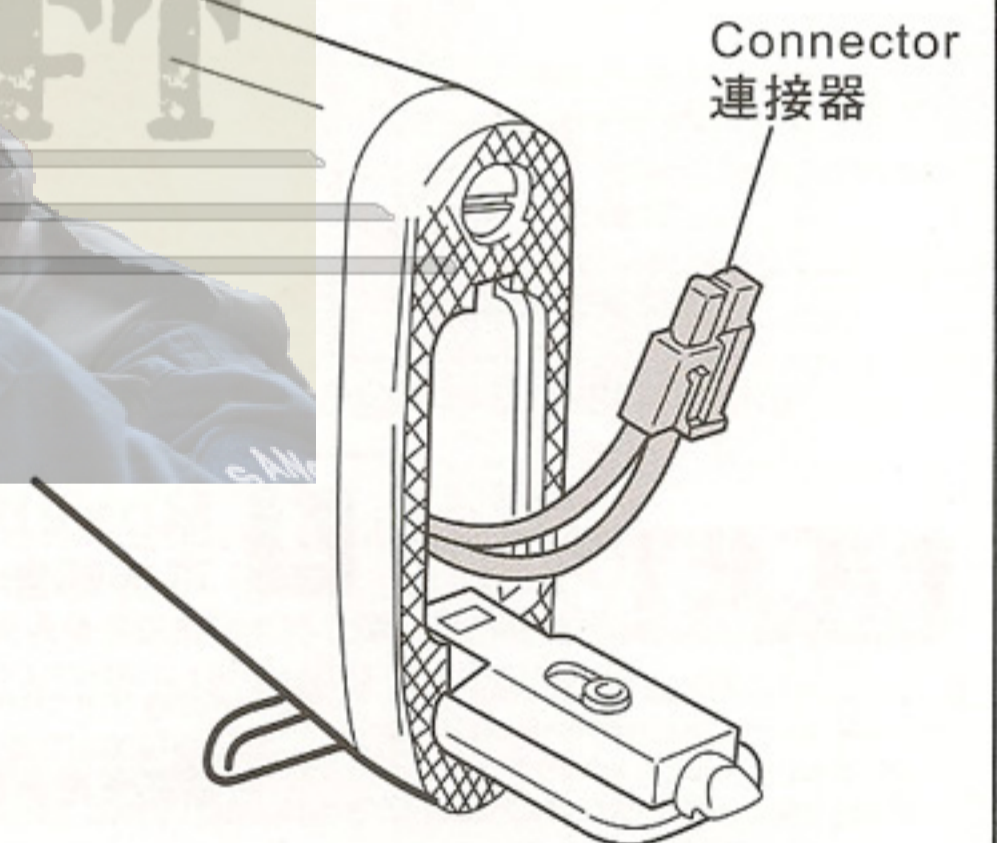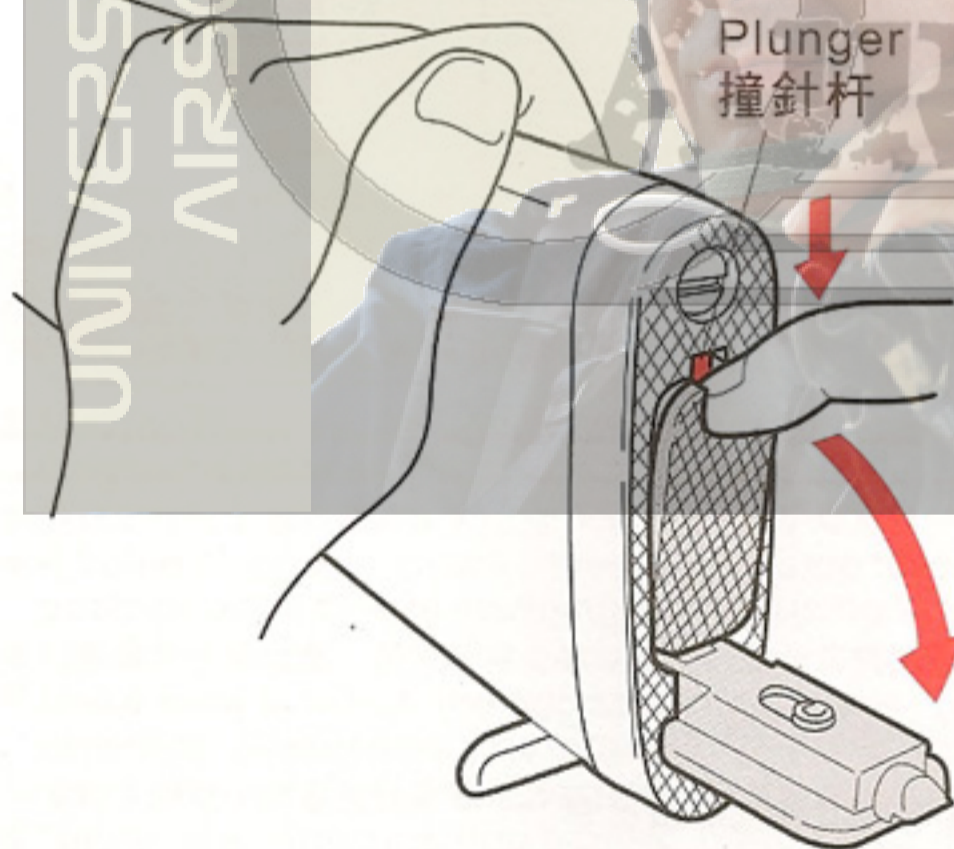

③ Insert the battery in the stock and connect the connector.
將電池裝入槍托裡並接上連接器。

  ④ Set the connector with the projection facing outwards and close the cover.
使連接器和突出部件面向上並關上電池蓋。

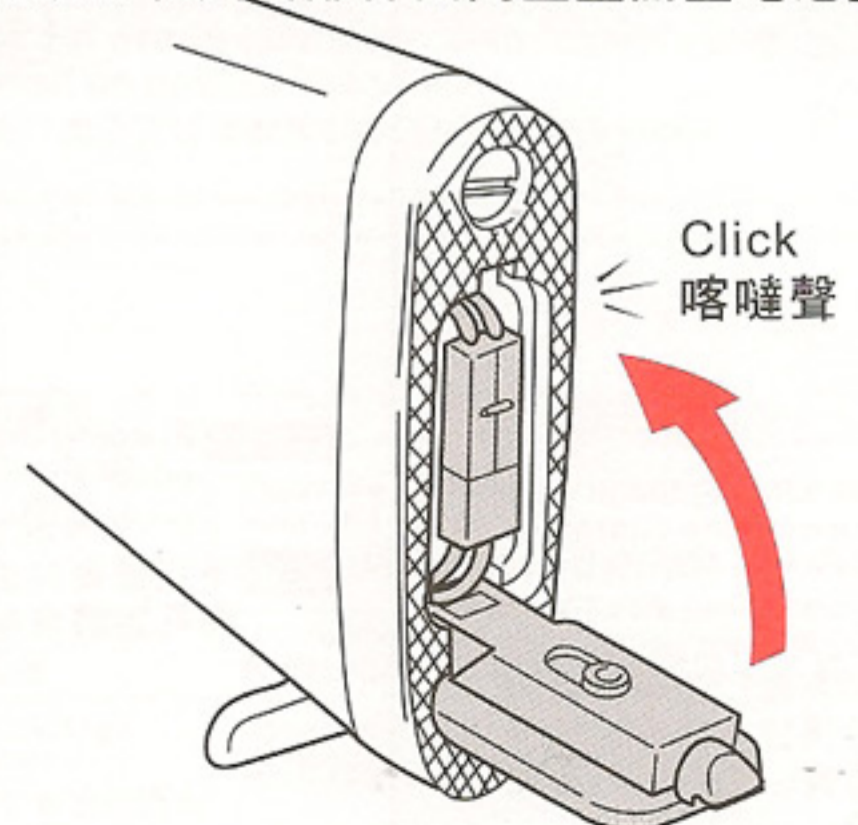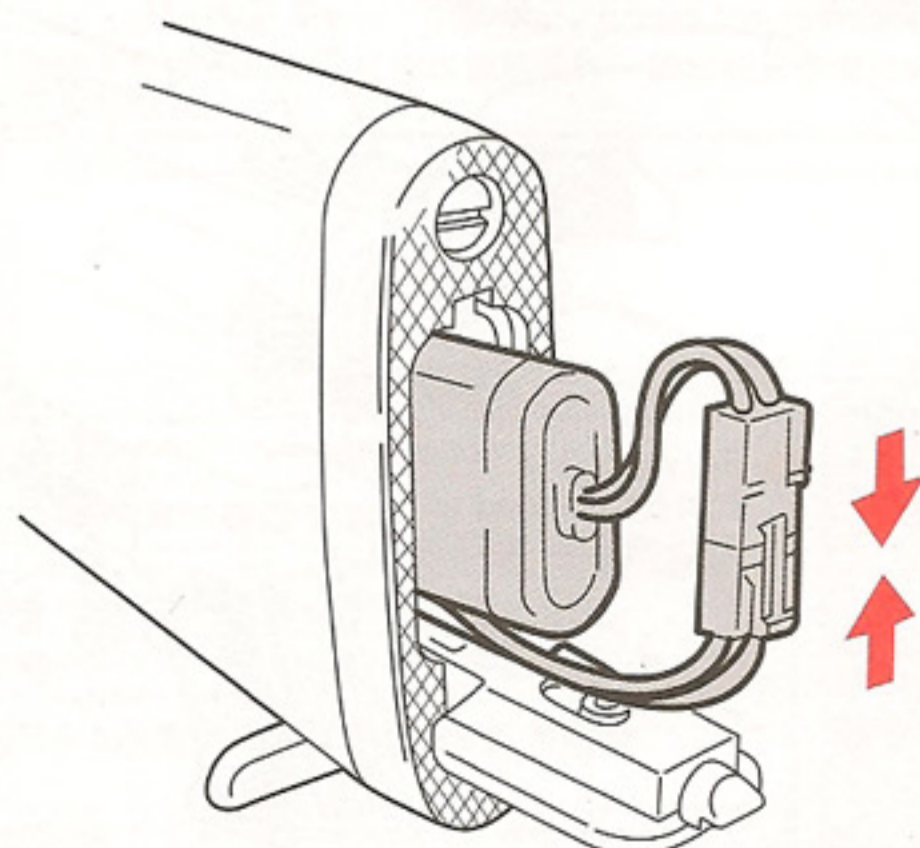

- Be careful so as not to catch your fingers in the movable parts.
- 小心不要被可拆卸配件夾到手指。

CAUTION 注意

 
- Be sure not to lose the adjustment tool.
- 請確信不要遺失調節工具。

CAUTION 注意

- W16-2 COMMANDO rear sight is designed as close to the real thing as possible. But, of course, the ranging will differ from the actual W16-2 COMMANDO. Please refer to 8P6 (Firing) and 9P7 (Variable hop up system) for directions. The explanation is for the actual W16-2 COMMANDO rear sight. Use for air gun will vary.
- W16-2短管卡賓槍后準星的设计盡可能靠近真正的實物。不過，當然，範圍與實際的W16-2短管卡賓槍是不同的。請參考第8頁-6 [射擊] 和第9頁-7 [多變的上跳系統]。其中的解釋是針對真正的W16-2短管卡賓槍后準星的，氣槍的使用將有所不同。

3 Setting the Open Sight 設置瞄準具


Front Sight Setting the bullet hitting point.
Cover the front sight with the adjustment tool and turn.
前準星設置子彈打擊點。
利用調節工具蓋住前準星並轉動。

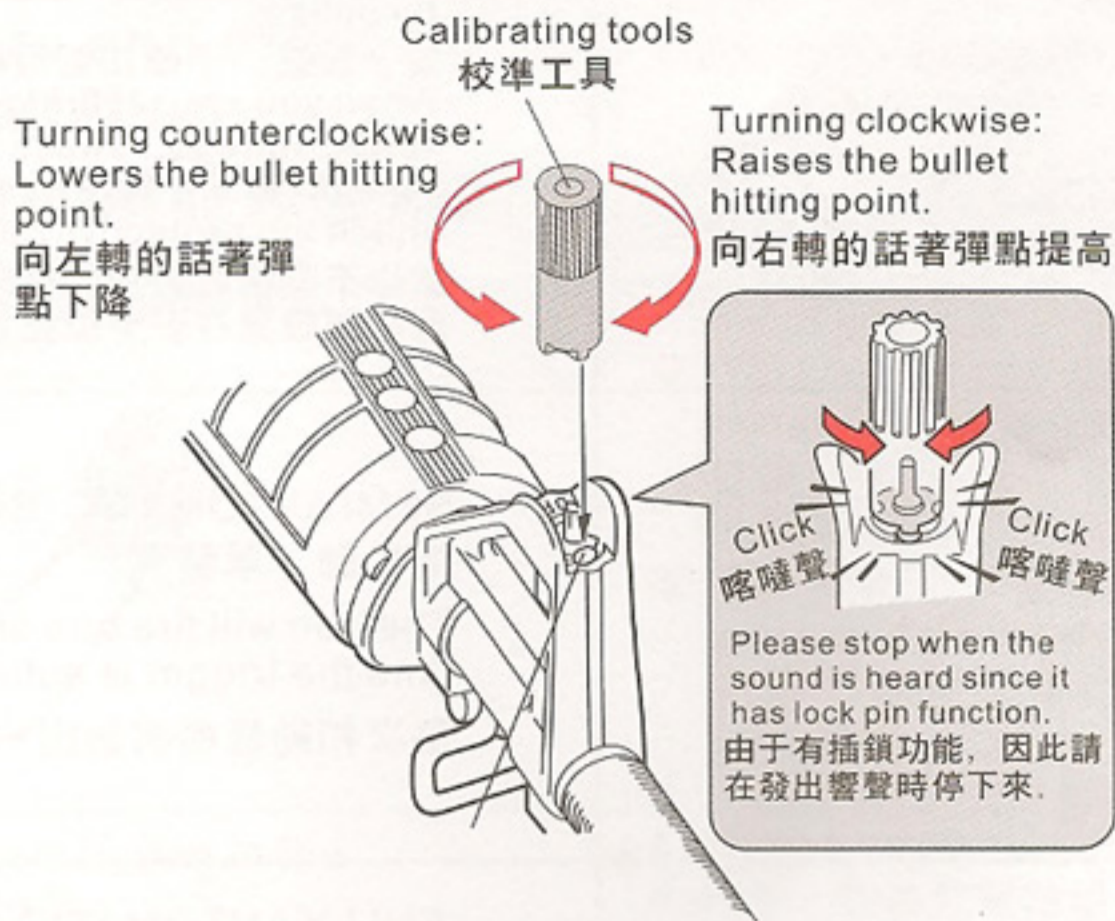


Rear Sight 2. For precision targeting.
The sight assembly is marked in millimeters for easy use.
后準星2 精確對準。
準星的裝備是以英裡標注的，以方便使用。



 Rear Sight 1 For left-right adjustment.
Turning the windage adjustment dial will move the bullet hitting point to the left or right.
后準星 1，進行左右調節。
轉動游隙調節標盤將使子彈打擊點左右轉動。

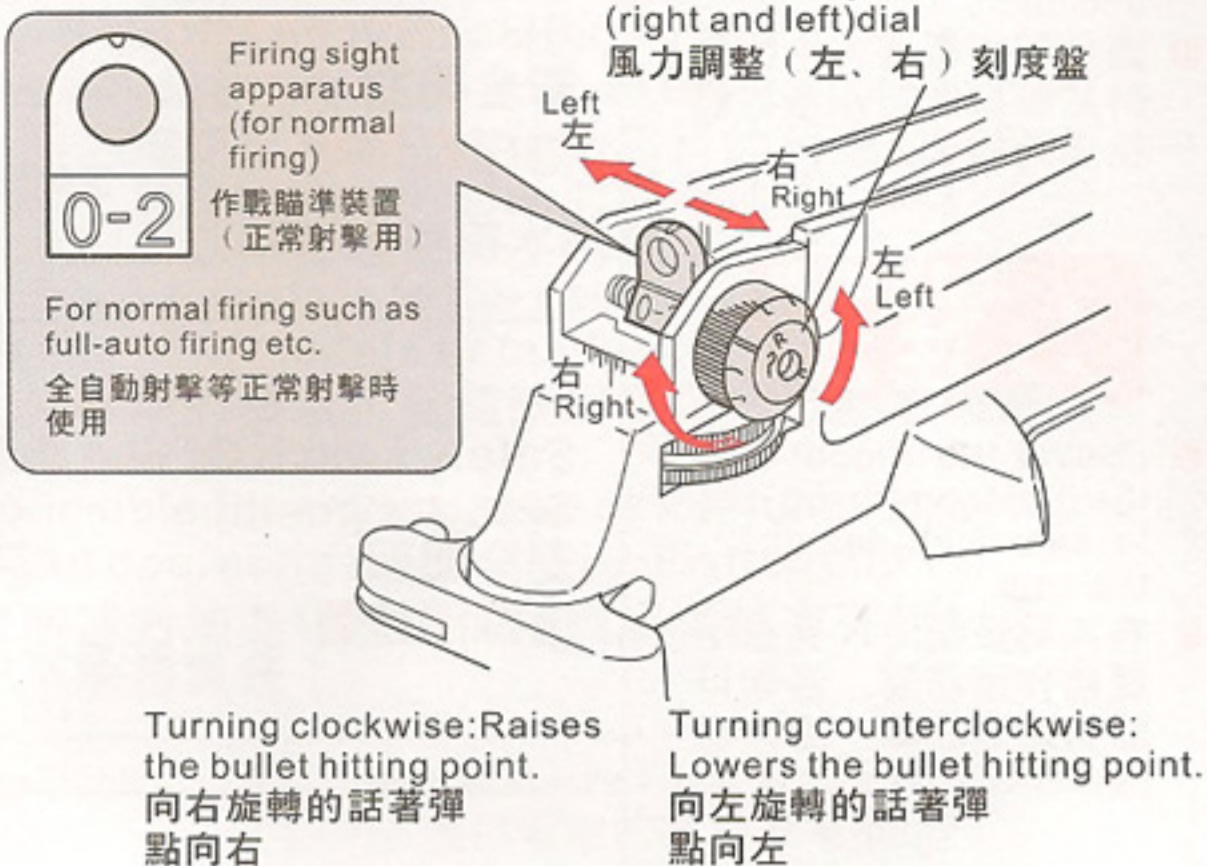

 Rear Sight 3. For up-down adjustment.
Turning the windage adjustment dial will move the bullet hitting point to the left or right.
后準星 3 進行上下調節。
轉動游隙調節標盤將使子彈打擊點左右移動。

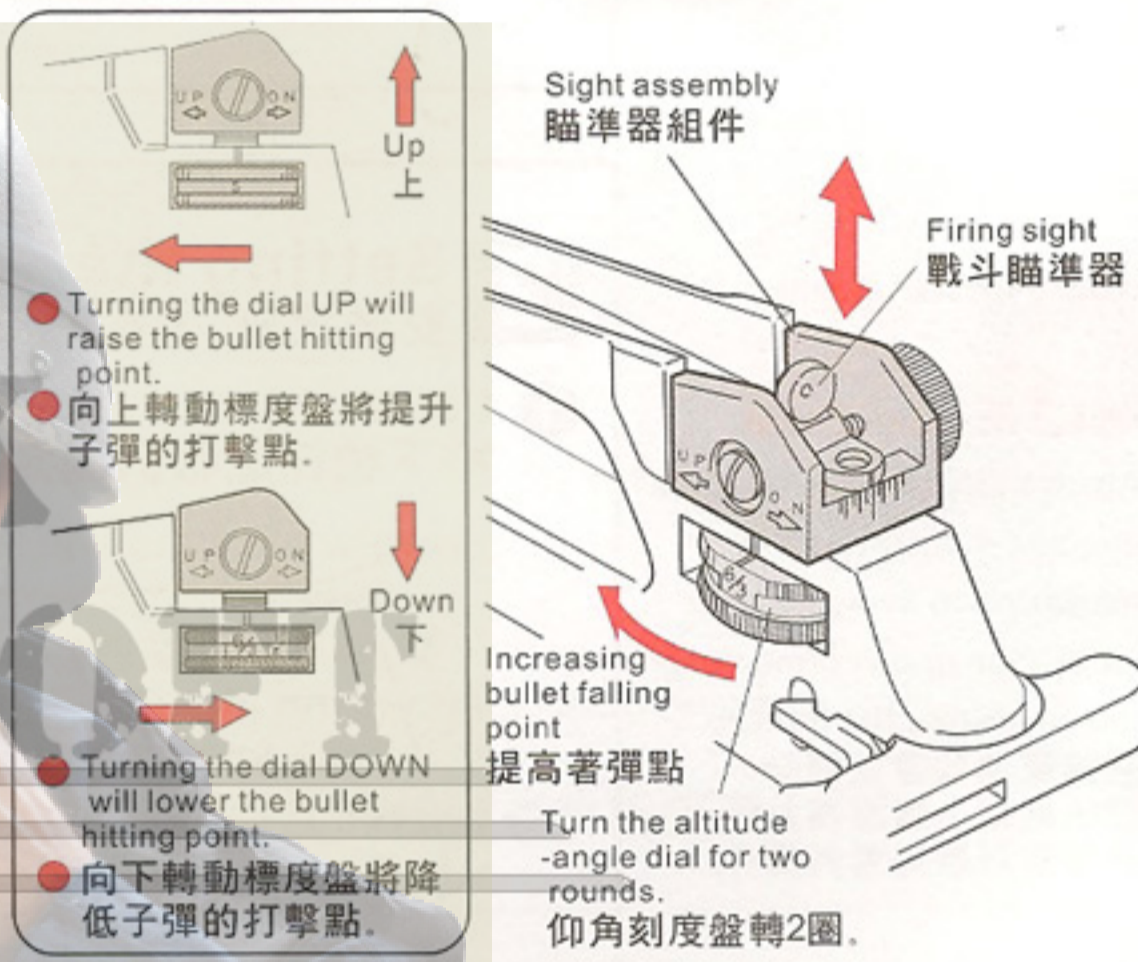


警告 WARNING

- Be careful not to catch your finger in the dummybolt as it will close quickly when the charging handle is released.
- 小心不要使您的手指碰到人形槍栓，因為當裝彈把柄釋放時該槍栓將快速閉合。

4 Movable Parts 可拆卸部件

 - Pulling the charging handle will expose the hop up adjustment dial in the port cover.
拉動裝彈把柄將會使上跳調節標盤在槍口蓋處暴露出來。

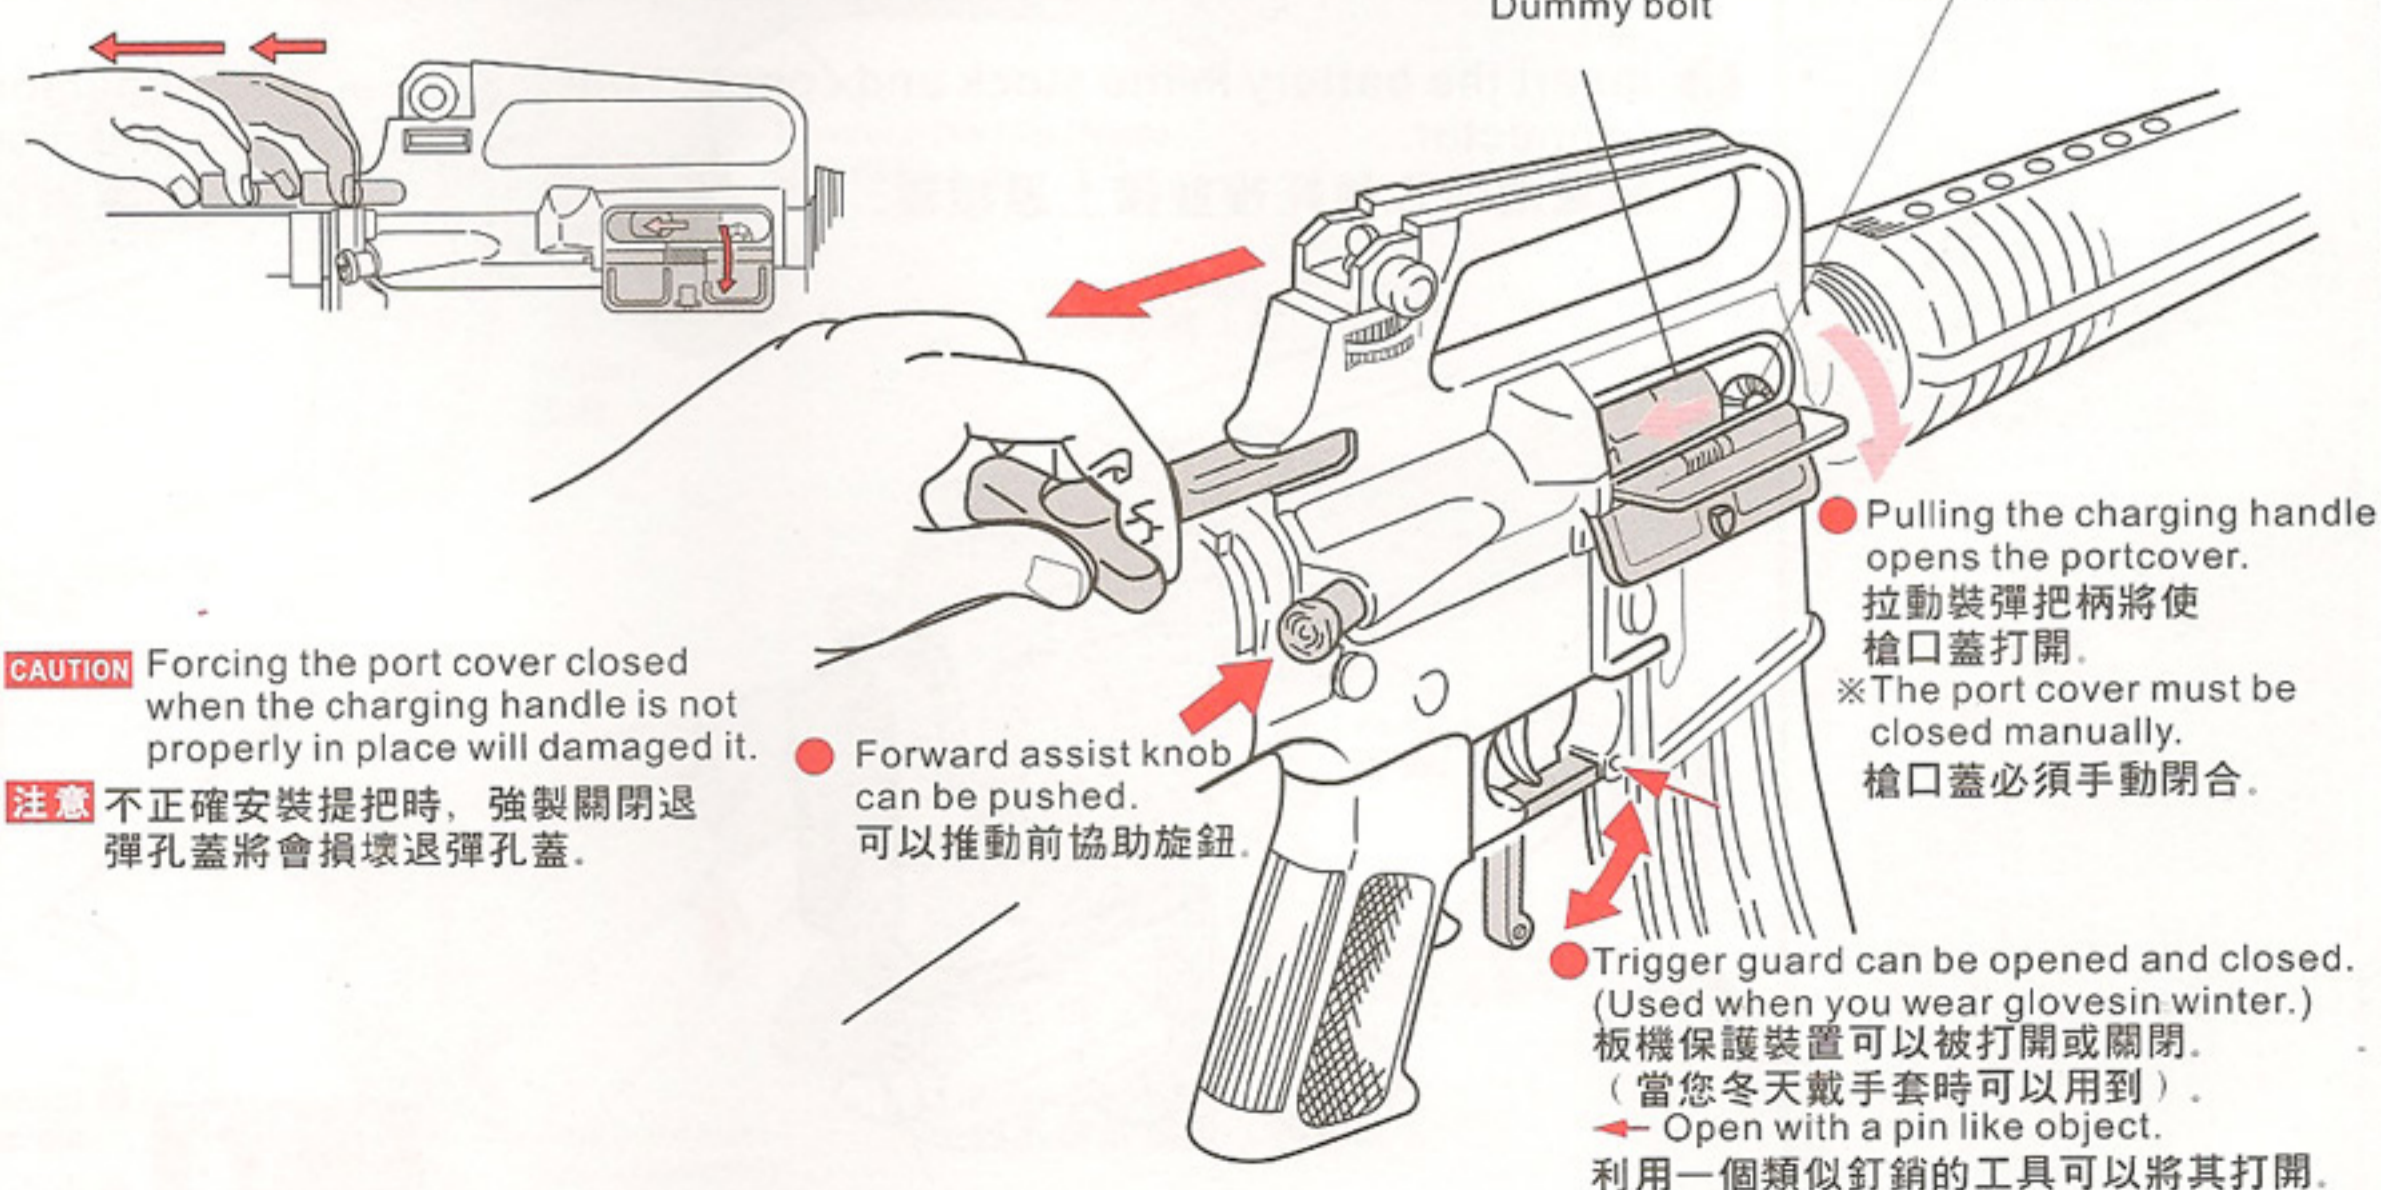

CAUTION Forcing the port cover closed when the charging handle is not properly in place will damaged it.

注意 不正確安裝提把時，強製關閉退彈孔蓋將會損壞退彈孔蓋。

- When closing the port cover, make sure the charging handle has returned fully into position, otherwise the port cover will not close.
- 當閉合槍口蓋時，請確信裝彈把柄已經完全恢復位置，否則槍口蓋將閉合。

警告
WARNING

- Be careful not to catch your fingers in the dummy bolt.
- 請小心不要使您的手指碰到人形槍栓。



注意
CAUTION

- If the hop-up is adjusted excessively causing clogging of bullets, immediately stop operating the gun, return the dial to Normal, fire 2 or 3 shots and readjust.
- 如果由于過度調節上跳而導致子彈堵塞，請立即停止操作，並將標度盤恢復至正常位置，射擊2發或3發后重新進行調節。

注意
CAUTION

- Since a precision tight barrel is used, use of dirty bullets or those with burrs causes clogging of bullets and possible fatal damage to the mechanical box and system.
- 由于采用的是精確緊箍槍管，采用有灰塵的子彈或那些帶有粘附物的子彈將可能導致子彈堵塞，並可能對機械盒和系統造成致命損壞。

警告
WARNING

- Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.
- 永遠不要側向一邊放置氣槍，因此BB子彈將向左或向右發生彎向。這是由于上旋系統的緣故。

 


7 Variable Hop Up System
可變上旋系統

By producing a back-spin on the BB bullets, this system allows for straighter and longer distance shooting than normal air guns. Unlike the fixed type, the variable hop up system permits one-touch adjustments using the dial and lever, making it an ideal hop up system.

通過在BB子彈上製作一個反螺旋，本系統可實現比正常氣槍更直、更遠的射擊距離。不像其他固定型，可變上旋系統允許使用刻度盤和調節杆進行單鍵調節，使之成為理想的上旋系統。

► Adjustment Procedure (Adjust by carrying out trial firing, referring to 8 on page 8P of the instruction manual.)
調節程序（通過進行試射進行調節，參閱說明書第6頁中的8）

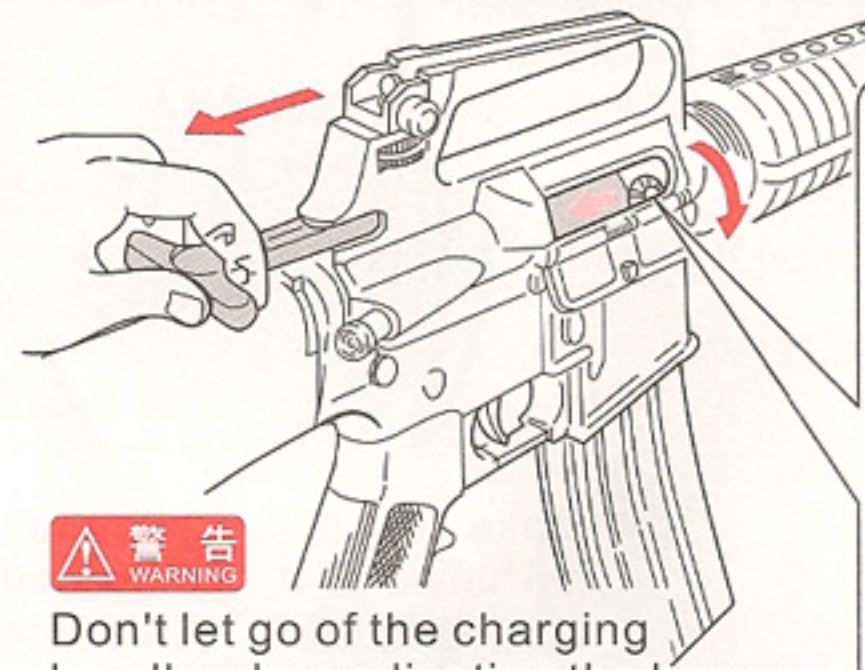

警告
WARNING

Don't let go of the charging handle when adjusting the hop up. 當對上旋進行調節時請不要操作裝彈把柄。



- Keep pulling the charging handle while adjusting the lever.
- 在調節調節杆時，保持拉動拉機柄。
- Turning excessively adversely affects the trajectory. So, stop turning the hop adjustment lever when bullets fly horizontally.
- 逆方向過度調節會影響彈道，因此，當子彈水平飛出時，停止調節上旋調節杆。
- The hop up dial can only be turned a certain amount. Turning it too much will damage it.
- 上旋刻度盤只能旋轉一定數字，旋轉太多將對刻度盤造成損壞。

- The best position is where the bullets fly horizontally, and the longest flying distance is obtained.
- 最佳位置是子彈水平飛行的位置，並且可以獲得最長的飛行距離。

Protective cap 保護蓋

跳躍過度 (把杠向正常方向調整)
Too much hop-up (Return the lever towards NORMAL)

Best position 最佳位置

跳躍不夠 (把杠向跳躍方向調整)
或者跳躍過度 (把杠向正常方向調整)

Structure 結構圖

Piston 活塞
HOP adjustment lever 跳躍調整杆
Brass tight barrel 槍管
Hop up chamber packing gum 跳躍彈腔膠墊物
Chamber 彈腔
Gear 齒輪
MOTOR

Operational Cautions
操作警告:

(Strictly observe the following cautions.)
(嚴格遵守下列警告)

- Moving the lever too much towards Hop causes bullets to clog. Keep pulling the trigger with bullets being clogged damages the piston and gears.
- 將調節杆向上旋移動太多會造成子彈堵塞。由于堵塞的子彈會對損害活塞和齒輪，因此保持扣發扳機。
- If bullet clogging occurs, immediately stop firing the gun, return the hop adjustment lever to the Normal position and remove clogging bullets using the cleaning rod. (refer to 10P 11P2)
- 如果發生子彈堵塞，則立即停止氣槍射擊，將上旋調節杆返回到正常位置，使用通槍條取出堵塞的子彈。(請參考第10頁11P2.)
- Make sure to return the hop adjustment lever to the Normal position when removing clogged bullets or cleaning. (Otherwise, the chamber packing is damaged.)
- 當卸下堵塞子彈或進行清潔時請確信將跳動調節標盤恢復至正常位置。(否則彈腔包裝可能被損壞。)
- Never use used and dirty bullets. (Otherwise, the chamber becomes dirty, resulting in instable hopping up.)
- 務必不要使用已用過的不干淨子彈。(否則槍腔會變得干不淨，並導致上旋不穩定。)
- When about 10,000 rounds are fired, spray silicone oil to the chamber for 0.5 to 1 sec. (refer to 8P 11P1. The hopping up operation may be instable for 200 to 300 rounds after spraying the silicone oil, which is not a problem.)
- 當射擊完10,000發子彈后，噴洒0.5-1秒的硅油于腔室內。(請參考第8頁11P1. 在噴洒硅油后上旋操作可能導致200-300發子彈不穩定，但這屬於正常現象。)
- We shall not be responsible for any damage or accidents arising from wrong operation, disassembly and modification of the air gun. Any costs for repair of such damage shall be paid by the user.
- 我們將不對由于任何對氣槍的錯誤操作，拆卸和更改導致的任何損害或事故負責。由于上述損壞而發生的任何修理費用將由用戶自行承擔。

When Hopping Up is improper
當上跳不正確時

Symptom 症狀	Cause 原因	Action 採取的措施
Bullets flying upwards 子彈向下飛行	Too much hop setting 上旋設置過度	Gradually return adjustment lever towards Normal. 緩慢地將調節標盤恢復至標準位置
Short flying distance of bullets (less hopping up effect) 子彈的飛行距離較短 (上旋效果弱)	Too much hop setting 上旋設置過度	Gradually return adjustment lever towards Normal. 緩慢地將調節標盤恢復至標準位置
	Hop packing contaminated by oil or dirt 油污污染了跳動包裝裝置	Fire bullets equivalent to 4 to 5 magazines or clean the chamber using cleaning rod. 射擊4-5彈盒子彈或利用通條清潔腔室。
	Worn or damaged hop packing 跳動包裝裝置磨損或損壞	Purchase the replacement part at your dealer or from and replace it. 向您的經銷商購買替換部件並進行替換。

Symptom 症狀	Cause 原因	Action 採取的措施
Cannot adjust 無法調節	Damaged adjustment lever or other parts 調節標盤或其它部件損壞	Purchase the replacement part at your dealer or from and replace it. 向您的經銷商購買替換部件並進行替換。
Frequent bullet clogging 子彈經常發生堵塞	Too much hop setting 上旋設置過度	Gradually return adjustment lever towards Normal. 緩慢地將調節標盤恢復至標準位置
	Improper or too large sized BB bullets BB子彈尺寸不合適或過大	Use the BB Bullet supplied by . 使用經銷商提供的BB子彈
	Dirty hop packing 跳動包裝裝置有灰塵	Clean using the cleaning rod or consult your dealer or for repair. 利用通條進行清潔或向您的經銷商進行諮詢以便修理。

CAUTION
注意

- Always use the BB Bullet for this air gun. We shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.
- 本氣槍應始終使用供銷商的BB子彈。對因使用其他生產商提供的子彈造成的損害或事故，我們將不負責任。

5 Setting The Magazine.
安裝彈匣

- 1** Press the magazine release to remove the magazine. (Support the magazine as it may drop.)
按下彈匣釋放杆取下彈匣。(由于彈匣可能會掉下來，所以要扶住彈匣。)



 
- 2** Insert 6mm BB bullets supplied by Marui into the charger. (70 bullets can be inserted.)
將供銷商提供的6毫米BB子彈插進填彈條。(可插入70發子彈)



- 3** Insert the charger into the magazine.
將填彈條插進彈匣。

Insert the BB bullet stopper horizontally when inserting the charger into the magazine, to avoid interference with the magazine stopper the magazine.
將裝彈器插入彈匣時，請將Bb彈製動器放入側面，和彈匣內的彈匣製動器相碰撞，就有折斷的危險。

BB bullet stopper
BB彈製動器
Magazine stopper
彈匣製動器

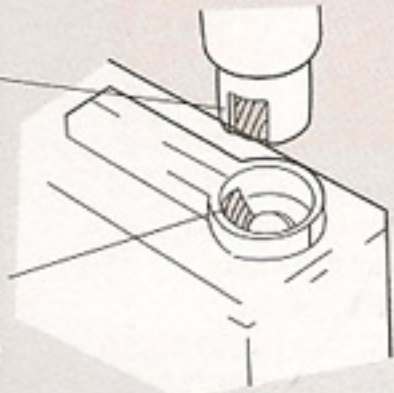


- 4** Press in bullets using the charging rod.
用填彈杆壓入子彈。

CAUTION The magazine is capable of containing 68 rounds.
注意事項 彈匣可容納68發子彈。



 
- 5** Make sure to set the magazine upwards and connect it firmly until a click sound is heard.
確保彈匣朝上安裝，並牢固連接，直到聽到一聲“喀噠”聲。

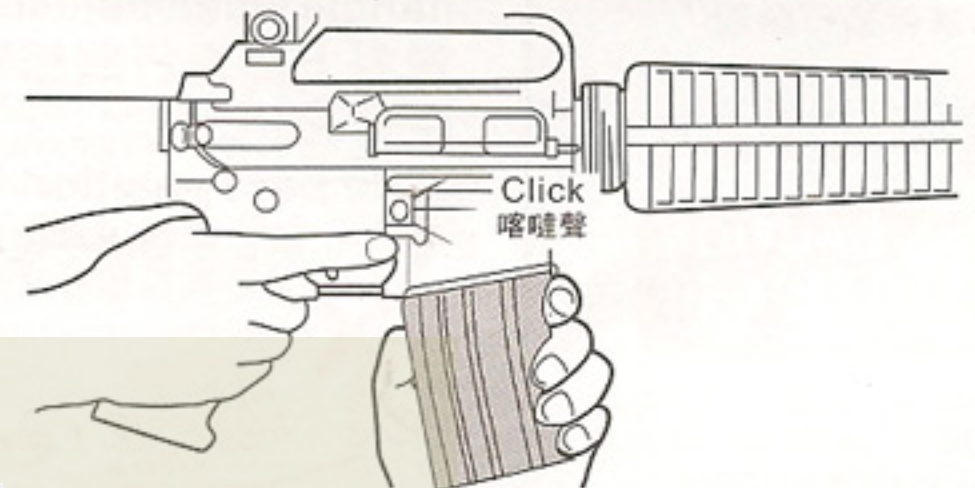

CAUTION Confirm that the safety lever is set to the safety position and don't place your finger on the trigger.
注意事項 確保保險杆設置在安全位置，並不要將手指放在扳機上。

6 FIRING (confirm safety sufficiently before beginning firing)
射擊 (射擊前要充分確保安全)

 Remove the protective cap.
取下保護帽

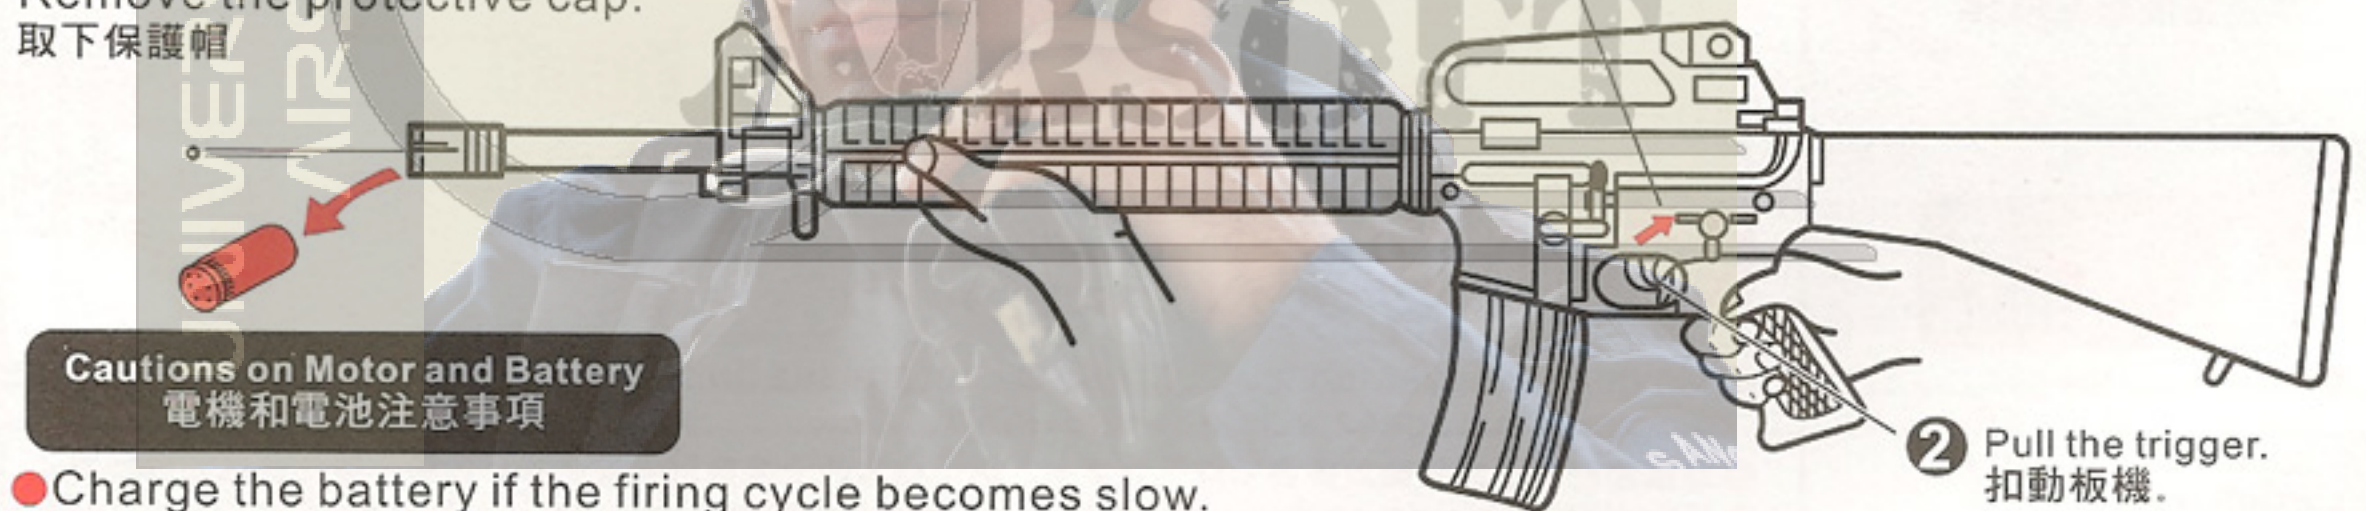

Cautions on Motor and Battery
電機和電池注意事項

- Charge the battery if the firing cycle becomes slow.
- 如果射擊周期變慢，請為電池充電。
- Give the air gun a rest for 5 to 10 minutes after firing about 500 rounds, in order to ensure long service lives of the motor and battery.
- 在射擊約500發子彈后，請將氣槍休息5至10分鐘，以保證電機和電池的長使用壽命。

CAUTION A blank firing may occur at triggering after setting the magazine, this is the normal operation of the gun.
注意 裝上子彈盒后可能觸發空彈發射。這屬於該槍的正常操作。

When Bullets Are clogged
當子彈堵塞時

- If bullets are clogged, remove them (refer to 10P8, 11P2) and apply a few drops of silicone oil into the chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 second, to obtain smooth continuous firing. (Never use CRC-556 or other mineral oil.)
- 如果子彈堵塞，則將子彈取出來(參閱10頁8, 11P2)，從所示的彈匣入口向槍膛裡注入幾滴硅油或噴灑硅油0.5至1秒，以實現流暢連續射擊。(務必不要使用CRC-556和其它礦物油。)

After Operation
操作之后

- Remove the magazine and dry fire the gun in the semi auto mode directing the muzzle to a safe direction. (Otherwise, the spring may be weakened.) Set the selector to the safe position.
- 取下彈匣，將彈匣朝向一個安全的方向，在半自動模式下對氣槍進行空槍射擊。(否則，彈簧可能會變弱)。將選擇器設置到安全位置。
- Always disconnect the battery and attach the protective cap whenever you do not operate the air gun. Bullets may remain in the chamber even if the magazine contains no bullets (or if the magazine is not connected).
- 無論何時不操作氣槍時，請始終斷開電池，蓋上保護帽。即使彈匣裡沒有子彈(或沒有連接彈匣)，子彈仍可留在槍膛裡。

Always attach the protective cap during storage.
在儲藏期間，要始終蓋上保護帽。



CAUTION
注意

- There are possible cases that no firing occurs after pulling the trigger in the semi auto mode. In this case, do not pull the trigger furiously. Fire 5 to 6 shots in the full auto mode and then return to the semi auto operation.

- 在半自動模式下，可能會發生扣動扳機后不射擊的情況。在這種情況下，不要猛烈地扣動扳機。在全自動模式下發射5至6發子彈，然後返回半自動操作。

CAUTION
注意

 
- Smell may be generated from the motor for a while when a new air gun is operated, this is the normal operation of the gun.
- 操作一支新氣槍時，電機可能會暫時發出氣味。這是氣槍的正常操作。
- The hopping up operation may be unstable for 200 to 300 rounds after using silicone oil, this is the normal operation of the gun.
- 由于使用硅油，200發至300發的上旋(hop up)操作可能會不穩定。

8 Normal Disassembly for Overhaul (Take down) and Maintenance Procedures

檢修和維修時的正常拆卸

CAUTION After removing the magazine, Fire the rifle in semi-automatic once to move the piston forward for easy disassembly.

注意 在卸下彈盒后，立即開動半自動步槍使活塞向前移動以方便拆卸。

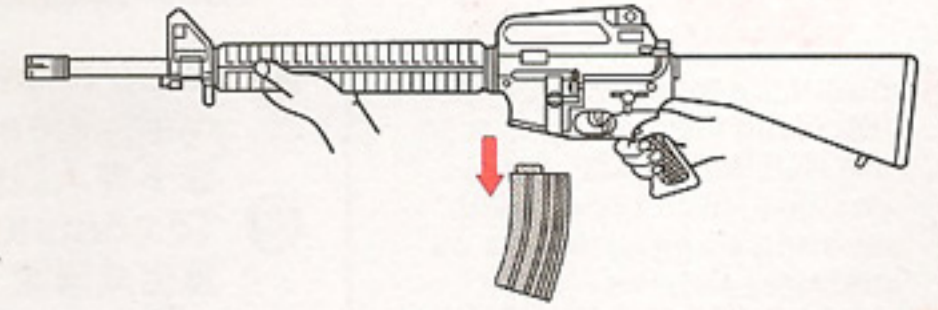


1 The upper receiver can be removed.

上部接受器可以拆下。
Remove the frame pin by screw driver and pull open the upper receiver by the carrying handle.
利用螺絲刀拆下外殼上的銷釘並利用把手拉開上部接受器。


2 The barrel can be removed

 槍管可以卸下。
Stop here for barrel cleaning
這時應停下來清潔槍管。

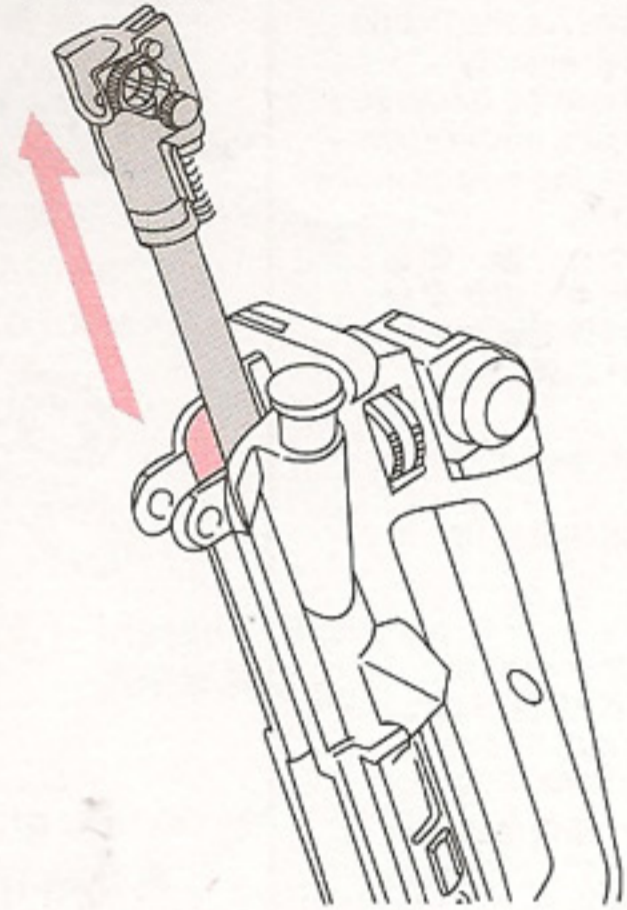

CAUTION 注意

 - Attach or detach the upper receiver with the magazine being removed, Otherwise, bullets remaining in the magazine may jump out in to the receiver, causing malfunctions.
- 安裝或卸下上部接受器時應將彈盒卸下。否則，留在彈盒內的子彈有可能會跳進接受器，導致功能故障。
- After removing the magazine, Fire the rifle in semi-automatic once to move the piston forward for easy disassembly.
- 在卸下彈盒后，立即開動半自動步槍使活塞向前移動以方便拆卸。
- After firing the single shot, Remove the battery for safety resuns.
- 在單發射擊后，為安全起見卸下電池。

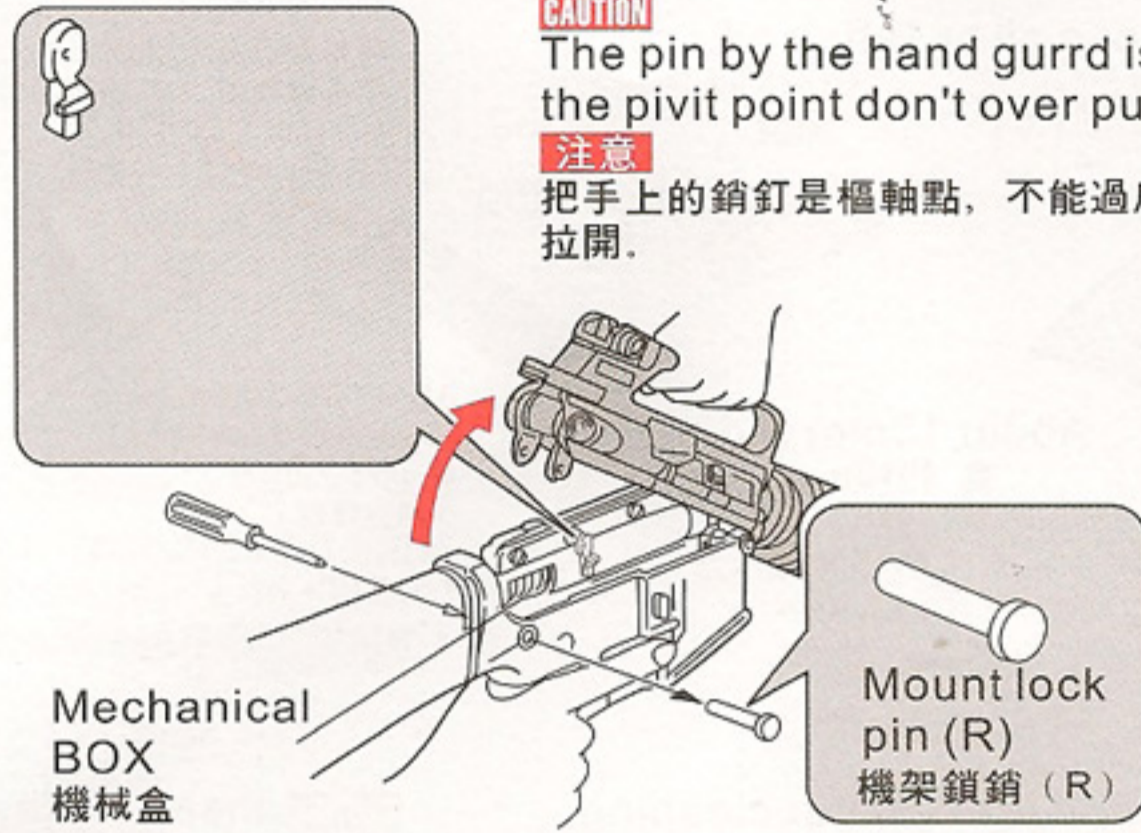


3 Separate the upper receiver from the body.

將上機匣從槍身上拆下來。

4 After disassembly 安裝后

警告 Do not disassembly past this point. 切勿拆開此配件。

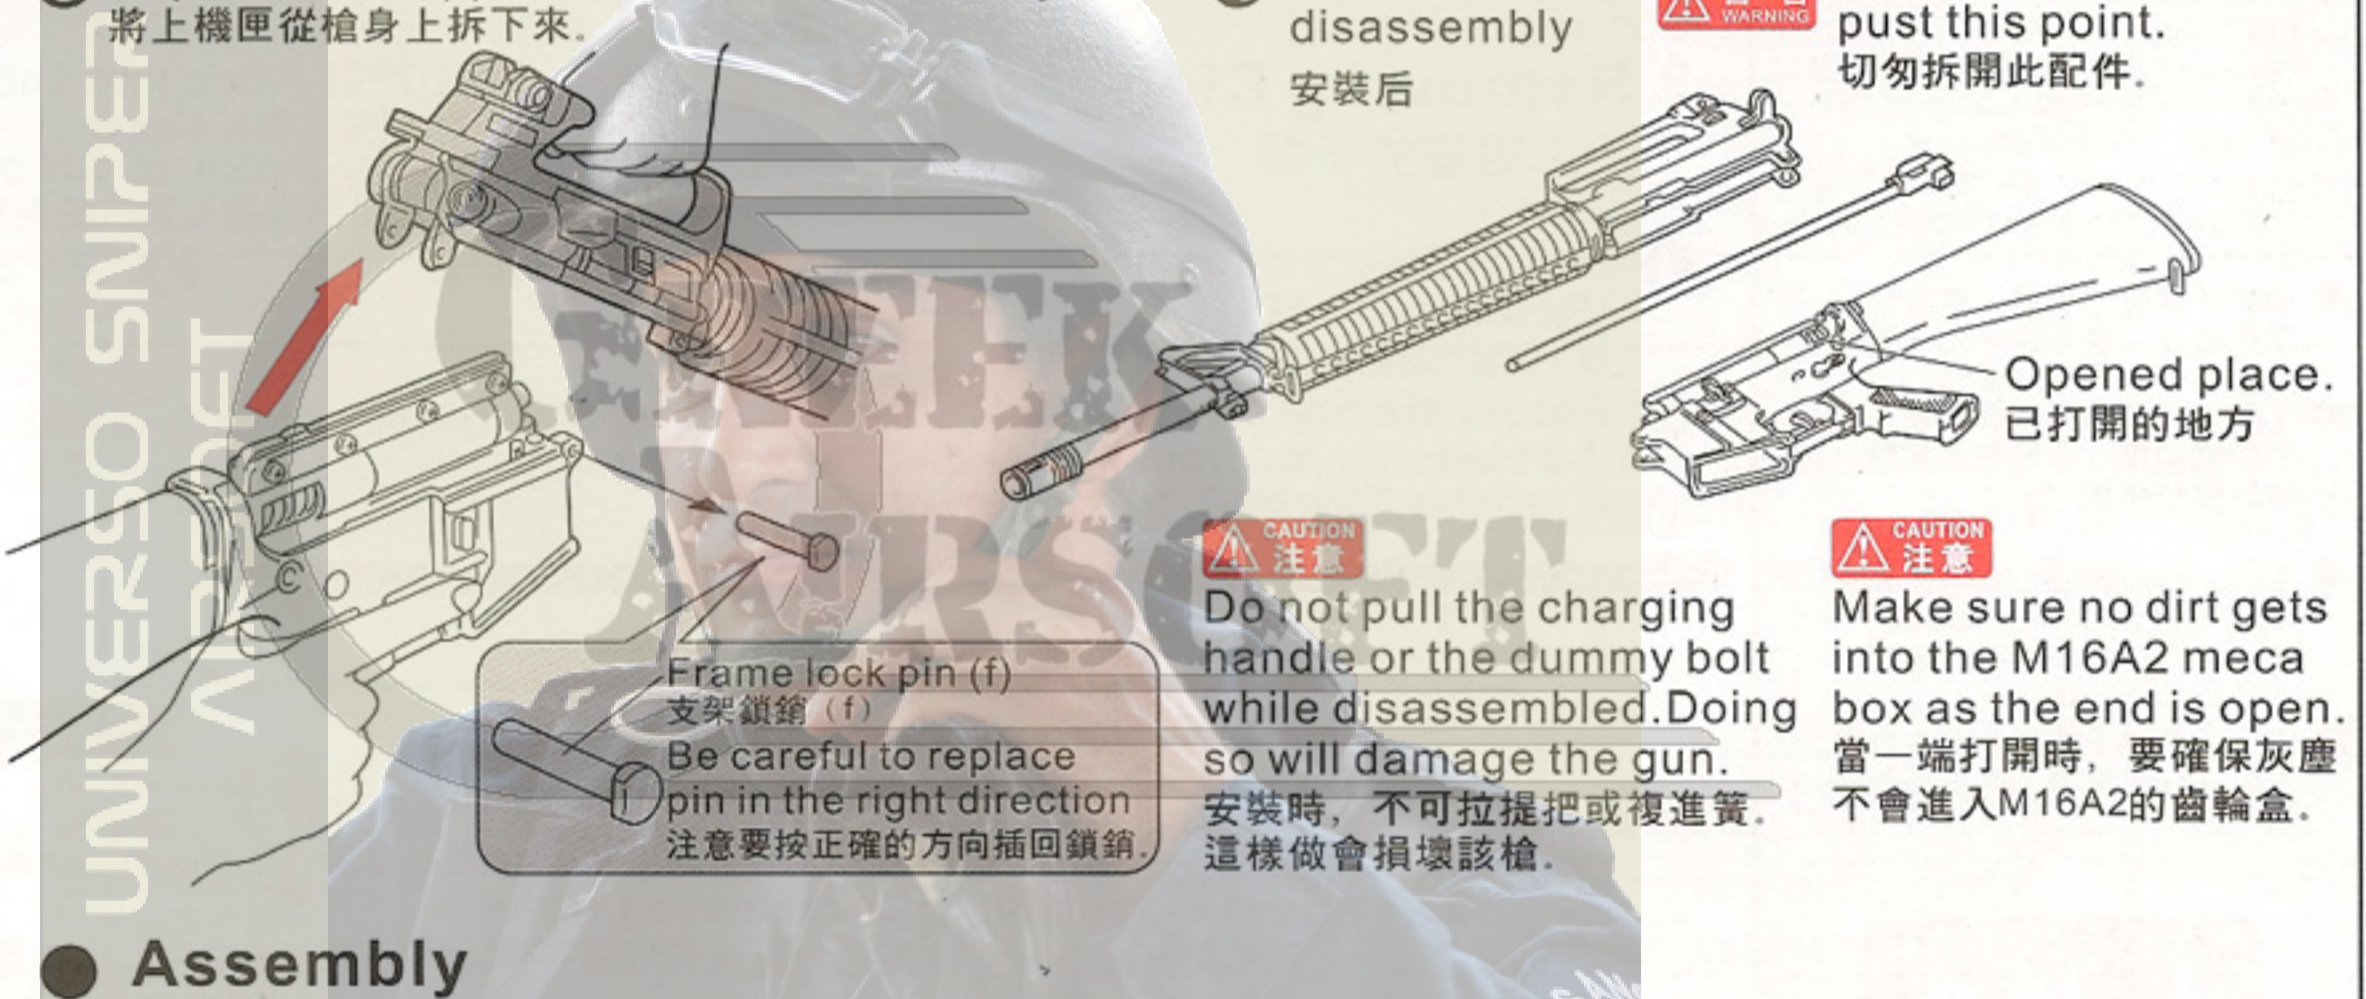


CAUTION 注意

- Slowly attach or detach the barrel assembly and receiver. Attaching or detaching rapidly or applying excessive force may cause malfunctions.
- 慢慢安裝上或卸下槍管組件和接受器。快速安裝或卸下或使用過大的力都可能導致功能故障。
- Don,t disassemble beyond what is necessary. Or the gun may be damaged.
- 不要拆卸無須拆卸的部位，否則氣槍會被損壞。

Assembly 組裝

 CAUTION Assembly after confirming the barrel is in place within the upper receiver. 在確信槍管位于上部接受器的適當位置后進行組裝。

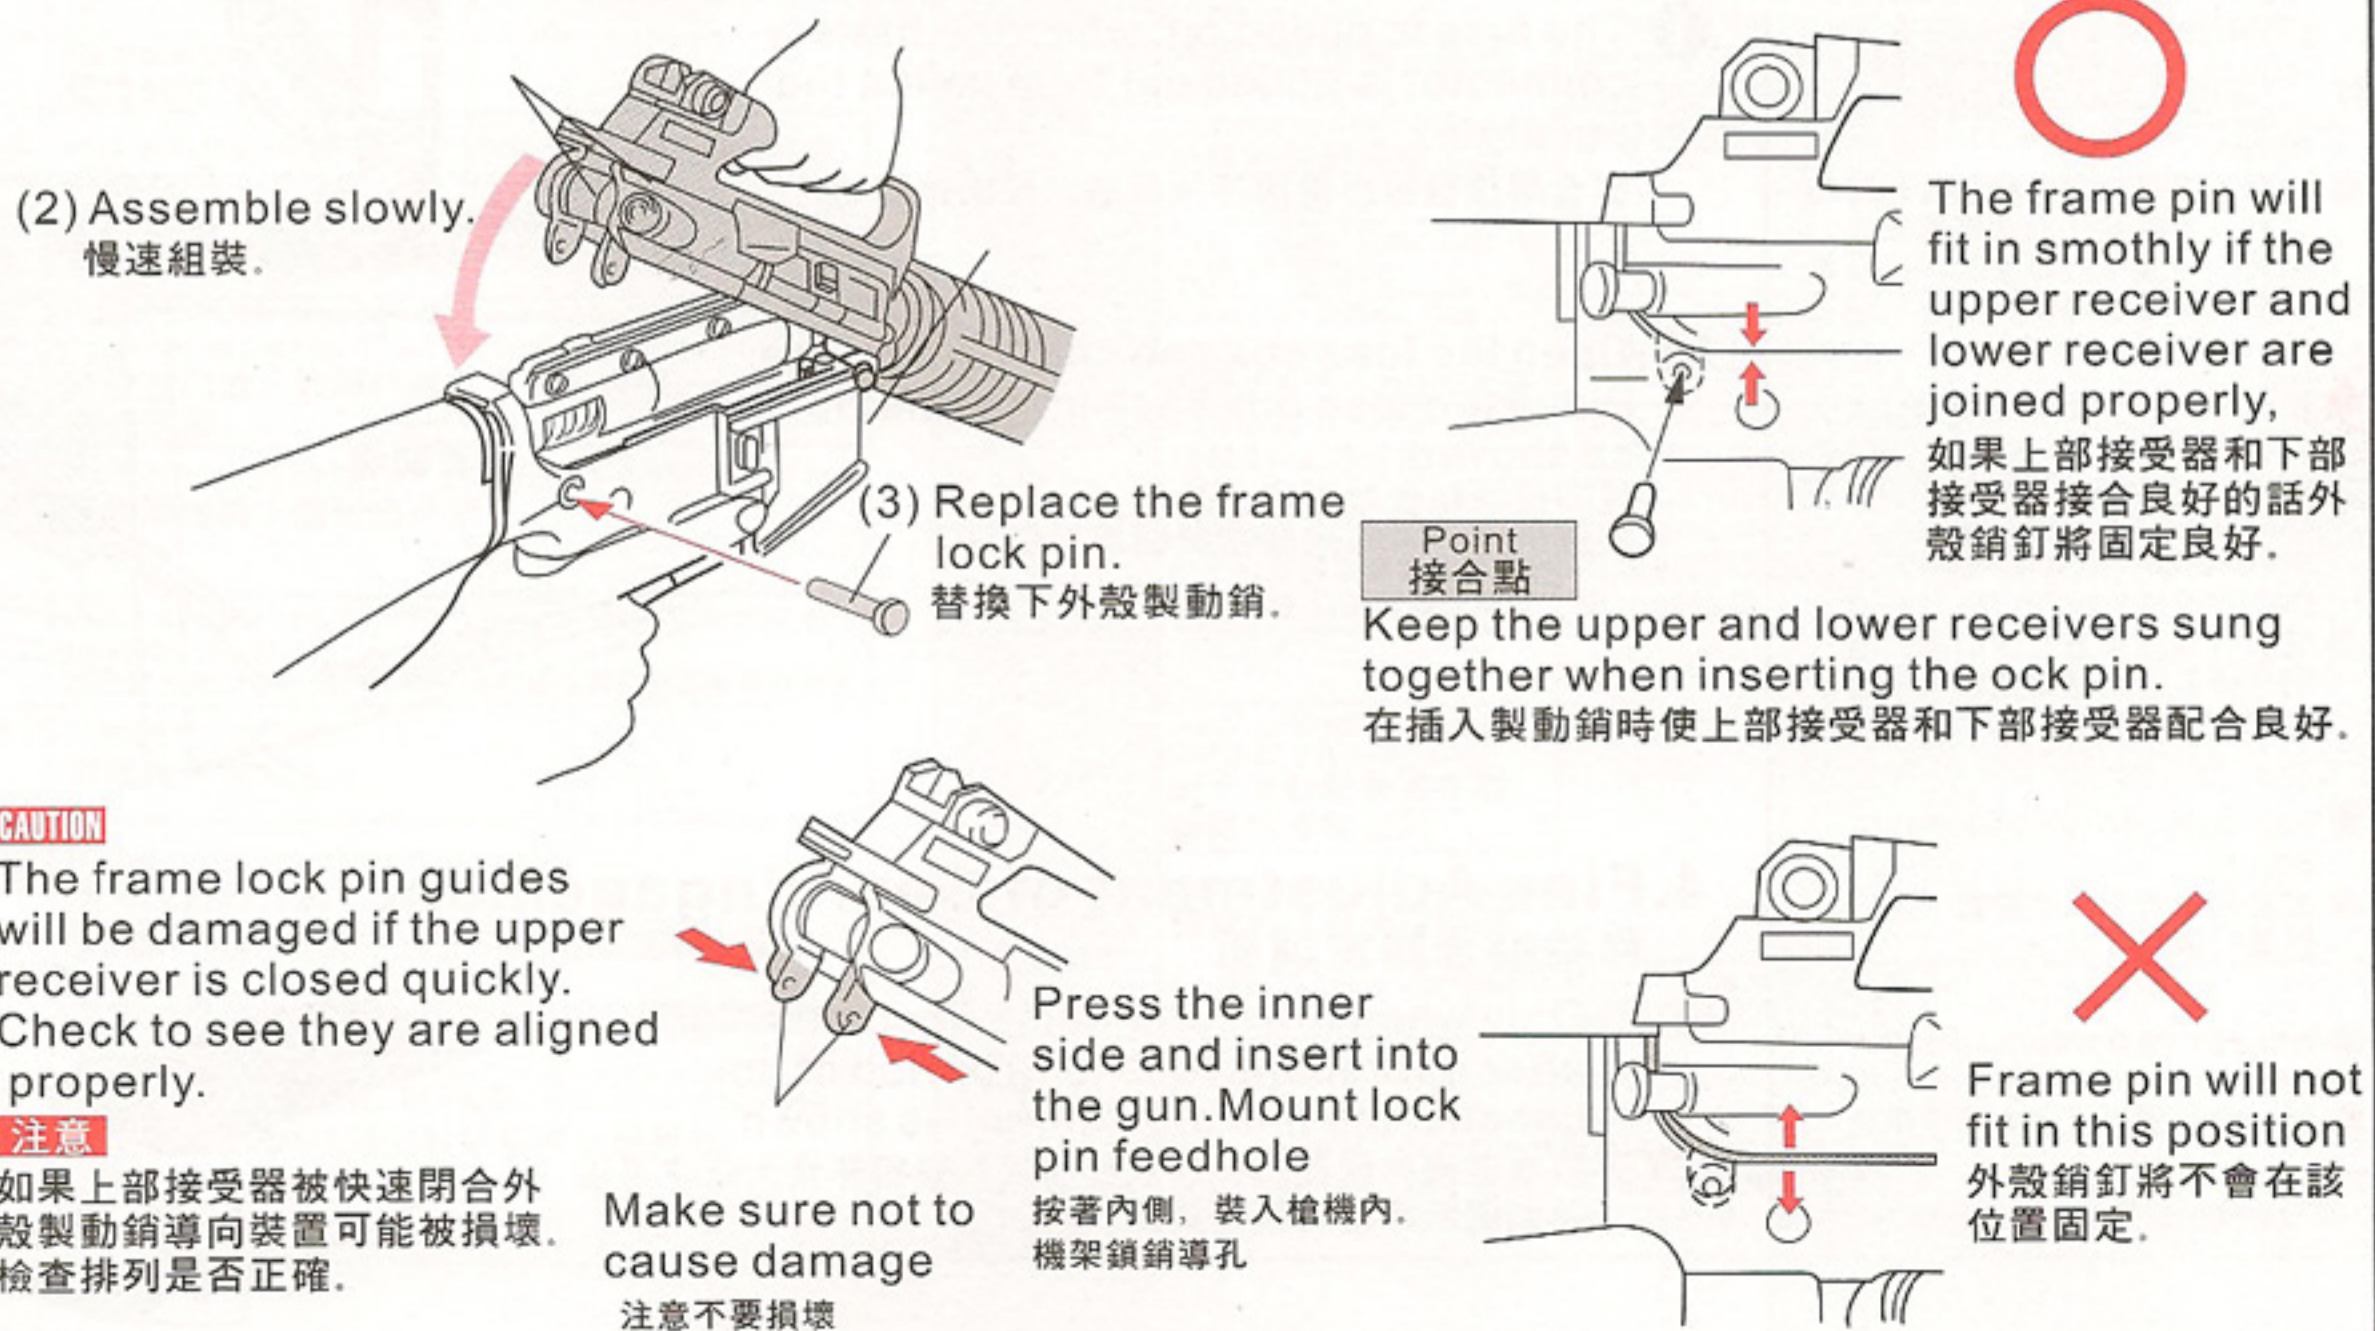

警告 WARNING

- Be careful not to catch your fingers in the moving parts.
- 小心不要讓您的手指碰到移動部件。



CAUTION 注意

● Begin the maintenance after returning the hop-up dial to the NORMAL (HOP-OFF) position, as in the case of clearing clogged bullets as instructed above.

● 在將上跳標度盤返回至正常 (NORMAL) (開啓) 位置后開始維修, 操作步驟與上述阻塞子彈的清除步驟相同。

● Be careful during maintenance. As the inside chamber is precisely designed it can be damaged easily, Use of a hard brush may damage the hop chamber packing.

● 在維修時應小心仔細, 因為彈腔內設計精準, 因此很容易受損, 採用硬毛刷可能會損壞彈跳腔外包裝。

● Never use any used BB bullets.

● 千萬不要使用任何已用過的BB子彈。

● Make sure to insert the cleaning rod AFTER returning the hop up dial to the Normal position. (HOP-OFF)

● 確信在將上跳標度盤返回至正常 (NORMAL) (開啓) 位置后插入通條。

● When bullets are clogged, immediately stop operation. Remove clogged bullets and then restart operation of the air gun. (If operation is continued with bullets being clogged, the mechanism may be damaged.)

● 如果子彈發生堵塞, 應立即停止操作, 卸下阻塞的子彈並重新開始氣槍的操作。(如果在子彈阻塞的情況下繼續操作, 可能會損害氣槍的機械結構)。

● Since clogging bullets may jump out at a high speed, always wear safety goggles and confirm safety.

● 由于阻塞的子彈可能高速跳出, 因此操作時應戴上護目鏡並確信安全。

CAUTION 注意

● The fuse may blow out due to an electrical overcurrent. Malfunctions of the internal mechanism are possible. So, check possible faulty parts and then connect the battery again.

● 在發生過電流現象時保險絲可能爆裂, 可能發生內部機製故障, 因此, 檢查可能發生故障的部件后重新連接電池。

● It is recommended to lock the adjustment screw by a screw locking agent or instantaneous adhesive agent after adjustment of the motor position is complete.

● 建議在完成馬達位置的調節后利用螺釘製動結構或快速粘附劑鎖住調節螺釘。

● Normally, do not attempt to adjust.

● 在通常情況下, 不要嘗試進行調節。

 
● Excessive tightening of the screw may damage the motor.

● 螺絲旋的過緊可能會損壞馬達。

1. Maintenance when Bullet Speed Becomes Low


在子彈速度為低速時的維護

- Drop a few drops of silicone oil or Teflon oil from the bullet entrance. Insert BB bullets into the magazine and fire bullets equivalent to 1 or 2 magazines.
在子彈入口處滴上幾滴硅油或特氟龍油。將BB子彈插入彈盒並射擊1到2彈盒的子彈。
- To complete the cleaning, use the cleaning rod (with cotton) as shown below, to remove excess oil.
為完成清潔, 採用如下所示的通條 (帶有棉球), 以除去多余的油分。

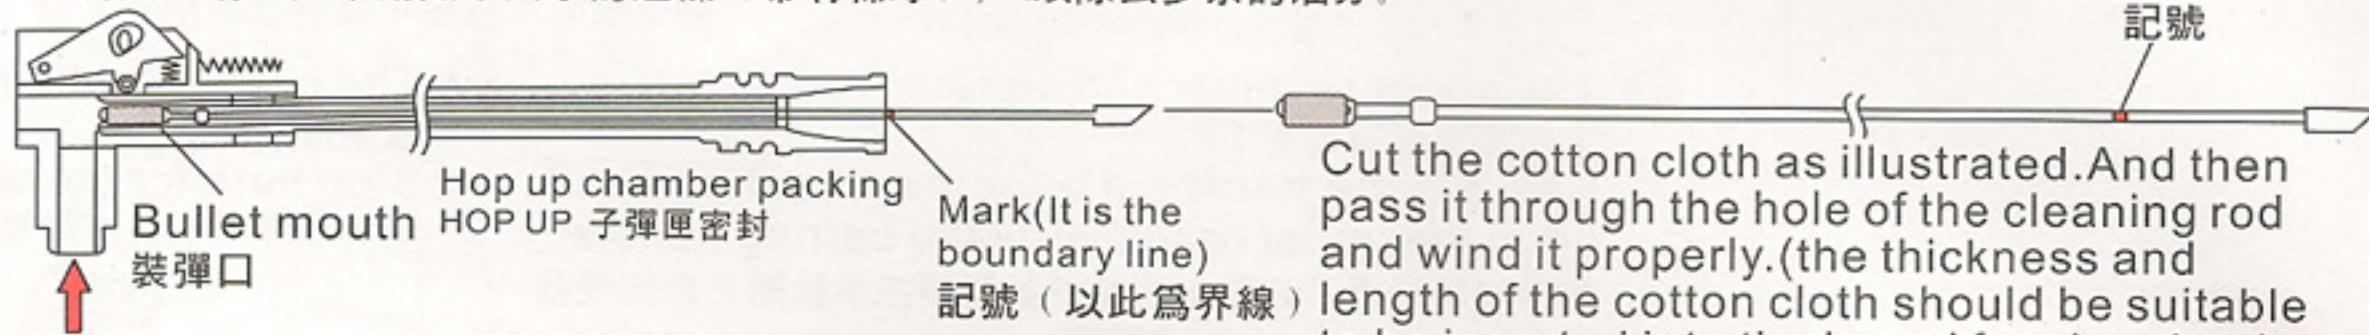

Spray a few drops of silicon oil or Teflon oil.
用一滴硅油或者特氟龍油滴上。

 Cut the cotton cloth as illustrated. And then pass it through the hole of the cleaning rod and wind it properly. (the thickness and length of the cotton cloth should be suitable to be inserted into the barrel for cleaning.)
將棉製品如下圖所示的比例剪下, 然后将剪下的棉布穿過清潔杆的小孔纏繞好。(棉布的厚度和長度要適中, 可以伸進槍筒清潔。)

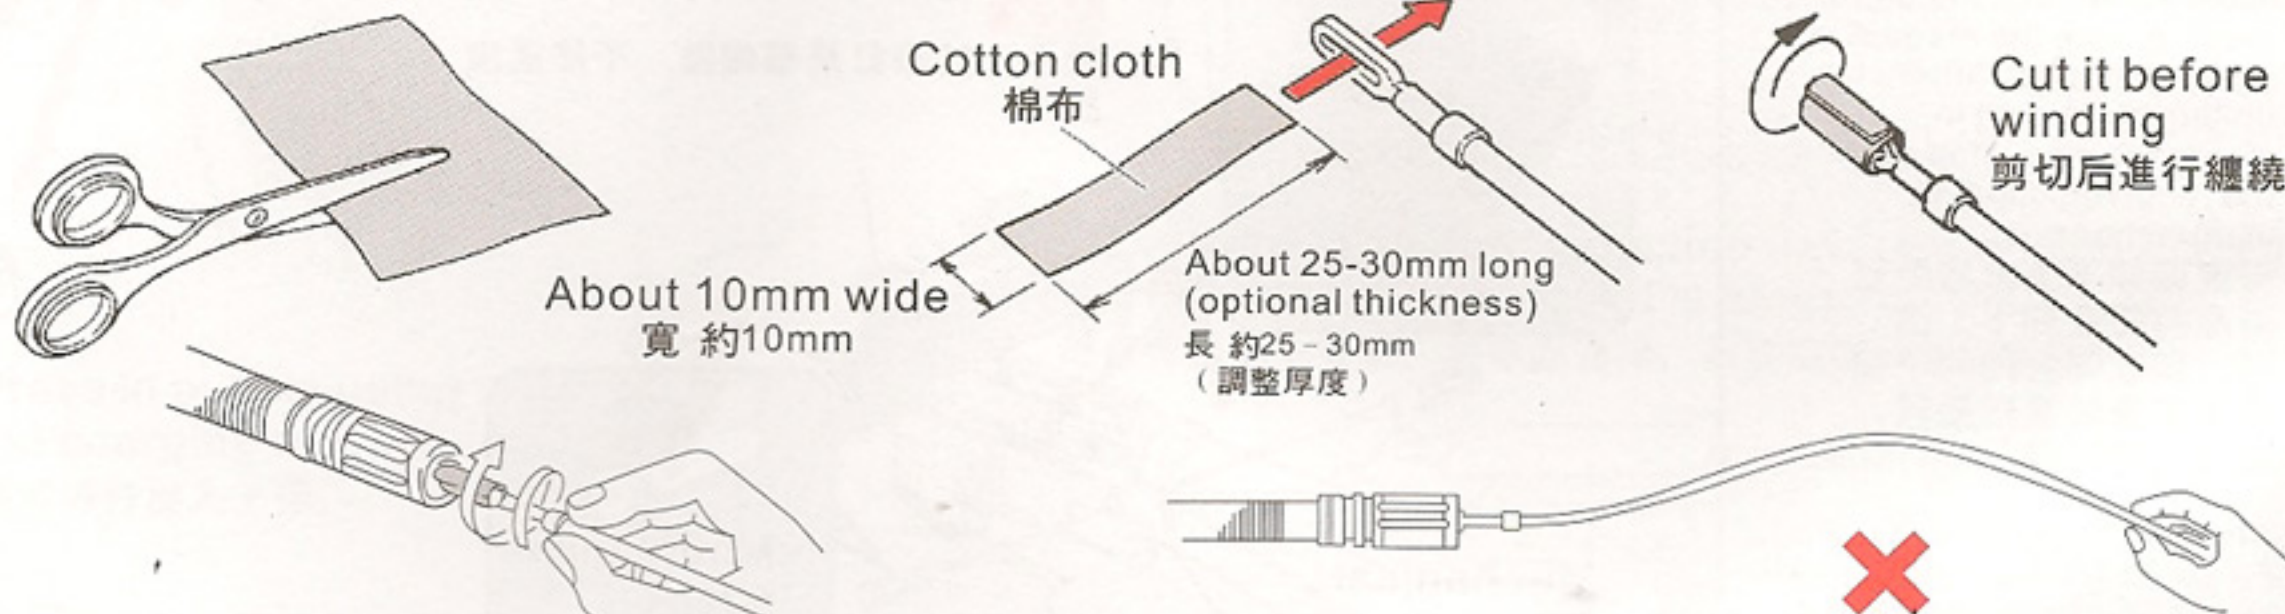

Hold the cleaning rod and turn it. After cleaning the barrel, replace it.
手持清潔棒一端轉動清潔后再將槍筒安裝上去。

CAUTION Inserting the rod will be difficult if you hold rod at the end.
注意 如果您手握通條的末端可能很難將通條插進去。

2. Removing Clogged Bullets

卸下阻塞的子彈

(Refer to 10P 8, Attaching and Detaching the Barrel.)


(參見第10頁-8 安裝和拆卸槍管)

(Set the Safety button to ON and Detaching the Barrel.)

(將安全按鈕設置到開的位置, 提前取下彈匣)

- Remove the magazine and then the barrel assembly.
(Refer to 10P 8.)
卸下彈盒然后組裝槍管。(參見10頁-8)
- Return the hop up dial to the Normal position and insert the cleaning rod from the lead edge of the barrel.
將上跳標度盤返回至標準位置, 並從槍管的前端插入通條。

- Be careful so that the angled part of the cleaning rod faces down, and remove clogged bullets.
應小心以防通條的彎角部分面向下, 然后卸下阻塞的子彈。

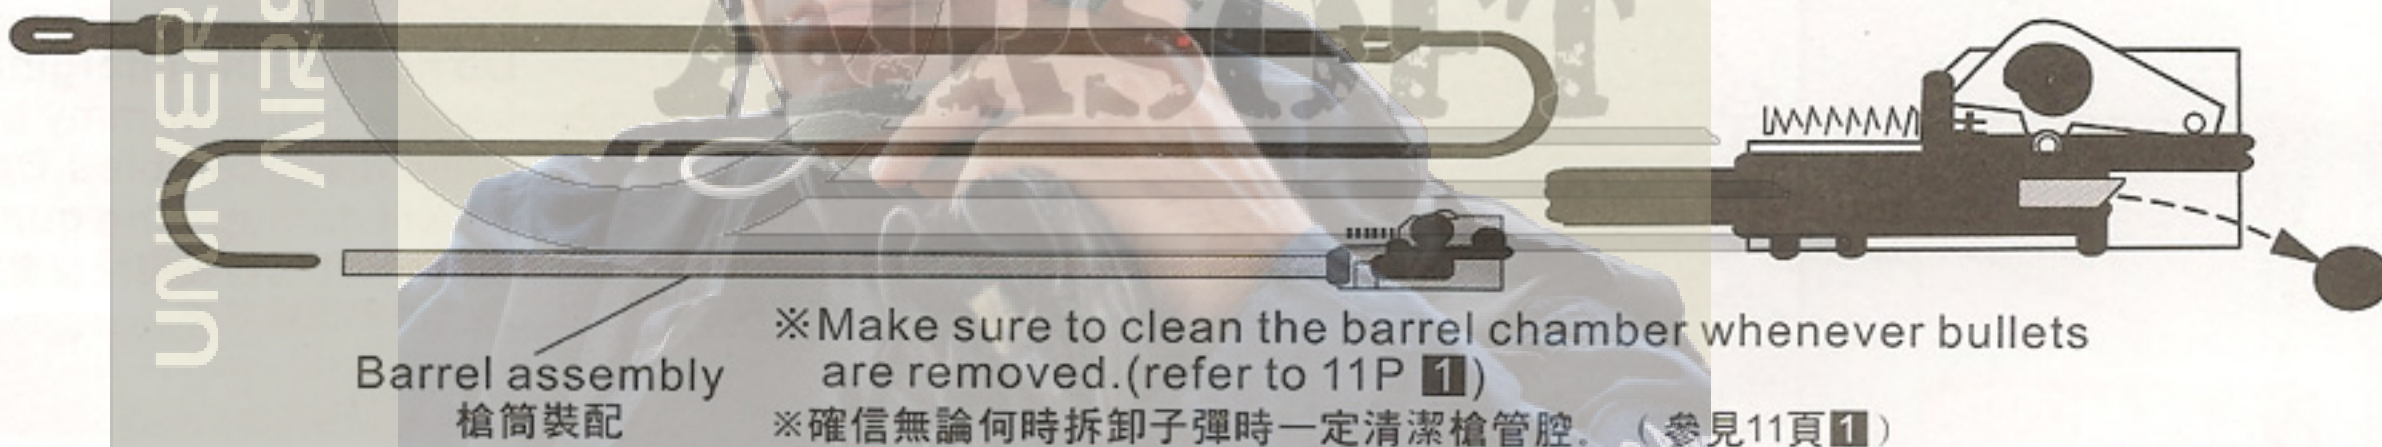


※Make sure to clean the barrel chamber whenever bullets are removed. (refer to 11P 1)
※確信無論何時拆卸子彈時一定清潔槍管腔。(參見11頁1)


3. Fuse Replacement Procedure

更換保險絲步驟

 - The fuse is pulled out when the battery connector is pulled out from inside the pat plate.
從金屬槽裡拉出電池連接器后, 拉出保險絲。

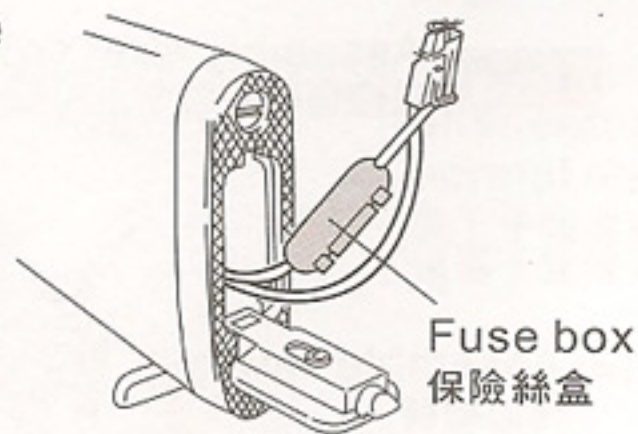

 - Open the fuse box and change the fuse. Place the fuse box back under the rib as shown.
找開保險絲盒並更換保險絲。如圖所示, 將保險絲盒放回槍管肋條下。

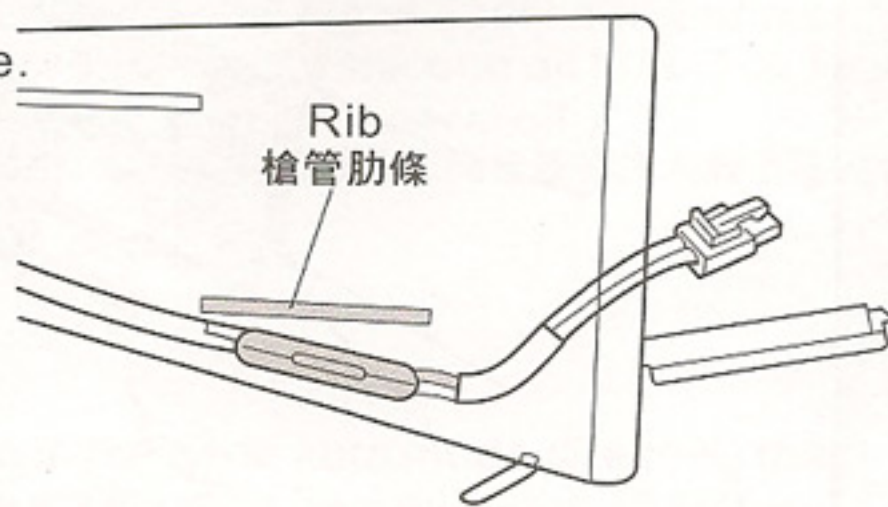


<Glass tube fuse>
<玻璃管保險絲>

It can be purchased at nearby electrical appliance shop (please be sure to buy the 15A type)

在附近的電器商店等處即可買到。(請務必買15A型。)

 General for battery guns
電動槍通用




4. Fine Adjustment of Gear Engagement

齒輪啮合精密調節

CAUTION Only when the motor noise becomes high after operations for a long period of time, conduct the fine adjustment as shown.

 注意 只有在操作較長時間后馬達的噪音變得非常大時才可按照如圖所示進行精密調節。

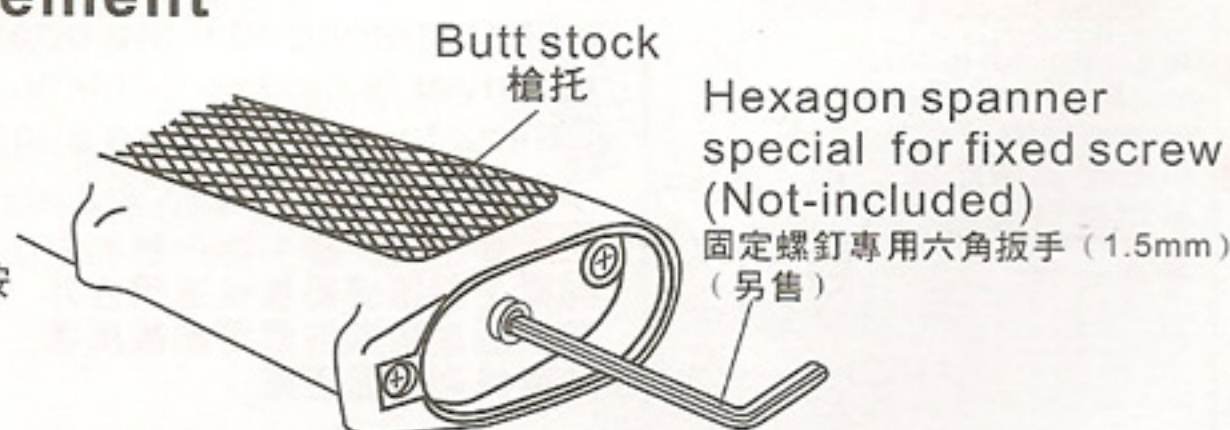

CAUTION Please refer to it only for installation of separately-purchased full-auto flame tracer and night muffler.

注意：只有在安裝另外購買的全自動曳光彈、夜間型消音器時，請進行參考。

- Installation method of full-auto flame tracer (BB bullet illuminating apparatus) adapter
- 全自動曳光彈 (BB彈發光裝置) 适配器的安裝方法

- Full-auto flame tracer
- 全自動曳光彈
- 0.20g BB illuminating bullet 600 rounds
- 0.20g發光BB彈600發

 
1 Loosen the fixed screw on suppressor with hexagon spanner (1.5mm) special for M3 fixed screw. Hexagon spanner special for M3 fixed screw (1.5mm) will loosen the fixed screw on the suppressor.



2 Remove the suppressor. 取下抑制器。



3 Remove the cover of the flashing unit and then screw the ① guide and ② coupler as illustrated. 先把發光組合蓋取下，如圖所示按順序鎖上螺絲①引導裝置②連接器。

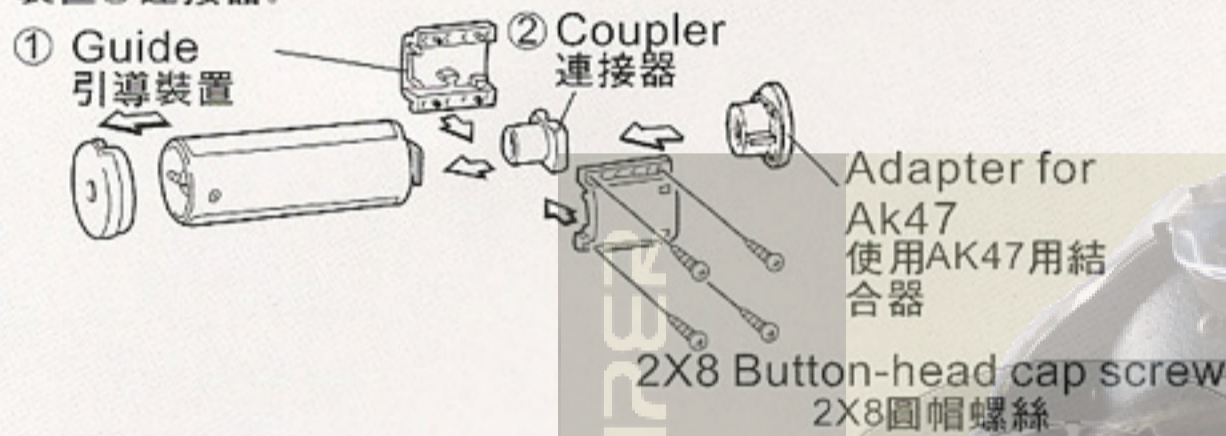

4 Fix it with 4 2X10 socket head cap screw 用4個2X10盤頭螺絲固定

5 Install the tracer 追蹤器的裝配



9 TROUBLE CLINIC (TROUBLESHOOTING)

故障診斷 (故障排除)

Confirm before calling for repair.

在請求修理前請確信發生了故障。

Never use BB bullets other than those supplied by . Use of poor quality BB bullets will cause problems. Never disassemble or modify the gun. 千萬不要使用廠家提供之外的的BB子彈。使用質量不符合要求的BB子彈將可能導致問題。不要拆卸或改動氣槍。

Symptom 症狀	Cause 原因	Action 採取的措施	Symptom 症狀	Cause 原因	Action 採取的措施
No operation at all 根本無操作	Selector lever is set to Safety. 選速(器)杆被設置在了安全狀態	Set the selector lever to Semi or Full Auto. 將選速(器)杆設置在半自動或全自動狀態	Impossible semi-auto operation (single shot) 半自動操作不可能 (單發射擊)	Insufficient battery power 電池電力不足	Charge the battery 對電池充電
	Battery is not charged. 電池未充電	Charge the battery. 對電池進行充電		Poor electrical connection 電路連接不良	Consult your dealer or us for overhaul maintenance or repair. 向您的經銷商或向我們諮詢檢修或修理事宜
	Battery connector is disconnected. 電池連接器被切斷	Connect the connector 連接上連接器	Automatic firing cycles become long. 自動射擊循環時間變長	Insufficient battery power 電池電力不足	Charge the battery 對電池充電
	The ⊕ and ⊖ or battery connector is revers. 正極或負極或電池連接器是反向的	Connect the connector correctly (check the fuse) 正確地連接連接器 (檢查保險絲)	Shooting distance become shorter. 射擊距離變短	Worn or damaged chamber packing 彈腔包裝磨損或損壞	Consult your dealer or us for overhaul maintenance or repair. Replace the chamber packing, piston packing (O-ring) and piston assembly. 向您的經銷商或向我們諮詢檢修或修理事宜。替換彈腔包裝，活塞包裝 (O-形環) 和活塞組件。
	Fuse is blown out. 保險絲爆裂	Replace the fuse 替換保險絲	Worn or damaged chamber packing (O-ring) 彈腔包裝磨損或損壞 (O-形環)	Deteriorated piston spring 活塞彈簧老化	Use the genuine BB bullets. 採用真正的BB子彈。
Although motor is removing, no bullets jump out. 雖然馬達已拆除，但無子彈跳出	Bullets are clogged in the magazine. 子彈被阻塞在了彈盒內	Insert the charging rod into the magazine and move up and down a few times to remove clogged bullets. 向彈盒內插入裝彈杆並上下移動幾次，以拆下阻塞的子彈。	Too loud operating noise 操作噪音過大	Shortage of damaged gear 齒輪有缺陷或損壞	Drop a few drops of silicone oil from under the chamber. 從彈腔下方部位滴幾滴硅油。
	Bullets are clogged in the magazine. 子彈被阻塞在了槍腔內	Remove clogged bullets using the cleaning rod. 利用通條拆下阻塞的子彈。		Gear problem caused by too many blank firing or worn or damaged gear 由于空發射擊過多而導致的齒輪問題。齒輪磨損或損壞	Consult your dealer or us for overhaul maintenance, part replacement (gear, etc.) Or repair. 向您的經銷商或向我們諮詢檢修，部件替換 (齒輪等) 或修理事宜。
	Faulty gear 齒輪故障	Purchase the replacement gear from your dealer or us and repair. 從您的經銷商或向我們購買替換齒輪並對故障齒輪進行修理。			
Impossible full-auto operation (automatic firing) 全自動操作不可能 (自動射擊)	Insufficient battery power 電池電力不足	Charge the battery. 對電池充電	Bullets being fallen out from barrel end 子彈自槍管末端掉落	Worn or damaged chamber packing 彈腔包裝磨損或損壞	
	Faulty bullet feed of magazine. 子彈喂入彈盒時發生故障	Repair clogging of the magazine. 清理阻塞的彈盒		Faulty BB bullets (too small) BB子彈故障 (太小)	Use the genuine BB bullet. 採用真正的BB子彈
	Poor electrical connection 電路連接不良	Consult your dealer or us for overhaul maintenance or repair. 向您的經銷商或向我們對檢修或修理操作進行諮詢			
Impossible semi-auto operation (single shot) 半自動操作不可能 (單發射擊)	Deviation in gear timing 齒輪定時發生偏差	Set to semi auto after firing 5 to 6 rounds in full auto. 在全自動射擊5-6發后設置成半自動狀態。	Being wet by or dropped into water (rain) 由于水或落入水中而變濕 (雨水)		Stop operation immediately, disconnect the battery, wipe off water from inside the main body and the battery, and, after complete dry, carry out trial firing. If no operation or malfunction is detected, consult your dealer or us for repair. 立即停止操作，卸下電池，擦干主體內部和電池的水，並在完全干燥后，進行射擊試驗操作。如果未檢測無法操作或故障，請向您的經銷商或向我們諮詢進行修理。

10 W16-2 & W16-4 DETAIL LIST
 W16-2 & W16-4 零件清單

Magazine
 子彈盒

