


WARNING: BEFORE USAGE, THE INSTRUCTION MUSE BE READ.


THANK YOU FOR PURCHASING. THE FOLLOWING ATTENTION POINTS AND INSTRUCTIONS MUST BE READ. SHOOTING WITHOUT CAUTION OR USED IMPROPERLY, BLINDNESS OR INJURIES COULD BE LEAD.

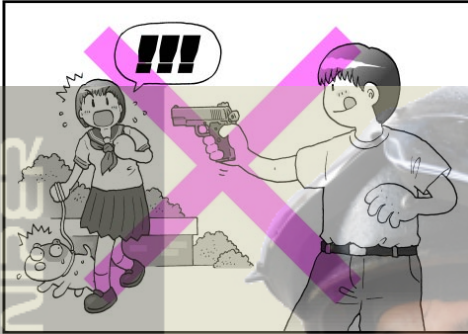

DO NOT POINT AT PEOPLE OR ANIMAL.




GUN AND GAS MUST NOT BE PLACED IN AREA WHERE TEMPERATURE IS OVER 40 °C

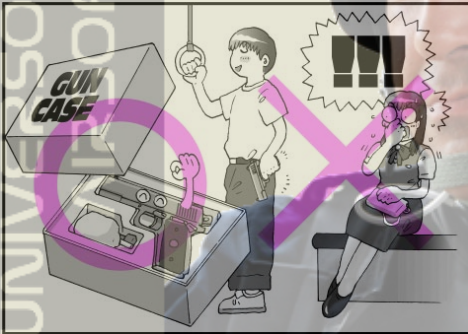

PLACE IN GUN CASE WHEN NOT IN USING OR TRANSPORTING



DO NOT USE GAS WHICH PRESSURE IS OVER 12 Kgs/cm²

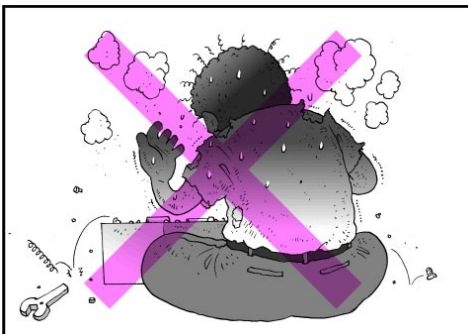

UNAUTHORIZED RECONSTRUCTION OF AIR SOFT GUN TO STRENGTHEN FIRING FUNCTION IS STRICTLY PROHIBITED.




BE CAREFULL WHAT TARGET YOU SHOOT



EYE PROTECTION DEVICE MUST BE EQUIPPED



DO NOT LOAD ANYTHING BUT BB BULLETS.

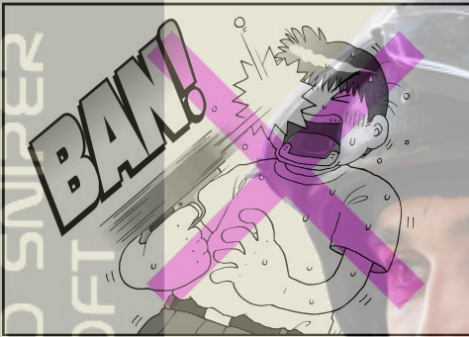

DO NOT LOOK THROUGH THE BARREL



PLEASE SHOOT IN SAFE PLACE


OPERATION

1.REMOVE THE MAGAZINE



PRESS MAGAZINE CATCH AND REMOVE MAGAZINE

2.FILLING GAS

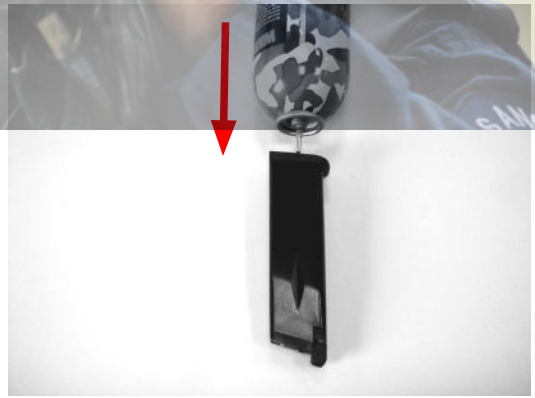

FILL THE GAS BOTTLE TO THE MAGAZINE IN VERTICA DIRECTION.

3.LOAD BB BULLETS



LOAD BULLETS

4.INSERT MAGAZINE



5.LOAD




PULL THE SLIDE COMPLETELY TO THE REAR.

6.FIRE



PULL THE TRIGGER.

7.SAFETY

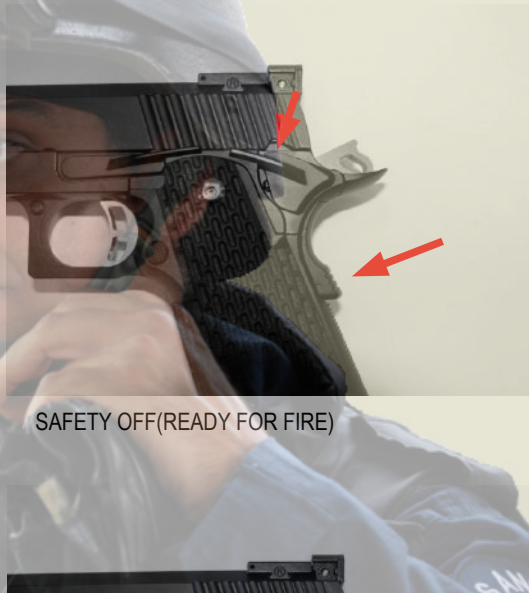

SAFETY OFF (READY FOR FIRE)



SAFETY ON

DISASSEMBLY

1. REMOVE THE SLIDE STOP




PRESS MAGAZINE CATCH AND REMOVE MAGAZINE. MOVE THE SLIDE REAR UNTIL THE TAKEDOWN NOTCH IS JUST ABOVE THE SLIDE STOP TAB AND REMOVE SLIDE STOP


2. REMOVE THE SLIDE



3. REMOVE THE RECOIL SPRING AND SPRING CAP

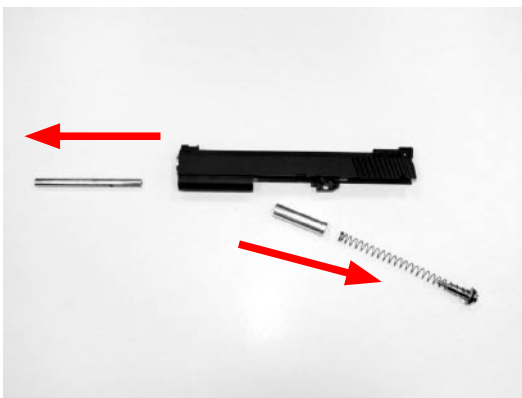

4. REMOVE THE BARREL

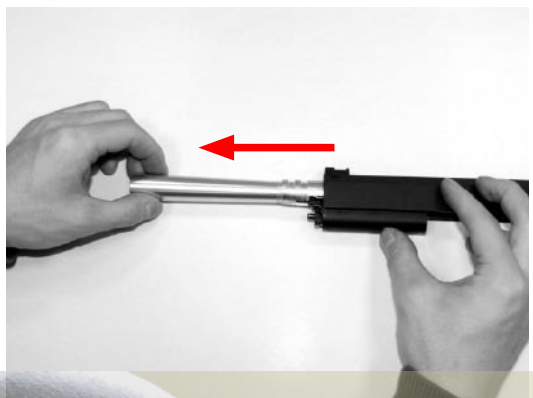


ASSEMBLY

REVERSE THE DISASSEMBLY ORDER
ADJUST TREJECTORY



TWIST THE ADJUST DIAL TO ADJUST TEAJECTORY.

PLEASE ADJUST ACCORDING TO TREJECTORT

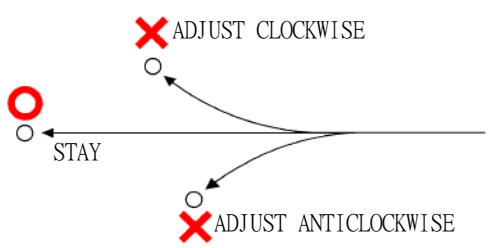

KP-06 EXPLODED DRAWING



NO	NAME OF PART	PRICE	NO	NAME OF PART	PRICE
1	SLIDE	1600	42	KNOCKER SPRING	30
2	FRONT SIGHT	150	43	CHASSIS COVER PART SCREW	10
3	FRONT SIGHT SCREW	10	44	KNOCKER(STEEL)	100
4	CYLINDER SCREW	10	45	KNOCKER LOCK(STEEL)	100
5-1	REAR SIGHT PART 1	80	46	KNOCKER LOCK SPRING	20
5-2	REAR SIGHT PART 2	80	47	SAFETY(L)	150
5-3	REAR SIGHT PART 3	80	48	SLIDE STOP PLUGER	50
5-4	REAR SIGHT PART 4	20	49	SLIDE STOP PLUGER SPRING	15
5-5	REAR SIGHT PART 5	20	50	SAFETY PLUGER	50
5-6	REAR SIGHT PART 6	20	51	GRIP SAFETY	240
5-7	REAR SIGHT PART 7	20	52	CHASSIS COVER SCREW	10
5-8	REAR SIGHT PART 8	10	53	GRIP	800
5-9	REAR SIGHT PART 9	10	54	GRIP SCREW	20
5-10	REAR SIGHT PART 10	10	56	MAGAZINE CATCH LOCK	30
5-11	REAR SIGHT PART 11	10	57	MAGAZINE CATCH SPRING	10
6	FIRING PIN STOP SCREW	20	58	MAGAZINE CATCH	120
7	PISTON	400	59	TRIGGER BAR	150
8	RING HEAD	40	60	TRIGGER	240
9	RING	20	61	TRIGGER PIN	10
10	RING HEAD SCREW	10	62	TRIGGER ADJUST SCREW	20
11	PISTON PART	30	63	SEAR PIN	100
12	PISTON PART SCREW	10	64	HOUSING PIN	50
13	CYLINDER RETURN SPRING	20	65	HAMMER SPRING PLUGER	30
15	CYLINDER	150	66	HAMMER SPRING	70
16	CYLINDER VALVE SPRING	20	67	HAMMER SPRING HOUSING	120
17	CYLINDER VALVE	20	68	PLUGER STOP	40
18	CYLINDER VALVE STOP	20	69	BB LIP	60
19-1	OUTTER BARREL A	300	70	MAGAZINE GASKET	80
19-2	OUTTER BARREL B	300	71	BB LIP PIN	10
20	INNER BARREL	180	72	VALVE	150
21	RUBBER CHAMBER	80	73	MAGAZINE CASE	400
22	CHAMBER COVER(R)	140	74	O-RING	20
23	CHAMBER COVER(L)	140	75	MAGAZINE SPRING RETAINER	20
24	O-RING	10	76	MAGAZINE BASE	180
25	ADJUST DIAL	20	77	FILLING VALVE	70
26	ADJUST LEVER	50	78	O-RING	10
27	CHAAMBER COVER SCREW	10	79	WASHER	10
28	RECOIL PLUG	200	80	MAGAZINE BASE SCREW	20
29	RECOIL SPRING	60	81	FOLLOWER	30
30	RECOIL SPRING GUIDE A	100	82	FOLLOWER SPRING	50
31	RECOIL SPRING GUIDE B	150	83G	MAGAZINE BOTTOM	120
32	CHASSIS	600	84	CHASSIS COVER	200
33	CHASSIS SCREW	10	85	RECOIL SPRING GUIDE BUFFER	20
34	SAFETY(RIGHT)	150	86	WASHER	20
35	SLIDE STOP	200	87	OUTTER BARREL O-RING	10
36	DISCONNECTOR(STEEL)	150		ACCESSORIES	
37	SEAR(STEEL)	120	64A	HOUSING PIN	50
38	HAMMER(STEEL)	300	88A	MAG LIP	500
39	HAMMER PIN	10			
40	HAMMER STRUT	50			
41	CHASSIS COVER PART	80			

UNIVERSO SNIPER
AIRSOFT

KP-06 MANUAL



UNIVERSO SNIPER
AIRSOFT



KJWORKS

Kjworks No.12 Lian-Ming 1st Street,Bade City,Taoyuan county,Taiwan
Tel:03-3749793 Fax:03-3618130 e-mail:kjworks@ms47.hinet.net Website:www.kjworks.com.tw