


KWA®


AKG Series

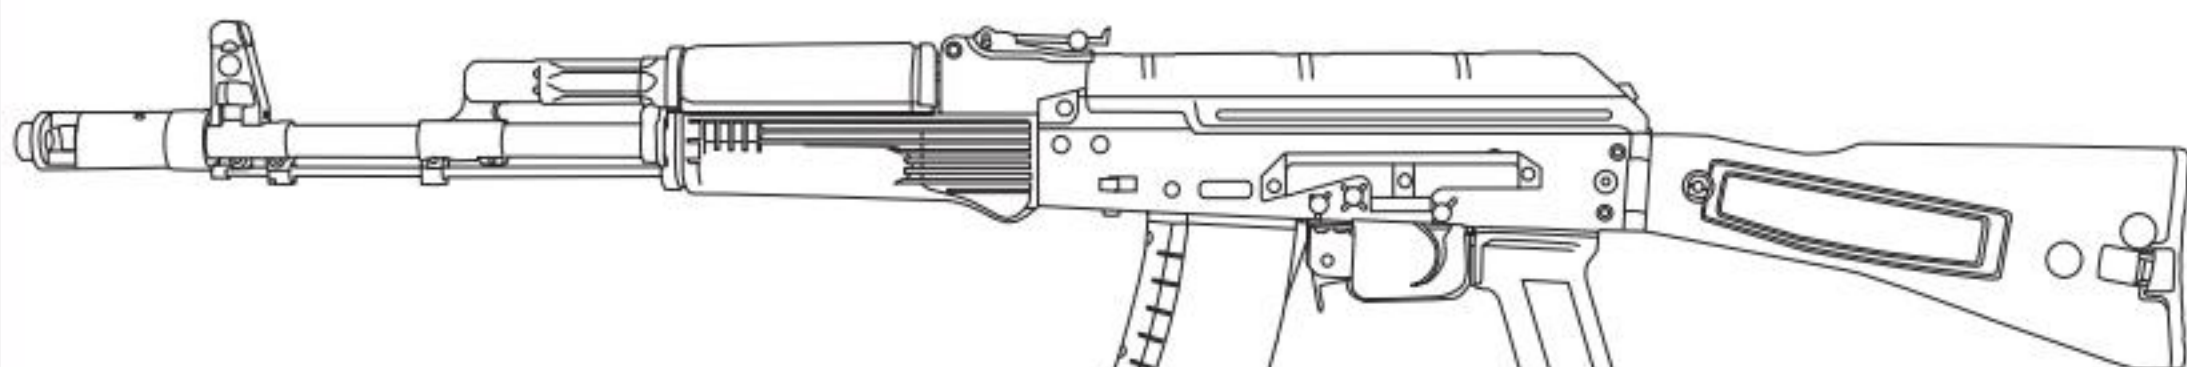

UNIVERSO SNIPER
AIRSOFT



VISZOLI
UNIVERSO SNIPER

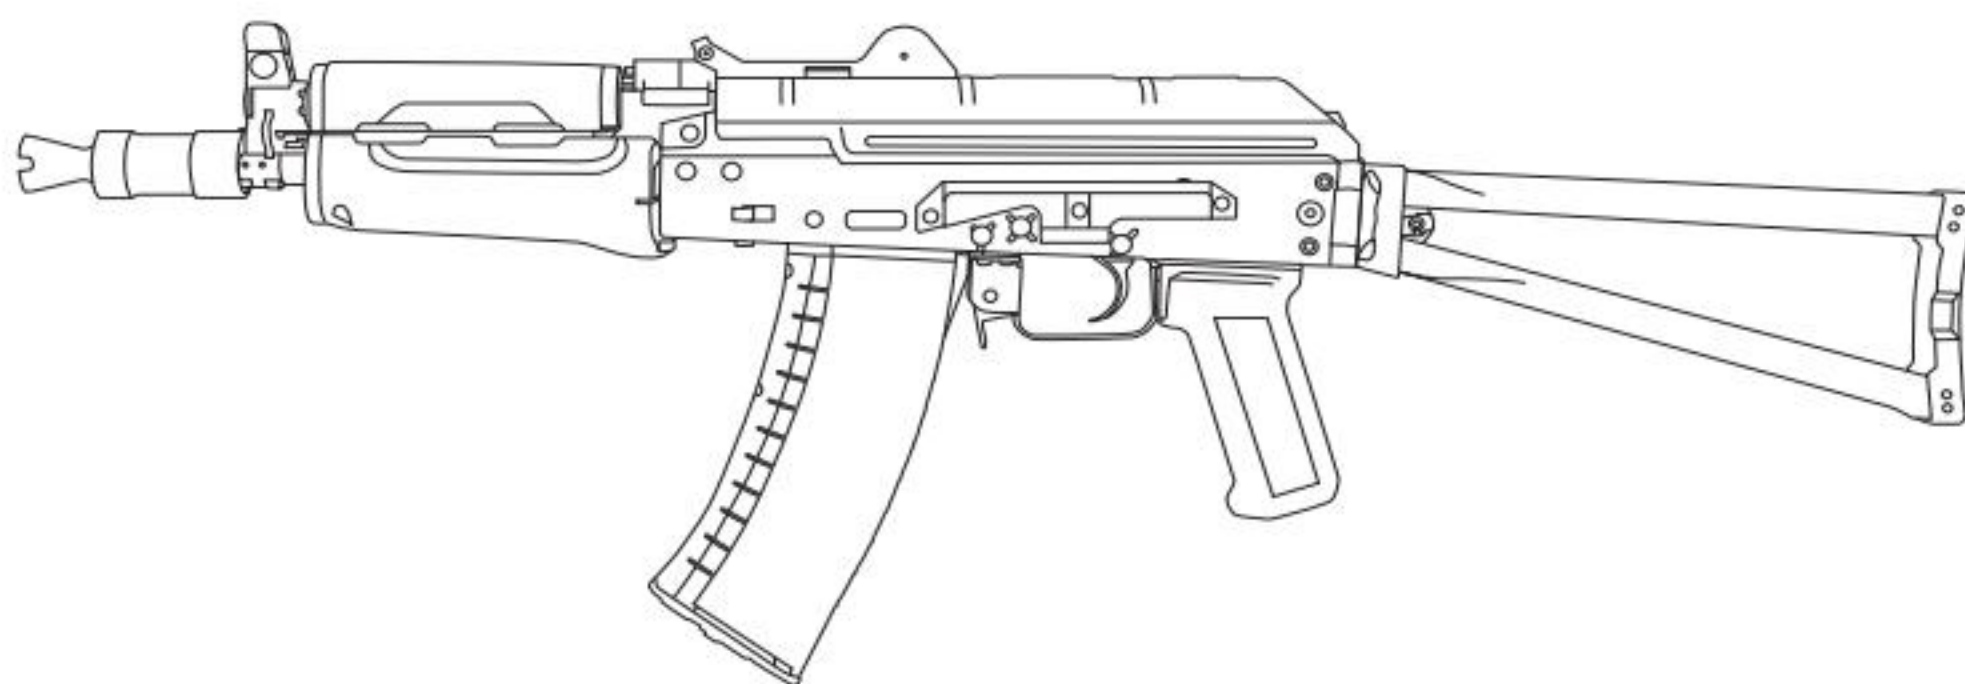

OPERATOR'S MANUAL

Please read this manual carefully before using the Airsoft gun.

UNIVERSO SNIPER
AIRSOFT



UNIVERSO SNIPER
AIRSOFT

TABLE OF CONTENTS

Warranty	3-4
Use of this manual.....	5
Safety Guidelines	5-6
Specifications and Package Contents:	
AKG-74SU	7
AKG-74M	8
Charging Gas	9
Loading BBs	10
Blank Fire Feature	11
Fire Selector Switch.....	12
Front Sight Adjustment	12
Folding Stock	13
Disassembly	14
Assembly	15
Cleaning	15-16
Hop-Up System	17
Troubleshooting	18
Operating Under Unusual Conditions.....	18
Diagram and Parts Lists:	
AKG-74SU	19-21
AKG-74M	22-24
AKG Series Magazine.....	25-26



KWA[®] WARRANTY

KWA PERFORMANCE INDUSTRIES, INC.
18571 E. Gale Ave.,
City of Industry, CA 91748-1339
1-(626)-581-1777

THANK YOU FOR PURCHASING A KWA PERFORMANCE INDUSTRIES, INC. PRODUCT. KWA Performance Industries, Inc. is committed to serving our customers with the finest quality products, the highest level of service, and the best customer satisfaction. Because of this, we offer a 90-day warranty on all KWA products we import and distribute.

Warranty Coverage

Except as specified below, this warranty covers all defects in material and workmanship in KWA products that occur during the above warranty period. The following are not covered by the warranty: (1) Any product which is not imported and distributed in the U.S.A. by KWA PERFORMANCE INDUSTRIES, INC. (2) Any products not purchased in the U.S.A. from a KWA AUTHORIZED RESELLER. If you are uncertain as to whether a reseller is a KWA AUTHORIZED RESELLER, please contact KWA PERFORMANCE INDUSTRIES, INC. as listed above or visit our website www.kwausa.com/where-to-buy (3) Damages, deterioration, or malfunction resulting from: a) An accident, act of nature, abuse, misuse, neglect, opening of or modification or failure to follow instructions supplied with the product. b) Repair or attempted repair by anyone not authorized by KWA PERFORMANCE INDUSTRIES, INC. c) Removal of the orange safety tip. (4) Use of the product outside the U.S.A. (5) Damaged batteries or improper use of bullets (BBs), or non approved propellants (ie. Propane, Red Gas, 134a...etc.) (6) Use in industrial, commercial, and/or professional applications.

What KWA Will Pay For

If your KWA product is found to be defective by KWA Performance Industries, Inc. during the applicable warranty period from the date of original purchase, KWA Performance Industries, Inc. will repair, or at its option, replace with new, used, or equivalent model, the defective product without charge for parts or labor.

How To Obtain Warranty Service

If your product needs service, it may be taken or shipped to KWA Performance Industries, Inc. The following procedures apply whenever your unit must be transported for warranty service:

- You must go to the Help Desk at www.kwausa.com/support to obtain an RMA number. THE RMA NUMBER MUST BE CLEARLY MARKED ON THE OUTSIDE OF THE PACKAGE. PACKAGES WITHOUT AN RMA NUMBER CLEARLY MARKED WILL BE REFUSED AND RETURNED TO THE SENDER.
- You are responsible for transporting your unit or arranging for its transportation.
- If shipment of your unit is required; you must pay the initial shipping fee, but we will pay the return shipping charge if the repairs are covered by the warranty.
- WHEN RETURNING YOUR UNIT FOR WARRANTY SERVICE, A COPY OF THE ORIGINAL SALES RECEIPT MUST BE ATTACHED.
- You must include the following: RMA number, your name, address, daytime telephone number, model and serial number (if applicable) of the product and a description of the problem.

This Warranty is Only Valid in the United States

If your product does not require service, but you have questions regarding its operation, please contact our Help Desk at www.kwausa.com/support.

THIS WARRANTY IS EXPRESSLY MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

OUR LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT, AT OUR OPTION, OF ANY DEFECTIVE PRODUCT AND SHALL IN NO EVENT INCLUDE INCIDENTAL OR CONSEQUENTIAL COMMERCIAL OR PROPERTY DAMAGES OF ANY KIND. WE ARE NOT RESPONSIBLE FOR PRODUCTS LOST, STOLEN AND/OR DAMAGED DURING SHIPPING.

SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS AND/OR DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, THE ABOVE LIMITATIONS AND EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, but you may also have other rights which vary from state to state. This Warranty may not be altered other than in writing signed by an officer of KWA Performance Industries, Inc.

USE OF THIS MANUAL

Before operating the Airsoft gun, read this manual in its entirety. Important safety topics and tips are discussed throughout all of the chapters. It's important that the operator know the principles of gun handling, safety, and operation prior to firing the Airsoft gun.

SAFETY GUIDELINES

Safety Distance

The effective shooting range is approximately 50 feet. BBs fired from this Airsoft gun may travel further than intended. Make certain that you have an adequate backstop.

Eye Protection

Eye protection should be worn at all times when both shooting and maintaining your Airsoft gun. Protect your eyes from BBs under pressure while performing maintenance on your Airsoft gun.

Assume Every Gun is Always Loaded

Until you are certain the chamber is empty, treat every gun as if it were loaded. Do not assume the chamber is empty based on your memory or someone else's words. Always remove the magazine and visually check to confirm the chamber is empty.

Beware of Barrel Obstructions

Ensure the Airsoft gun barrel is free of obstructions before you fire the gun. Even the smallest obstruction such as dirt, dust, or a stuck cleaning patch can cause a jam, misfire, or malfunction.

Muzzle Control

Always keep the muzzle of the gun pointed in a safe direction. Never point the muzzle at a person or object that you do not intend to shoot.

Keep Your Safety On

Keep the gun's safety on until your sights are aligned on your target and you are ready to fire.

Keep Your Finger Off The Trigger

Keep your finger off the trigger and out of the trigger guard until your sights are aligned on your target and you are ready to fire.

Identify Your Target and Backstop

Before you pull the trigger, make certain of your target and what is beyond it. The Airsoft gun should never be fired at surfaces such as rocks, glass, water, or other hard surfaces where BBs are likely to ricochet in unpredictable directions.



WARNING:

- Airsoft BBs can be a choking hazard. Keep them away from children.
- Failure to follow safety guidelines may result in serious injury.

SAFETY GUIDELINES (CONTINUED)

Failure To Fire

If the Airsoft gun fails to fire, misfires, or malfunctions, do not look into the gun barrel. BBs can become lodged into the chamber, and serious eye injury may occur.

Maintain Your Gun Properly

Performing proper maintenance, as outlined in this manual, ensures that your Airsoft gun will be safe to shoot and will perform to its designed specifications for many years. Alterations, modifications or adjustments may damage your Airsoft gun, make it unsafe to shoot, and will void all warranty claims.

Store Your Gun Safely

Always store the Airsoft gun in a safe place, and out of reach of children. Always transport the Airsoft gun in a carrying case. Never display the Airsoft gun in a public place. Keep the safety engaged, and remove the magazine before storing the Airsoft gun.

NOTE: IT IS YOUR RESPONSIBILITY TO TAKE EVERY REASONABLE PRECAUTION TO ENSURE THE SAFE STORAGE AND TRANSPORTATION OF YOUR AIRSOFT GUN.

Orange Tip

The orange tip on Airsoft guns helps Law Enforcement distinguish between the replica guns from their real firearm counterparts. Altering the coloration or markings required by state or Federal law so as to make the product look more like a firearm is dangerous and may be a crime. Operator assumes all risks and responsibility when doing so.

Hazards of Being Mistaken for a Real Firearm

Airsoft guns have been mistaken by Police and Law Enforcement as real firearms. A confrontation with law enforcement while carrying an Airsoft gun can result in serious injury or even death. It is strongly advised to operate the Airsoft gun at a safe and legal location. In the event that you are approached by Law Enforcement personnel, you must comply with their instructions immediately to avoid an incident.

Alcohol, Medications, and Drugs

Do not handle or operate your Airsoft gun while under the influence of alcohol, medication or drugs.

Your Responsibility

Your Airsoft gun is well-engineered and manufactured to the highest standards. It was carefully inspected before it was packaged and shipped from our factory. Its safe use depends on you alone. You are the ultimate safety device. Like many other devices, your Airsoft gun is safe unless handled in an irresponsible or uneducated manner.



WARNING:

- Adult supervision is required for any person under the age of 18.

AKG-74SU

SPECIFICATIONS

- Overall Length [Retracted] = 500 mm [19.68"]
- Overall Length [Extended] = 745 mm [29.33"]
- Inner Barrel Length = 240 mm [9.44"]
- Inner Barrel Diameter = 6.05 mm
- Weight = 3.29 kg [7.25 lbs]
- Barrel thread = -14 mm
- Caliber = 6 mm
- Magazine Capacity = 40 rounds
- Rate of Fire = 14+ RPS
- Velocity = 100~106 MPS [330~350 FPS]*
- Energy Output with 0.20g BB = 1.01 Joules
- Gas System = Force Velocity
- Propellant = Green Gas


*Individual test results may vary depending on brand of BBs and chronograph used.

Special Features:

- Gas operated recoil blow back
- Realistic construction & field stripping
- Full metal alloy receiver
- AK side rail
- Folding stock
- Blank fire mode
- Semi and full auto select fire
- Adjustable hop-up

PACKAGE CONTENTS

- 1 AKG 74SU Airsoft Gun
- 1 Sight Adjustment Tool
- 1 BB Loading Tool
- 1 Owners Manual
- 1 Cleaning Rod

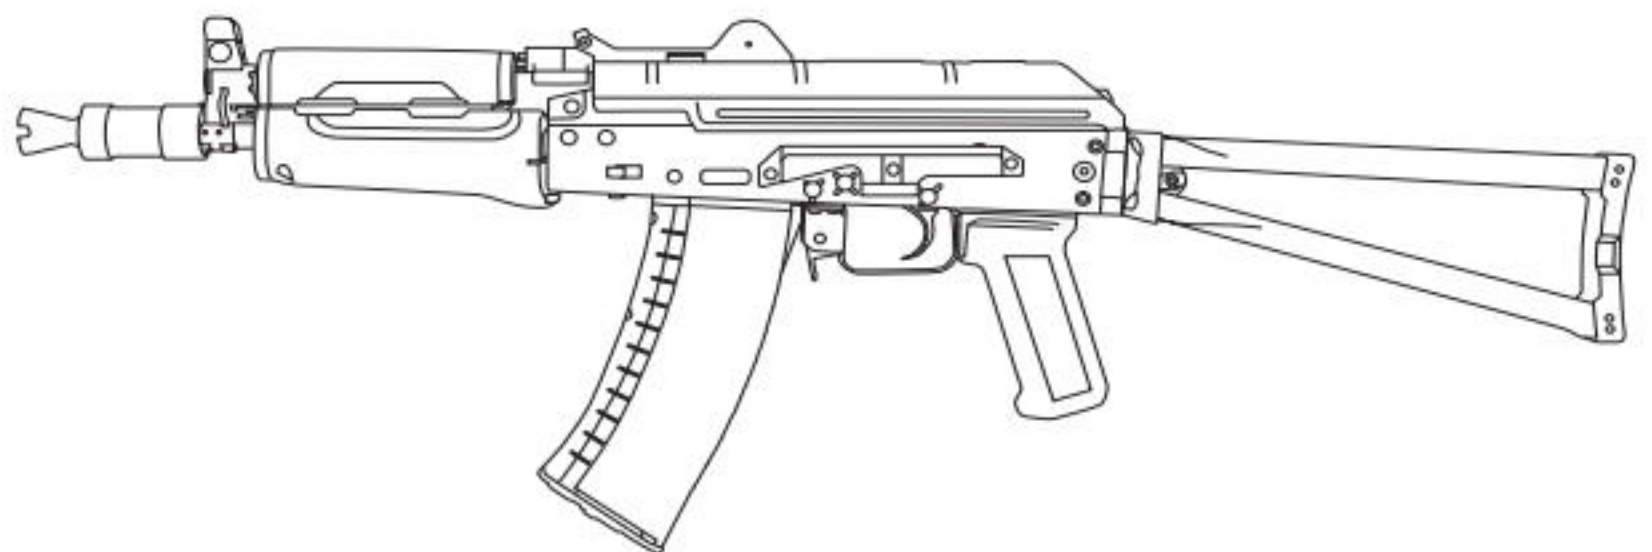

AKG-74M

SPECIFICATIONS

- Overall Length (Retracted) = 705 mm [27.76"]
- Overall Length (Extended) = 945 mm [37.20"]
- Inner Barrel Length = 420 mm [16.54"]
- Inner Barrel Diameter = 6.05 mm
- Weight = 3.52 kg [7.76 lbs]
- Barrel Thread = -14 mm
- Caliber = 6 mm
- Magazine Capacity = 40 rounds
- Rate of Fire = 14+ RPS
- Velocity = 118-125 MPS [380-400 FPS]
- Energy Output with 0.20g BB = 1.49 Joules
- Gas System = Force Velocity
- Propellant = Green Gas

*Individual test results may vary depending on brand of BBs, and chronograph used.


Special Features:

- Gas operated recoil blow back
- Realistic construction & field stripping
- Fully metal alloy receiver
- AK side rail
- Folding stock
- Blank fire mode
- Semi and full auto select fire
- Adjustable hop-up



PACKAGE CONTENTS

- 1 AKG 74M Airsoft Gun
- 1 Sight Adjustment Tool
- 1 BB Loading Tool
- 1 Owners Manual
- 1 Cleaning Rod

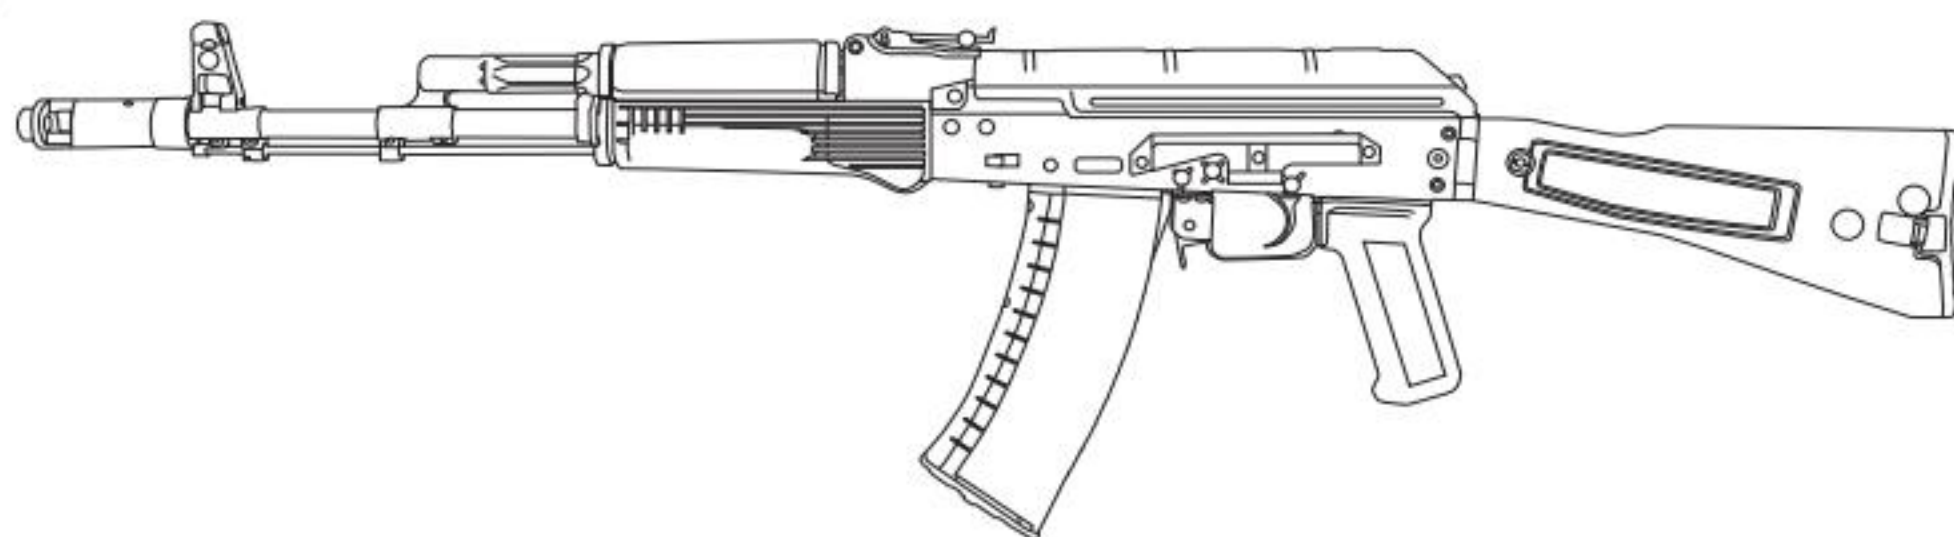


CHARGING GAS

1. Release the magazine by pressing the magazine catch lever towards the magazine.
2. Push the gas canister nozzle into the charging valve. Make sure the canister is in a vertical position when charging.
3. Charge the magazine for approximately 30-40 seconds.

Note: It is normal to have minor leaking from the charging valve during charging due to high pressure built up inside the magazine. It is recommended to keep the gas release valve slightly oiled. Room temperature is the ideal temperature for shooting. You may experience a delayed action if the surrounding temperature drops below 68° F.

Note: Do not expose the magazine to direct sunlight or incinerate the magazine, as this may cause the magazine to burst. It is strongly recommended to empty the gas from the magazine after shooting. Be certain that the gas does not make contact with eyes or skin while being released, as any contact will cause cold burns.

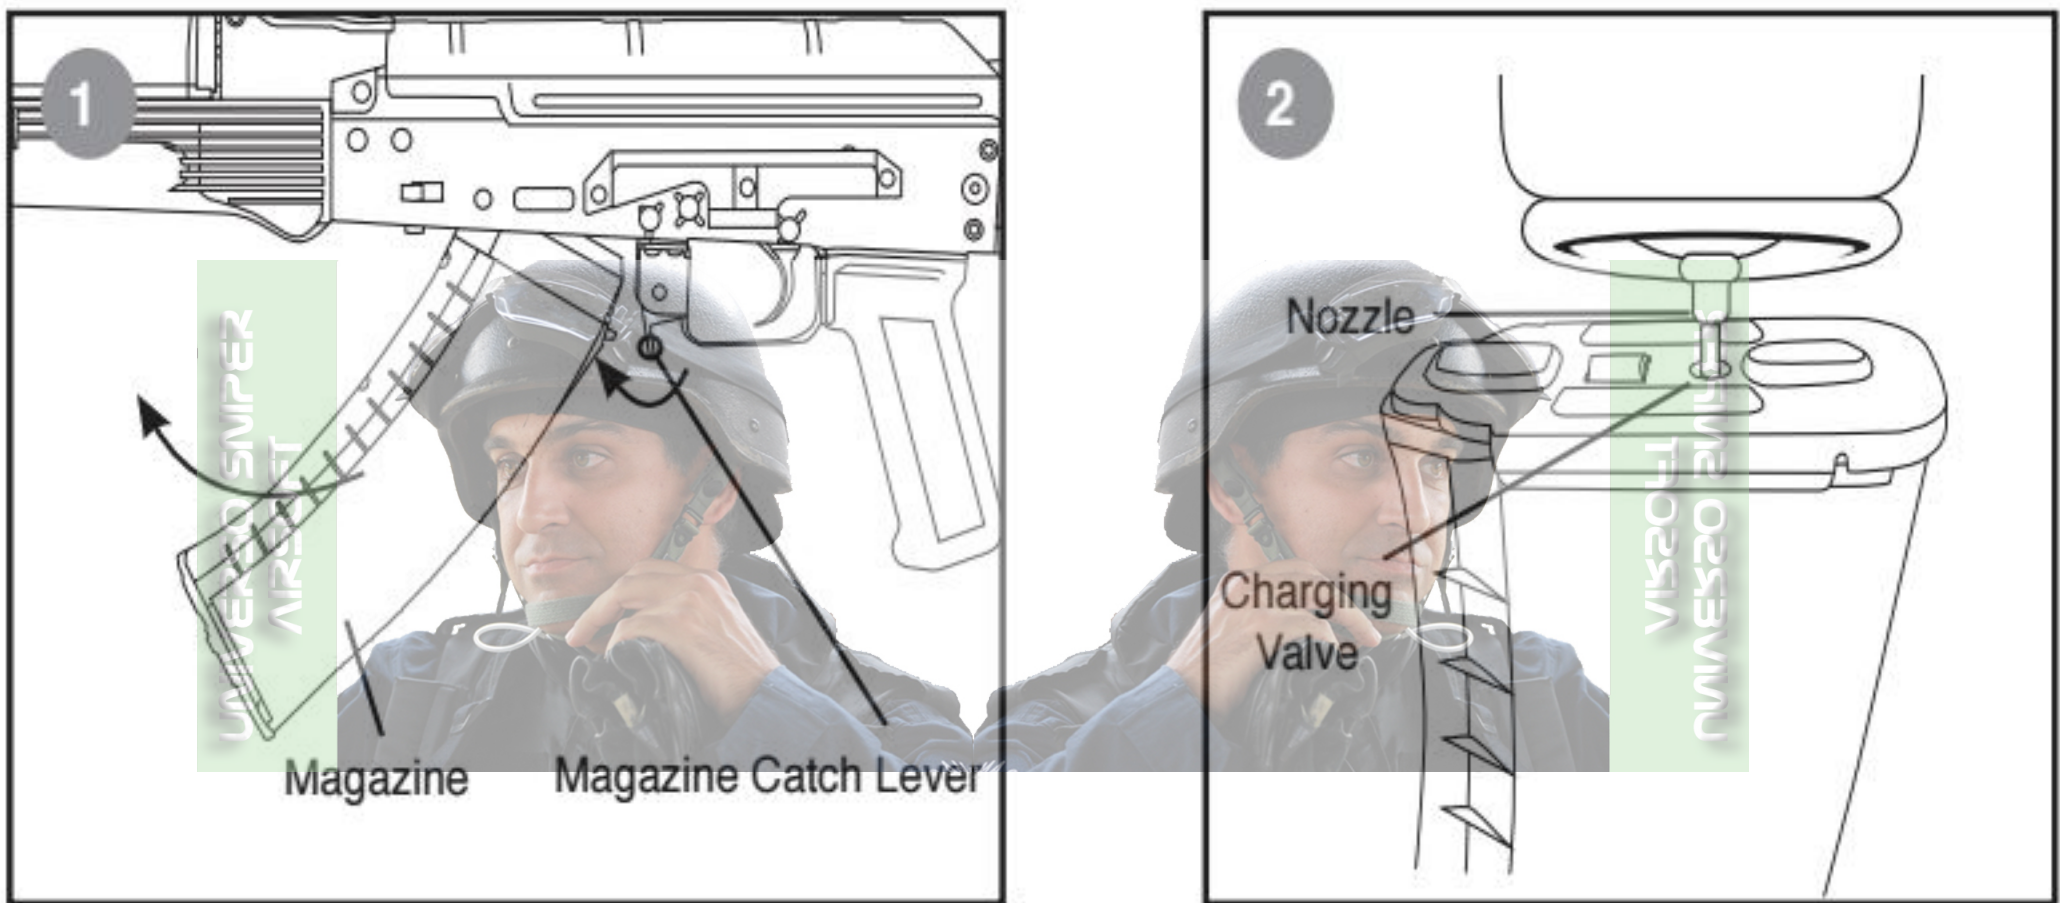

Green Gas safety tips:

- Check the canister for any cracks or leaks before using.
- Do not expose the canister to temperature over 104° F.
- Do not leave the canister directly over fire.
- Do not heat the canister.
- Keep the canister away from direct sunlight.
- Do not leave the canister in any type of vehicle.




WARNING:

- Avoid dropping the magazine. Sudden impact with a hard surface may cause damage to the magazine.

LOADING BBS

1. Release the magazine from the Airsoft gun by pressing the magazine catch lever.
2. Fit the standard BB loader over the magazine feed lip.
3. Load the BBs into the BB loader.
4. Insert the plunger into the BB loader and push down to load BBs into the magazine.

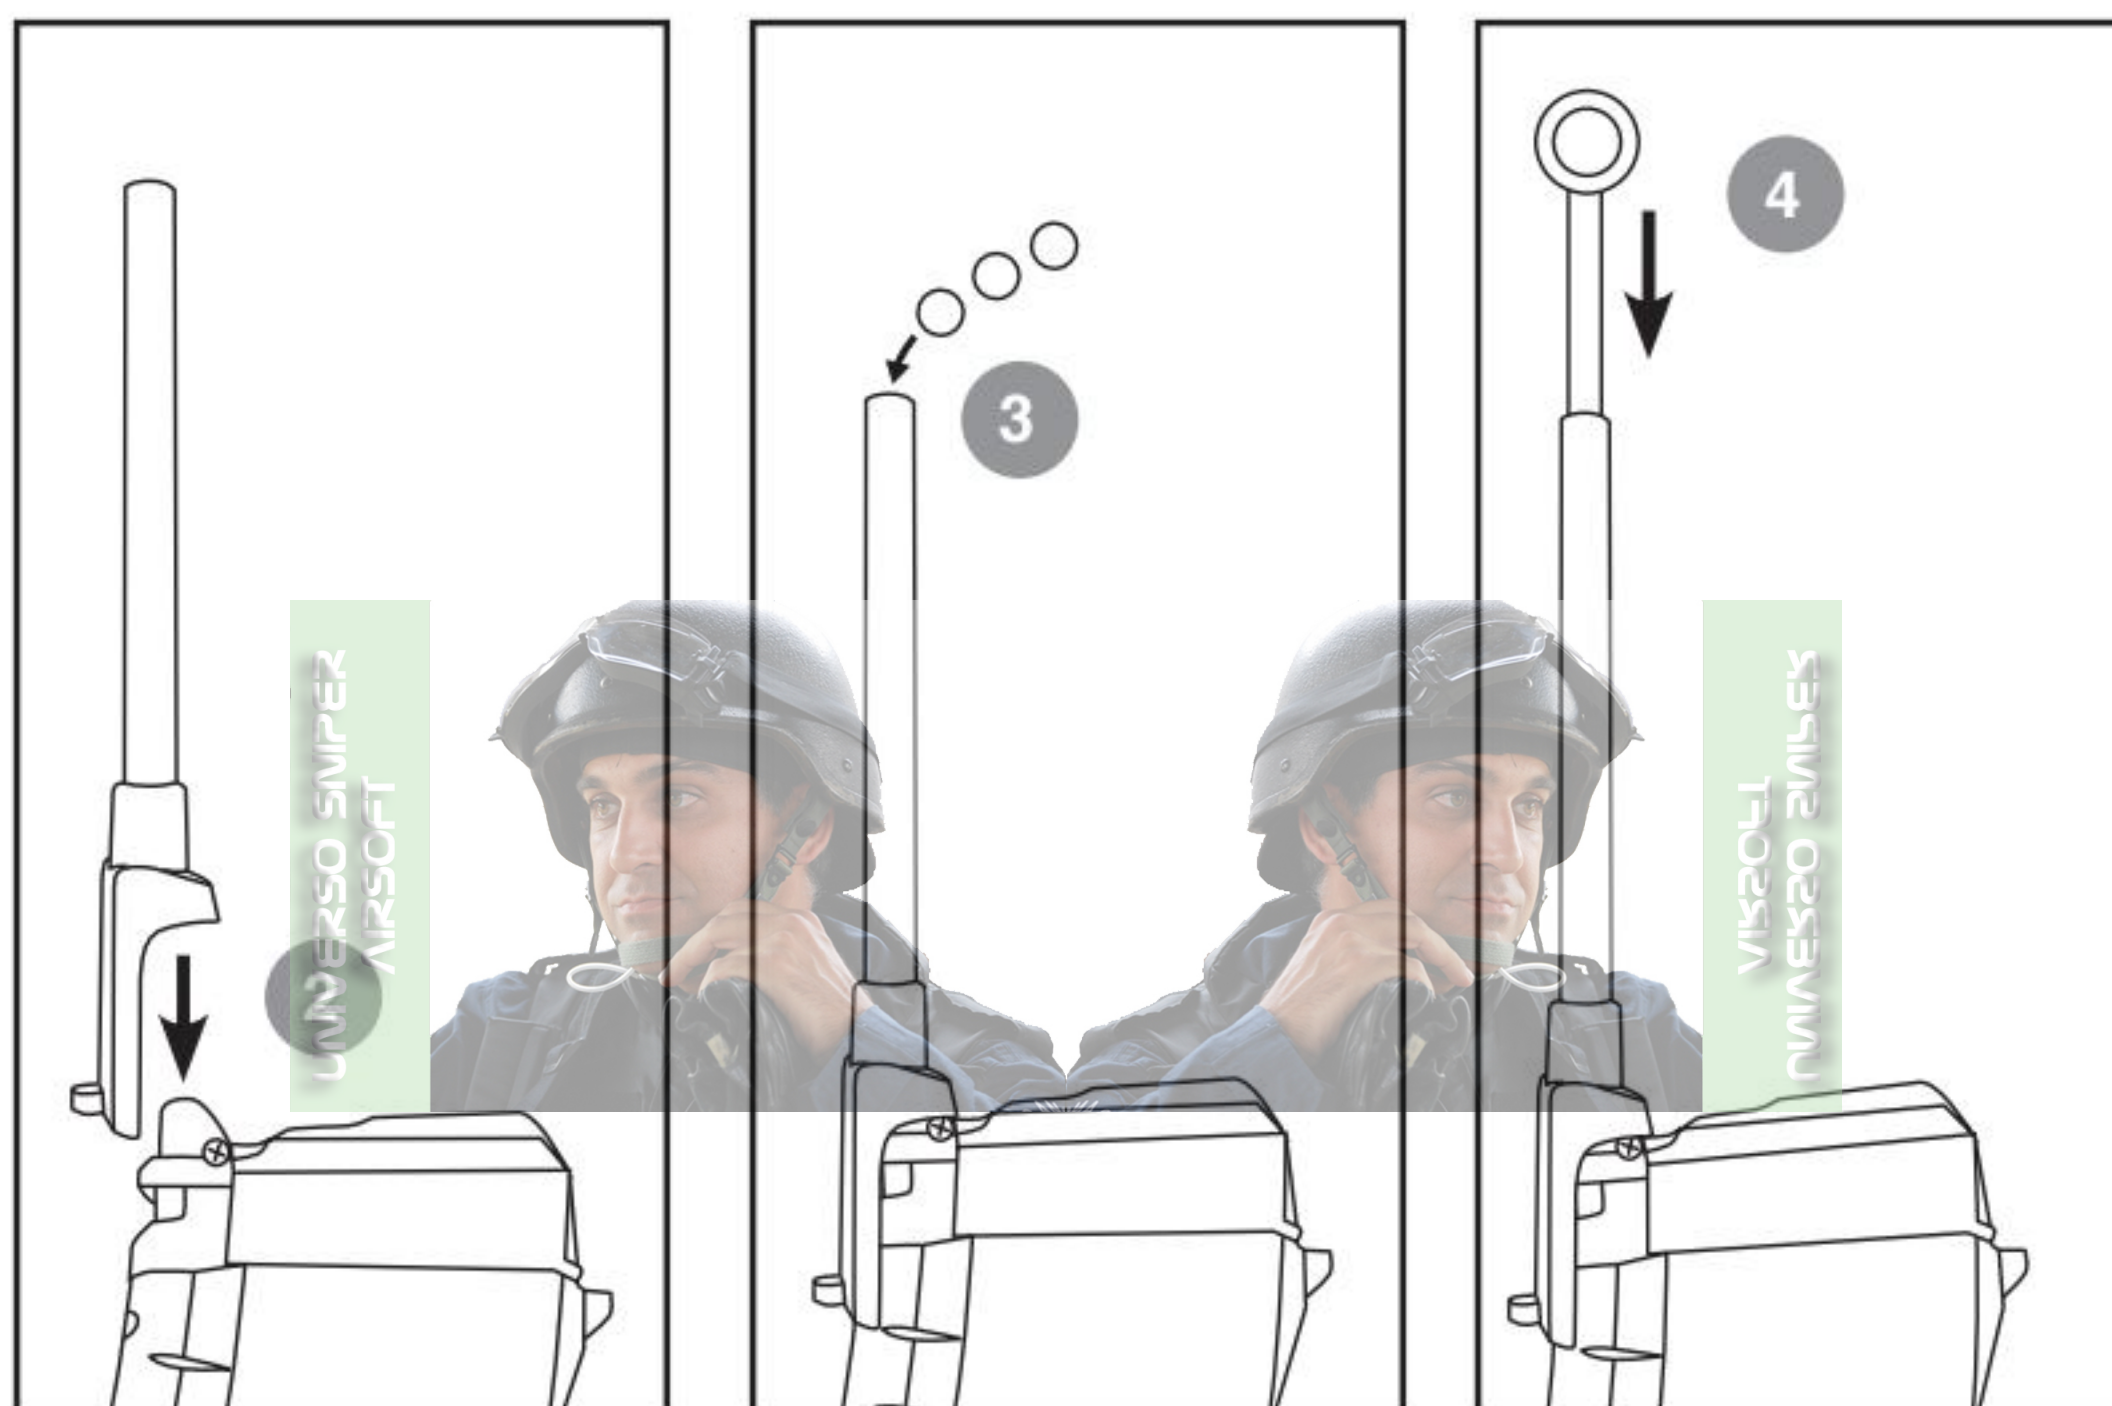


WARNING:

- Always use high quality 6mm BBs, weighing 0.2g or heavier. For best results use 0.25g KWA Perfect BBs. Never use recycled or low grade BBs to prevent damage to your gun.

BLANK FIRE MODE

One of the standard features of the KWA AKG Series is the Integrated Blank Fire Device implemented in every AKG magazine. This allows for the AKGs to be fired continuously without ammunition for training use.

1. Push down and hold the Base Plate Stop to release the Magazine Base Plate.
2. Slide the Base Plate backwards to reveal the Blank Fire Key.
3. Insert the key into the Indicator Wheel.
4. Turn the Indicator Wheel to the desired position as shown.

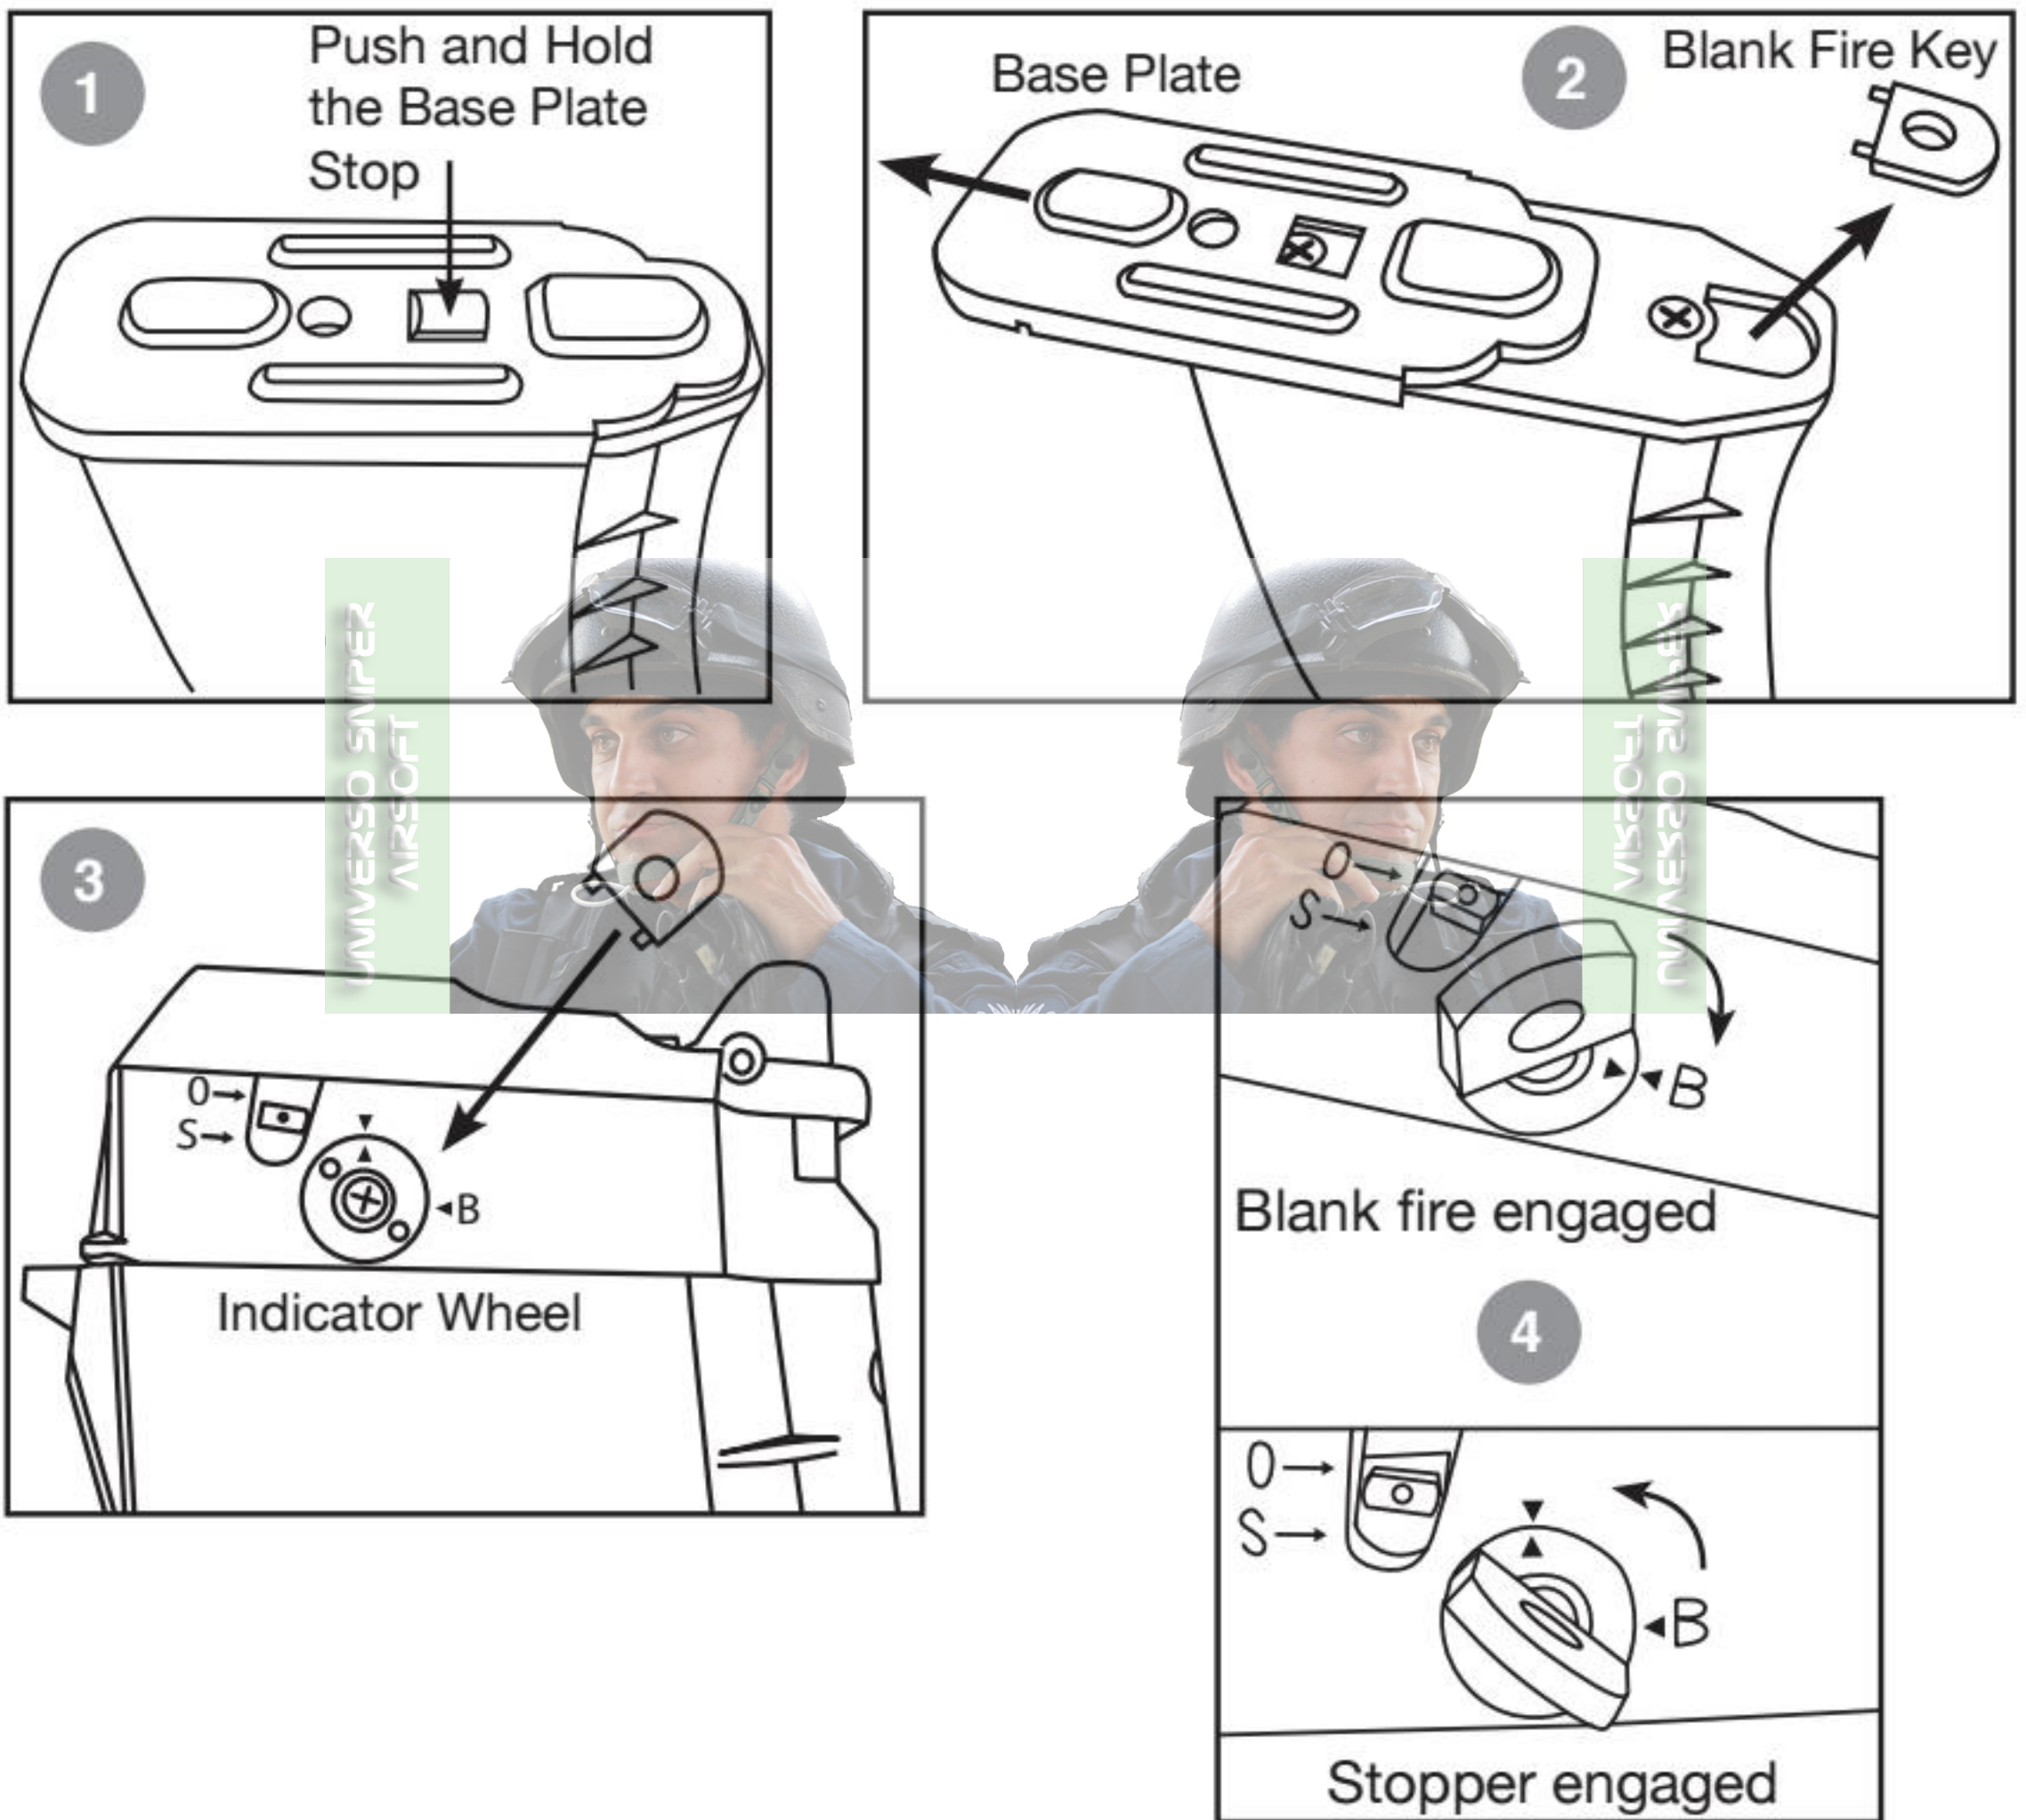

WARNING:

- Any loaded rounds can still fire with the Blank Fire Device activated. Always make sure the gun is unloaded by inspecting BOTH the chamber and magazine. Failure to do so may result in serious injury.

FIRE SELECTOR SWITCH

1. Safe


Safe mode is the highest setting as indicated in the diagram below. In this mode the gun will not fire. For safety reasons, you should keep the switch in Safe mode at all times when you are not ready to fire.

2. Full Auto

Full Auto mode is the second setting. In this mode the gun will fire continuously as long as the trigger is engaged.

3. Semi-Auto

Semi-Auto mode is the lowest setting. In this mode the gun will fire one shot for each time you squeeze the trigger.

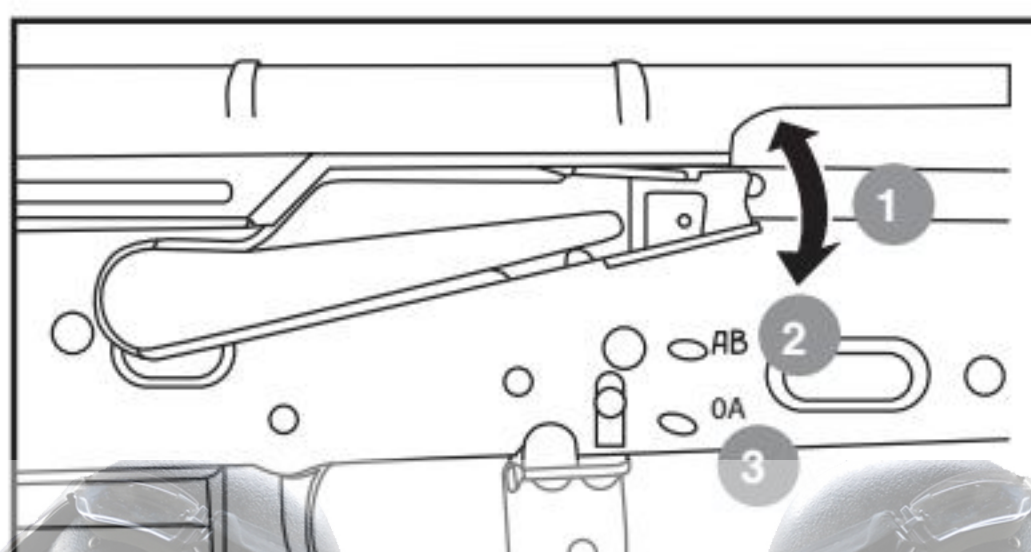

FRONT SIGHT ADJUSTMENT

1. The front sight can be moved up and down to zero the sights.
2. Turn counter clockwise to raise the post.
3. Turn clockwise to lower the post.





WARNING:

- Do not squeeze the trigger when switching the fire selector.
- If turned too far, the front sight will come off.



FOLDING STOCK AKG-74M

1. Press the stock release button and swing the stock into folding position until it clicks into place.
2. Push the front latch to release the stock and swing the stock outward until it clicks into position.

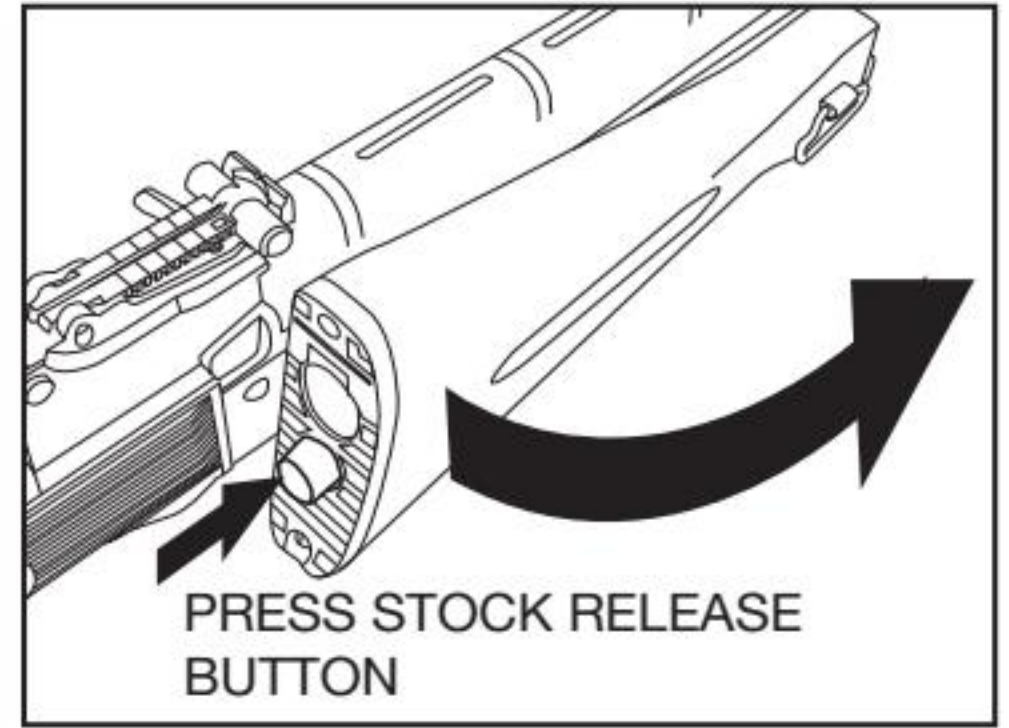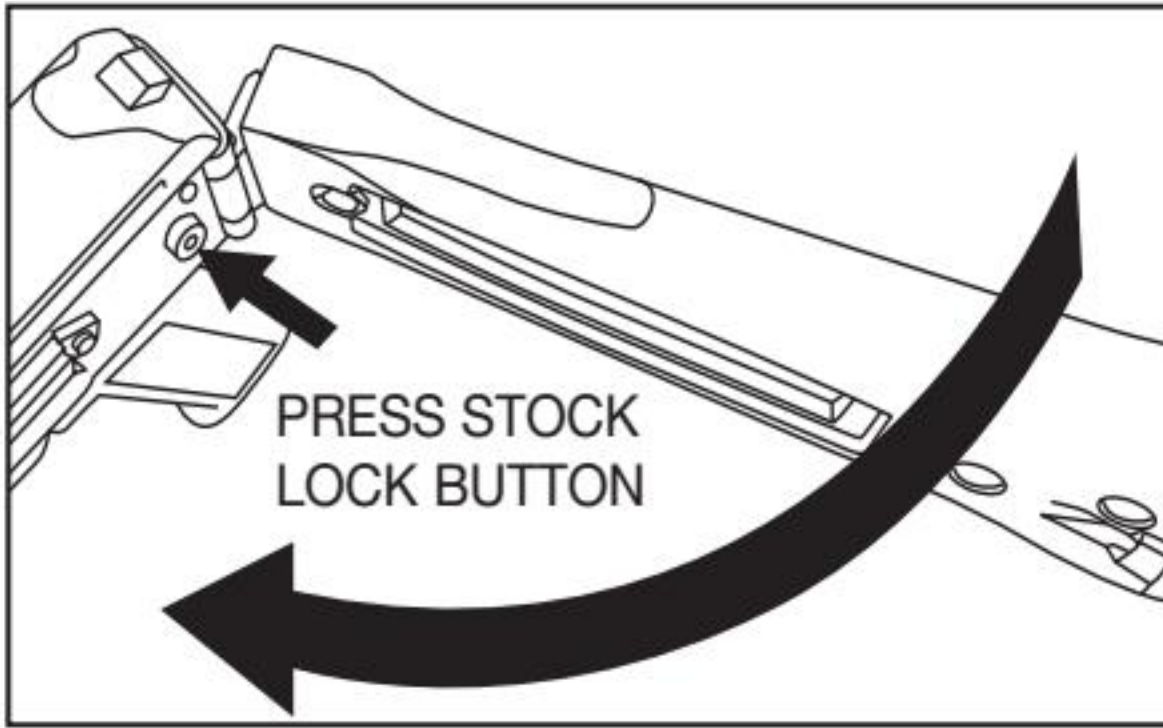




FOLDING STOCK AKG-74SU

1. Press the stock release button and swing the stock into folding position until it clicks into place.
2. Push the front latch to release the stock and swing the stock outward until it clicks into position.

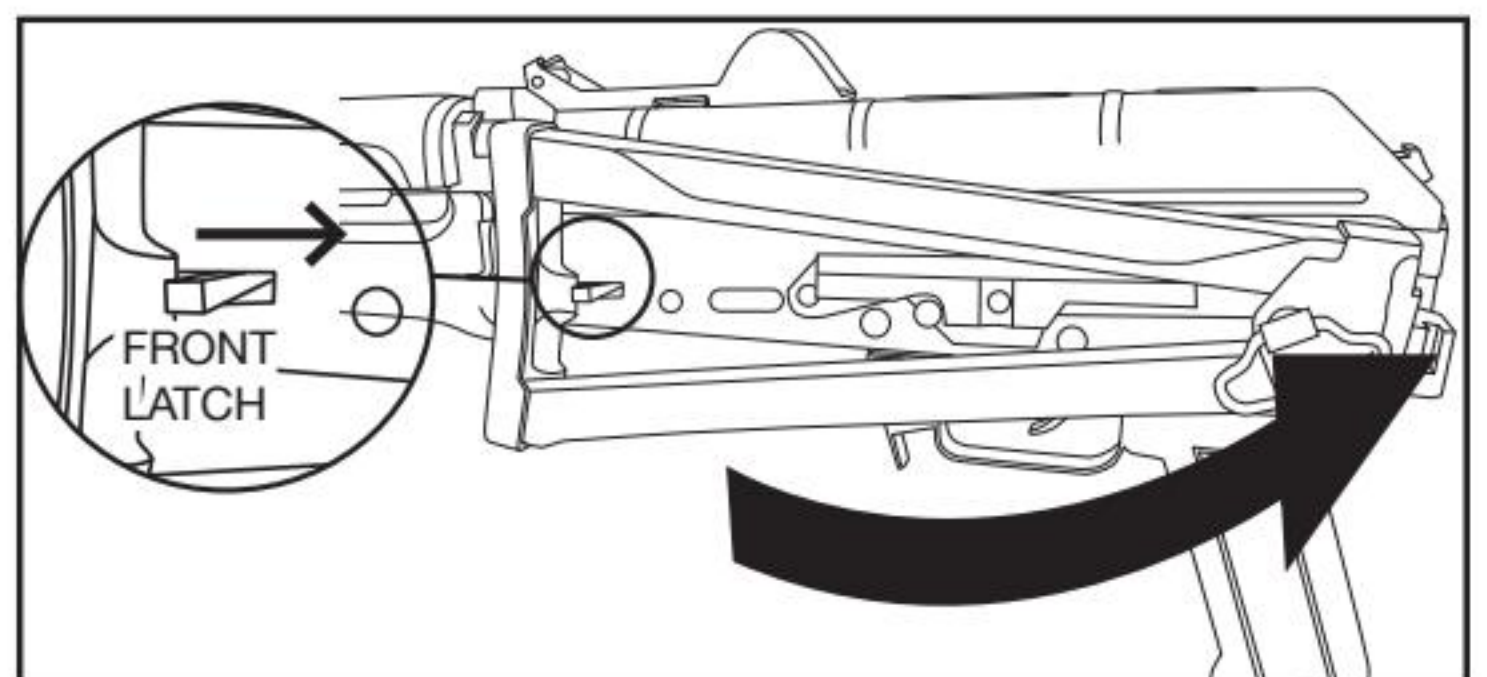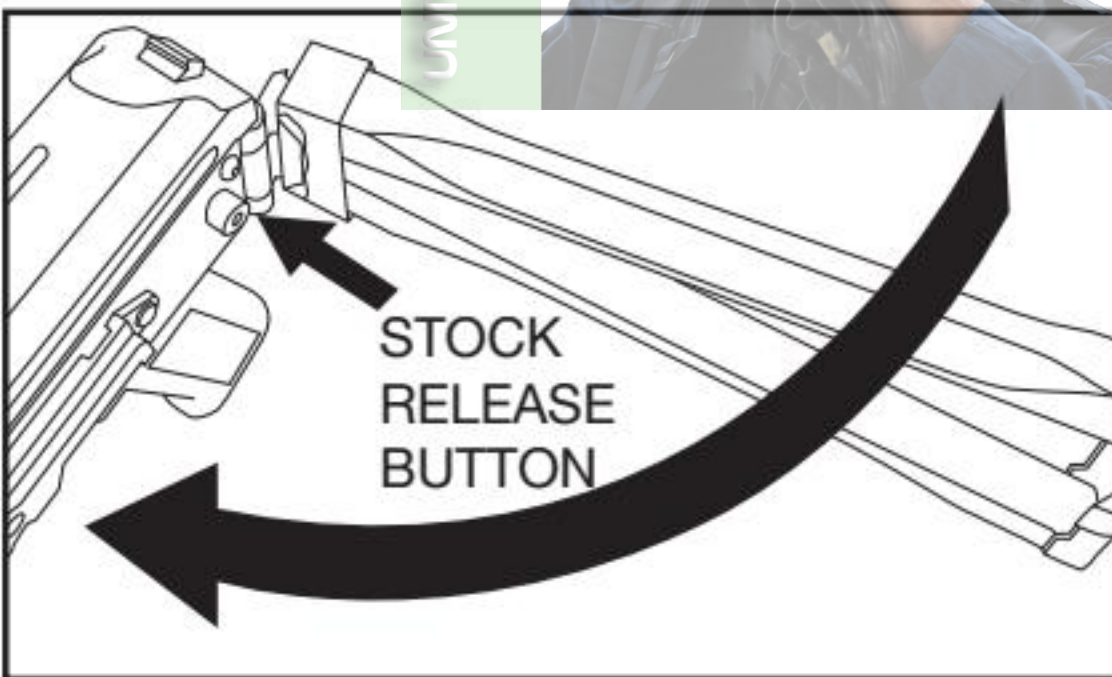

DISASSEMBLY

1. Remove magazine.
2. Set the selector to semi-automatic.
3. Charge the bolt to reset the hammer.
 - Note:** Check and clear the chamber of BB's.
4. Depress the spring guide to lift the cover.
5. Push the spring guide forward then lift up to remove the spring guide.
6. Pull the bolt back then remove the bolt.

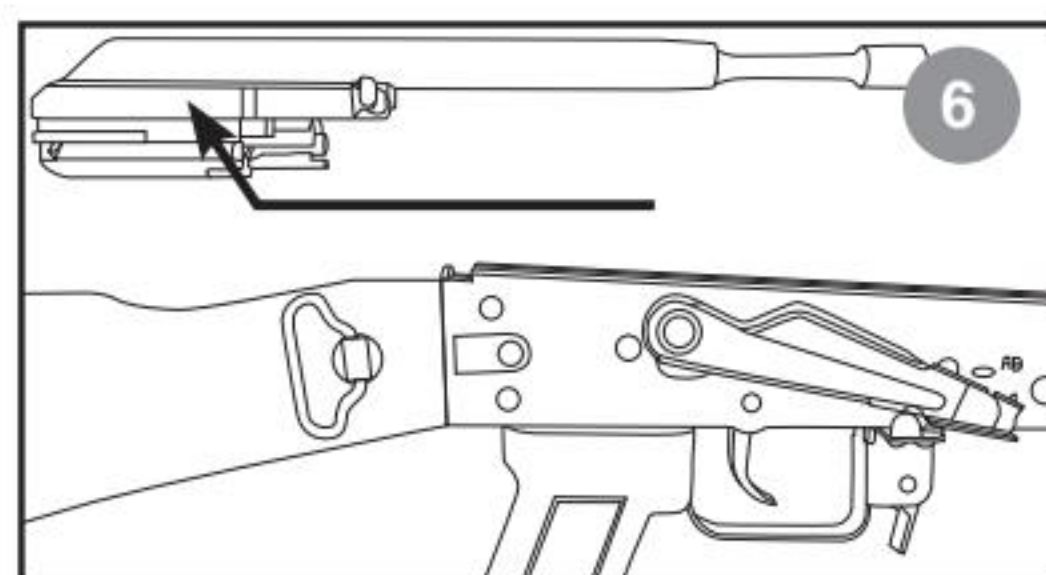
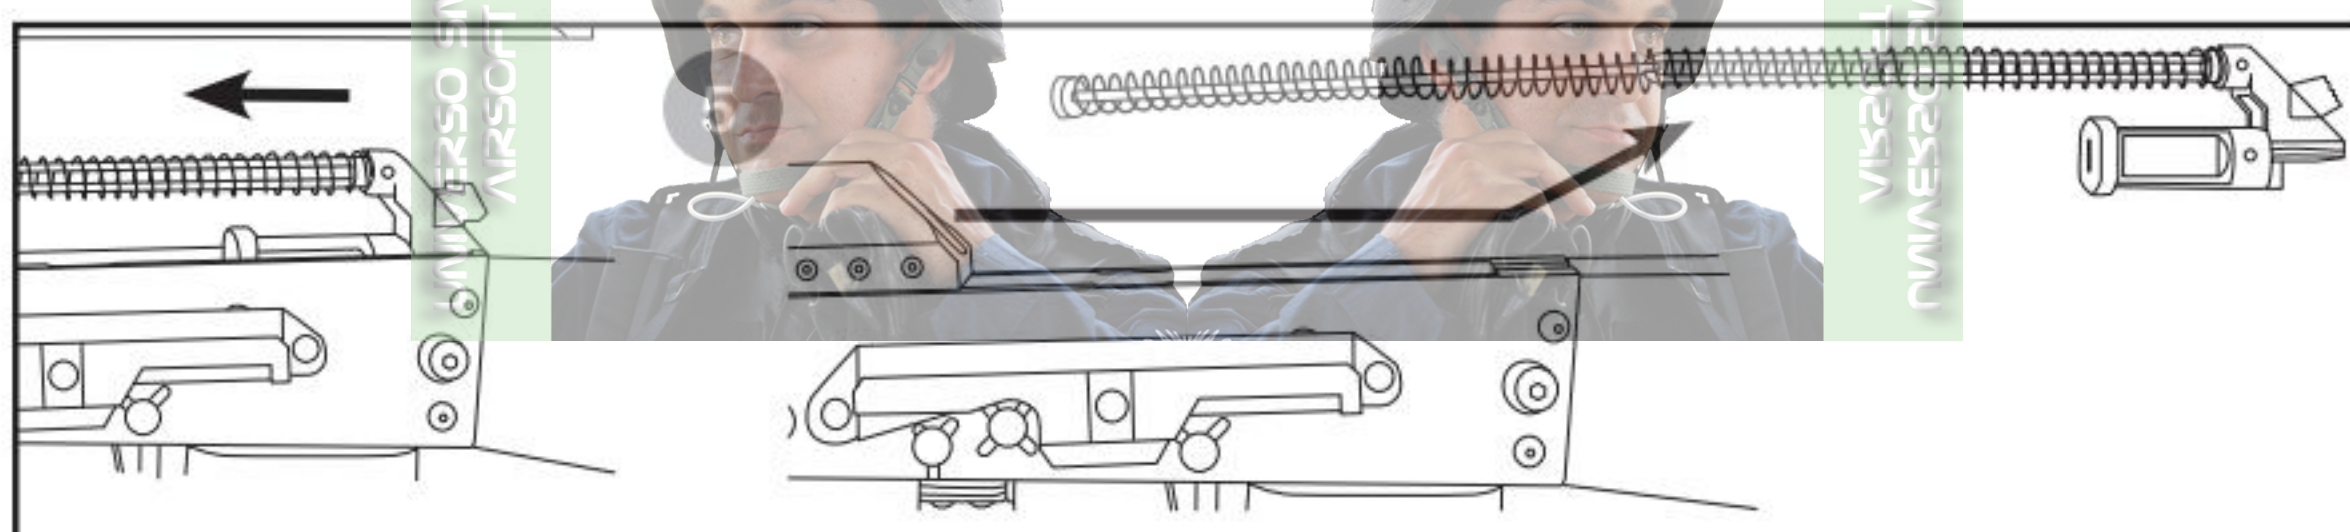
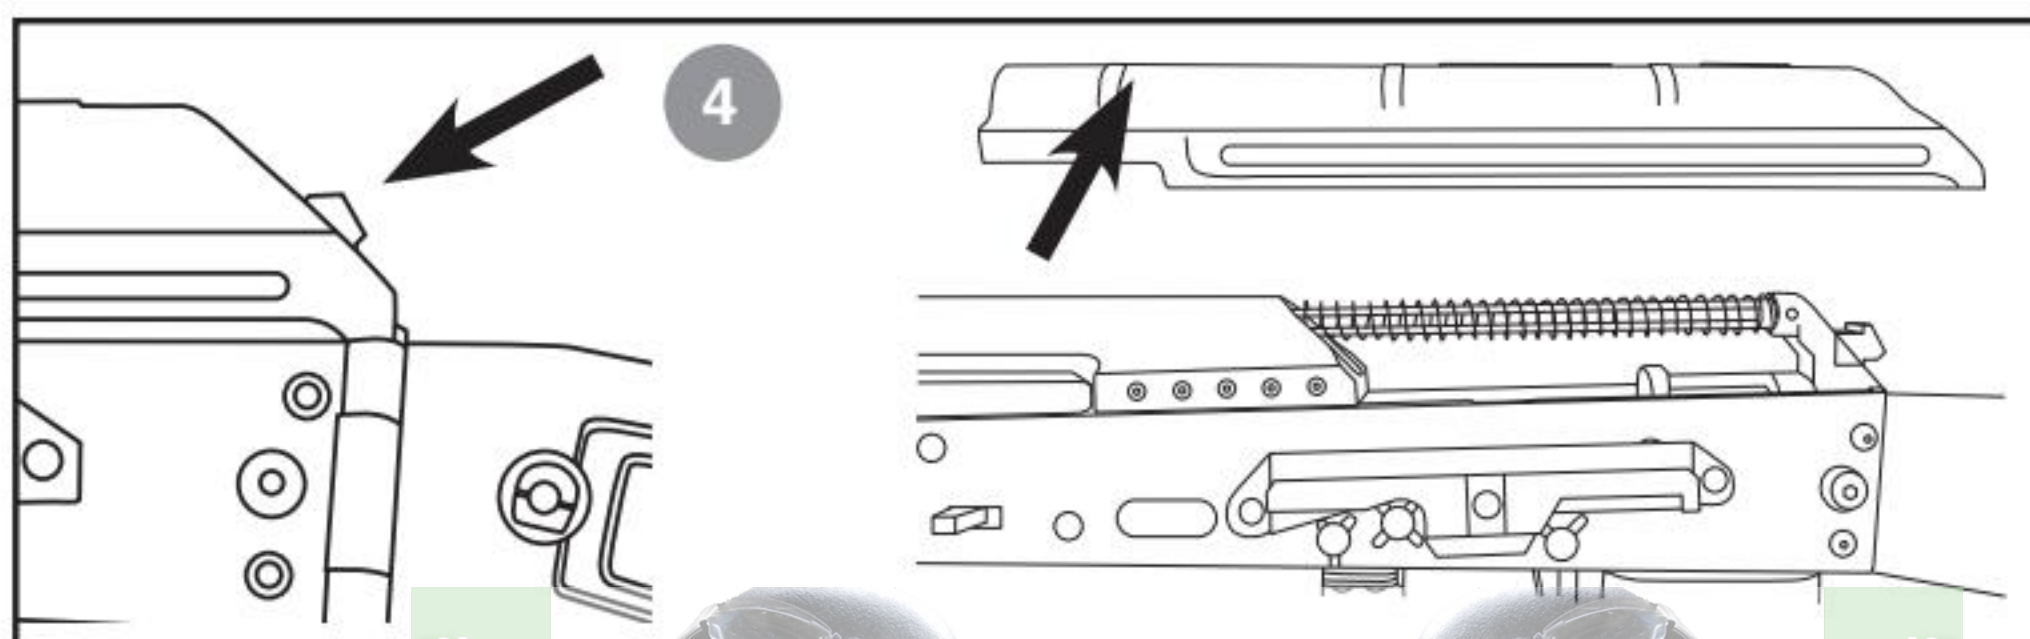


WARNING:

- Always place the safety cap on the barrel tip when servicing your gun.

ASSEMBLY

1. Re-install the bolt carrier onto receiver and push bolt to full forward position.
2. Re-install the recoil guide into opening of bolt carrier. Compress recoil guide and insert into recoil guide cutout on receiver.
3. Align front end of dust cover with receiver and push down until it locks.
4. Cycle bolt to ensure proper re-assembly.

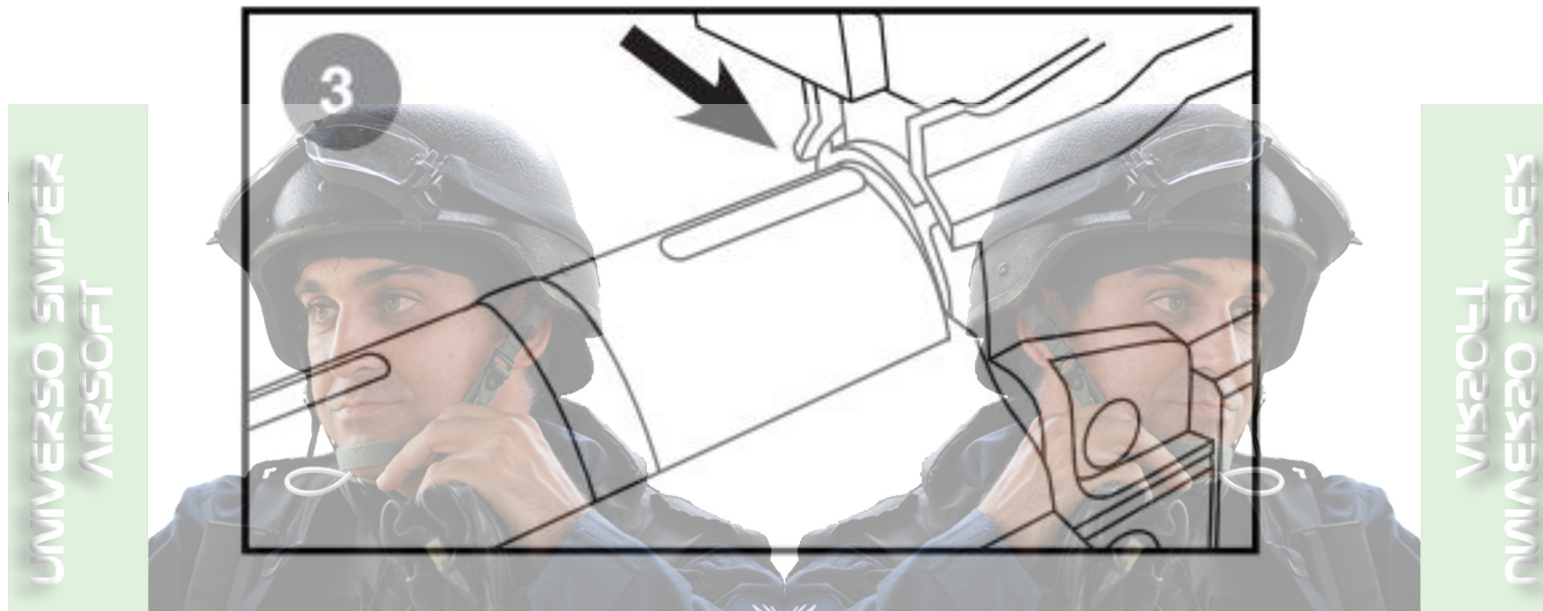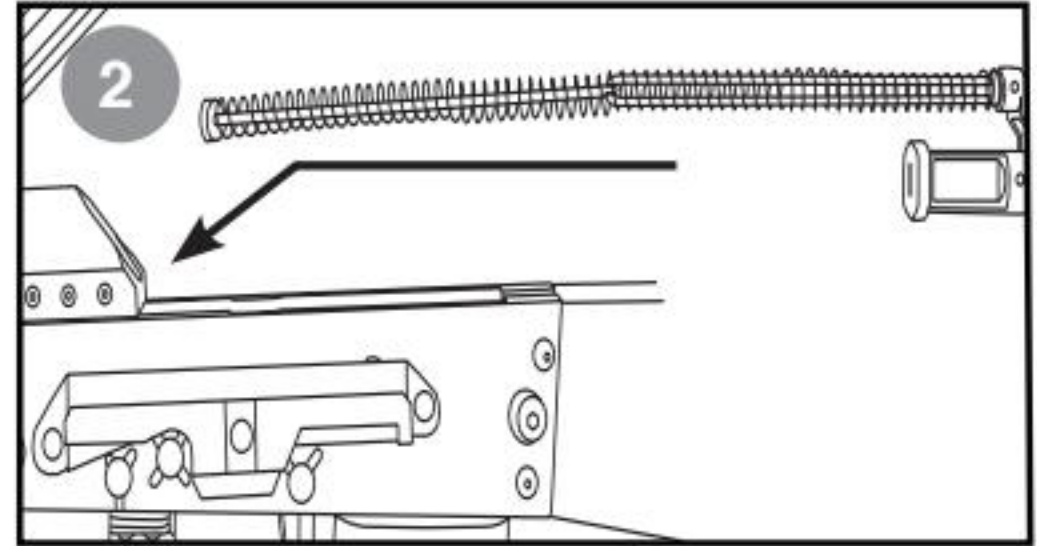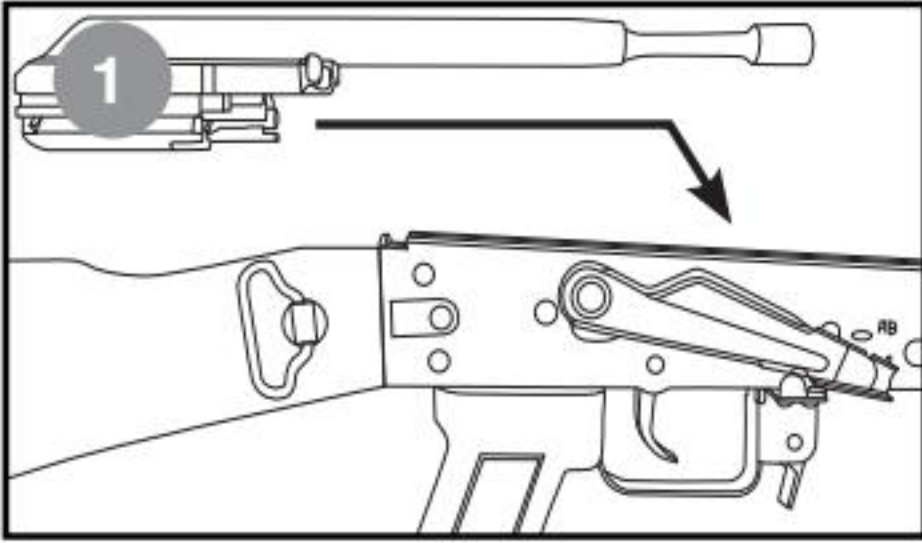

CLEANING

The Airsoft gun barrel should be cleaned after each shooting session. Regular cleaning prevents the effects of BB residue buildup that can hinder performance or jam the gun.

1. Ensure that the safety is engaged
2. Remove the magazine and clear the chamber of loaded BBs
4. Disassemble the receiver (see Disassembly section)




WARNING:

- **Unload and clear the Airsoft gun before cleaning.**
- **DO NOT use spray silicone oil as a cleaning solution for the inner barrel.**

CLEANING (CONTINUED)

5. Steps to use cleaning rod:
 - a. Cut a piece of clean cotton cloth to 1 inch by 0.5 inch size. Insert one end of the cloth into the hole in the cleaning rod (adjust the length of cloth for smooth entry into the barrel)
 - b. Wind the cloth around the cleaning rod
 - c. Insert the cleaning rod into the inner barrel, and push the rod through.
 - d. Remove the cleaning rod and check the cotton cloth for dirt. Repeat steps a. through c. when necessary.
6. Oil the piston seal and hammer.

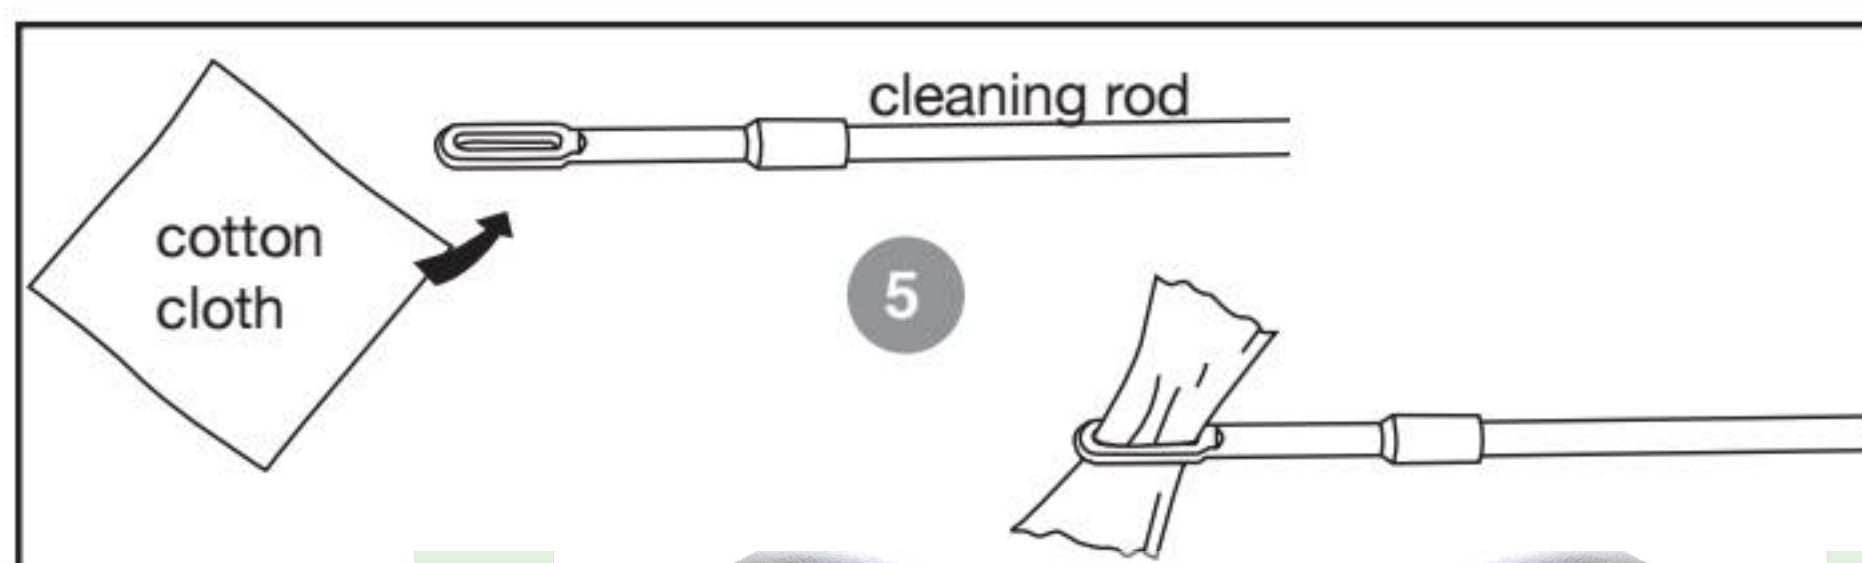

NOTE: Lubricating dry seals and o-rings are essential. Unload BBs from the magazine. Make sure the magazine is free of gas before lubricating the magazine's charging valve and release valve.

Use only the recommended 100% silicone oil, available for purchase at the Airsoft dealer where you purchased your KWA products. Any other type of lubricant may damage the products.



WARNING:


- Unload and clear the Airsoft gun before cleaning.
- **DO NOT** use spray silicone oil as a cleaning solution for the inner barrel.

HOP-UP SYSTEM

The Hop-Up device is one of KWA's standard features, giving Airsoft BBs greater stability, further travel, and increased accuracy. Airsoft BBs are light-weight and can be affected by wind when fired. With the Hop-Up system, the trajectory of the Airsoft BBs can be adjusted according to the shooting environment or surroundings.

HOP-UP ADJUSTMENT

1. Test fire the gun to determine the amount of hop up needed.
2. Remove the Magazine.
3. Pull the bolt back to access the Hop-Up Dial.
4. Turn the Hop-Up Dial to adjust hop.
5. Left for more hop, right for less hop.
6. Test fire and adjust as needed.

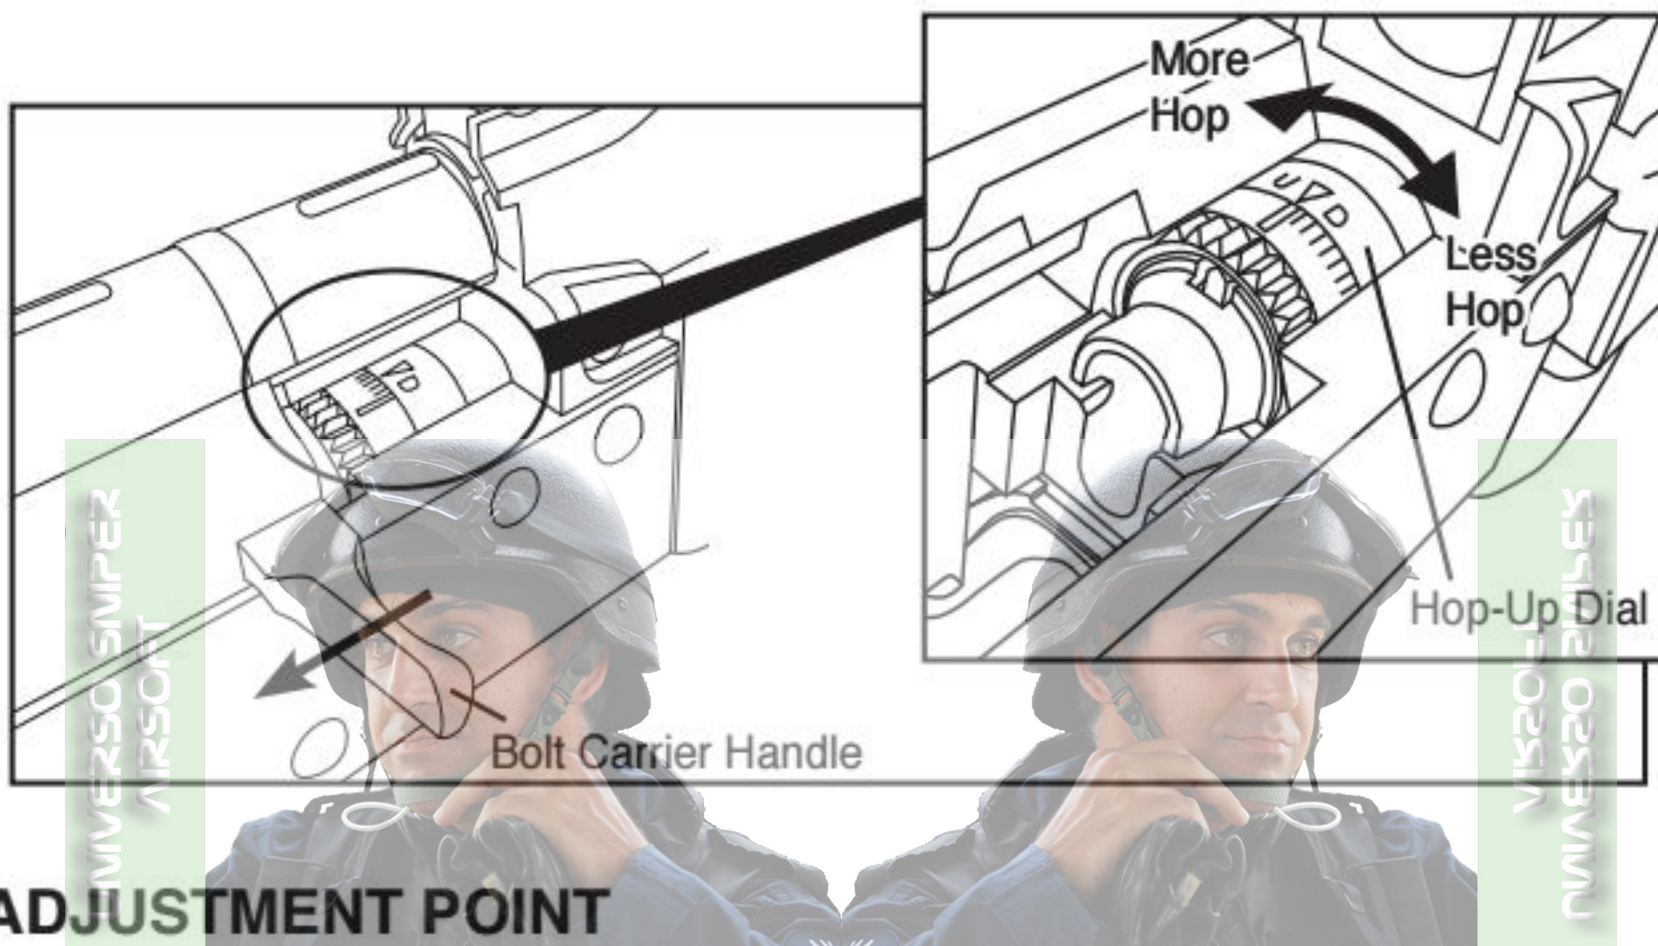

HOP-UP ADJUSTMENT POINT

BB TRAJECTORY PATTERN		ADJUSTMENTS
	BB DROPS FREELY	TURN KNOB TO LEFT
	BB TRAVELS AT SHORT TRAJECTORY PATH	TURN KNOB SLIGHTLY TO LEFT
	BB TRAVELS DISTANCE AT FLAT TRAJECTORY PATH	NO ADJUSTMENT MADE
	BB TRAVELS FLAT IN SHORT DISTANCE, THEN GOES UP IN CURVE AND DROPS FREELY	TURN KNOB SLIGHTLY TO RIGHT
	BB TRAVELS AT UNSTABLE SPEED AND IRREGULAR PATH	TURN KNOB TO RIGHT



WARNING:

- Do not release the bolt with hand in the chamber.

BASIC TROUBLESHOOTING GUIDE FOR RIFLES

SYMPTOMS	POSSIBLE CAUSE	SOLUTIONS
Slide jams / Will not complete cycle	Dry internals	Add silicone to cylinder / main seal
Double feeds BBs into chamber / BB's roll out of barrel	Hop-up adjustment too tight	Release hop-up or replace bucking
BBs will not release from magazine / bent mag lip/ check BB condition	Bent magazine lip	Replace magazine lip
Leaking release valve & charging valve	Dry O-ring	Add silicone oil to valves / Replace valves
Slide stop engages while shooting BBs	Weak slide stop spring	Adjust tension
Magazine base plate will not lock	Broken base plate lock	Replace base plate lock
Magazine base leaking air	Worn out base seal	Replace magazine base seal
Cylinder will not load BBs into chamber	Broken cylinder tab	Replace cylinder
Trigger will not reset	Worn out trigger spring / trigger bow spring	Replace trigger spring / trigger bow spring

OPERATING UNDER UNUSUAL CONDITIONS

Unusual conditions are defined as any condition requiring special maintenance. Perform maintenance outlined for the climate similar to your operational area.

Extreme Cold:

Operating an Airsoft gas gun in extremely cold temperatures is not recommended. Cold temperatures will cause the Hop-up Bucking to harden, reducing its effectiveness. Gas will not expand properly in cold temperatures, so both the cycling rate and power will be dramatically reduced.

Extreme Heat:

Operating an Airsoft gas gun in extremely hot temperatures is also not recommended. Leaving the gun in direct sunlight for long periods of time, or operating in extremely hot areas will cause the gas to over-expand, damaging the internal workings of the gun. The increase in internal pressure from the expanding gas can also damage the seals and cause leaks in the magazine.

Dust or Sand:

Dust or sand can get into a gas gun and cause malfunctions and/or excessive wear. Keep the gun covered whenever possible. Use lubricant sparingly, as lube naturally attracts dirt and other particles. After use in a dusty area, always field strip the gun (refer to Disassembly Section) and clean any areas you can reach with a soft, lint-free cloth.

AKG-74SU PARTS LIST


Parts #	Description
AKG74SU-1	GRIP
AKG74SU-3	BOLT
AKG74SU-4	INNER PISTON
AKG74SU-5	FRONT LATCH BASE
AKG74SU-6	FRONT LATCH DÉTENTE
AKG74SU-7	FRONT LATCH
AKG74SU-8	INNER BARREL BASE
AKG74SU-9	INNER BARREL CLAMP
AKG74SU-10	HOPUP CYLINDER
AKG74SU-11	HOPUP ADJUSTMENT DIAL
AKG74SU-12	JET NOZZLE
AKG74SU-15	HOPUP NUB
AKG74SU-16	RECOIL BUFFER BASE
AKG74SU-17	BOLT BASE
AKG74SU-18	RECEIVER
AKG74SU-20	REAR TRUNNION BLOCK
AKG74SU-21	BOLT CARRIER
AKG74SU-22	BOLT STOP
AKG74SU-25	IMPACT BLOCK BASE
AKG74SU-26	IMPACT HAMMER
AKG74SU-27	IMPACT HAMMER LOCK
AKG74SU-28	AUTOMATIC SEAR
AKG74SU-29	TRIGGER
AKG74SU-30	SEAR

Parts #	Description
AKG74SU-31	HAMMER
AKG74SU-32	SELECTOR BASE
AKG74SU-33	STOCK LOCKING LATCH HAMPER
AKG74SU-34	STOCK LATCH RELEASE BUTTON
AKG74SU-35	RECOIL SPRING GUIDE BASE
AKG74SU-36	RECOIL SPRING GUIDE STOP
AKG74SU-40	CYLINDER PLUG
AKG74SU-49	MAGAZINE CATCH
AKG74SU-50	OPTICS SIDE RAIL
AKG74SU-53	TRIGGER GUARD
AKG74SU-56	RECOIL SPRING GUIDE
AKG74SU-57	SELECTOR LEVER
AKG74SU-58	IMPACT HAMMER STOP
AKG74SU-59	IMPACT HAMMER STOP SPRING
AKG74SU-65	SELECTOR LEVER PIN
AKG74SU-66	ACTION PINS
AKG74SU-67	IMPACT HAMMER SLEEVE
AKG74SU-68	TRIGGER PIN SLEEVE
AKG74SU-69	IMPACT HAMMER LOCK PIN
AKG74SU-70	FRONT LATCH SCREW
AKG74SU-71	TRUNNION SCREWS
AKG74SU-72	GRIP SCREW
AKG74SU-73	STOCK HINGE PIN
AKG74SU-74	OUTER BARREL PIN

Parts #	Description
AKG74SU-75	HOPUP NUB SPACER
AKG74SU-76	FRONT TRUNNION PIN
AKG74SU-77	IMPACT BLOCK RESET SPRING PIN
AKG74SU-78	BOLT CARRIER SET SCREW (SHORT)
AKG74SU-79	RECOIL SPRING GUIDE SET PIN
AKG74SU-80	HAMMER ROLLER PIN
AKG74SU-81	PISTON RETURN SPRING PIN
AKG74SU-82	JET NOZZLE PIN
AKG74SU-84	HAMMER ROLLER
AKG74SU-85	HOPUP BUCKING
AKG74SU-86	PISTON SEAL
AKG74SU-87	RECOIL SPRING
AKG74SU-88	HAMMER SPRING
AKG74SU-89	SEAR SPRING
AKG74SU-90	AUTOMATIC SEAR SPRING
AKG74SU-91	IMPACT HAMMER LOCK SPRING
AKG74SU-92	IMPACT HAMMER SPRING
AKG74SU-93	HAMMER GROUP LOCK SPRING
AKG74SU-94	FRONT LATCH SPRING
AKG74SU-95	STOCK LATCH SPRING
AKG74SU-96	JET NOZZLE SPRING
AKG74SU-97	PISTON RETURN SPRING
AKG74SU-100	MAGAZINE CATCH SPRING
AKG74SU-101	RECOIL BUFFER PAD

AKG-74SU PARTS LIST (CONTINUED)

Parts #	Description	Parts #	Description	Parts #	Description
AKG74SU-102	BOLT STOP SCREWS	AKG74SU-162	UPPER HANDGUARD	AKG74SU-418	FRONT SIGHT POST
AKG74SU-103	TRIGGER SPRING	AKG74SU-163	OUTER BARREL BASE	AKG74SU-419	MUZZLEBRAKE DÉTENTE
AKG74SU-105	SELECTOR BASE PIN	AKG74SU-164	UPPER HANDGUARD RETAINER	AKG74SU-420	MUZZLE BREAK ADAPTER
AKG74SU-106	TRIGGER GUARD SCREW	AKG74SU-165	GAS TUBE BASE	AKG74SU-421	MUZZLEBRAKE DÉTENTE SPRING
AKG74SU-107	LOWER HANDGUARD SPRING SCREW	AKG74SU-166	LOWER HANDGUARD RETAINER	AKG74SU-422	FRONT SIGHT BASE SCREW
AKG74SU-108	OUTER BARREL BASE SCREWS	AKG74SU-167	LOWER HANDGUARD RETAINER LEVER	AKG74SU-423	NOZZLE BRAKE DETENTE SCREW
AKG74SU-111	INNER BARREL BASE PIN	AKG74SU-172	DUST COVER	AKG74SU-424	MUZZLE BREAK ADAPTER HEX SCREW
AKG74SU-112	OUTER BARREL SET SCREW	AKG74SU-173	OUTER BARREL		
AKG74SU-114	REAR TRUNNION HEX SCREW	AKG74SU-174	INNER BARREL		
AKG74SU-115	OPTIC RAIL SCREW	AKG74SU-175	HANDGUARD PLUNGER		
AKG74SU-116	HAND GUARD RETAINER SCREW	AKG74SU-176	GAS TUBE		
AKG74SU-117	CYLINDER PLUG ROLL-PIN	AKG74SU-177	GAS PISTON		
AKG74SU-118	IMPACT HAMMER SPRING PIN	AKG74SU-178	HANDGUARD PLUNGER SPRING		
AKG74SU-119	INNER PISTON PIN	AKG74SU-179	REAR SIGHT BASE		
AKG74SU-120	BOLT BASE PIN	AKG74SU-180	LOWER HANDGUARD		
AKG74SU-121	GAS PISTON PIN	AKG74SU-184	REAR SIGHT		
AKG74SU-122	MAGAZINE CATCH PIN	AKG74SU-185	REAR SIGHT SPRING		
AKG74SU-123	RECOIL BUFFER PIN	AKG74SU-186	LOWER HANDGUARD SPRING		
AKG74SU-124	CYLINDER PLUG O-RING	AKG74SU-188	REAR SIGHT PIN		
AKG74SU-125	CYLINDER PLUG CONICAL O-RING	AKG74SU-189	REAR SIGHT BASE RIVETS		
AKG74SU-126	PISTON O-RING	AKG74SU-400	STOCK		
AKG74SU-127U	REAR SIGHT BASE PIN	AKG74SU-415	FRONT SIGHT BOLT STOP		
AKG74SU-127	BOLT CARRIER SET SCREW (LONG)	AKG74SU-416	MUZZLE BRAKE		
AKG74SU-128	IMPACT HAMMER PIN CLAMP	AKG74SU-417	FRONT SIGHT BASE		

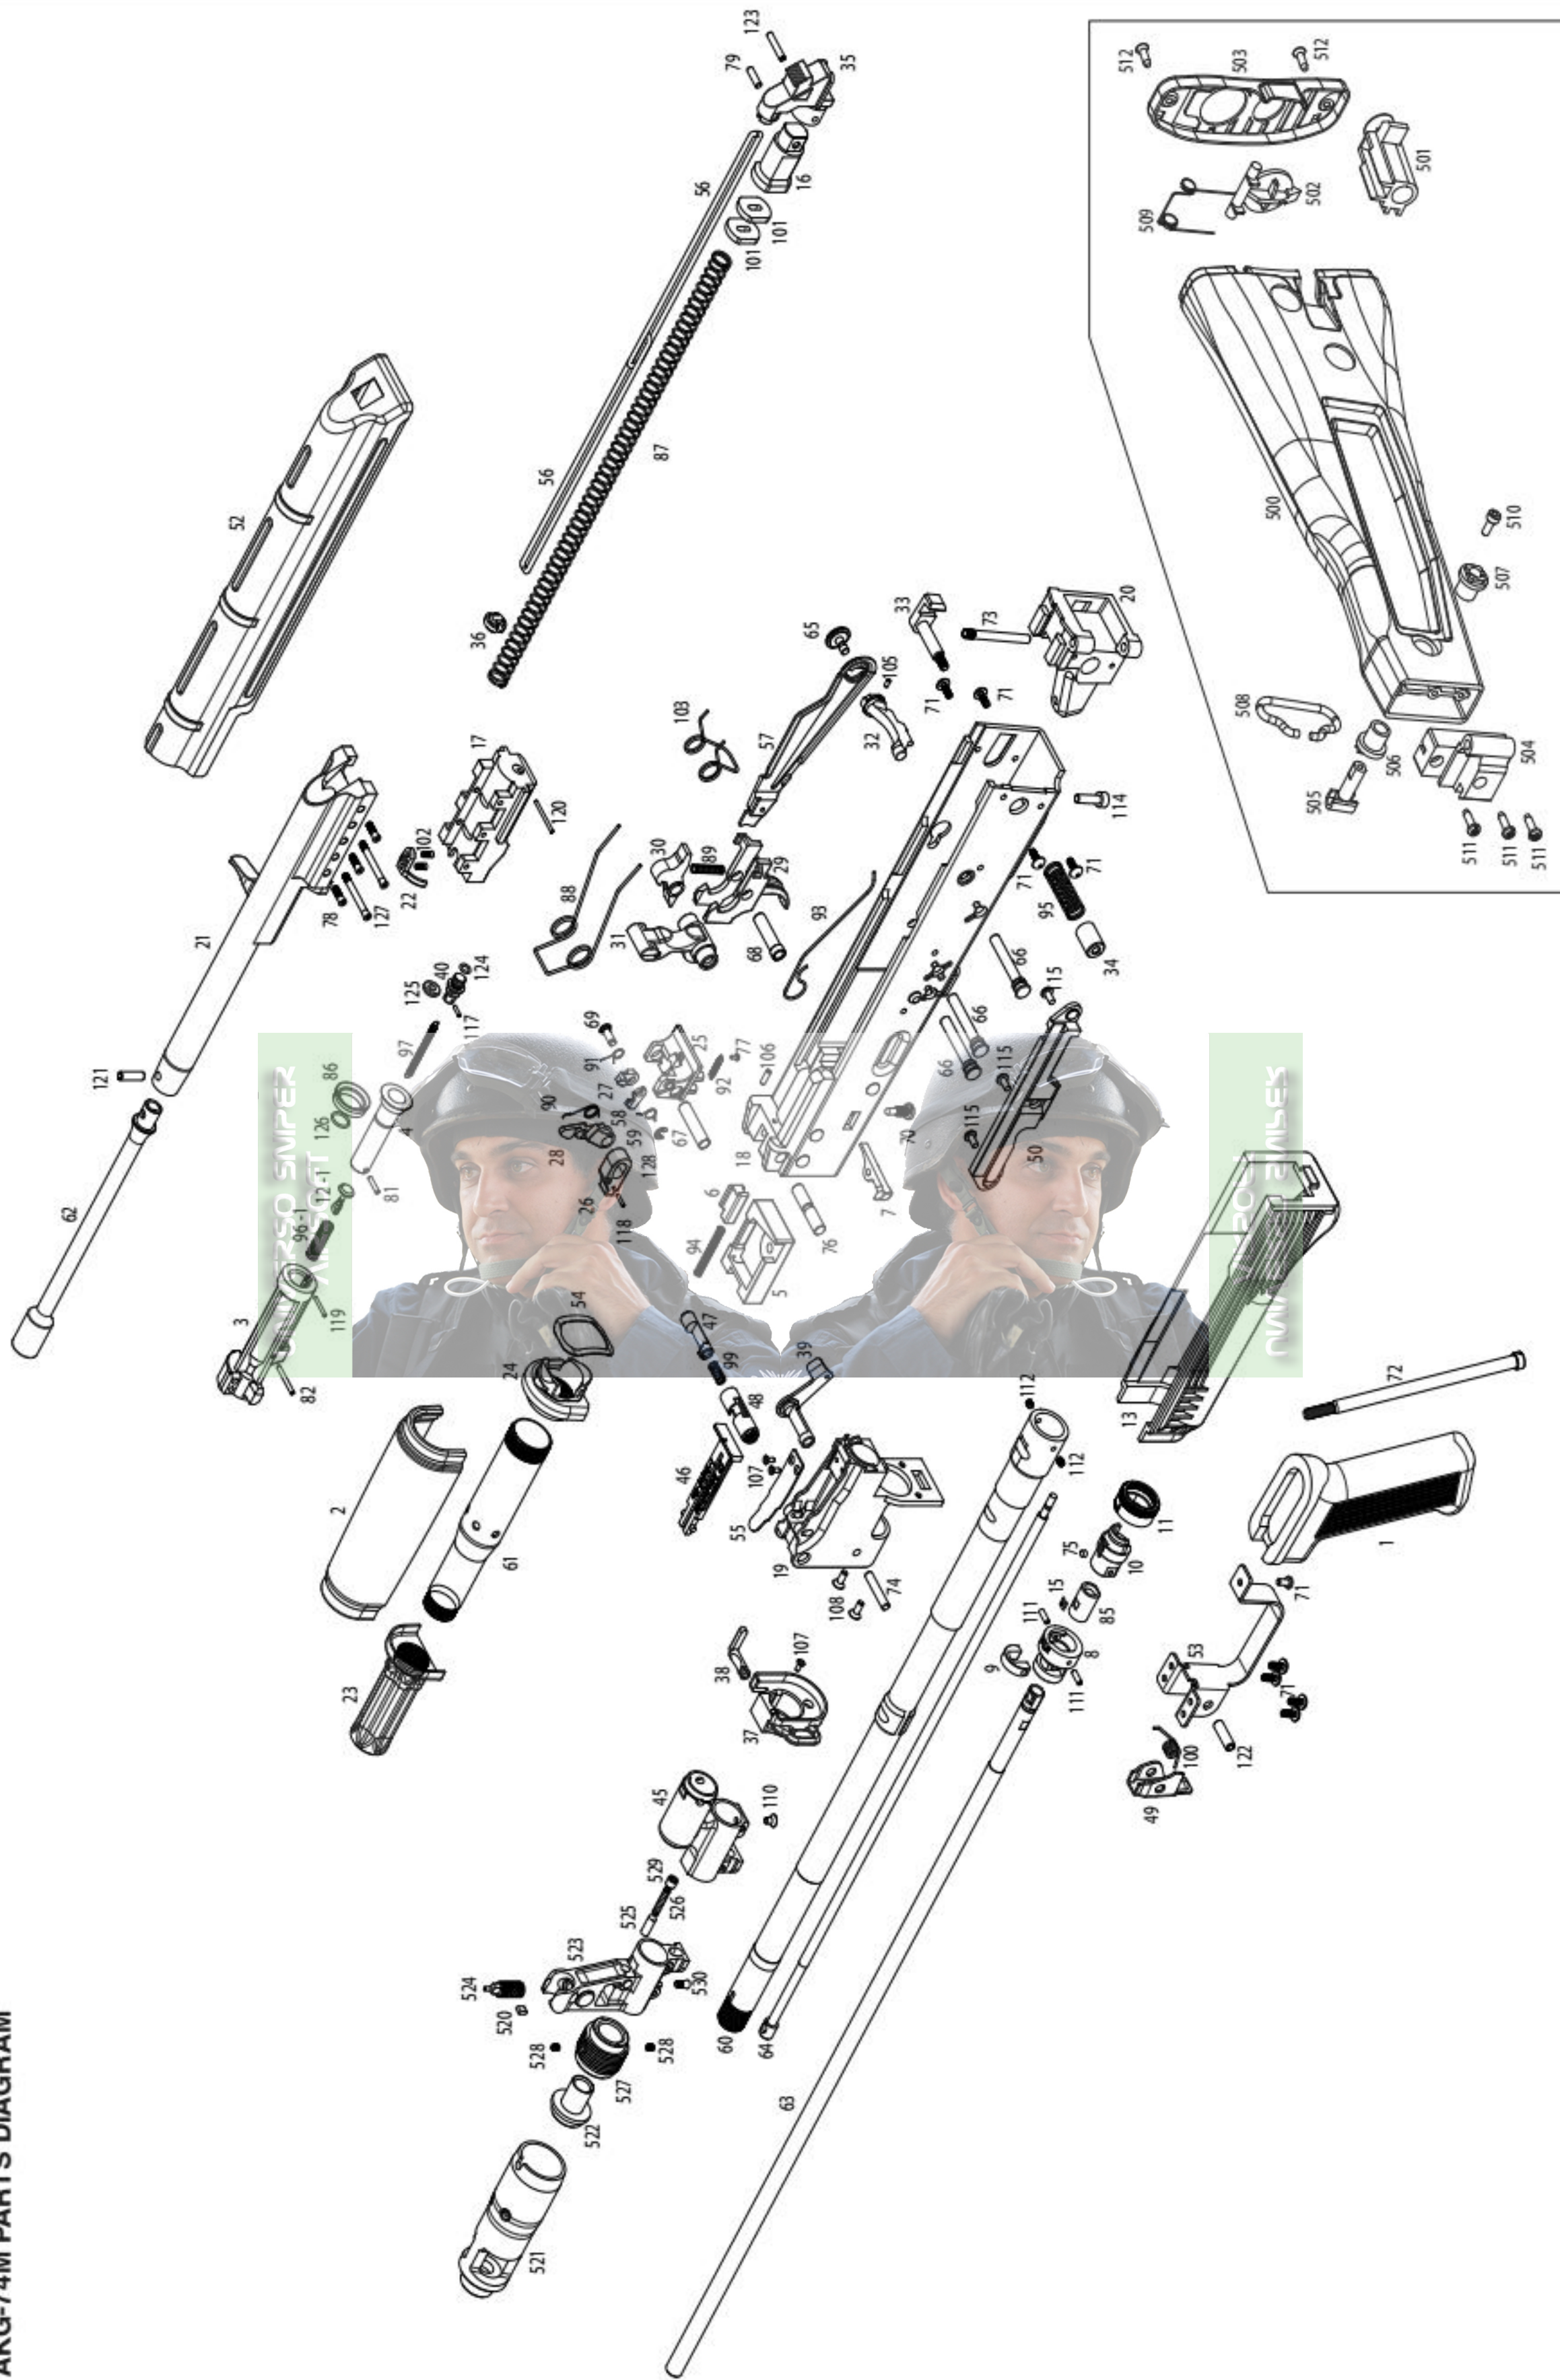


AKG-74M PARTS LIST

Parts #	Description	Parts #	Description	Parts #	Description
AKG74M-1	PISTOL GRIP	AKG74M-26	IMPACT HAMMER	AKG74M-55	REAR SIGHT LEAF SPRING
AKG74M-2	UPPER HAND GUARD	AKG74M-27	IMPACT HAMMER LOCK	AKG74M-56	RECOIL SPRING GUIDE (2X)
AKG74M-3	BOLT	AKG74M-28	INTERRUPTER	AKG74M-57	SELECTOR LEVER
AKG74M-4	INNER PISTON	AKG74M-29	TRIGGER	AKG74M-58	IMPACT HAMMER STOP
AKG74M-5	FRONT LATCH BASE	AKG74M-30	SEAR	AKG74M-59	IMPACT HAMMER STOP SPRING
AKG74M-6	FRONT LATCH DÉTENTE	AKG74M-31	HAMMER	AKG74M-60	OUTER BARREL
AKG74M-7	FRONT LATCH	AKG74M-32	SELECTOR BASE	AKG74M-61	GAS TUBE
AKG74M-8	INNER BARREL BASE	AKG74M-33	STOCK LOCKING LATCH	AKG74M-62	GAS PISTON
AKG74M-9	INNER BARREL CLAMP	AKG74M-34	STOCK LATCH RELEASE BUTTON	AKG74M-63	INNER BARREL
AKG74M-10	HOP-UP CYLINDER	AKG74M-35	RECOIL SPRING GUIDE BASE	AKG74M-64	CLEANING ROD
AKG74M-11	HOP-UP ADJUSTMENT DIAL	AKG74M-36	RECOIL SPRING GUIDE STOP	AKG74M-65	SELECTOR LEVER PIN
AKG74M-12	JET NOZZLE	AKG74M-37	LOWER HAND GUARD RETAINER	AKG74M-66	FIRE CONTROL GROUP PINS
AKG74M-13	LOWER HAND GUARD	AKG74M-38	HAND GUARD RETAINER LEVER	AKG74M-67	IMPACT HAMMER SLEEVE
AKG74M-15	HOP-UP NUB	AKG74M-39	HAND GUARD RELEASE LEVER	AKG74M-68	TRIGGER SLEEVE
AKG74M-16	RECOIL BUFFER	AKG74M-40	CYLINDER PLUG	AKG74M-69	IMPACT HAMMER RESET PIN
AKG74M-17	BOLT BASE	AKG74M-45	GAS BLOCK	AKG74M-70	FRONT LATCH SCREW
AKG74M-18	RECIEVER	AKG74M-46	REAR SIGHT LEAF	AKG74M-71	TRUNNION SCREWS
AKG74M-19	REAR SIGHT BASE	AKG74M-47	REAR SIGHT ADJUSTMENT BUTTON	AKG74M-72	GRIP SCREW
AKG74M-20	REAR TRUNNION	AKG74M-48	REAR SIGHT SLIDER	AKG74M-73	STOCK HINGE PIN
AKG74M-21	BOLT CARRIER	AKG74M-49	MAGAZINE CATCH	AKG74M-74	REAR SIGHT BLOCK PIN
AKG74M-22	PISTON STOP	AKG74M-50	OPTICS SIDE RAIL	AKG74M-75	HOP-UP NUB SPACER
AKG74M-23	UPPER HAND GUARD RETAINER	AKG74M-52	DUST COVER	AKG74M-76	FRONT TRUNNION PIN
AKG74M-24	HAND GUARD STOP	AKG74M-53	TRIGGER GUARD	AKG74M-77	IMPACT BLOCK RESET SPRING PIN
AKG74M-25	IMPACT BLOCK BASE	AKG74M-54	HAND GUARD SPRING	AKG74M-78	SHORT BOLT CARRIER SCREW

AKG-74M PARTS LIST (CONTINUED)

Parts #	Description	Parts #	Description	Parts #	Description
AKG74M-79	RECOIL SPRING GUIDE SET PIN	AKG74M-108	REAR SIGHT BASE SCREW	AKG74M-506	STOCK SLING SWIVEL CAP (RIGHT)
AKG74M-81	PISTON RETURN SPRING PIN	AKG74M-110	GAS BLOCK SCREW	AKG74M-507	STOCK SLING SWIVEL CAP (LEFT)
AKG74M-82	JET NOZZLE PIN	AKG74M-111	INNER BARREL BASE SCREWS	AKG74M-508	STOCK SLING LOOP
AKG74M-85	HOP-UP BUCKING	AKG74M-112	CHAMBER SCREW	AKG74M-509	STOCK TRAP DOOR SPRING
AKG74M-86	PISTON SEAL	AKG74M-114	REAR TRUNNION BASE SCREW	AKG74M-510	STOCK SLING SWIVEL SCREW
AKG74M-87	RECOIL SPRING	AKG74M-115	SIDE RAIL SCREWS	AKG74M-511	STOCK HINGE SCREW
AKG74M-88	HAMMER SPRING	AKG74M-117	GAS PLUG PIN	AKG74M-512	STOCK BUTT PLATE SCREW
AKG74M-89	SEAR SPRING	AKG74M-118	IMPACT HAMMER RESET PIN	AKG74M-520	FRONT SIGHT POST SPACER
AKG74M-90	INTERRUPTER SPRING	AKG74M-119	INNER PISTON PIN	AKG74M-521	MUZZLE BRAKE
AKG74M-91	IMPACT HAMMER LOCK SPRING	AKG74M-120	CYLINDER PLUG PIN	AKG74M-522	MUZZLE BRAKE SPACER
AKG74M-92	IMPACT HAMMER RESET SPRING	AKG74M-121	BOLT CARRIER PIN	AKG74M-523	FRONT SIGHT
AKG74M-93	HAMMER GROUP LOCK SPRING	AKG74M-122	MAGAZINE CATCH PIN	AKG74M-524	FRONT SIGHT POST
AKG74M-94	FRONT LATCH SPRING	AKG74M-123	RECOIL BUFFER PIN	AKG74M-525	MUZZLE BRAKE DETENTE
AKG74M-95	STOCK LATCH SPRING	AKG74M-124	CYLINDER PLUG SEAL	AKG74M-526	MUZZLE BRAKE DETENTE SPRING
AKG74M-96	JET NOZZLE SPRING	AKG74M-125	CYLINDER PLUG SPACER	AKG74M-527	THREADED MUZZLE BREAK ADAPTER
AKG74M-97	PISTON RETURN SPRING	AKG74M-126	INNER PISTON SEAL	AKG74M-528	BARREL NUT SCREW
AKG74M-99	REAR SIGHT SLIDER SPRING	AKG74M-127	LONG BOLT CARRIER SCREW	AKG74M-529	MUZZLE BRAKE DETENTE SCREW
AKG74M-100	MAGAZINE CATCH SPRING	AKG74M-128	IMPACT HAMMER PIN CLAMP	AKG74M-530	FRONT SIGHT BASE SCREW
AKG74M-101	RECOIL BUFFER PAD	AKG74M-500	POLYMER STOCK		
AKG74M-102	PISTON STOP SCREW	AKG74M-501	STOCK RELEASE BUTTON		
AKG74M-103	TRIGGER SPRING	AKG74M-502	STOCK TRAP DOOR		
AKG74M-105	SELECTOR LEVER PIN	AKG74M-503	STOCK BUTT PLATE		
AKG74M-106	FRONT TRUNNION PIN SCREW	AKG74M-504	STOCK HINGE		
AKG74M-107	REAR SIGHT LEAF SCREW	AKG74M-505	STOCK SLING SWIVEL BASE		

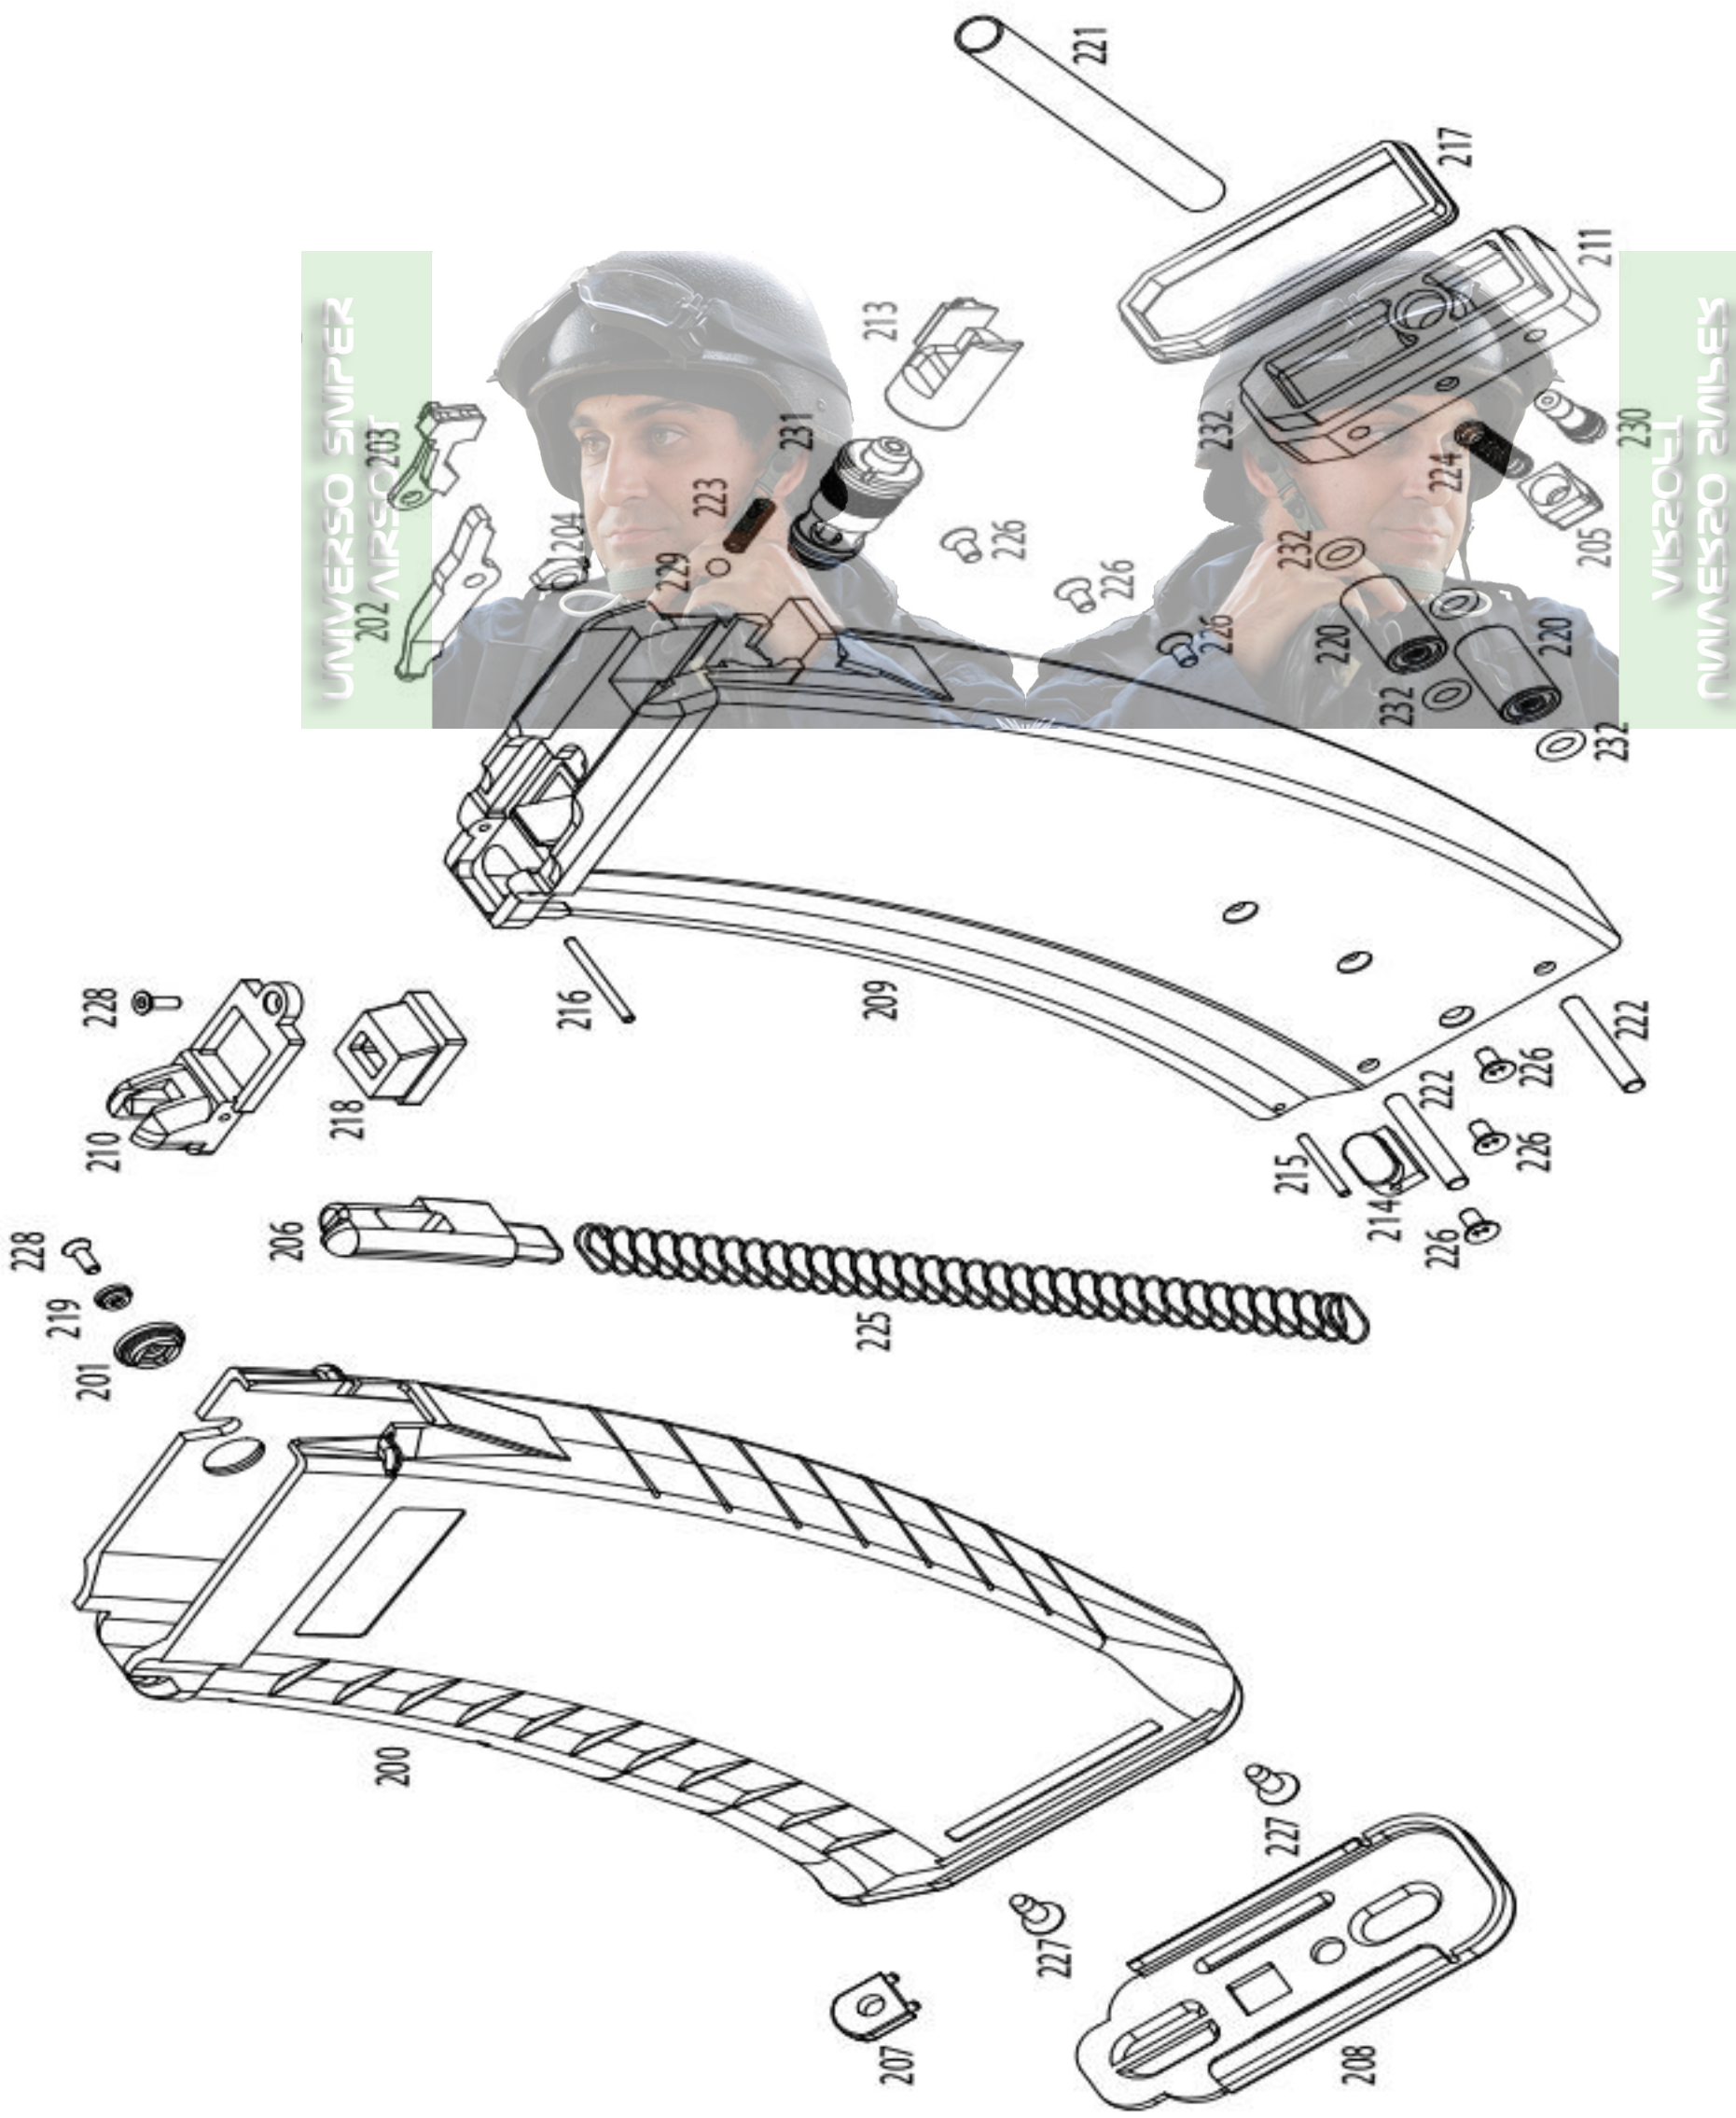

AKG SERIES MAGAZINE PARTS LIST

Parts #	Description	Parts #	Description
AKG74M-200	MAGAZINE SLEEVE BODY	AKG74M-217	MAGAZINE BASE SEAL
AKG74M-201	MAGAZINE STOP DIAL	AKG74M-218	MAGAZINE NOZZLE SEAL
AKG74M-202	MAGAZINE STOP LEVER	AKG74M-219	MAGAZINE STOP DIAL SPACER
AKG74M-203	MAGAZINE STOP INDICATOR	AKG74M-220	MAGAZINE INNER POST
AKG74M-204	MAGAZINE STOP SELECTOR	AKG74M-221	MAGAZINE GAS EXPANSION TUBE
AKG74M-205	MAGAZINE BASE PLATE STOP	AKG74M-222	MAGAZINE BASE PINS
AKG74M-206	MAGAZINE FOLLOWER	AKG74M-223	MAGAZINE STOP SPRING
AKG74M-207	MAGAZINE STOP KEY	AKG74M-224	MAGAZINE BASE PLATE STOP SPRING
AKG74M-208	MAGAZINE BASE PLATE	AKG74M-225	MAGAZINE FOLLOWER SPRING
AKG74M-209	MAGAZINE BODY	AKG74M-226	MAGAZINE INNER POST SCREWS
AKG74M-210	MAGAZINE FEED LIP	AKG74M-227	MAGAZINE BASE SCREWS
AKG74M-211	MAGAZINE BASE	AKG74M-228	MAGAZINE FEED LIP SCREW
AKG74M-213	MAGAZINE RELEASE VALVE BLOCK	AKG74M-229	MAGAZINE STOP DIAL DÉTENTE
AKG74M-214	MAGAZINE FOLLOWER STOP	AKG74M-230	MAGAZINE CHARGING VALVE
AKG74M-215	MAGAZINE FOLLOWER STOP PIN	AKG74M-231	MAGAZINE RELEASE VALVE
AKG74M-216	MAGAZINE FEED LIP PIN	AKG74M-232	MAGAZINE INNER POST SEAL



VISZOL
NIVAKESZO ZIMBEX



KWA Performance Industries, Inc.

18571 E. Gale Ave

City of Industry, CA 91748

T: 1.626.581.1777 • F: 1.626.581.0777

WWW.KWAUSA.COM