

KWA®

OPERATOR'S MANUAL



KZ75

TABLE OF CONTENTS

Use of this manual.....	2
Safety Guidelines	2-3
Specifications	4
Package Contents	4
Charging Gas	5
Loading BBs	6
Loading Magazine	7
Safety	7
Loading Chamber	7
Shooting	8
Shooting Modes.....	8
Open Slide	9
After Shooting.....	9
Hop-Up System.....	10
Hop-Up Adjustment Point	11
Disassembly	12
Assembly.....	12
Troubleshooting	13
General Maintenance	14
Operating Under Unusual Conditions.....	14
Diagrams and Parts Lists	15-18



USE OF THIS MANUAL

Before operating the Airsoft gun, read this manual in its entirety. Important safety topics and tips are discussed throughout all of the chapters. It's important that the operator know the principles of gun handling safety and operation prior to firing the Airsoft gun.

SAFETY GUIDELINES



WARNING! Failure to follow safety guidelines may result in serious injury.

Safety Distance

The effective shooting range is approximately 75 feet. BBs fired from this Airsoft gun may travel further than intended. Make certain that you have an adequate backstop.

Eye Protection

Eye protection should be worn at all times when both shooting and maintaining your Airsoft gun. Protect your eyes from silicone spray and BBs under spring pressure while performing maintenance on your Airsoft gun.

Assume Every Gun is Always Loaded

Until you are certain the chamber is empty, treat every gun as if it were loaded. Do not assume the chamber is empty based on your memory or someone else's words. Always remove the magazine and visually check to confirm the chamber is empty.

Beware of Barrel Obstructions

Ensure the Airsoft gun barrel is free of obstructions before you fire the gun. Even the smallest obstruction such as dirt, dust or a stuck cleaning patch can cause a jam, misfire or malfunction.

Muzzle Control

Always keep the muzzle of the gun pointed in a safe direction. Never point the muzzle at a person or object that you do not intend to shoot.

Keep Your Safety On

Keep the gun's safety on until your sights are aligned on your target and you are ready to fire.

Keep Your Finger Off The Trigger

Keep your finger off the trigger and out of the trigger guard until your sights are aligned on your target and you are ready to fire.



WARNING! Airsoft BBs can be a choking hazard. Keep them away from children.

SAFETY GUIDELINES

Identify Your Target and Backstop

Before you pull the trigger, make certain of your target and what is beyond it. The Airsoft gun should never be fired at surfaces such as rocks, glass, water, or other hard surfaces where BBs are likely to ricochet in unpredictable directions.



WARNING! Adult supervision is required for any person under the age of 18.

Failure To Fire

If the Airsoft gun fails to fire, misfires, or malfunctions, do not look into the gun barrel. BBs can become lodged into the chamber, and serious eye injury may occur.

Maintain Your Gun Properly

Performing proper maintenance, as outlined in this manual, ensures that your Airsoft gun will be safe to shoot and will perform to its designed specifications for many years. Alterations, modifications or adjustments may damage your Airsoft gun, make it unsafe to shoot, and will void all warranty claims.

Store Your Gun Safely

Always store the Airsoft gun in a safe place, and out of the reach of children. Always transport the Airsoft gun in a carrying case. Never display the Airsoft gun in a public place. Keep the safety engaged, and remove the magazine before storing the Airsoft gun.

NOTE: IT IS YOUR RESPONSIBILITY TO TAKE EVERY REASONABLE PRECAUTION TO ENSURE THE SAFE STORAGE AND TRANSPORTATION OF YOUR AIRSOFT GUN.

Orange Tip

The orange tip on Airsoft guns helps Law Enforcement distinguish between the replica guns from their real firearm counterparts. Altering the coloration or markings required by state or Federal law so as to make the product look more like a firearm is dangerous and may be a crime. Operator assumes all risks and responsibility when doing so.

Hazards of Being Mistaken for a Real Firearm

Airsoft guns have been mistaken by Police and Law Enforcement as real firearms. A confrontation with law enforcement while carrying an Airsoft gun can result in serious injury or even death. It is strongly advised to operate the Airsoft gun at a safe and legal location. In the event that you are approached by Law Enforcement personnel, you must comply with their instructions immediately to avoid an incident.

Alcohol, Medications, and Drugs

Do not handle or operate your Airsoft gun while under the influence of alcohol, medication or drugs.

Your Responsibility

Your Airsoft gun is well-engineered and manufactured to the highest standards. It was carefully inspected before it was packaged and shipped from our factory. Its safe use depends on you alone. You are the ultimate safety device. Like many other devices, your Airsoft gun is safe unless handled in an irresponsible or uneducated manner.

SPECIFICATIONS

- Overall Length = 21 cm [8.27"]
- Overall Height = 14 cm [5.51"]
- Inner Barrel Length = 105 mm
- Inner Barrel Diameter = 6.05 mm
- Weight = 0.94 kg [2.07 lbs]
- Caliber = 6 mm
- Magazine Capacity = 22 rounds
- Velocity = 104-107 MPS [340-350 FPS]
- Energy Output with 0.20g BB = 1.07 Joules
- Gas System = NS2
- Propellant = Green Gas

Special Features:

- Realistic construction and field stripping
- Full metal alloy construction
- Functional safety lever
- Adjustable hop-up

*Individual test results may vary depending on brand of BBs, ambient temperature, and chronograph used.

PACKAGE CONTENTS

- 1 KZ75 Airsoft Gun
- 1 Bottle of Silicone Oil
- 1 Magazine
- 1 Sample Bag of Airsoft BBs
- 1 Hop-Up Adjustment Tool
- 1 Operator's Manual



CHARGING GAS


1. Release the magazine by pressing the magazine catch button.
2. Push the gas canister nozzle into the charging valve. (Make sure both the canister and magazine are inverted and in the vertical position when charging.)
3. Charge the magazine until gas overflows from the charging valve.



WARNING: Avoid dropping the magazine. Sudden impact with a hard surface may cause damage to the magazine.

Note: It is normal to have minor leaking from the charging valve during charging due to high pressure built up inside the magazine. It is recommended to keep the gas release valve slightly oiled. Room temperature is the ideal temperature for shooting. You may experience a delayed action if the surrounding temperature drops below 68° F.

Note: Do not expose the magazine to direct sunlight or incinerate the magazine, as this may cause the magazine to burst. It is strongly recommended to empty the gas from the magazine after shooting. Be certain that the gas does not make contact with eyes or skin while being released, as any contact will cause cold burns.

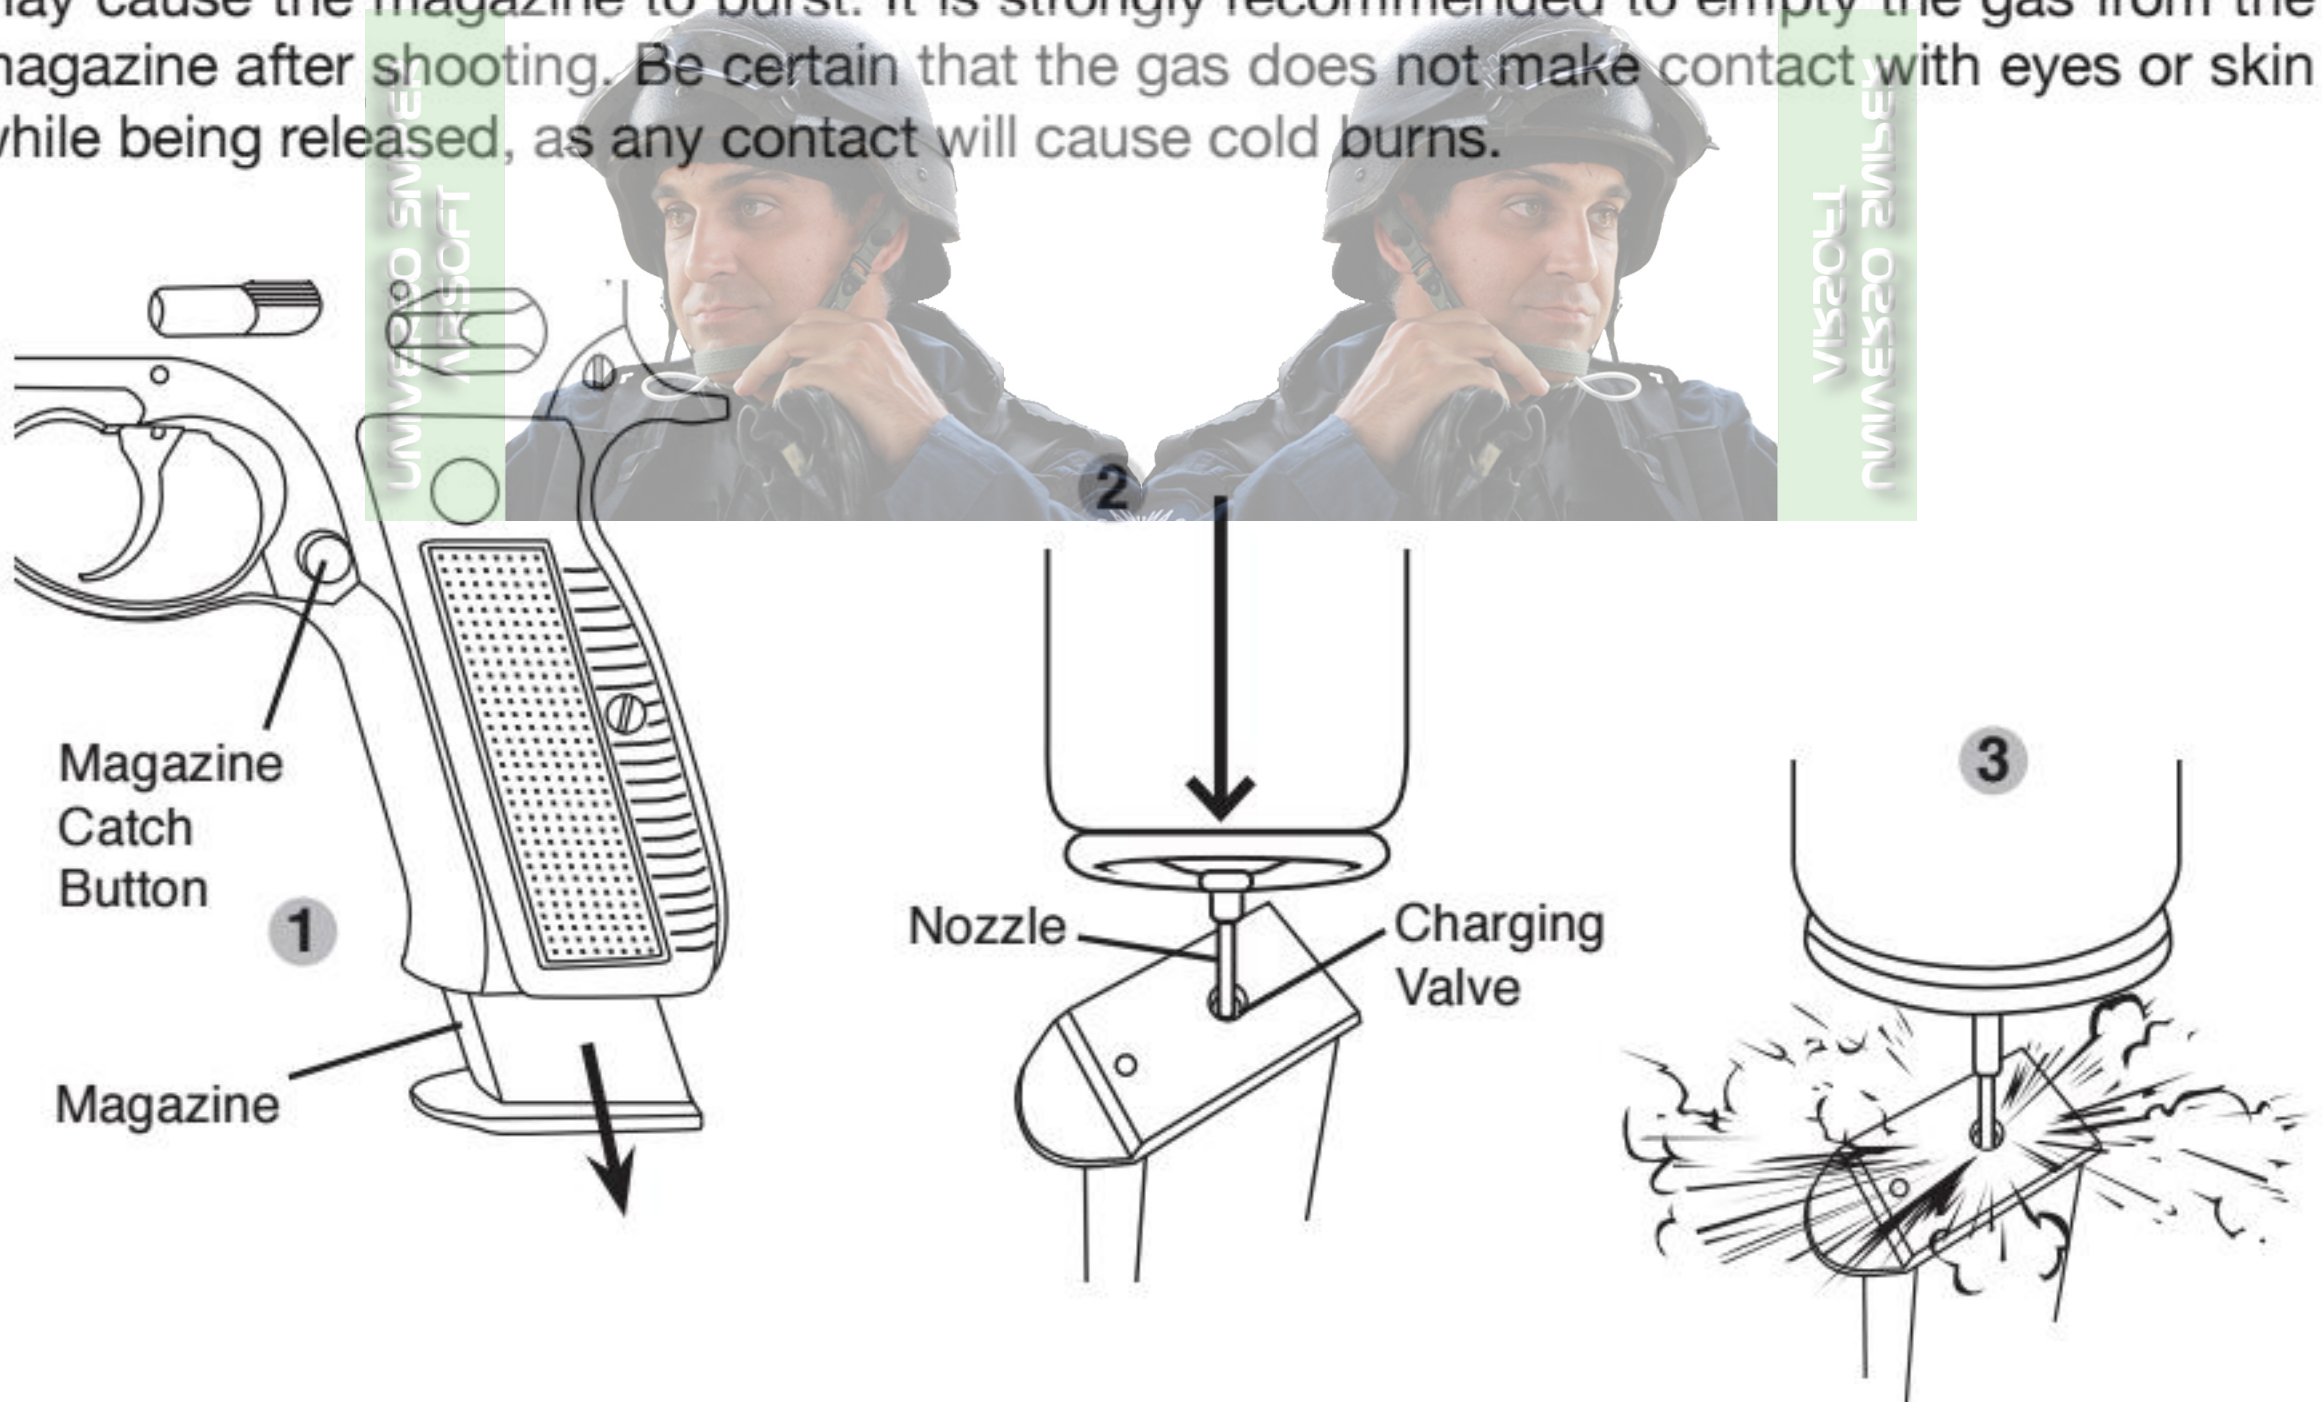

Green Gas safety tips:

- Check the canister for any cracks or leaks before using.
- Do not expose the canister to temperature over 104° F.
- Do not leave the canister directly over fire.
- Do not heat the canister.
- Keep the canister away from direct sunlight.
- Do not leave the canister in any type of vehicle.

LOADING BBs


1. Pull the magazine follower down until it locks.
2. Insert BBs into the magazine lip.
3. Make sure to have a 3mm clearance between BBs and the top lip of the magazine.
4. Push the magazine follower lock to release.



WARNING: Always use high quality 6mm BBs, weighing 0.2g or heavier. For best result use 0.25g KWA Perfect BBs. Never use recycled or low grade BBs to prevent damage to your gun.




WARNING: Do not release the magazine follower when the magazine is empty. Doing so will damage the magazine and magazine follower.

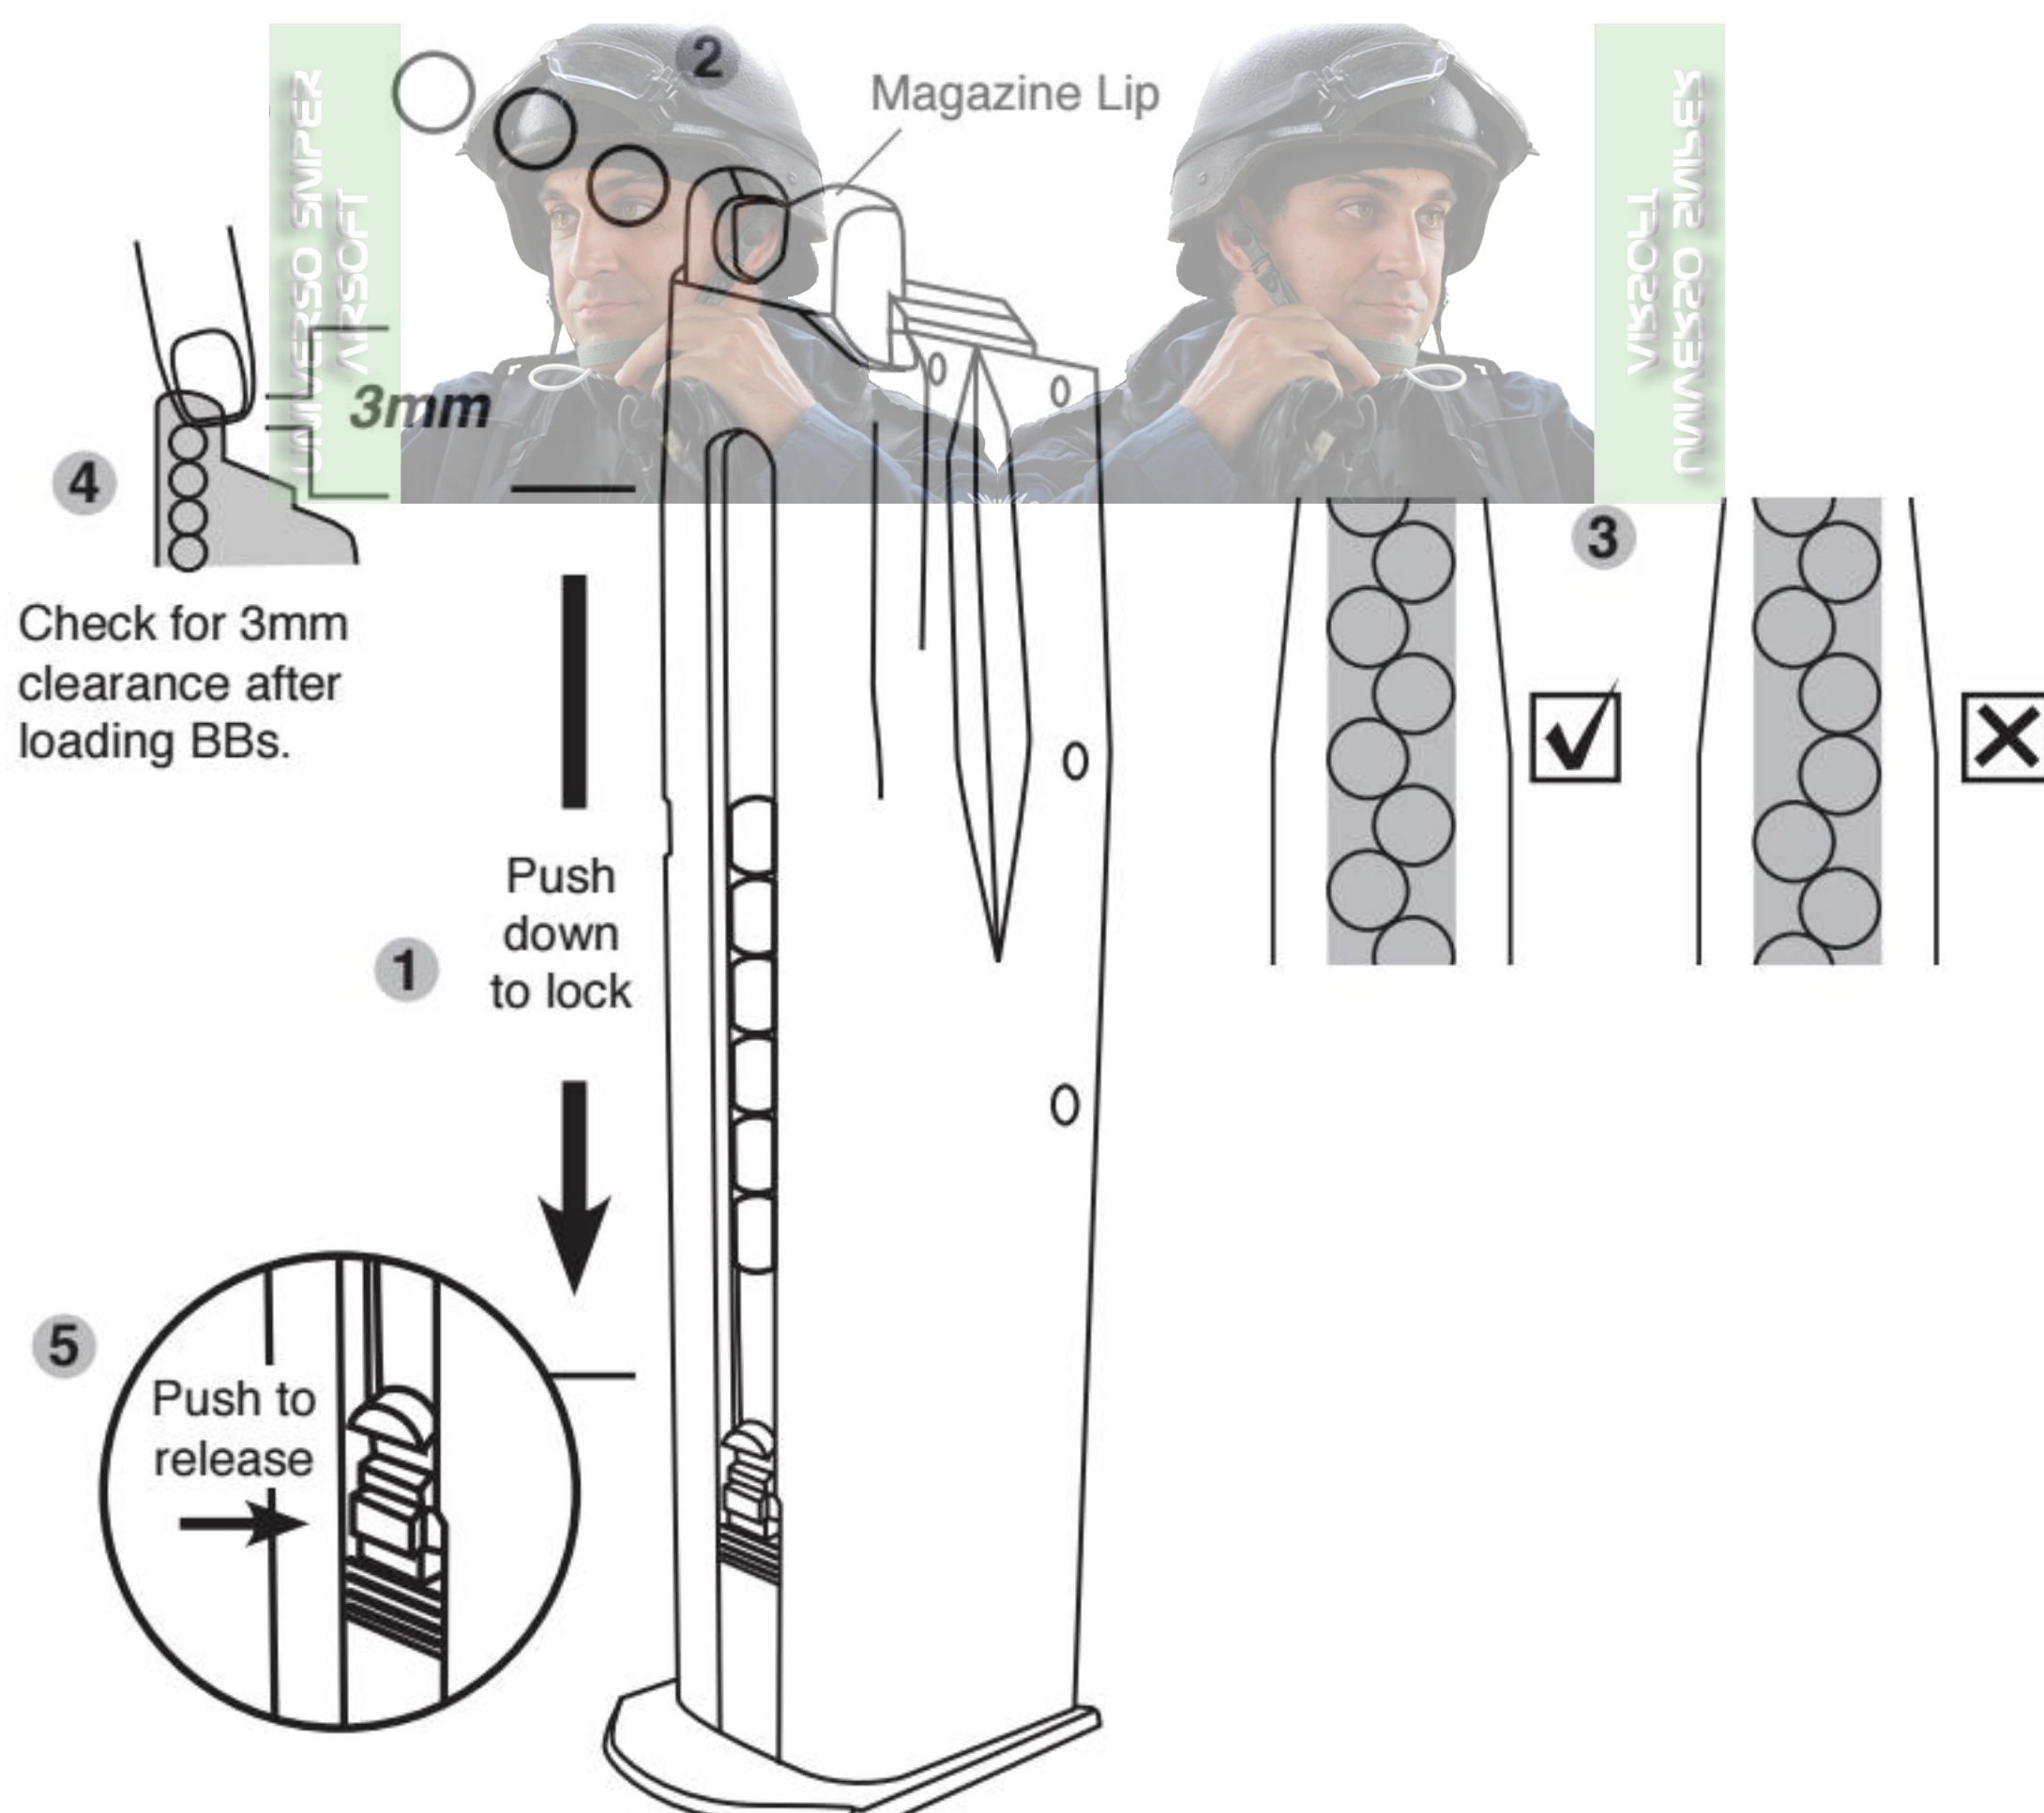

LOADING MAGAZINE


1. Place the magazine back into the magazine well.
2. Push the magazine up until it clicks into a locked position.
3. Pull the magazine down to assure that it has been locked in place.

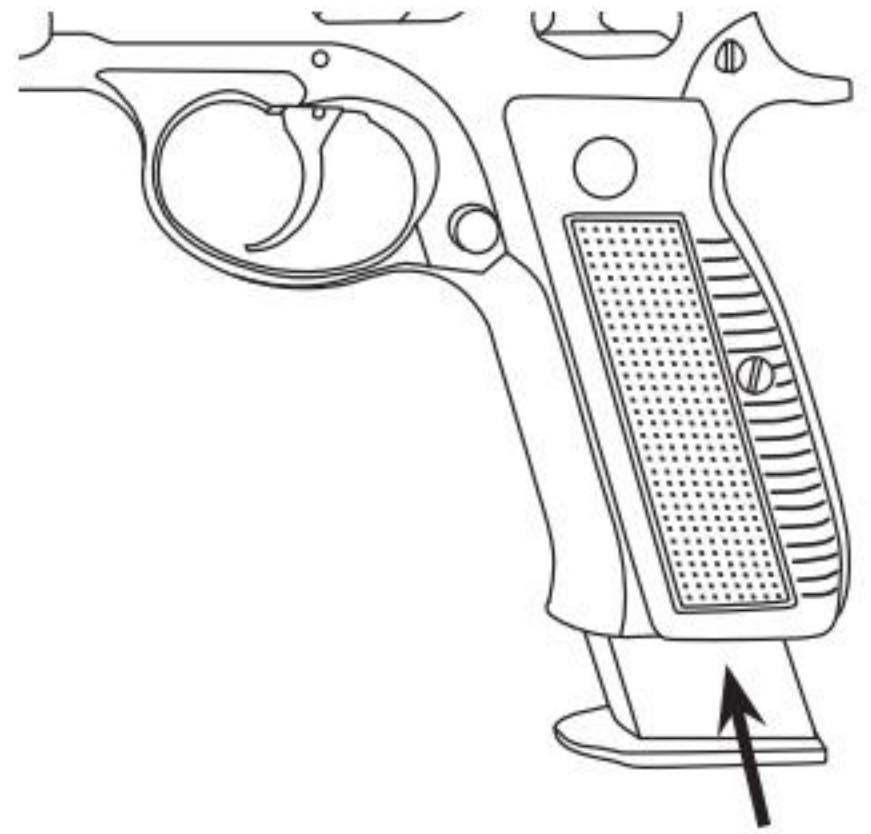

SAFETY


To engage the Safety, push the safety lever upward. The gun is not ready to fire.
(UP = ON = NOT READY TO FIRE)

To disengage the Safety, push the safety lever downward. The gun is ready to fire.
(DOWN = OFF = READY TO FIRE)

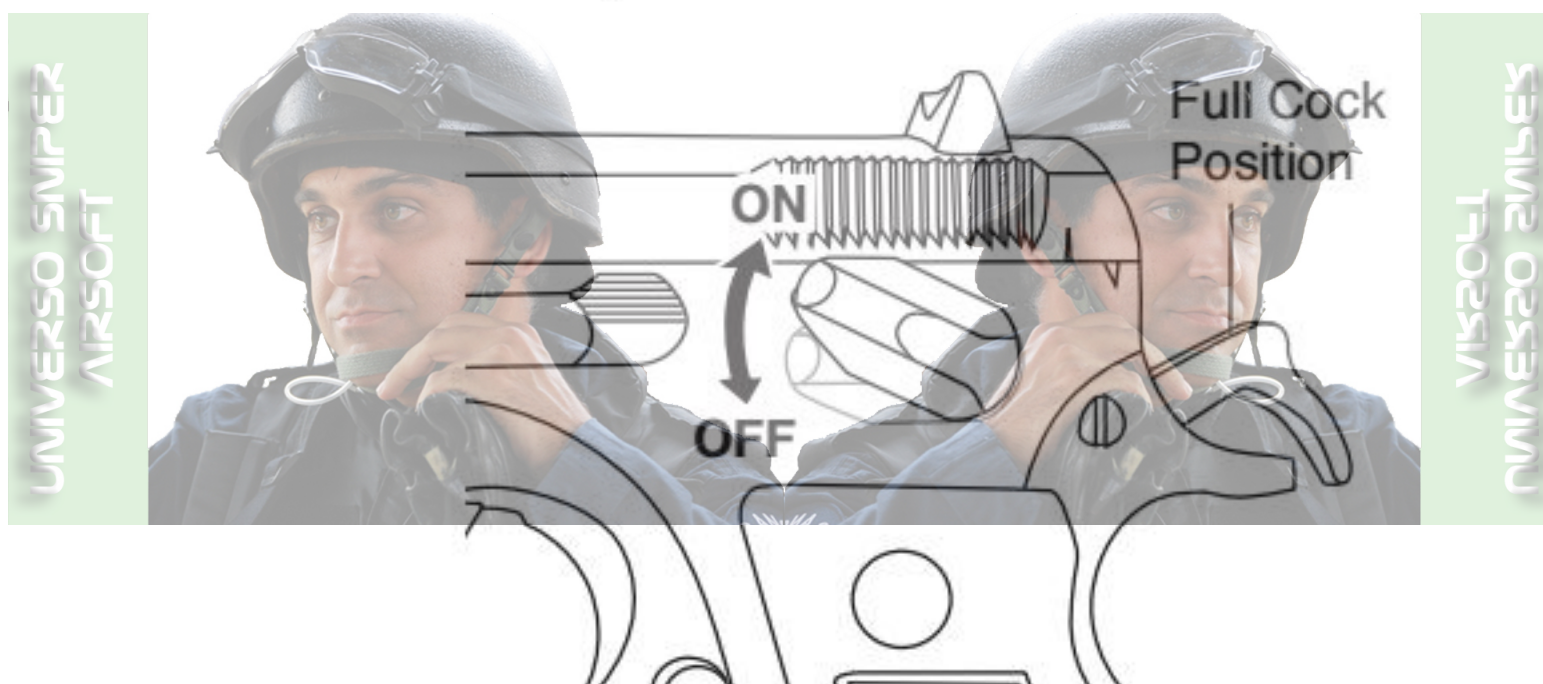


LOADING CHAMBER

Pull the slide to the rear-most position and release the slide. This will automatically load the BBs into the chamber. The hammer will be in a cocked position. Make sure not to skip this procedure. Skipping this step will cause a misfire on the first pull of the trigger. The slide will stay open when the last BB is fired.

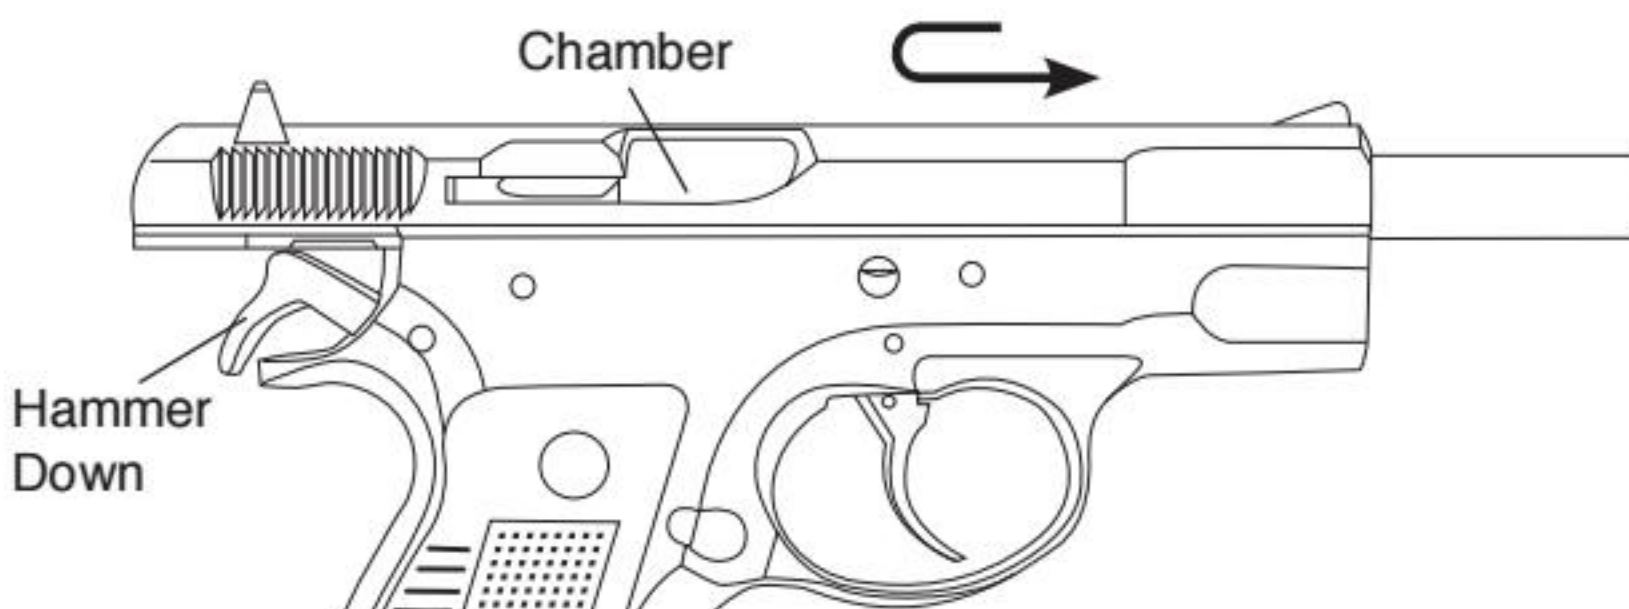

SHOOTING

1. Make sure the gun is cocked.
2. Grasp the Airsoft gun in your hand firmly. A two-hand hold with one hand wrapped around the other will help control the Airsoft gun.
3. Release safety and squeeze the trigger. The blow back action will load the following BBs automatically as the slide cycles back and forth.

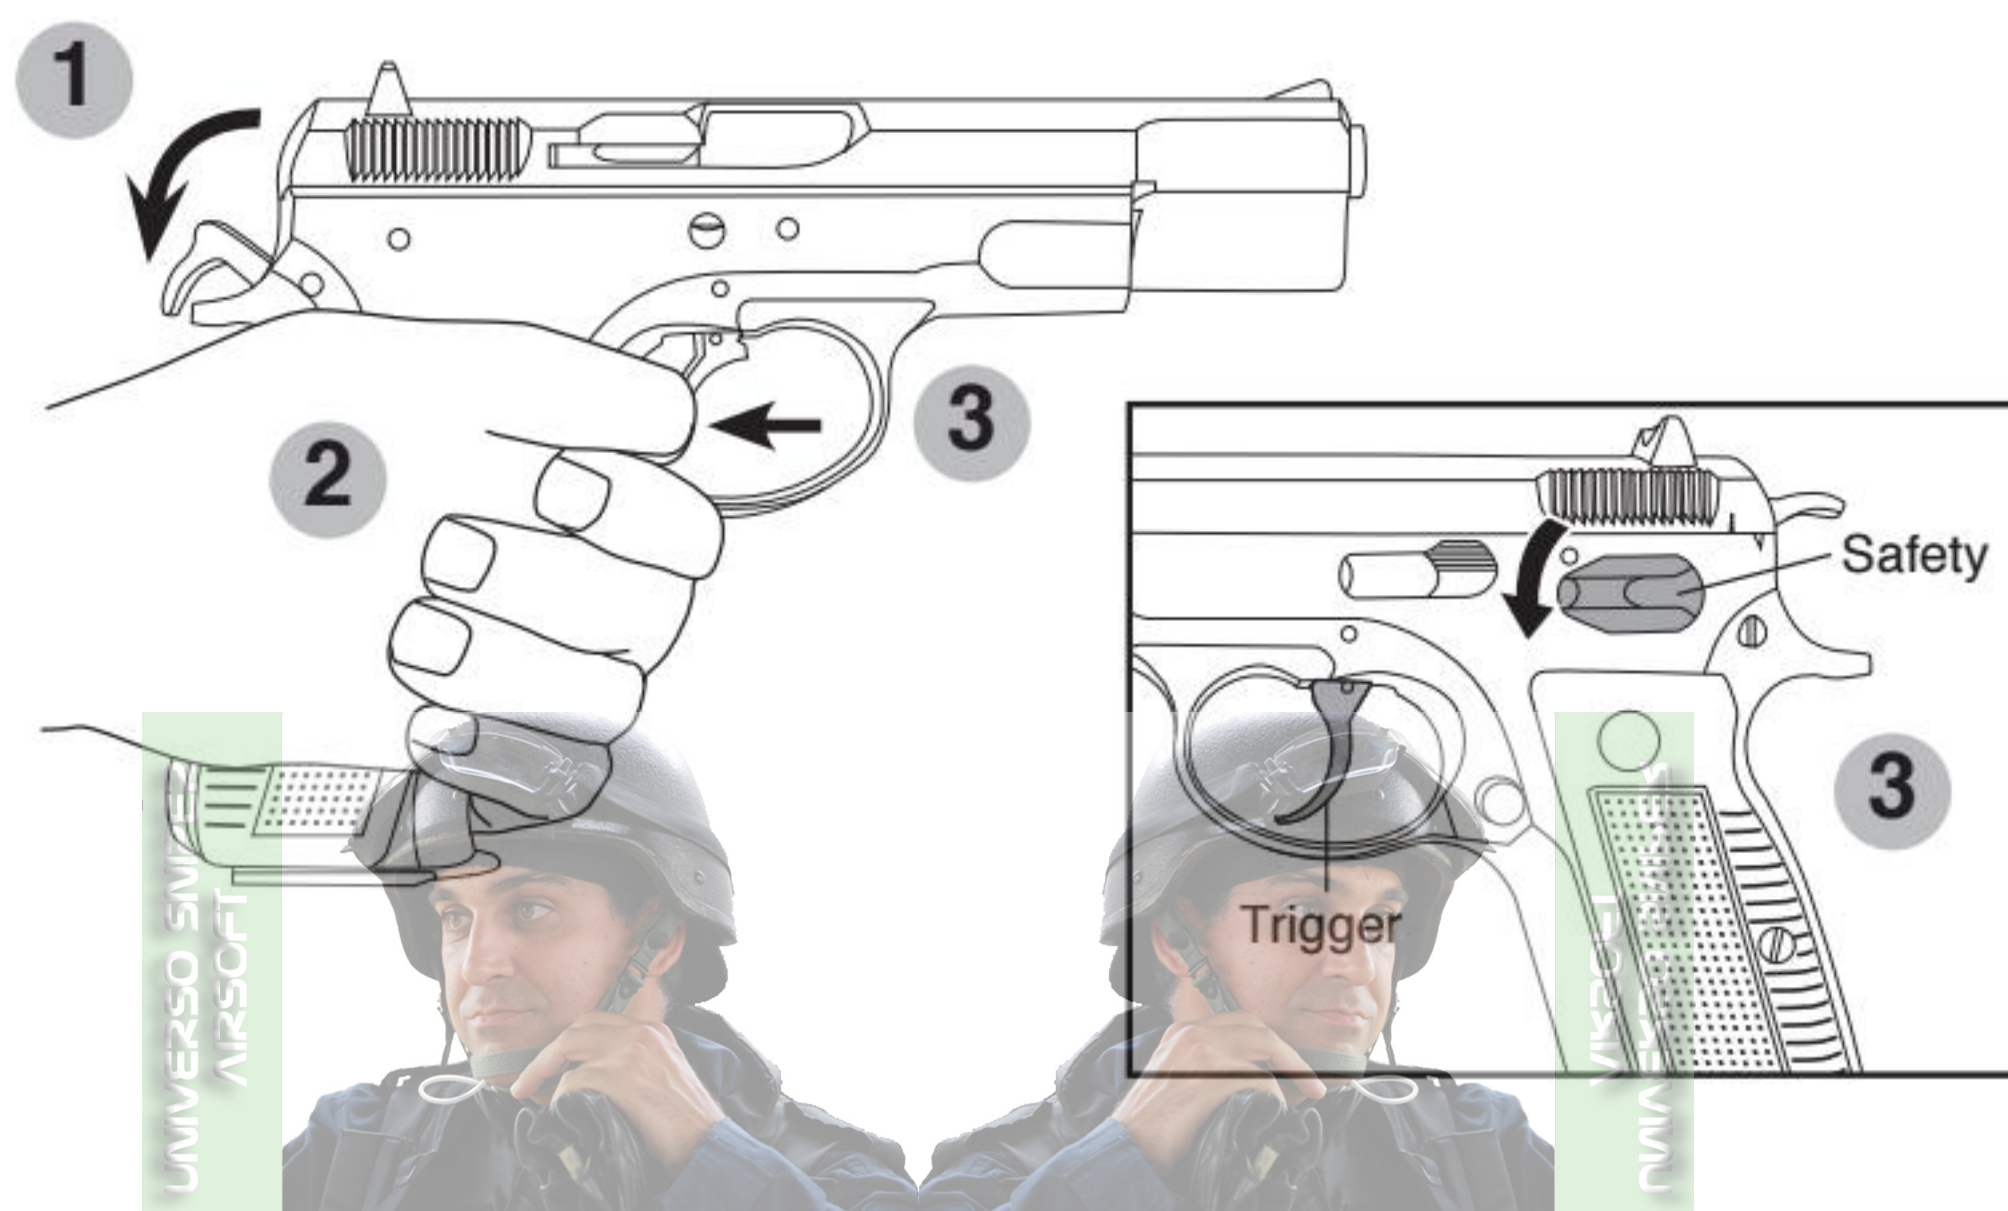

WARNING: Never shoot the gun in a horizontal or upside-down position.




WARNING: Do not fire the pistol without a magazine inserted. Doing so may damage the impact block and result in the loss of the impact pin.

OPEN SLIDE

The slide will remain open after the last BB has been fired and ejected. Remove the empty magazine and replace it with a loaded magazine, then release the slide stop. The first BB will be automatically loaded into the chamber.

Note: It is important to treat your gun as if it were loaded even when the slide is open.

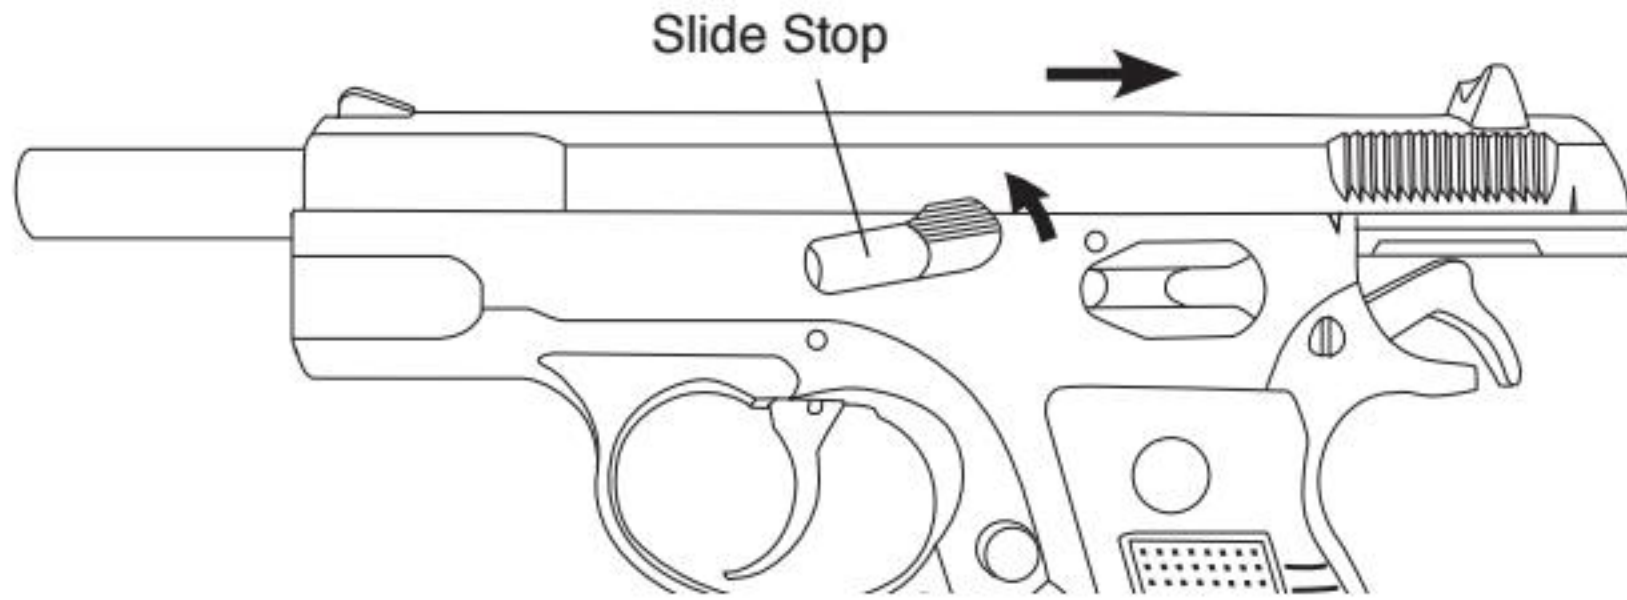


AFTER SHOOTING

After you are finished shooting, remove the magazine and visually examine the open chamber to check for clearance. Make sure both the magazine and the chamber are clear without BBs, **release the slide then engage the safety lever.**



CHECK
Make sure
chamber is
clear

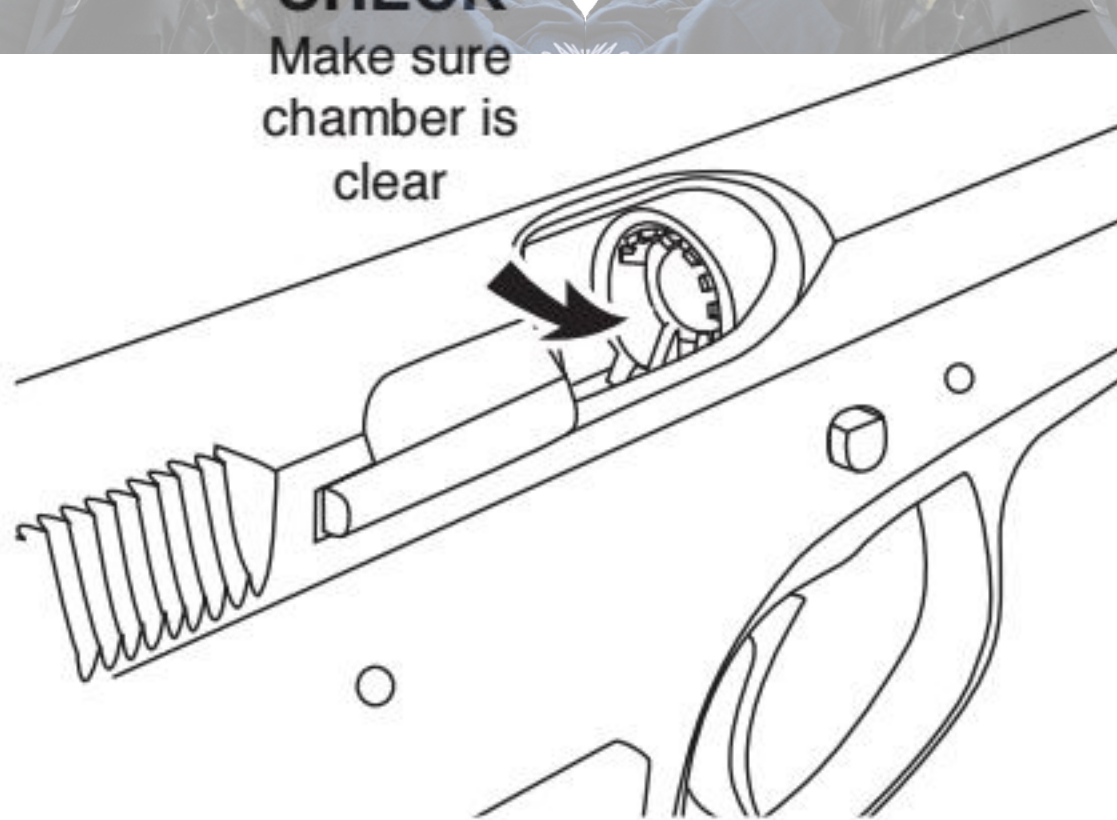




HOP-UP SYSTEM

The Hop-Up device is one of KWA's standard features, giving Airsoft BBs greater stability, further travel and increased accuracy. Airsoft BBs are light-weight and can be affected by wind when fired. With the Hop-Up system, the trajectory of the Airsoft BBs can be adjusted according to the shooting environment or surroundings.







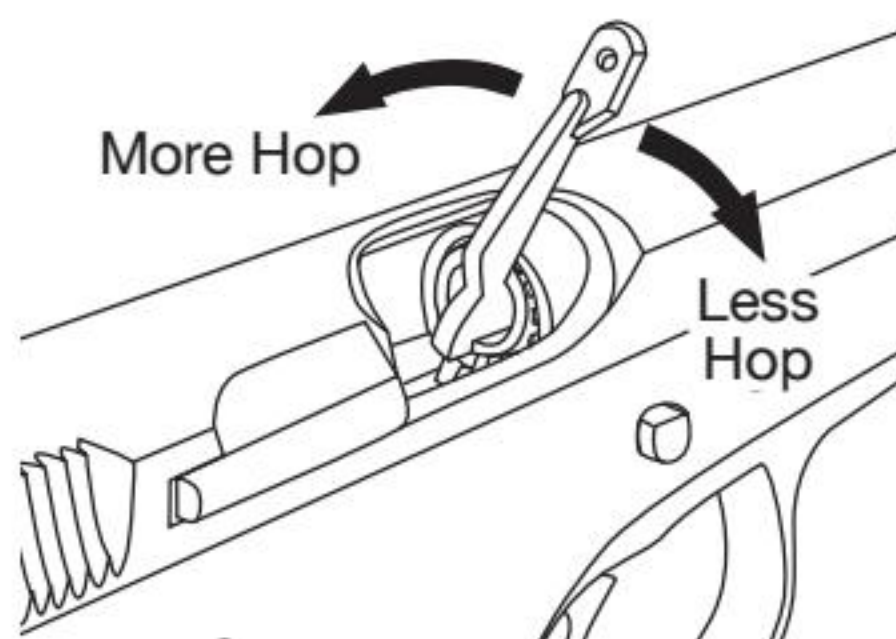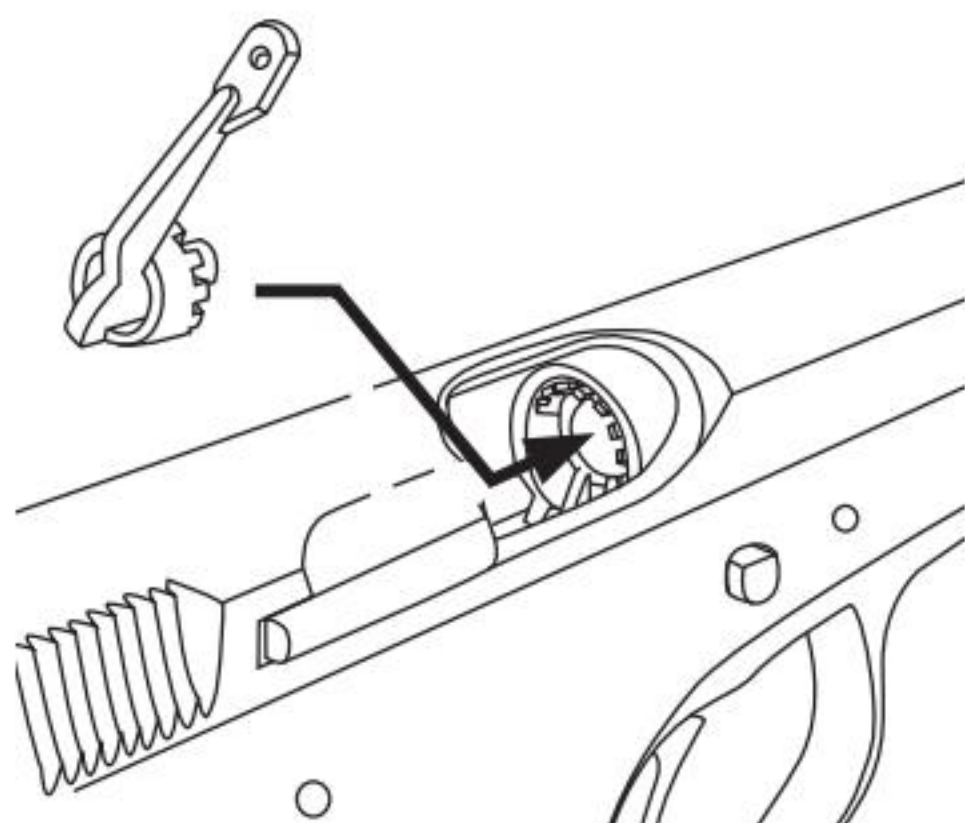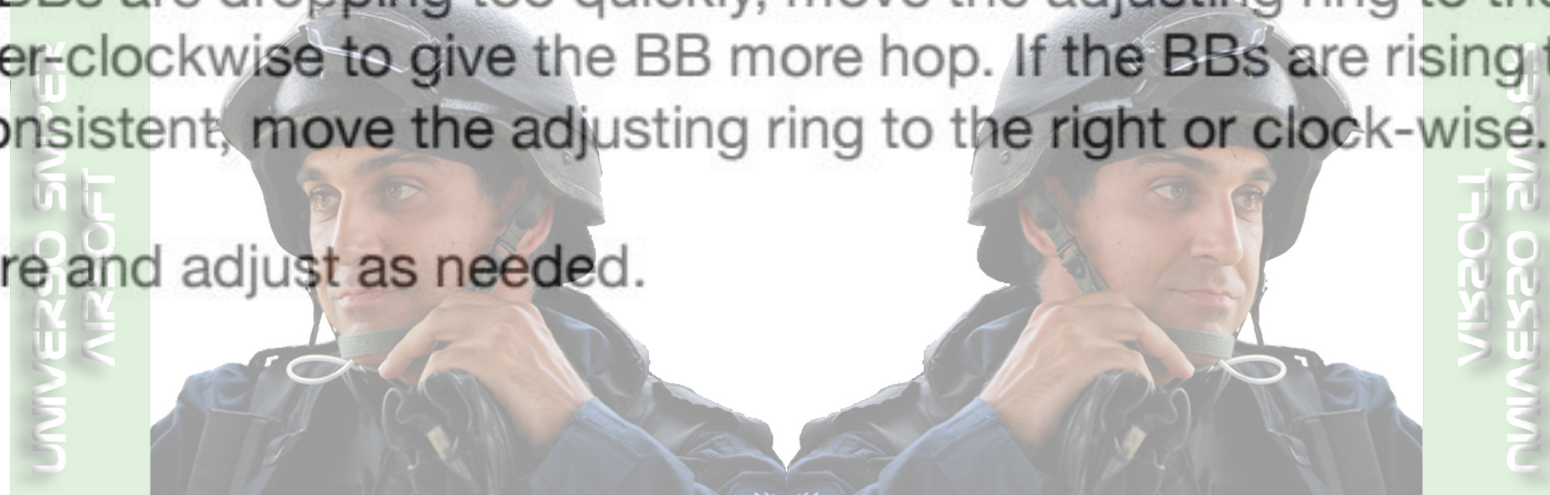



HOP-UP ADJUSTMENT

To adjust the Hop-Up, make sure the magazine is loaded and that you have at least 65 feet of clearance for a test fire before making any adjustments.

1. Test fire the gun for 10 to 20 rounds and observe the BB's traveling pattern.
2. Remove the magazine.
3. Open the slide and place the adjusting tool into the slotted chamber ring. Turn the adjusting ring a 1/4-inch at a time.
4. If the BBs are dropping too quickly, move the adjusting ring to the left or counter-clockwise to give the BB more hop. If the BBs are rising too slowly, or not consistent, move the adjusting ring to the right or clock-wise.
5. Test fire and adjust as needed.



HOP-UP ADJUSTMENT POINT

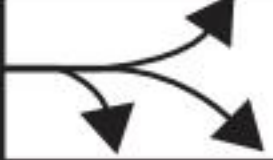
BB TRAJECTORY PATTERN		ADJUSTMENTS
	BB DROPS FREELY	 TURN KNOB TO LEFT
	BB TRAVELS AT SHORT TRAJECTORY PATH	 TURN KNOB SLIGHTLY TO LEFT
	BB TRAVELS DISTANCE AT FLAT TRAJECTORY PATH	 NO ADJUSTMENT MADE
	BB TRAVELS FLAT IN SHORT DISTANCE, THEN GOES UP IN CURVE AND DROPS FREELY	 TURN KNOB SLIGHTLY TO RIGHT
	BB TRAVELS AT UNSTABLE SPEED AND IRREGULAR PATH	 TURN KNOB TO RIGHT



DISASSEMBLY

It is not recommended to disassemble the gun unless for general maintenance, or to clear BBs jammed inside the barrel.

1. Remove the magazine by depressing the magazine catch button on the left side of the Airsoft gun.
2. Check and clear the chamber of BBs.
3. Pull back the slide until a small cut-out slot on the slide aligns with the cut-out slot on the frame.
4. While holding the slide in position, remove the slide-stop by pushing on the release pin on the right side of frame. Pull off the slide-stop from the left side of the frame.
5. Glide the slide forward, away from the frame.

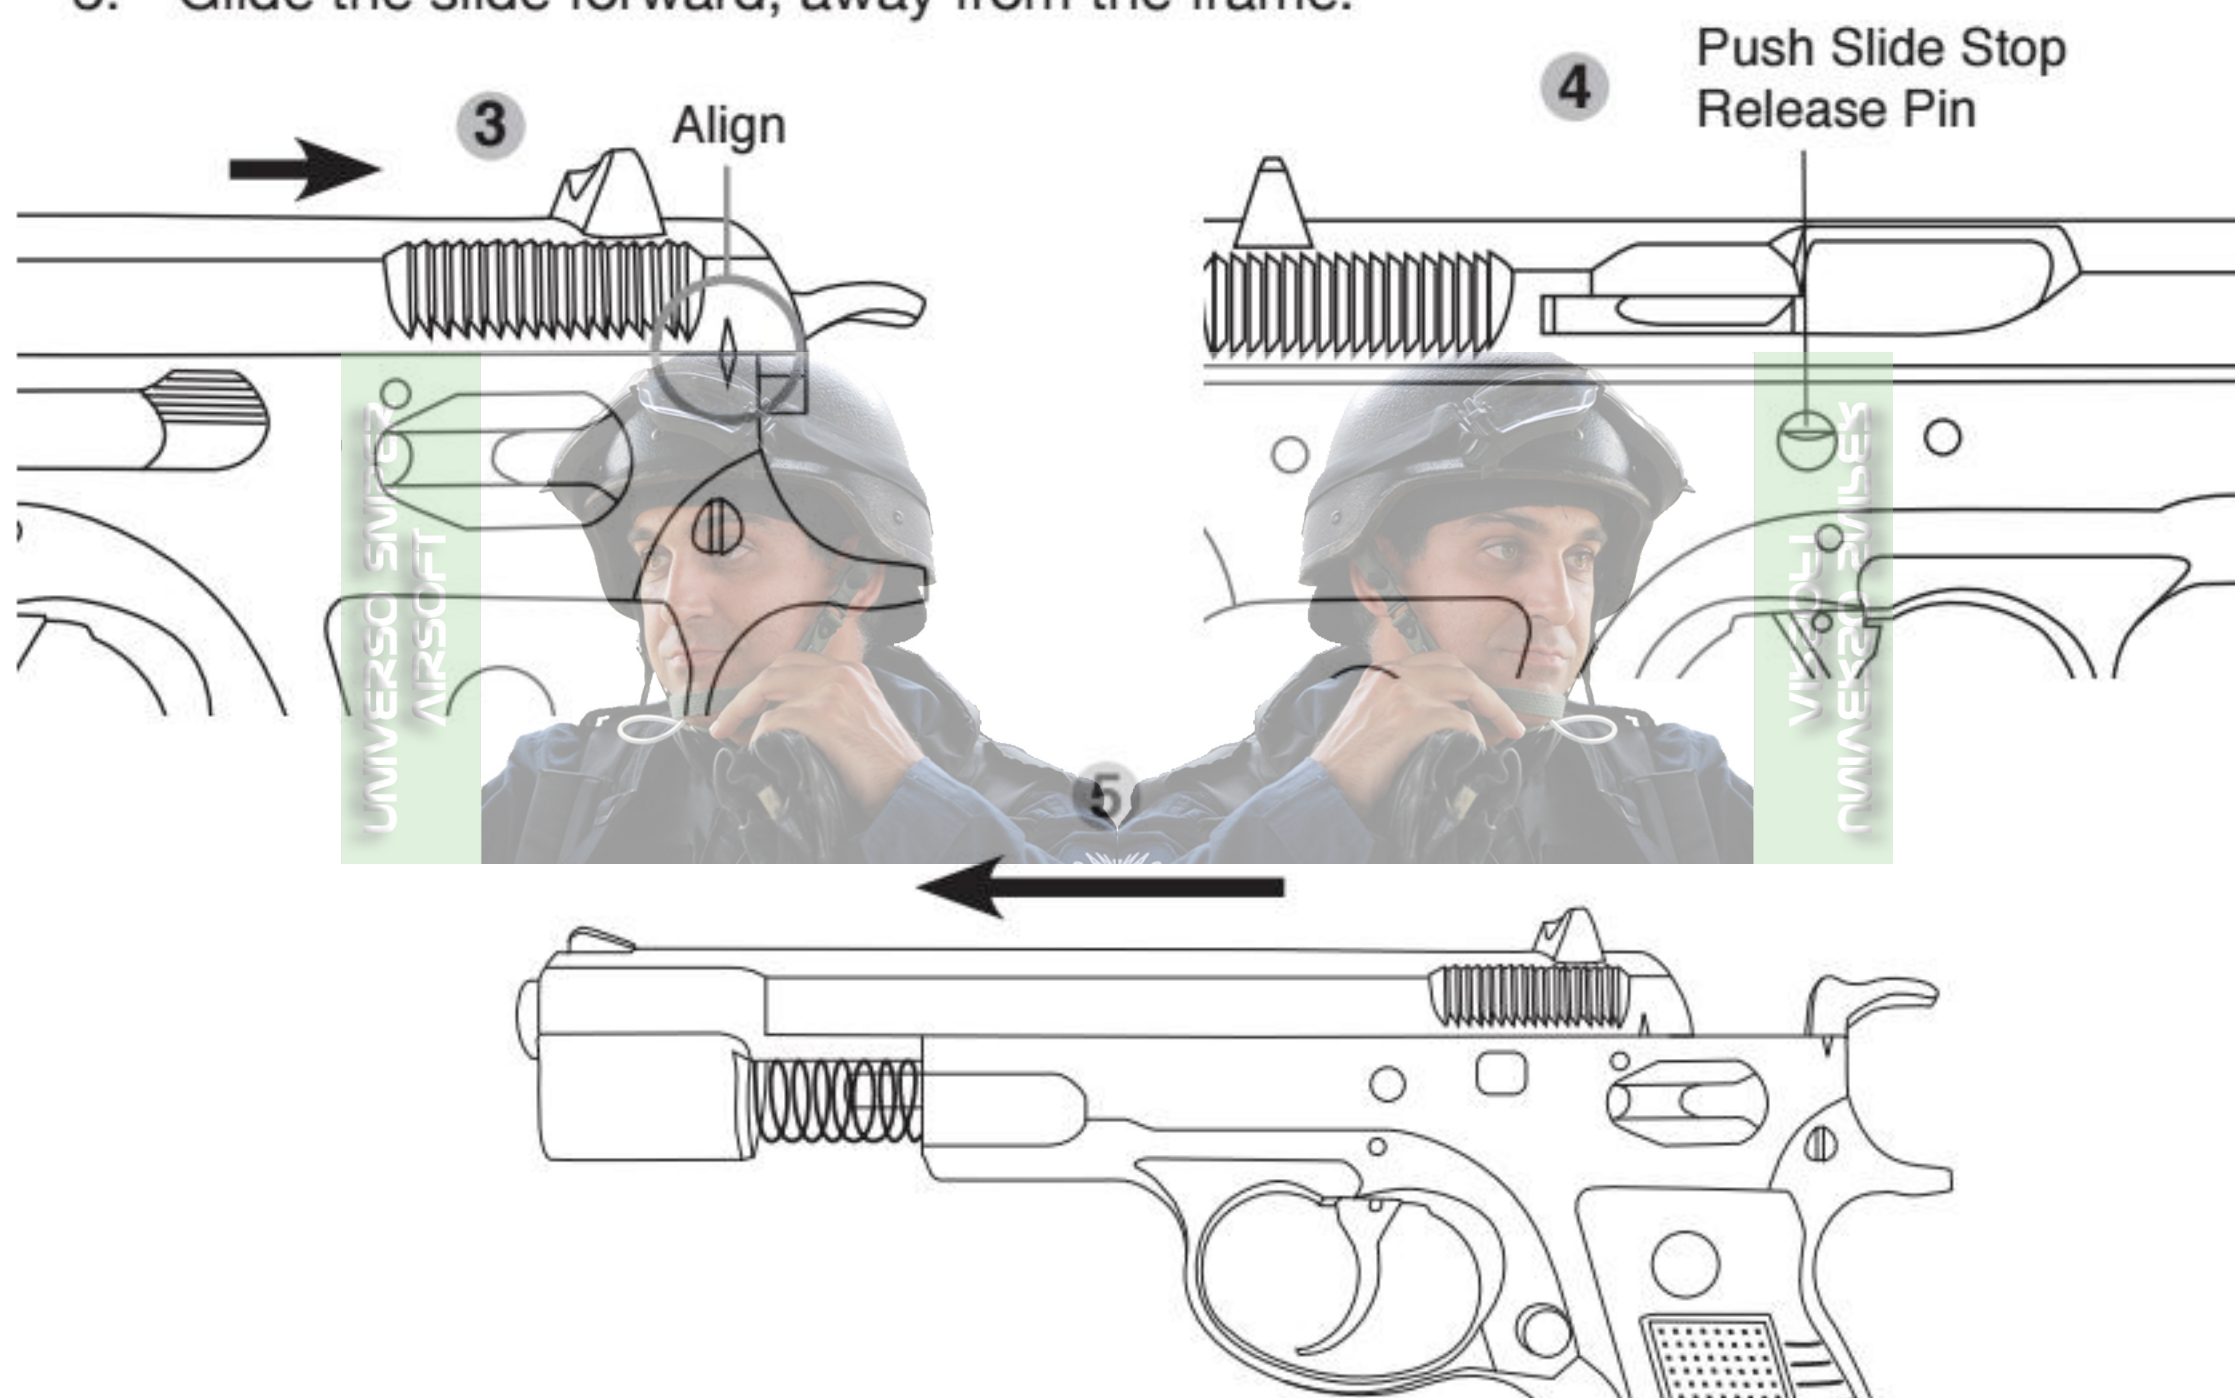


ASSEMBLY

1. Put the slide onto the frame rails. Glide it toward the rear of the Airsoft gun until the small cut-out slot on the slide aligns with the cut-out slot on the frame.
2. While holding the slide in position, insert the slide-stop.
3. Pull the slide to the rear-most position and then release.
4. Install the magazine.

NOTE: After the slide assembly is completed, cycle the slide back and forth to insure proper assembly.

BASIC TROUBLESHOOTING GUIDE FOR PISTOL

SYMPTOMS	POSSIBLE CAUSE	SOLUTIONS
Slide jams / Will not complete cycle	Dry internals	Add silicone to cylinder / main seal/ rails
Double feeds BBs into chamber / BB's roll out of barrel	Hop-up adjustment too tight	Release hop-up or replace bucking
BBs will not release from magazine / bent mag lip/ check bb condition	Bent magazine lip	Replace magazine lip
Leaking release valve & charging valve	Dry O-ring	Add silicone oil to valves / Replace valves
Slide stop engages while shooting BBs	Weak slide stop spring	Adjust tension
Magazine base plate will not lock	Broken base plate lock	Replace base plate lock
Magazine base leaking air	Worn out base seal	Replace magazine base seal
Cylinder will not load BBs into chamber	Broken cylinder tap	Replace cylinder
Trigger will not reset	Worn out trigger spring / trigger bow spring	Replace trigger spring / trigger bow spring

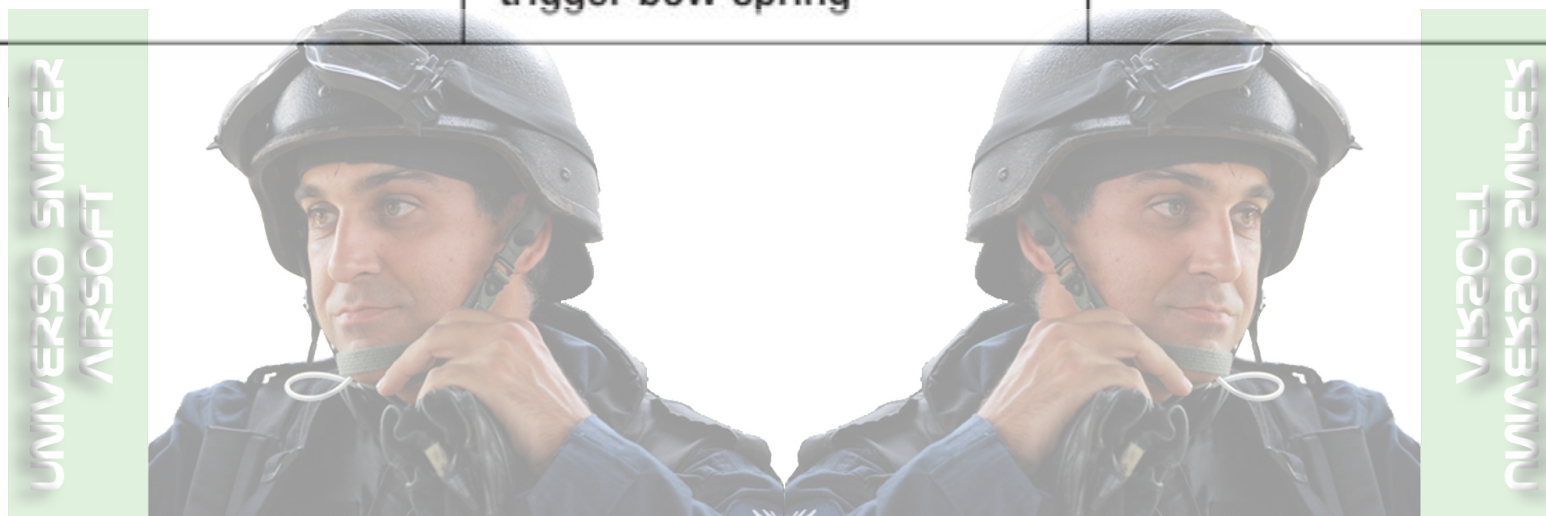

GENERAL MAINTENANCE FOR KWA GAS BLOW BACK

Green gas is a liquid propellant which tends to dry out the seals and o-rings. With lubricating silicone oil, it will extend the life of the seals and o-rings and prevent gas leaks.

Use only the recommended 100% silicone oil, available for purchase at the Airsoft dealer where you purchased your KWA products. Any other type of lubricant may damage the products.

Lightly lubricate the recoil spring, cylinder and moving parts with a few drops of oil. Lubricating the seals and o-rings are essential. Unload BBs from the magazine. Make sure the magazine is free of gas before lubricating the magazine's charging valve and release valve.

OPERATING UNDER UNUSUAL CONDITIONS

Unusual conditions are defined as any condition requiring special maintenance. Perform maintenance outlined for the climate similar to your operational area

Extreme Cold:


Operating an Airsoft gas gun in extremely cold temperatures is not recommended. Cold temperatures will cause the Hop-up Bucking to harden, reducing its effectiveness. Gas will not expand properly in cold temperatures, so both the cycling rate and power will be dramatically reduced.

Extreme Heat:


Operating an Airsoft gas gun in extremely hot temperatures is also not recommended. Leaving the gun in direct sunlight for long periods of time, or operating in extremely hot areas will cause the gas to over-expand, damaging the internal workings of the gun. The increase in internal pressure from the expanding gas can also damage the seals and cause leaks in the magazine.


Dust or Sand:

Dust or sand can get into a gas gun and cause malfunctions and/or excessive wear. Keep the gun covered whenever possible. Use lubricant sparingly, as lube naturally attracts dirt and other particles. After use in a dusty area, always field strip the gun (refer to Disassembly Section) and clean any areas you can reach with a soft, lint-free cloth.

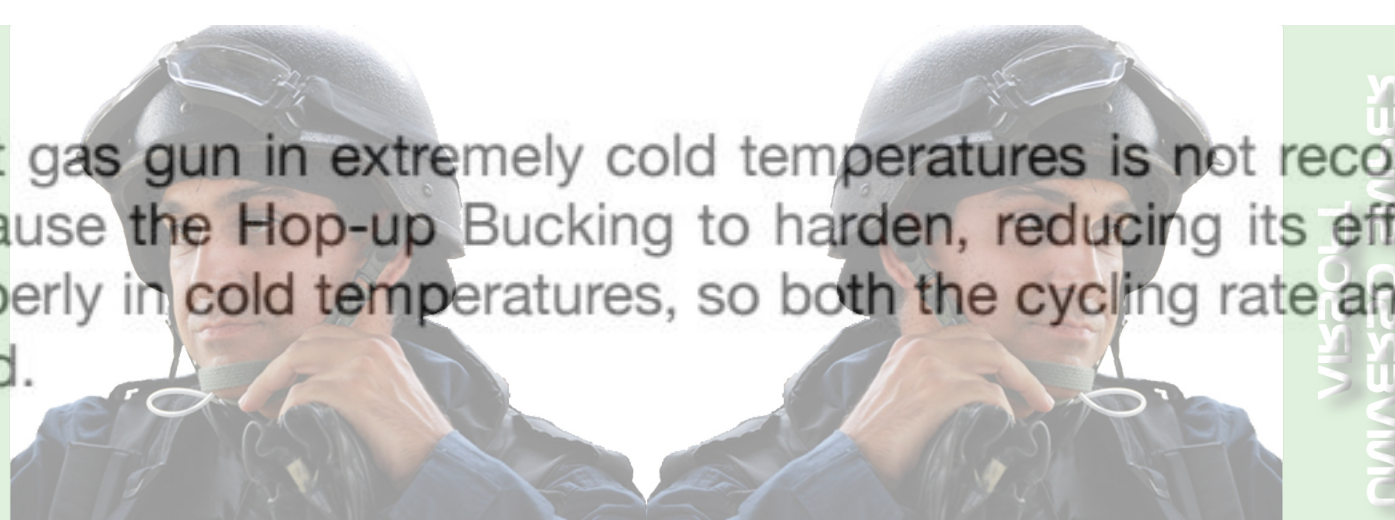

KZ75 PARTS DIAGRAM

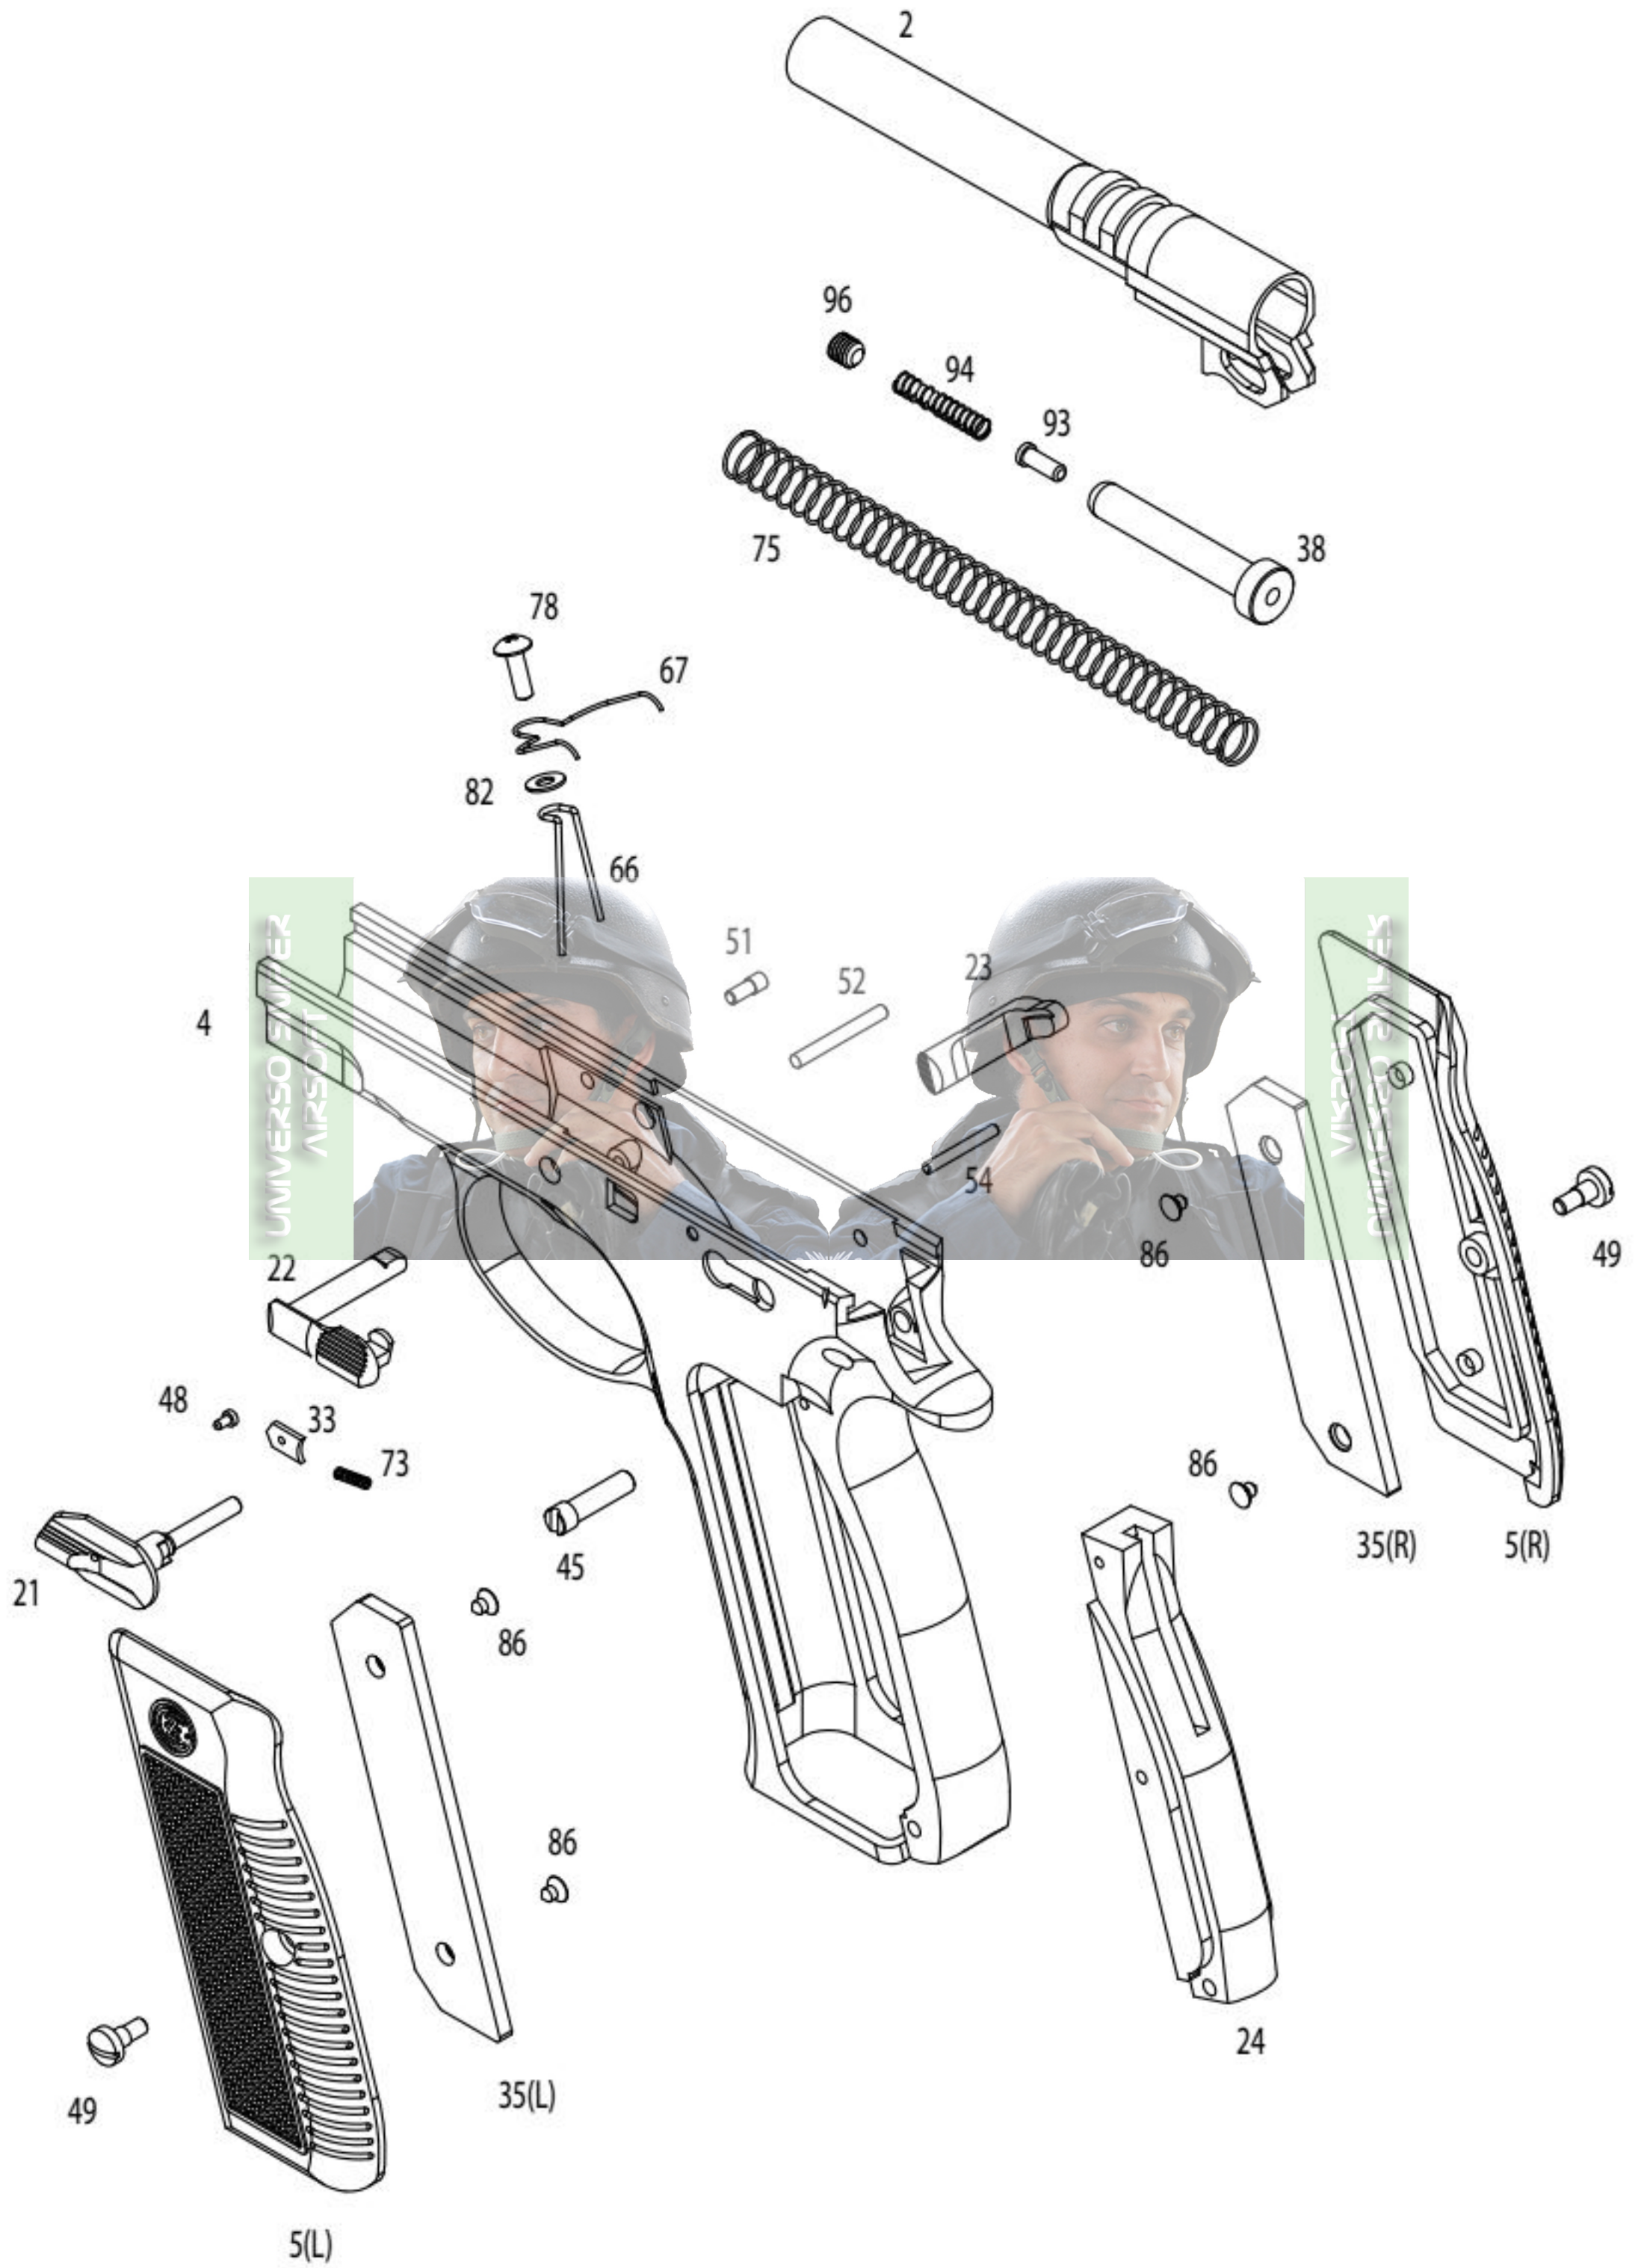

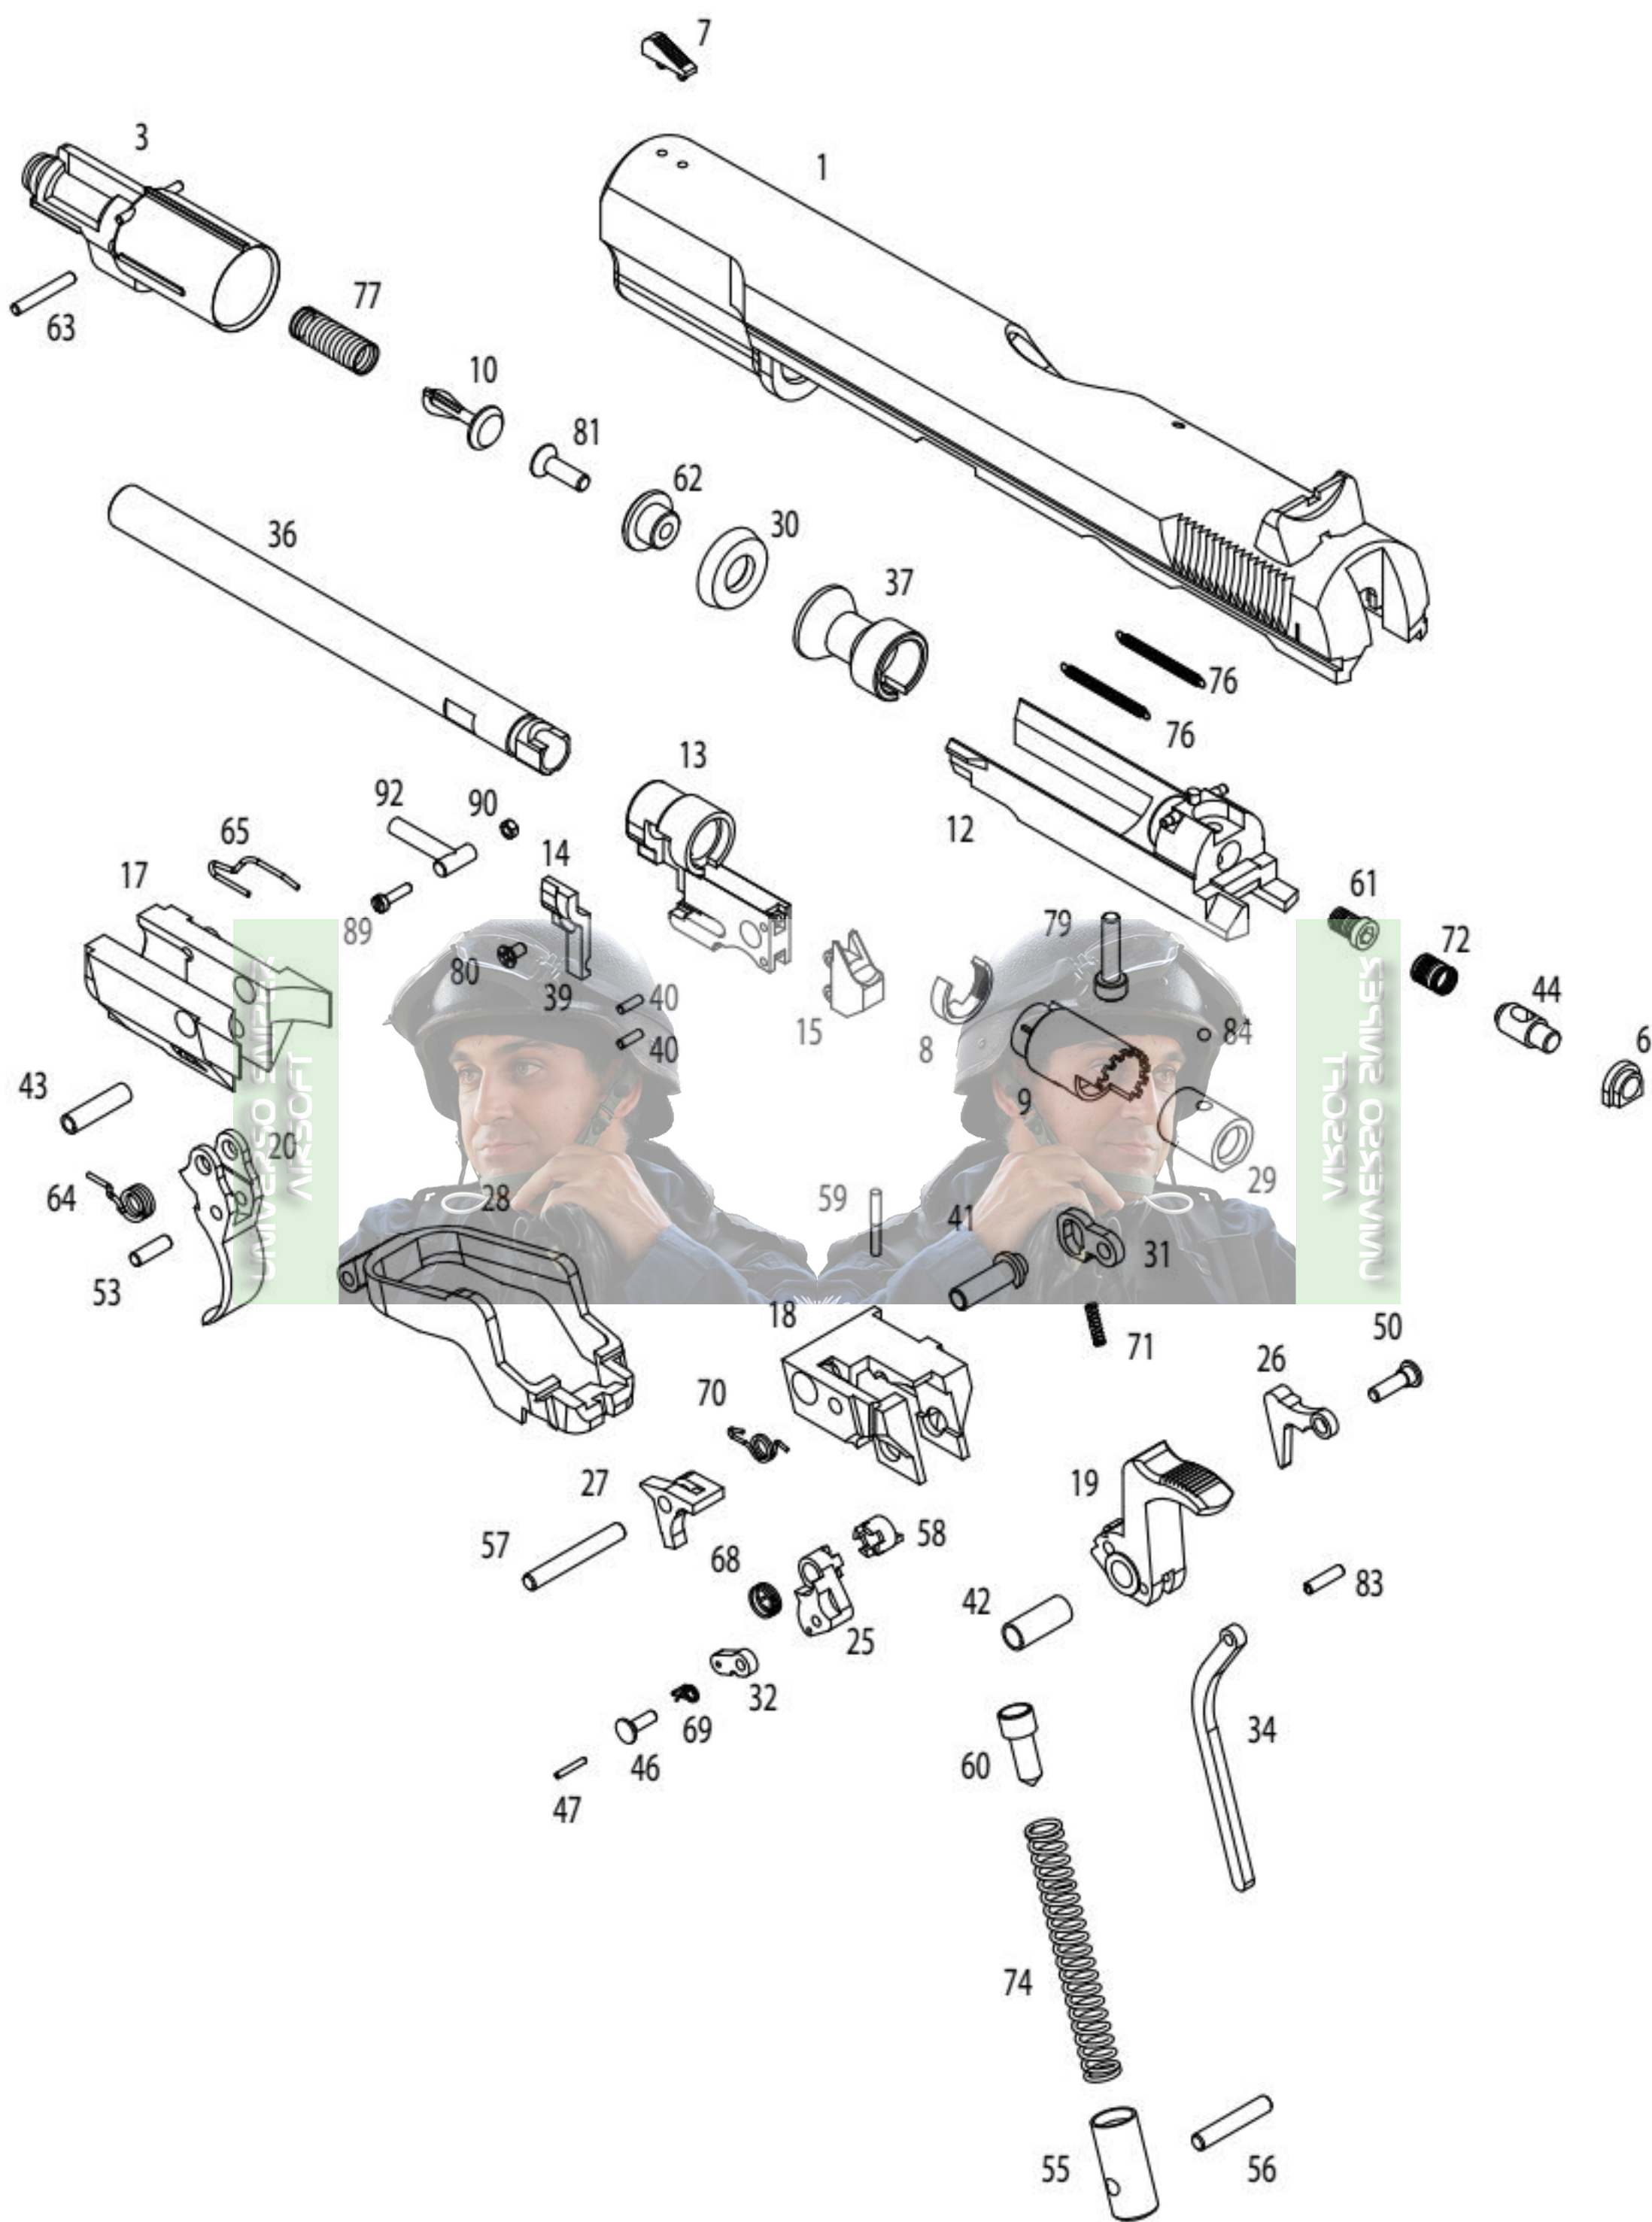


KZ75 PARTS LIST

Parts #	Description
KZ75-1	Slide
KZ75-2	Outer Barrel
KZ75-3	Cylinder
KZ75-4	Frame
KZ75-5L	Grip - Left
KZ75-5R	Grip - Right
KZ75-6	Firing Pin Sleeve
KZ75-7	Front Sight
KZ75-8	Hop-Up Cylinder Clamp
KZ75-9	Hop-Up Cylinder
KZ75-10	Jet Nozzle
KZ75-12	Breech Block
KZ75-13	Inner Barrel Base
KZ75-14	Inner Barrel Lock
KZ75-15	BB Feed Ramp
KZ75-16	Rear Sight
KZ75-17	Inner Frame Front
KZ75-18	Inner Frame Rear
KZ75-19	Hammer
KZ75-20	Trigger
KZ75-21	Safety Lever
KZ75-22	Slide Stop
KZ75-23	Magazine Catch
KZ75-24	Main Spring Housing
KZ75-25	Impact Hammer Base
KZ75-26	Disconnecter
KZ75-27	Sear
KZ75-28	Trigger Bow
KZ75-29	Hop-Up Bucking
KZ75-30	Main Seal
KZ75-31	Reset Lever
KZ75-32	Impact Hammer
KZ75-33	Safety Lever Lock
KZ75-34	Hammer Strut
KZ75-35L	Grip Plate - Left
KZ75-35R	Grip Plate - Right

Parts #	Description
KZ75-36	Inner Barrel
KZ75-37	Main Base Seal
KZ75-38	Recoil Spring Guide Rod
KZ75-39	Inner Barrel Lock
KZ75-40	BB Feed Ramp Pins
KZ75-41	Impact Base Sleeve
KZ75-42	Hammer Pin Sleeve
KZ75-43	Trigger Pin Sleeve
KZ75-44	Firing Pin
KZ75-45	Hammer Pin
KZ75-46	Impact Hammer Pin
KZ75-47	Impact Hammer Spring Pin
KZ75-48	Safety Lever Pin
KZ75-49	Grip Screws X 2
KZ75-50	Disconnecter Pin
KZ75-51	Inner Frame Pin "Front"
KZ75-52	Trigger Pin
KZ75-53	Trigger Bow Pin
KZ75-54	Main Spring Housing Pin
KZ75-55	Main Spring Catch
KZ75-56	Main Spring Cap Pin
KZ75-57	Sear Pin
KZ75-58	Impact Base Bushing
KZ75-59	Hammer Stopper Pin
KZ75-60	Main Spring Retainer
KZ75-61	Main Seal Base Screw
KZ75-62	Main Seal Cap
KZ75-63	Jet Nozzle Pin
KZ75-64	Trigger Spring
KZ75-65	Slide Stop Spring
KZ75-66	Magazine Catch Spring
KZ75-67	Trigger Bow Spring
KZ75-68	Impact Base Spring
KZ75-69	Impact Hammer Spring
KZ75-70	Sear Spring
KZ75-71	Reset Lever Spring

Parts #	Description
KZ75-72	Firing Pin Spring
KZ75-73	Safety Lever Spring
KZ75-74	Main Spring
KZ75-75	Recoil Spring
KZ75-76	Cylinder Springs X 2
KZ75-77	Jet Nozzle Spring
KZ75-78	Trigger Bow Spring Screw
KZ75-79	Breech Screw
KZ75-80	Inner Barrel Clamp Screw
KZ75-81	Main Seal Cap Screw
KZ75-82	Magazine Catch Spring Washer
KZ75-83	Hammer Strut Pin
KZ75-84	Hop Up Ball
KZ75-86	Plate Screws X 4
KZ75-89	Guide Rod Alignment Screw
KZ75-90	Guide Rod Alignment Nut
KZ75-92	Guide Rod Alignment Pin
KZ75-93	Guide Rod Plunger
KZ75-94	Guide Rod Spring
KZ75-96	Guide Rod Set Screw

KZ75 MAGAZINE DIAGRAM AND PARTS LIST

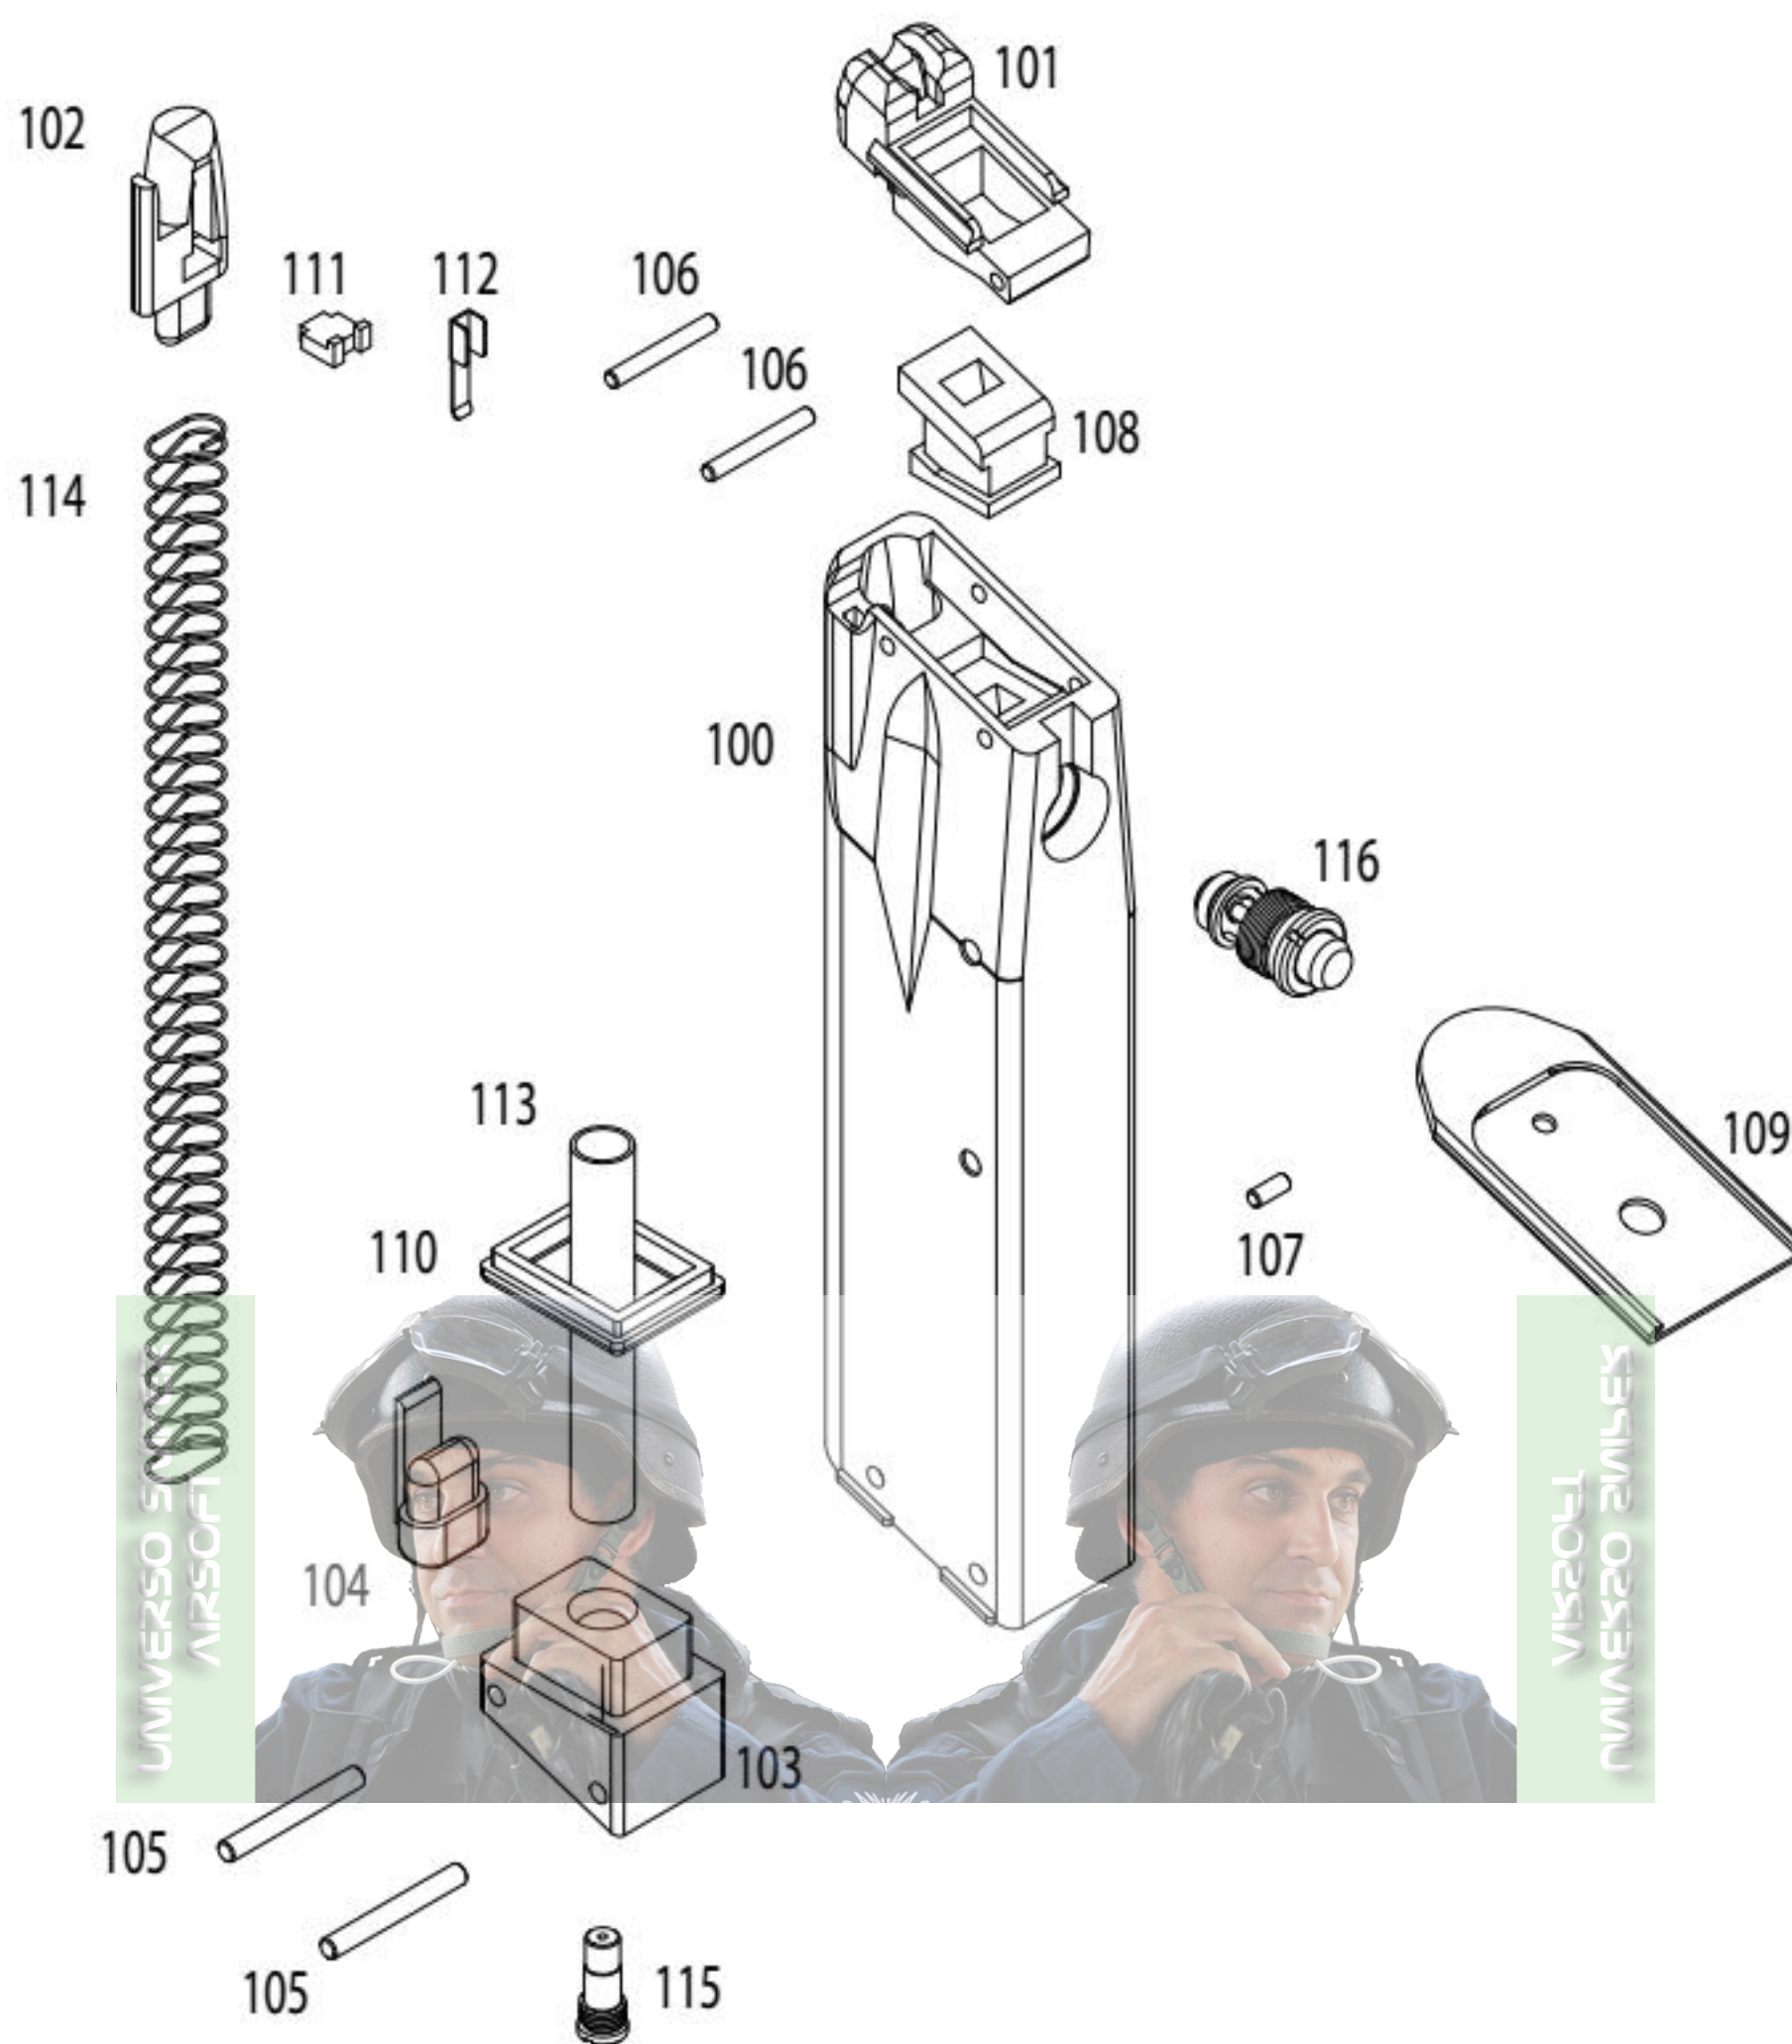

Parts #	Description
KZ75-MG100	Magazine Body
KZ75-MG101	Magazine Lip
KZ75-MG102	Magazine Follower
KZ75-MG103	Magazine Inner Base
KZ75-MG104	Magazine Inner Base Lock
KZ75-MG105	Magazine Base Pin
KZ75-MG106	Magazine Lip Pins X 2
KZ75-MG107	Magazine Base Lock Pin
KZ75-MG108	Magazine Nozzle Seal

Parts #	Description
KZ75-MG109	Magazine Base Plate
KZ75-MG110	Magazine Base Seal
KZ75-MG111	Magazine Follower Lock
KZ75-MG112	Magazine Follower Lock Spring
KZ75-MG113	Magazine Expansion Tube
KZ75-MG114	Magazine Follower Spring
KZ75-MG115	Magazine Charging Valve
KZ75-MG116	Magazine Release Valve



KWA Performance Industries, Inc.

Copyright © March, 2010 KWA Performance Industries, Inc. All Rights Reserved.