

King Arms

UNIVERSO SNIPER
AIRSOFT



GHK M4 Gas Blowback Instruction Manual




⚠ WARNING

- User of this GBB rifle must be 18 years of age or older.
- The shooting range of the plastic BB bullet can reach up to 100 meters, beware at all time. Careless shooting may cause eye or other injuries.
- Read through this Handling and Instruction Manual carefully before operating this GBB rifle.

Caution

- Read through this manual before shooting. Pay special attention for safe operation.
- Remember the warnings and be cautions at all times
- Failing to do so may cause injury, accidents or damage to gun.

Component Names

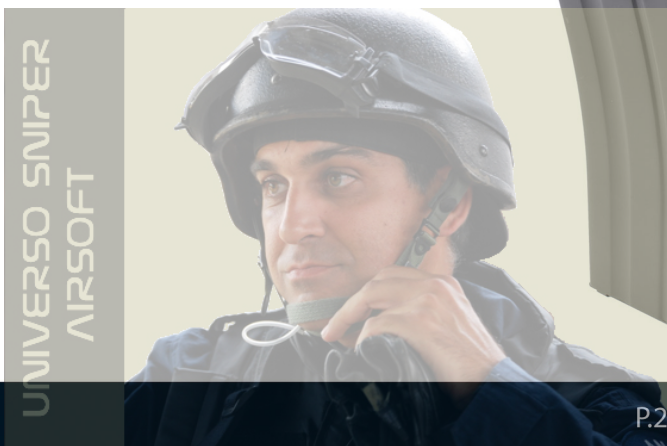

Loading The Magazine



1. Press the magazine catch button to release the magazine.



2. Hold the magazine sideways and let the gas valve hole facing up. Charge the magazine with green gas for 4 seconds.



3. Load the magazine with 6mm BB bullets. Use BB loader to speed up the process if needed.



4. Insert the loaded magazine into the rifle.



5. Turn the dry fire switch backward, the magazine follower will bounce out. The bolt will be locked when the magazine is empty.



6. Turn the dry fire switch forward while pressing the magazine follower down. The rifle will keep dry firing even when the bullet is out.

Always use new BB bullets or jamming and damage of rifle may occur.

Do not use the following BBs:



• Remove the magazine from the rifle and make sure there is no bullet remains in the chamber when the rifle is not in use.

• Do not over filling gas to magazine. 4 seconds of green gas filling should be enough.

• Always leave some gas to be remaining in the magazine.

• Please beware that the maximum loading capacity for this Gas Blowback Magazine is 40 rounds of BB. Do not overfeeding the magazine or it will damage the magazine and the rifle.

Operation Loading your rifle.



1. Preparing to fire, pull and release the charging handle to load.



2. Set the selector to SEMI or AUTO position.



3. Pull the trigger to fire.

• Make sure the charging handle went back to its original position after released the charging handle from loading the rifle.

• After shooting, close the dust cover to prevent dust get into the piston.

Selector Lever & Safety Setting



Safety:
With hammer cocked, always set the lever to the SAFE position when you are not firing the gun or during storage.



Semi-auto:
The gun will fire one shot each time when the trigger is pulled.



Full-auto:
The gun will fire automatically while hammer cocked and the trigger remains pulled.

• Always set the safety selector to "SAFE" position when you are not firing the gun.

• Do not point the rifle at any person or animal at all time, even when the rifle is in "SAFE" mode.

• The selector lever can only be pointed to SEMI or AUTO when the hammer is not yet cocked. Always set the selector to SAFE only when the hammer is cocked.

• Do not select the lever to safety when the hammer is NOT cocked. It might damage the selector lever or internal parts.

Hop Up Adjustment



Pull the charging handle backward and the hop up adjustment dial will be seen. Turn the dial downward to increase hop up while turn it upward to decrease hop up.

○ Excessive hop up (Turn the dial to upward.)

○ Best position

○ Not enough hop up (Gradually turn the dial downward.)

- Turning the hop up dial excessively can cause bullet clogging. Keep pulling the trigger while bullet being clogged will damage the piston and gears.
- If bullet clogging occurs, immediately stop firing the gun, return the hop dial to the normal position and remove clogging bullets using a cleaning rod.
- Make sure to return the hop up to normal position when removing clogged bullets. Otherwise, the chamber packing may be damaged.
- Never use used and dirty bullets. Dirty chamber will result in unstable hop up.
- Lacking or over spraying of silicone oil will also lead to unstable hop-up.

Thank you very much for buying King Arms product

