

UNIVERSO SNIPER
AIRSOFT



King Arms

Mosin-Nagant Model 1891/30 Rifle (Gas) Instruction Manual



⚠ WARNING

- User of this airsoft rifle must be 18 years of age or older.
- The shooting range of the plastic BB bullet can reach up to 100 meters, beware at all time. Careless shooting may cause eye or other injuries.
- Read through this Handling and Instruction Manual carefully before operating this gun.


<http://www.kingarms.com>

⚠️ WARNING ⚠️


Read through this Handling and Instruction Manual carefully before operating this rifle

This sport gun is developed for recreational use and it is capable to shoot BB bullets as a projectile so please be caution when handling or using this gun. Careless shooting or improper use is dangerous, and it can cause damage or injury on human or animal. Make sure you read through this manual and all the warnings before operating this gun.


Operating this airsoft gun must be aged over 18 years old. Users must understand and follow the laws of country before possessing or operating this product.

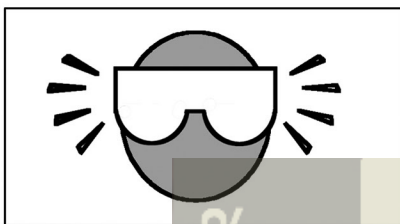

Always wear eyes protective gear.

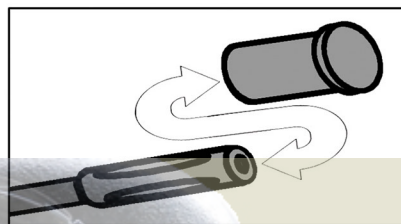


Always attach the protective plug to the gun muzzle.

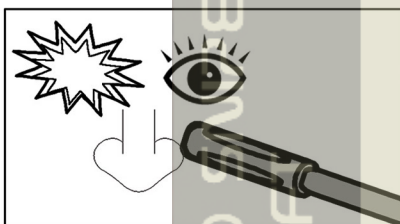

Never look into the gun muzzle.




Beware of accidental discharge and be prepared before shooting the rifle.

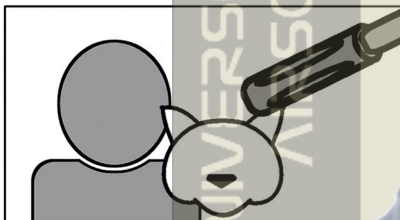

Never point the gun or to shoot towards a person or an animal.




Always put the gun in a case or bag when you are carrying it.

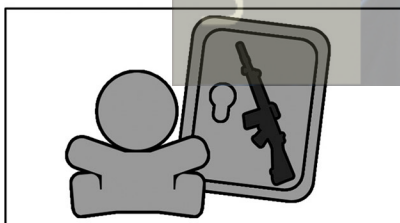


Store the air gun at places out of reach by children.



Always put your finger away from the trigger except when you are ready to fire the gun.

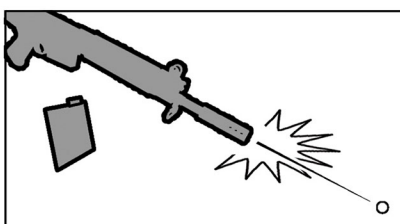

Even if the magazine is removed, there might be remaining BB bullet in the gun which still can be shooting.

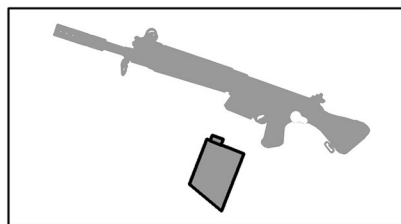

Always apply safety habits:
- Set selector lever at the "SAFE" position.
- Remove the magazine when the rifle is not in use.

Component Names



Gas Charging The Rifle



Push the cocking handle upwards as the arrow indicated.



Pull the cocking handle backwards until gas charging valve on cylinder is shown. Then fill the cylinder with 134A and make sure there is no leaking.

* Always remains minimum pressure inside the gas magazine / cylinder to maintain it is in good condition and prevent gas leaking. Therefore, charge the magazine / cylinder with 134A gas in 1 second when it is empty.

Loading The Rifle




Open the magazine cover on the bottom of rifle as shown.




Wind-up the magazine and install maximum 15 rounds of 6mm BB bullet into the magazine. And then close the magazine cover.

* Unload the rifle and ensure that there is no BB bullet remains inside the rifle when the rifle is not in use or in storage.

* Please beware that the maximum loading capacity for the King Arms Mosin-Nagant Model 1891/30 Rifle is 15 rounds of 6mm BB Bullet. Do not overfeeding the magazine or it will damage the magazine and the rifle.

Always use new BB bullets or jamming and damage of rifle may occurs.  6mm

Do not use the following BBs:

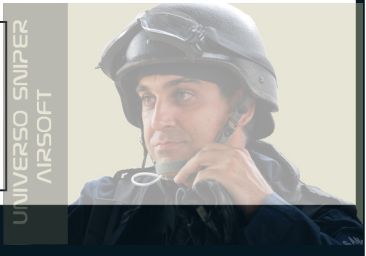

Firing The Rifle



Push the cocking handle upwards and then pull it backwards as far as it can reach.



Push the bolt handle back to its original position to complete the bullet loading cycle. A bullet will be loaded on each loading cycle. Then pull the trigger to fire.

- * Do not load the rifle until you fire it.
- * Make sure you followed all safety instructions before firing the gun.
- * Always keep your finger away from the trigger unless you are ready to fire the rifle.
- * If magazine became empty while shooting or an empty magazine is installed on the rifle, do not cock the rifle or the magazine and the rifle will be damage.
- * If no bullet is shooting out after rifle is loaded and trigger is pulled. Stop shooting and check:
 - if the magazine is empty, reload magazine if needed then install it back to the rifle.
 - to ensure the loading process is completed.
 - if there is any bullet is clogged in the inner barrel. Clean the inner barrel with the cleaning rod and apply silicone to the inner barrel.
- * Only perform the loading action one time on each shooting cycle or it may damage the rifle.

Hop Up & Sight Adjustment



The hop up adjustment screw is built on top of the receiver behind the rear sight. You can adjust the hop up by loosen and tighten the hop up adjustment screw by a hex key. Hop up will be increased when rotate the screw in clockwise direction while in anti-clockwise direction will decrease the hop up.




To set the rear sight for the desired elevation, press the button indicated by red arrow then move the indicator forwards and backward along the slide bar.


- * Turning the hop up excessively can cause bullet clogging. Keep pulling the trigger while bullet being clogged will damage the piston and parts.
- * If bullet clogging occurs, immediately stop firing the gun, turn the hop up to normal position and remove clogging bullets using a cleaning rod.
- * Make sure to return the hop up to normal position when removing clogged bullets. Otherwise, the chamber packing may be damaged.
- * Never use used or dirty bullets. Dirty chamber will result in unstable hop up.
- * Lacking or over spraying of silicone oil will also lead to unstable hop up.



Bayonet Installation

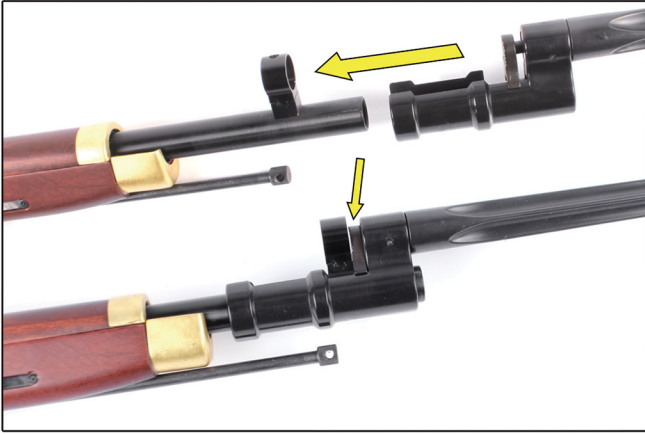

Install the bayonet through the muzzle as shown. Push the bayonet until the locking button is pressed by the front sight.

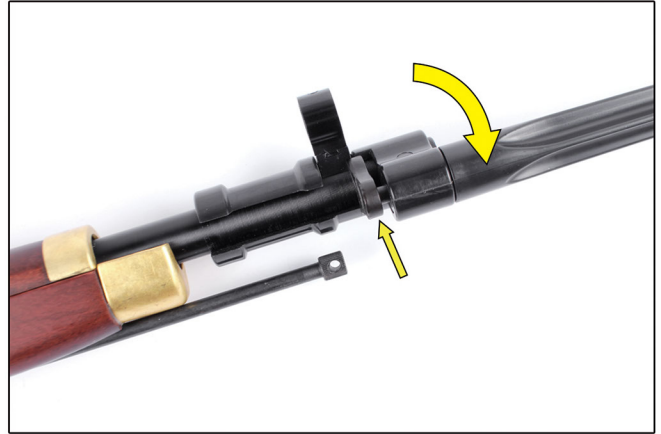


Turn the bayonet 90 degrees and the locking button will be released to lock the bayonet in position.


Scope Installation




For installation of scope which comes with KA-AG-171. First, release the 3 screws on the mount base and take the scope off as shown. And then release the 2 screws on the rifle as shown.

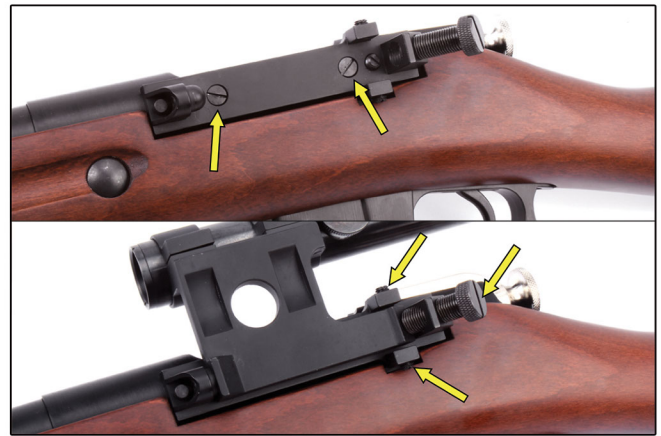

Place the mount base on the rifle as shown and tighten it with 2 screws. And then put the scope on the mount base and lock it in place with 3 screws as shown.

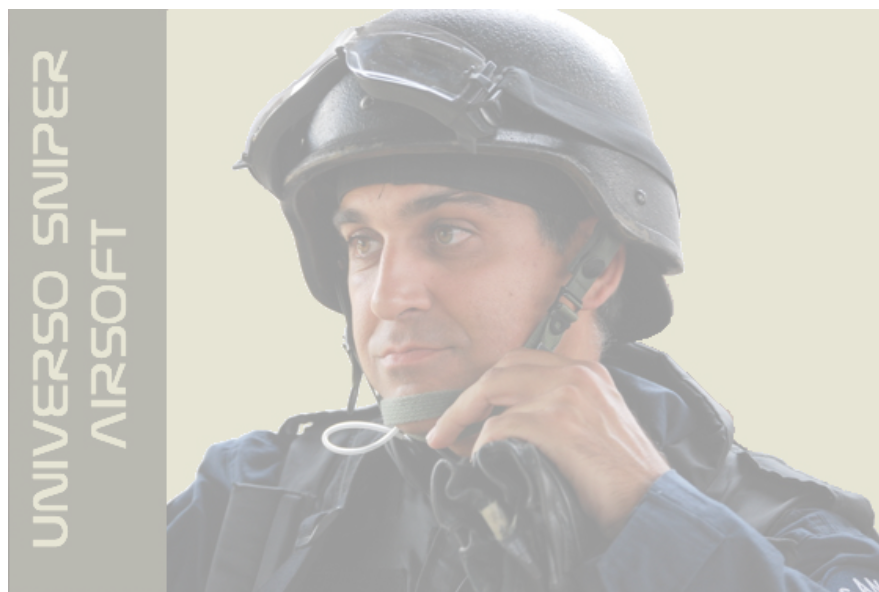

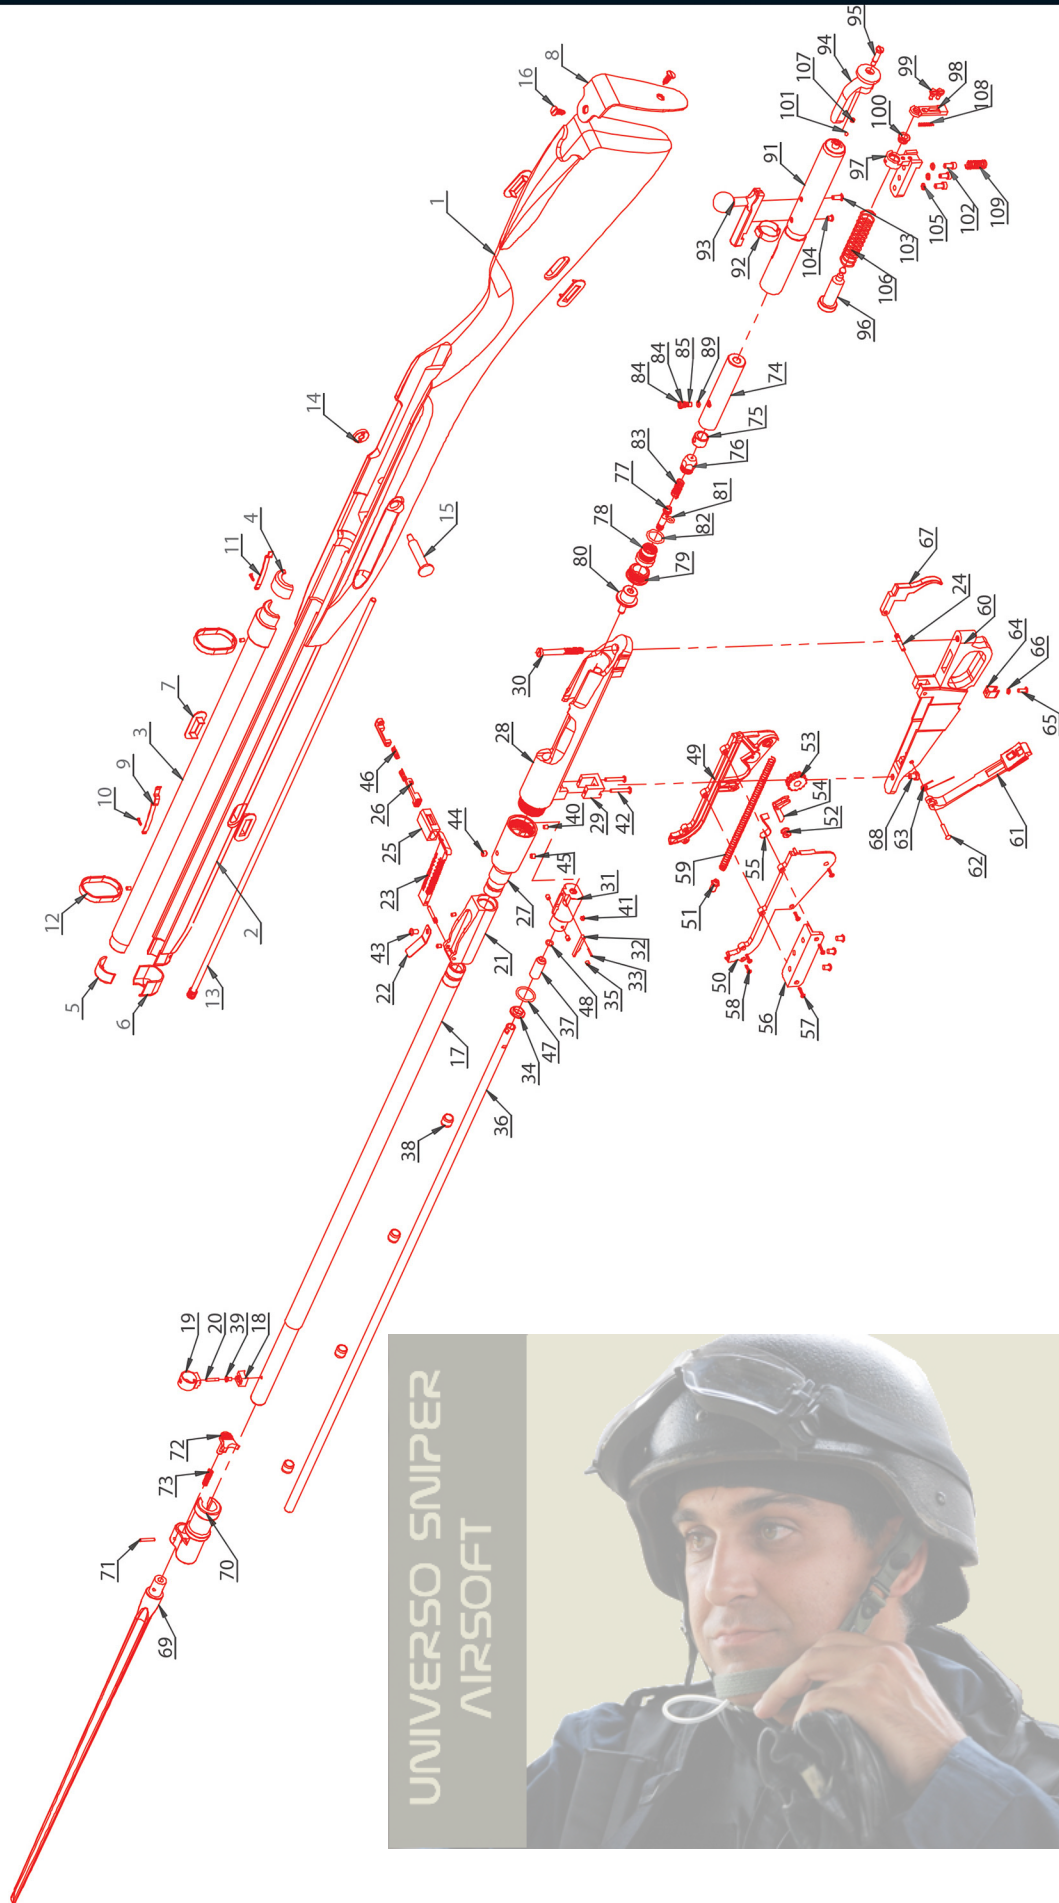

Thank you very much for buying King Arms product

Airsoft Gun Parts and Accessories Manufacturer



<http://www.KingArms.com>

