




1. Loosen the knob.

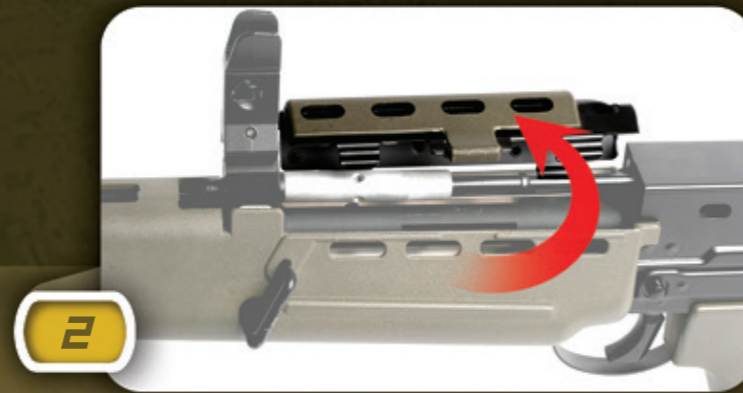

2. Open the upper handguard cover.



3. Press the button to draw back the lower bolt.


Made in Taiwan [www.guay2.com](http://www.guay2.com)

Manufactured by G&G ARMAMENT [b2b@guay2.com](mailto:b2b@guay2.com)

**INSTRUCTION**  
**MANUAL** **L85**  
**4x**  
**SUSAT**



4. Set L85 scope on the rail and push the button until the scope is set to an appropriate position.

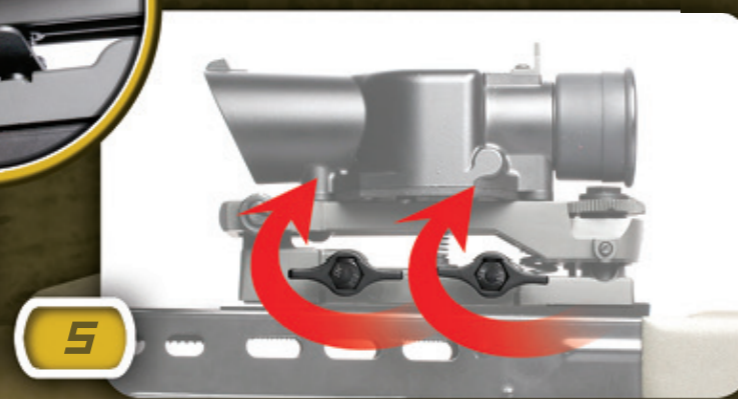


5. Fasten the knob.



6. Loosen the screw.



7. Substantially adjustment :  
Turning the screw UP will raises the aiming point.  
Turning the screw DOWN will lower the aiming point.

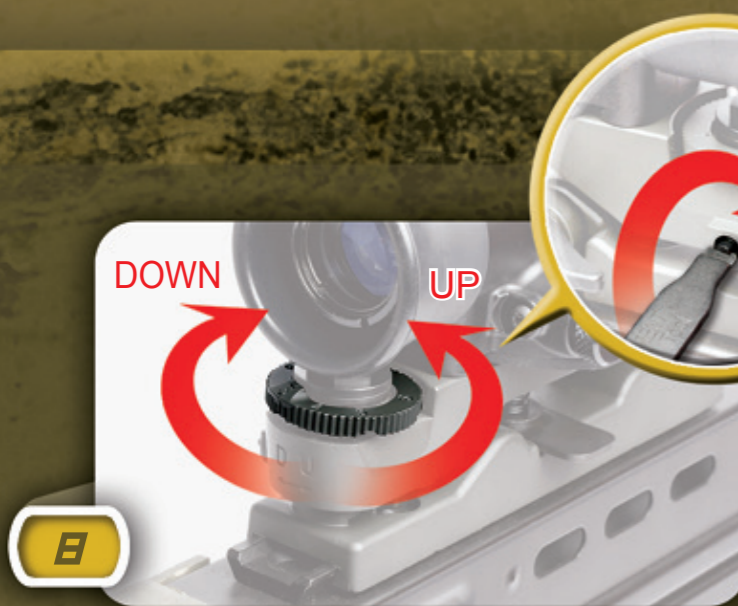

8. Slightly adjustment :  
Turning the dial UP will raises the aiming point.  
Turning the dial DOWN will lower the aiming point.  
After adjusting the dial,fasten it.



9. Before adjusting the screw, loosen it.



10. Before adjusting the left screw, fasten the right screw. Turning the screw left or right to adjust the aiming point.



11. Adjusting another side by the same token.