 


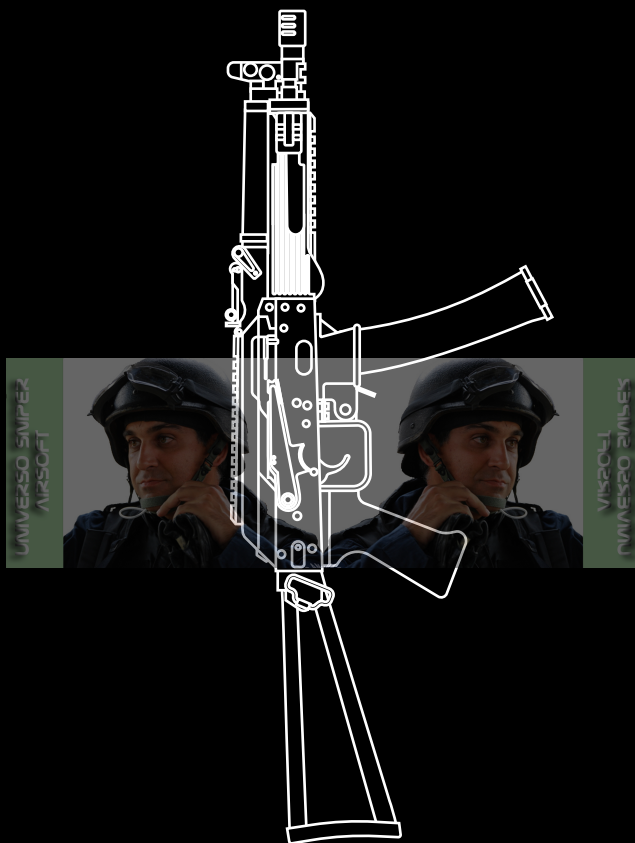

KALASHNIKOV
USA™
DISTRIBUTED BY LANCER TACTICAL

KR-19® SERIES OWNER'S MANUAL



WARNING

READ ALL INSTRUCTIONS AND WARNINGS WITHIN THIS MANUAL CAREFULLY AND UNDERSTAND THEM BEFORE USING THIS AIRSOFT GUN. IF THERE IS ANYTHING YOU DO NOT UNDERSTAND, IT IS YOUR RESPONSIBILITY TO SEEK ADVICE FROM YOUR RETAILER, AN INSTRUCTOR, OR COMPETENT AIRSOFT TECHNICIAN. PLEASE CONTACT LANCER TACTICAL AT 562-287-8918 OR VISIT US AT WWW.LANCERTACTICAL.COM FOR MORE PRODUCT INFORMATION.

Version 1



UNIVERSO SNIPER
AIRSOFT




UNIVERSO
EMILES

INDEX

WARNINGS	4
ICONS IN OWNER'S MANUAL	5
HAZARDS	5
ILLUSTRATIONS IN OWNER'S MANUAL	5
GENERAL PROCEDURES AND SAFE HANDLING	6
GENERAL LIPO BATTERY SAFETY AND WARNINGS	7
1. DESCRIPTION AND OPERATION	13
1.1 MODELS	14
1.2 FEATURES	14
1.3 SPECIFICATIONS	14
1.4 PACKAGE COMPONENTS	14
1.5 AIRSOFT GUN COMPONENTS	14
2. DESIGNATED OPERATION	15
2.1 LOADING THE MAGAZINE	15
2.2 ADJUSTING THE HOP-UP	16
2.3 SELECTOR LEVER AND FIRE SELECTION	18
2.4 FOLDING STOCK	20
3. GENERAL MAINTENANCE	21
3.1 GENERAL	21
3.2 CLEANING AND LUBRICATION	21
3.3 QUICK CHANGE SPRING	21
4. TRANSPORTATION	23
5. STORAGE	23
6. SCHEMATICS	24
7. WARRANTY	25

KR-19® SERIES
AK AUTOMATIC ELECTRIC RIFLE SERIES

 OWNER'S MANUAL

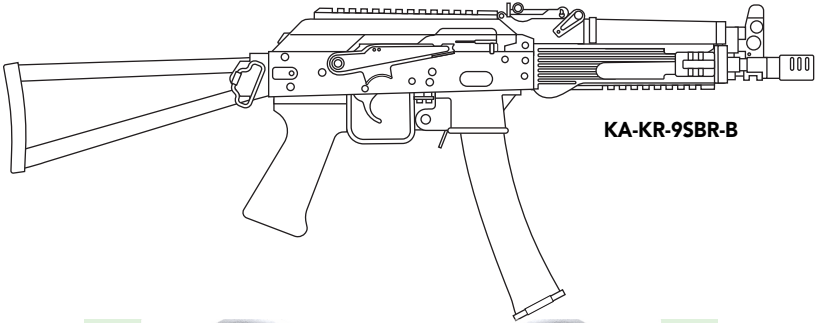

KA-KR-9SBR-B



UNIVERSO SNIPER
AIRSOFT

VISPOL
AIRSOFT



DANGER!

PRIOR TO REMOVING THIS AIRSOFT GUN FROM ITS PACKAGING, AND PRIOR TO HANDLING, LOADING AND FIRING, CAREFULLY AND THOROUGHLY READ AND UNDERSTAND THIS ENTIRE OWNER'S MANUAL WHICH GIVES ADVICE ON THE AIRSOFT GUN'S PROPER HANDLING, FUNCTIONING AND SAFE USE. YOUR SAFETY AND THAT OF OTHERS (INCLUDING YOUR FAMILY) DEPENDS ON YOUR RESPONSIBLE COMPLIANCE WITH THAT ADVICE, GOOD JUDGMENT AND COMMON SENSE. AIRSOFT GUN SAFETY DEPENDS ON YOU. YOU CANNOT FORGET, YOU CANNOT OVERLOOK, YOU CANNOT ALLOW YOURSELF TO BE DISTRACTED, YOU CANNOT BECOME COMPLACENT OR CASUAL WITH AIRSOFT GUNS. THERE ARE NO "FOOLPROOF" AIRSOFT GUNS. ONCE A SHOT IS FIRED, IT CAN NOT BE CALLED BACK. AN AIRSOFT GUN IN YOUR HANDS CAN CAUSE UNINTENDED DEATH OR SERIOUS BODILY HARM IF YOU FAIL TO FOLLOW SAFE GUN HANDLING RULES AND PRACTICES SUCH AS THOSE CONTAINED IN THIS MANUAL.

REMEMBER, AIRSOFT GUN SAFETY DEPENDS ON YOU! IF YOU ARE UNFAMILIAR WITH AIRSOFT GUNS, SEEK SUPERVISED INSTRUCTION FROM A CERTIFIED INSTRUCTOR OR AIRSOFT TECHNICIAN.

Important **WARNINGS** and **SAFETY PRECAUTIONS** must be read and understood before using this airsoft gun. **SAFE AIRSOFT GUN HANDLING IS YOUR PERSONAL RESPONSIBILITY AT ALL TIMES.** Disregarding the warnings and safety precautions in this manual can result in injury or death to you and others, as well as damage to property.

- Directions and procedures for handling, loading, firing, unloading, disassembling and assembling this airsoft gun.
- Instructions for care, cleaning and repair of this airsoft gun. This OWNER'S MANUAL is designed to help you in learning how to properly and safely use and care for your Kalashnikov USA AEG rifle. Only when you are certain you have fully familiarized yourself with the function of your airsoft gun should you practice loading, unloading, and firing with live rounds of ammunition at a firing range or other safe location.

This OWNER'S MANUAL should always accompany the airsoft gun and be transferred with the airsoft gun on change of ownership or possession. Should you ever need to replace it, this manual is available FREE upon request from Lancer Tactical or on the Lancer Tactical website at www.lancertactical.com

ICONS IN OWNER'S MANUAL

Before you start, familiarize yourself with the warning icons you will see:

HAZARDS



DANGER—indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING—indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION—indicates a potentially hazardous situation or an unsafe practice, which, if not avoided, could result in minor or moderate injury or property damage.

ILLUSTRATIONS IN OWNER'S MANUAL

The illustrations in this manual may differ slightly from the actual product. The illustrations in this manual are related to the right handed shooter configuration.

GENERAL PROCEDURES & SAFE HANDLING



WARNING

WARNING! Always make sure your airsoft gun is unloaded before cleaning, storing, transporting or handing it to another person. Airsoft guns should be transported unloaded and in a protective gun case.

Siempre asegúrese de que su arma de airsoft esté descargada antes de limpiarla, almacenarla, transportarla o entregársela a otra persona. Las armas de Airsoft deben transportarse descargadas y en un estuche protector para armas.



WARNING

WARNING! Always wear and require others to wear commercially-manufactured eye protection when shooting.

Siempre use y exija a los demás que usen protección para los ojos fabricada comercialmente cuando dispare.



WARNING

WARNING! Obey all local, state and federal laws regarding possession, storage, shooting and transporting of your airsoft gun.

Obedezca todas las leyes locales, estatales y federales con respecto a la posesión, almacenamiento, tiro y transporte de su arma de airsoft.



WARNING

WARNING! Only point the muzzle at an intended target. Practicing good muzzle control will prevent others from becoming injured and lower the amount of friendly-fire.

Solo apunte el cañón hacia el objetivo previsto. Practicar un buen control de el cañón evitará que otros se lastimen y reducirá la cantidad de fuego amigo.



CAUTION

CAUTION! If your gun fails to fire, take precautions. If your airsoft gun fails to function as it should and you can't correct the issue in-game, unload the magazine.

Si su arma no dispara, tome precauciones. Si su arma de airsoft no funciona como debería y no puede corregir el problema en el juego, descargue el cargador.



CAUTION

CAUTION! Avoid pulling the trigger carelessly. Do not place your finger on the trigger when not in use. Always have the selector switch set to safe when not in use.

Evite apretar el gatillo sin cuidado. No coloque el dedo en el gatillo cuando no esté en uso. siempre tenga el interruptor selector en posición segura cuando no esté en uso.



WARNING

WARNING! Careless and improper handling of this airsoft gun could result in unintended discharge, causing injury, death or property damage. Safety must be the first and in constant consideration when handling an airsoft gun.

 
El manejo descuidado e inadecuado de esta pistola de airsoft podría resultar en una descarga no intencionada, causando lesiones, muerte o daños a la propiedad. La seguridad debe ser la primera y constante consideración cuando se maneja una arma de airsoft.



CAUTION

CAUTION! This airsoft gun was designed to function properly in its original condition. Do not alter any parts. Do not replace any parts unless you are trained to do so and then use only original factory parts from Lancer Tactical. Any alterations or changes made to an airsoft gun after its manufacture can make the gun unsafe and could void its warranty.

Esta pistola de airsoft fue diseñada para funcionar correctamente en su estado original. No altere ninguna pieza. No reemplace ninguna pieza a menos que esté capacitado para hacerlo y solo usar piezas originales de fábrica de Lancer Tactical. Cualquier alteración o cambio realizado en un arma de airsoft después de su fabricación puede hacer que la arma no sea segura y podría anular su garantía.

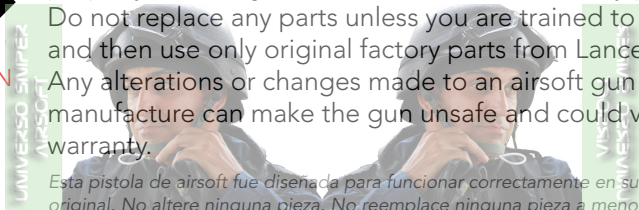

WARNING

WARNING! Always handle and treat your airsoft gun as if it were loaded so you will never fire it accidentally when you mistakenly think it is unloaded. Never take anyone's word that it is unloaded. Always check it yourself with your fingers off the trigger and the airsoft gun pointed in a safe direction. Even after you have confirmed that the airsoft gun is unloaded, continue to treat it as if it were loaded. Never look down a barrel.

Siempre trate su arma de airsoft como si estuviera cargada para que nunca la dispare accidentalmente cuando crea que está descargada. Nunca tome la palabra de nadie de que está descargada. siempre verifiquelo usted mismo con los dedos fuera del gatillo y la pistola de airsoft apuntando en una dirección segura. Incluso después de haber confirmado que la arma de airsoft está descargada, continúe tratándola como si estuviera cargada. Nunca mire hacia abajo de un barril.



WARNING! Do not pull the trigger or attempt to fire until the safety selector has been moved to the **"FIRE"** position.

No apriete el gatillo ni intente disparar hasta que el selector de seguridad se haya movido a la posición "FIRE".



DANGER! DO NOT allow any fingers of your non-shooting hand to enter the trigger guard at any time. If you do so, there is a chance your non-shooting hand or fingers could touch the trigger, unintentionally firing the airsoft gun and resulting in death or serious injury.

NO permita que ningún dedo de la mano con la que no dispara entre en el guardamonte en ningún momento. Si lo hace, existe la posibilidad de que su mano o dedos que no disparan puedan tocar el gatillo, disparando involuntariamente la pistola de airsoft y provocando la muerte o lesiones graves.



DANGER! Always keep the safety on **"SAFE"** and your finger outside the trigger area, wrapped around the grip or braced on the airsoft gun's receiver, until you intend to fire.

Mantenga siempre el seguro en "SAFE" y su dedo fuera del área del gatillo, envuelto alrededor de la empuñadura o apoyado en el receptor de la pistola de airsoft, hasta que tenga la intención de disparar.



WARNING! This airsoft gun should always be carried with the chamber empty and with the safety on **"SAFE"** to prevent accidental discharge.

La pistola de airsoft siempre debe llevarse con la recámara vacía y con el seguro en "SAFE" para evitar descargas accidentales.



WARNING! Keep the airsoft gun's muzzle pointed in a safe direction at all times. A safe direction is one in which an unintentionally fired shot will not cause any physical injury or property damage. Never let the muzzle of a airsoft gun point at any part of your body or another person, or in any direction where an injury may result if the airsoft gun were to fire. Always be sure of your target and what's beyond and around it before firing.

.Mantenga la boca del arma de airsoft apuntando en una dirección segura en todo momento. Una dirección segura es aquella en la que un disparo no intencionado no causará lesiones físicas ni daños a la propiedad. Nunca deje que la boca de una pistola de airsoft apunte a ninguna parte de su cuerpo o de otra persona, o en cualquier dirección donde pueda resultar en una lesión si la pistola de airsoft fuera a disparar. Asegúrese siempre de su objetivo y de lo que rodea antes de disparar.



WARNING

WARNING! Always make sure your airsoft gun is not loaded before cleaning, storing, transporting or handing it to another person. Airsoft guns should be transported unloaded and in a protective gun case.

Siempre asegúrese de que su arma de airsoft no esté cargada antes de limpiarla, almacenarla, transportarla o entregársela a otra persona. Las armas de Airsoft deben transportarse descargadas y en un estuche protector para armas.



CAUTION

CAUTION! Horseplay has no place around firearms. Guns can't think – you can! **SAFETY DEPENDS ON YOU!**

Las payasadas no tienen cabida en las armas de airsoft. Las armas de Airsoft no pueden pensar, ¡tú puedes! ¡LA SEGURIDAD DEPENDE DE TI!



CAUTION

CAUTION! Remember, safety is your responsibility. Be a safe shooter. **SAFETY DEPENDS ON YOU!**

Recuerde, la seguridad es su responsabilidad. Sea un tirador seguro. ¡LA DEPENDE

UNIVERSO SIMPER
AIRSOFT

UNIVERSO SIMPER
AIRSOFT

CAUTION! FOLLOW THE LAW. Obey all local, state and federal laws regarding possessing, storage, shooting and transporting of your airsoft gun.

SIGA LA LEY. Obedezca todas las leyes locales, estatales y federales con respecto a la posesión, el almacenamiento, el tiro y el transporte de su arma de airsoft.



CAUTION

GENERAL LIPO BATTERY SAFETY AND WARNINGS



WARNING! Handle with proper care - lithium polymer (lipo) batteries are extremely volatile and failure to follow this product's instructions could result in fire, damage to property, injury to self or others, and/or even death.

Manipule con el cuidado adecuado: las baterías de polímero de litio (lipo) son extremadamente volátiles y el incumplimiento de las instrucciones de este producto podría provocar incendios, daños a la propiedad, lesiones a sí mismo o a otras personas e incluso la muerte. *A manipuler avec précaution. Les batteries Lithium polymère (Lipo) sont extrêmement sensibles. Si vous ne respectez pas les instructions, elles peuvent prendre feu, vous blessez ou blesser des tiers, et endommager vos biens.*



DANGER! Adult supervision required at all times when charging a lipo battery. Keep away from children and minors. Never leave a battery charging unattended. Always unplug the lipo battery within the hour when charging is complete.

Se requiere la supervisión de un adulto en todo momento cuando se carga una batería lipo. Mantener alejado de niños y menores. Nunca deje una batería cargando sin supervisión. Siempre desenchufe la batería lipo dentro de la hora de cuando se completa la carga. *A utiliser sous le supervision d'un adulte uniquement. A tenir hors de portée des enfants. Ne jamais laisser une batterie en charge sans surveillance. Ne jamais charger une batterie en dehors d'un sac de recharge pour batterie Lipo.*



WARNING! Do not modify, alter, or use the battery for any other purpose that it is not intended for. This battery and/or charger is sold for the sole purpose of airsoft use only.

No modifique, altere ni utilice la batería para ningún otro propósito para el que no esté diseñada. Esta batería y/o cargador se vende con el único propósito de usar Airsoft únicamente.

Ne pas modifier, altérer ou utiliser la batterie pour une autre destination que celle de l'airsoft.



WARNING! Inspect the lipo battery before use or charging of this battery. You need to properly dispose of the battery if visually damaged, deformed, rusted, wet, hot, or exceed the expiration of use (3 years since first use).

Inspeccione la batería lipo antes de usarla o cargarla. Necesita un espacio para desecharla si está visiblemente dañada, deformada, oxidada, mojada, caliente o si excede el vencimiento del uso (3 años desde el primer uso).

Inspecter la batterie avant et après chaque utilisation. A remiser immédiatement si la batterie est visuellement endommagé, ou si celle-ci chauffe ou est humide, et ceux durant sa durée de vie (3 ans à compter de la première utilisation).



CAUTION

Batteries are considered hazardous waste material and must be recycled or taken to a household hazardous waste disposal facility. It is illegal to trash lipo batteries without proper disposal.

Las baterías se consideran material de desecho peligroso y deben reciclarse o llevarse a un centro de eliminación de desechos domésticos peligrosos. Es ilegal desechar las baterías lipo sin desecharlas adecuadamente.

Les batteries sont considérées comme des déchets dangereux et doivent être recyclées ou apportées à une installation d'élimination des déchets domestiques dangereux. Il est illégal de jeter des batteries lipo sans élimination appropriée.



DANGER

Lipo battery is an explosive and fire hazard. If the lipo battery becomes damaged or bent, immediately unplug the device. With caution, place the into a battery safe pack and in a fire-safe location. Monitor before disposal.

La batería Lipo es un peligro de explosión y de incendio. Si la batería lipo se daña o se dobla, desconecte inmediatamente el dispositivo. Con precaución, coloque la batería en un paquete seguro y en un lugar a prueba de incendios. Supervisar antes de desechar.

La batterie Lipo est un explosif et un risque d'incendie. Si la batterie lipo est endommagée ou pliée, débranchez immédiatement l'appareil. Avec précaution, placez le dans une batterie sécurisée et dans un endroit à l'abri des incendies. Surveiller avant élimination.



WARNING

Do not charge a lipo battery with NiMh/NiCd charger or anything else not purchased from us. For advanced chargers, please reference the device's specific instructions.

No cargue una batería lipo con un cargador NiMh/NiCd o cualquier otra cosa que no nos haya comprado. Para cargadores avanzados, consulte las instrucciones específicas del dispositivo.

Ne chargez pas une batterie lipo avec un chargeur NiMh/NiCd ou quoi que ce soit d'autre qui n'a pas été acheté chez nous. Pour les chargeurs avancés, veuillez vous reporter aux instructions spécifiques de l'appareil.



WARNING

Recharge your lipo battery at least once every 6 months to prevent over-charge of this device. Store in a cool, flame resistant, non-pressured, low humidity container out of the sun.

Recargue su batería lipo al menos una vez cada 6 meses para evitar la sobrecarga de este dispositivo. Guárdelo en un recipiente fresco, resistente al fuego, sin presión y con poca humedad, protegido del sol.

Rechargez votre batterie lipo au moins une fois tous les 6 mois pour éviter une surcharge de cet appareil. Conserver dans un récipient frais, résistant aux flammes, sans pression et à faible humidité, à l'abri du soleil.



CAUTION

Do not smoke near or leave the device unattended by flammable material. Unplug the charger immediately if your battery swells or is damaged. Charge only in the recommended temperature range of 40-90°F (5-32°C).

No fume cerca ni deje el dispositivo desatendido cerca de un material inflamable. Desconecte el cargador inmediatamente si su batería se hincha o se daña. Cargue solo en el rango de temperatura recomendado de 40-90°F (5-32°C).

Ne pas fumer à proximité de la batterie ou laisser la batterie dans un endroit chaud. Charger uniquement dans les conditions adéquates de températures : entre 5°C et 32°C maximum. (40-90°F).



DANGER

Always unplug the battery from airsoft gun when charging and when not in use. Never discharge lipo battery packs with a discharger. Stop the use of your AEG if the motor slows down - overuse of the battery may result in a fire.

Siempre desenchufe la batería de la pistola de airsoft cuando la esté cargando y cuando no esté en uso. Nunca descargue paquetes de baterías lipo con un descargador. Detenga el uso de su AEG si el motor se ralentiza; el uso excesivo de la batería puede provocar un incendio.

 
Débranchez toujours la batterie du pistolet airsoft lors du chargement et lorsqu'il n'est pas utilisé. Ne jamais décharger les batteries lipo avec un déchargeur. Arrêtez l'utilisation de votre AEG si le moteur ralentit - une utilisation excessive de la batterie peut provoquer un incendie.



1. DESCRIPTION AND OPERATION

1.1 MODELS

The full licensed Kalashnikov USA KR-9 SBR AEG series comes in the sub-machine configuration with a 1:1 scale based on the Russian PP-19-01 "Vityaz." Includes a detachable mid-cap magazine which is available in 9 x 19 millimeter. Models, specifications are subject to change.

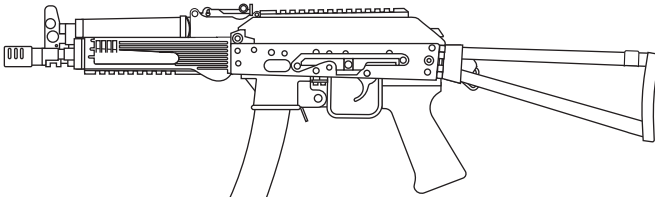

The **KP-9** is a USA designed 9mm AK style sub-machine gun. It is based on the Russian Vityaz-SN submachine gun, accepts 9x19 mm magazines. The KP-9 comes with attached picatinny railing, deans wired connector, and attached folding stock.

1.2 FEATURES

This Kalashnikov USA sub-machine gun includes:

- Reliable and rugged design of Mikhail Kalashnikov
- US innovation utilizing state of the art manufacturing processes
- Two position safety lever: Fire and Safe
- Front Post Sight and Rear Leaf Sight
- Detachable Magazine
- No special tools required for field stripping

1.3 SPECIFICATIONS

MODEL	CALIBER	OPERATION	LENGTH/FOL	WEIGHT	HANDGUARD	CONNECTION	STOCK
KR-9	9mm	AEG	28"/ 8.5"	6"	6.5"	Deans	Side Folding Stock

1.4 PACKAGE COMPONENTS

 
The set consists of the following main components:

- Airsoft AEG Rifle
- Magazine
- Carrying Case
- Cleaning Rod
- Owner's Manual



The rifle's components are shown in Schematic (page 26).

1.5 AIRSOFT GUN COMPONENTS

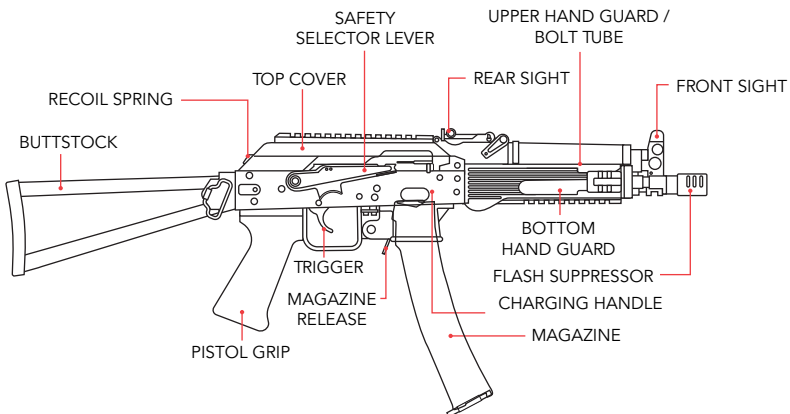

2. DESIGNATED OPERATION

2.1 LOADING THE MAGAZINE

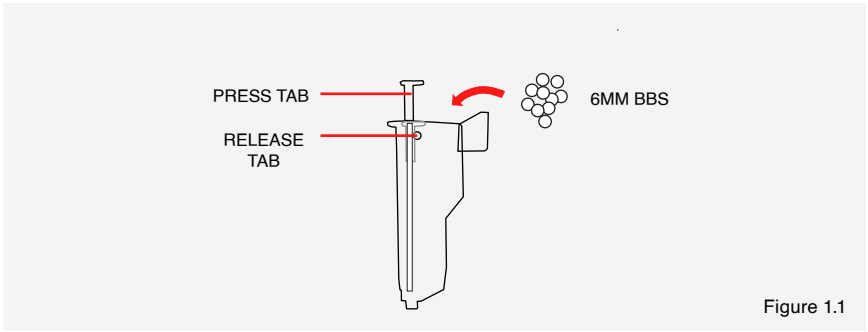 


Figure 1.1

FIGURE 1.1 — SPEED LOADER DIAGRAM

- As shown in Figure 1.1, with the magazine, PRESS the RELEASE TAB on the speed loader marked “PUSH OPEN” to release the PRESS TAB. Open the lid marked “OPEN” and load BBS into the speed loader chamber until full.

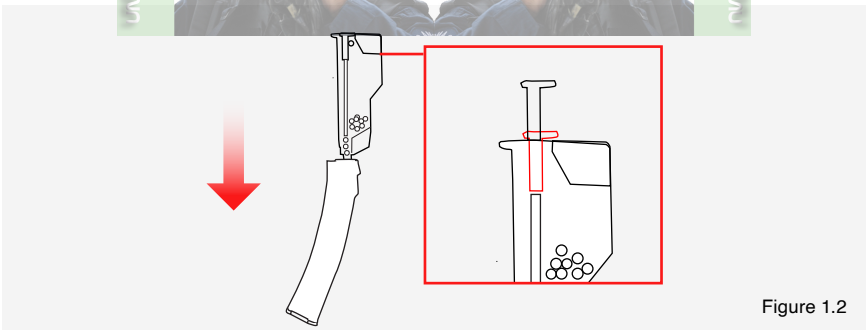 


Figure 1.2

FIGURE 1.2 — LOADING THE MAGAZINE

- As shown in Figure 1.2, hold the BB speedloader vertical to the magazine and firmly PRESS the nozzle to the magazine opening, then PRESS down on the PRESS TAB pushing BBs into the magazine until full.



CAUTION

CAUTION - Do not overfill the magazine. The magazine holds approximately 90 BBs. Over filling may cause damage to the magazine's internals and may BB feeding issues. Additionally, extended storage of a loaded magazine will, over-time, place wear onto the springs and reduce its functional lifespan.

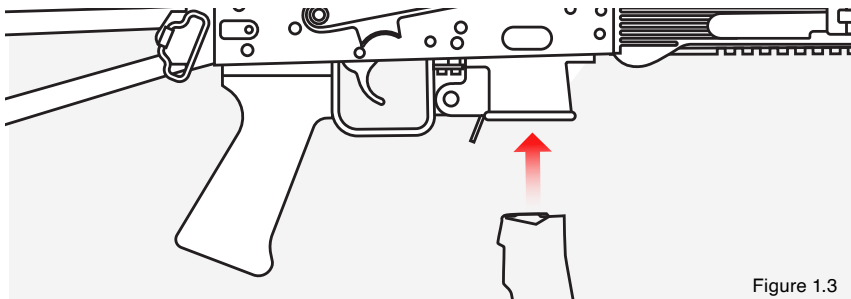 


Figure 1.3

FIGURE 1.3 — LOADING THE MAGAZINE

- As shown in Figure 1.3, hold the magazine with one hand and INSERT the feeding side into the airsoft gun's MAGWELL ensuring the magazine locks firmly into place.

2.2 ADJUSTING THE HOP-UP

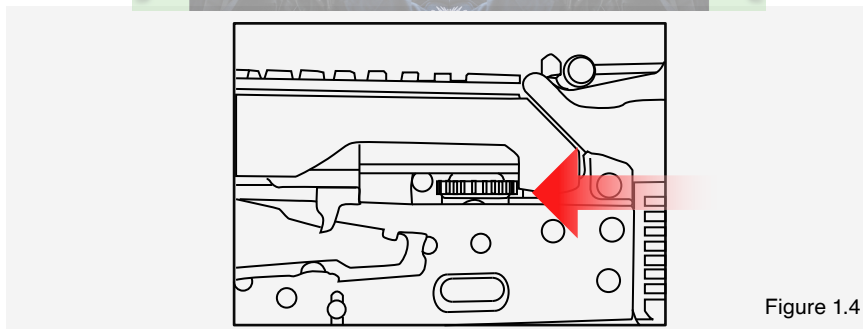 


Figure 1.4

FIGURE 1.4 — AJUSTING THE HOP-UP

- As shown in Figure 1.4, pull the charging handle back and lock and hold it back with the SELECTOR LEVER set to "SAFE" with the ejection port cover open, adjustment to the ROTARY HOP-UP WHEEL can be made through

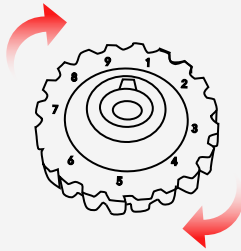 


Figure 1.4

FIGURE 1.5 — THE HOP-UP ROTARY WHEEL

- As shown in Figure 1.5, the dial numbers on the ROTARY WHEEL can be viewed through either the EJECTION PORT or by raising the DUST COVER.
- The numbers on the dial indicate the level of applied Hop-Up to the BBs. Straight is set at 5, the closer to 1 the Hop-up will curve the BB down, conversely the closer to 9 the BB will curve up.

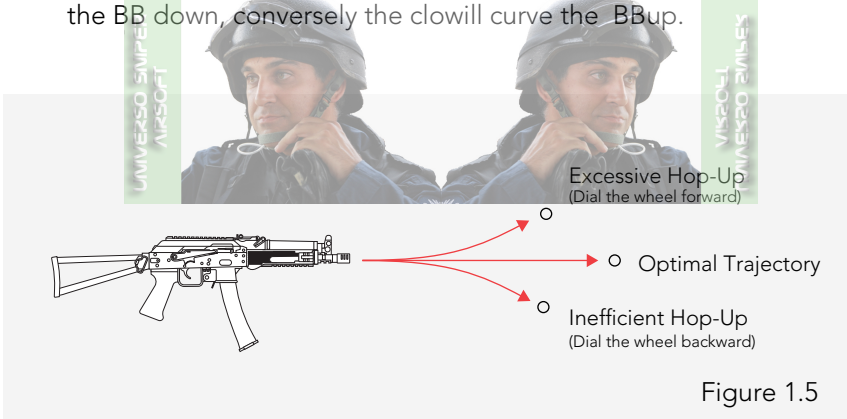 


Figure 1.5

FIGURE 1.6 — TRAJECTORY AND BB HOP-UP

- As shown in Figure 1.6, the trajectory of the BB is affected by the Hop-Up placed onto the BB and the conditions of the environment (i.e wind). Take several shots as you make minor adjustments to the ROTARY HOP-UP WHEEL until the BB arches into an optimal trajectory path.

2.3 SELECTOR LEVER AND FIRE SELECTION

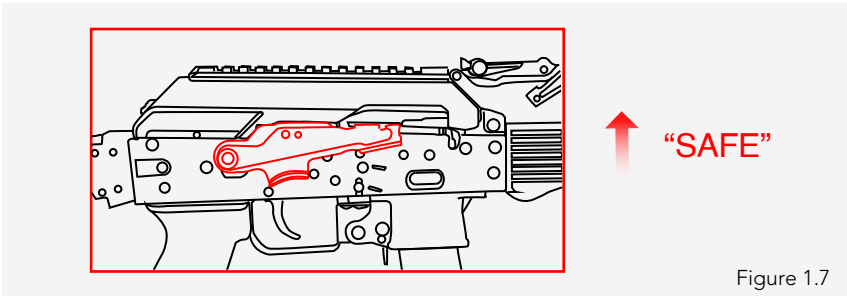 


FIGURE 1.7 — SAFE

- As shown in Figure 1.7, Safe, indicated by the SELECTOR LEVER, when set to the SELECTOR LEVER is set to the TOP POSITION it will lock the trigger and prevent the airsoft gun from firing.

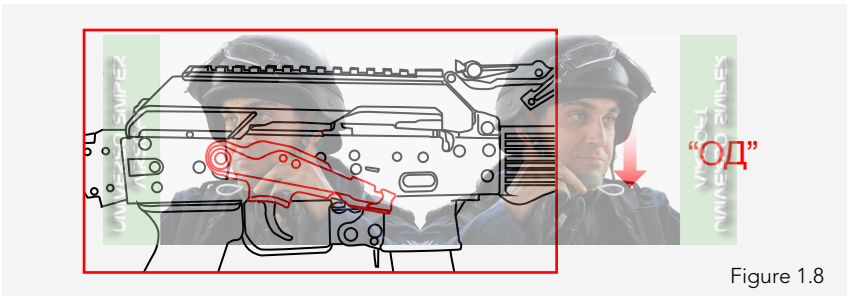 


FIGURE 1.8 — SEMI-AUTOMATIC

- As shown in Figure 1.8, "SEMI-AUTOMATIC" mode, indicated by "ОД" on the SELECTOR SWITCH, will fire one single BB for each pull of the trigger.

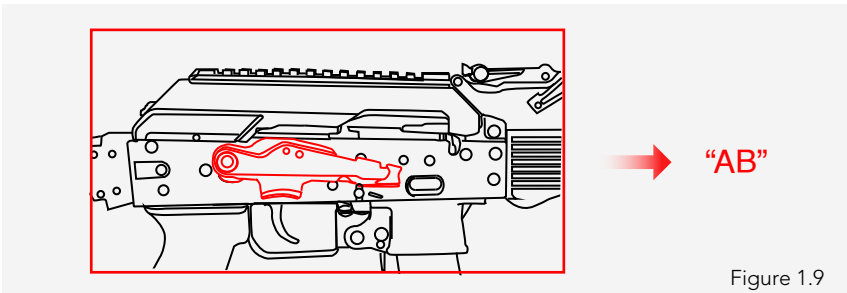 


FIGURE 1.9 — FULL-AUTOMATIC

- As shown in Figure 1.9, “FULLY-AUTOMATIC” mode, indicated by “AB” on the SELECTOR SWITCH, will continuously fire as long as the TRIGGER is kept depressed and the BB ammunition feeding remains available.

2.4 CONNECTING THE LIPO BATTERY

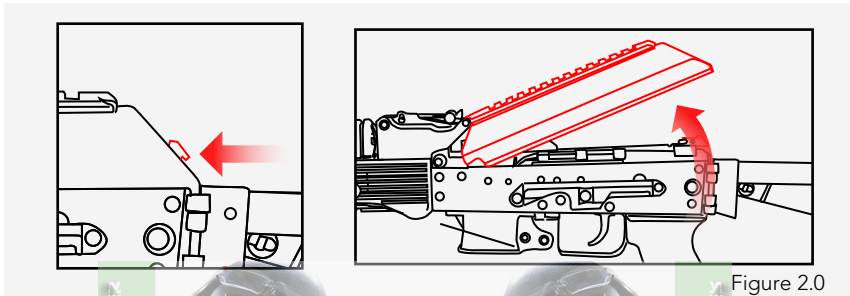 


Figure 2.0

FIGURE 2.0 — OPENING THE DUST COVER

- As shown in Figure 2.0, firmly PRESS the release button located at the rear end of the DUST COVER. The cover will rise allowing access to the BATTERY STORAGE compartment.

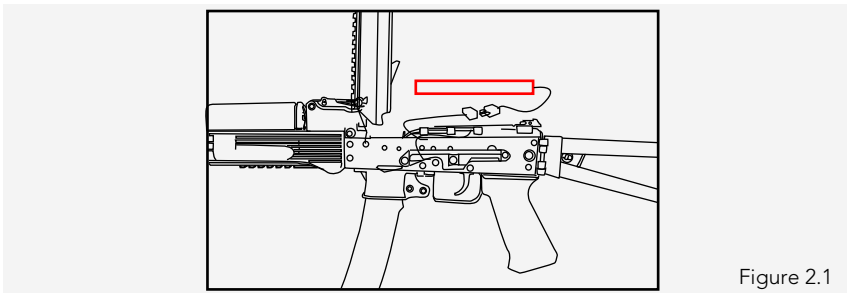 


Figure 2.1

FIGURE 2.1 — CONNECTING THE BATTERY

- As shown in Figure 2.1, Connect the Deans LIPO BATTERY to the DEANS WIRED connection, placing the battery such that it lays flat along the length of the BATTERY STORAGE compartment.

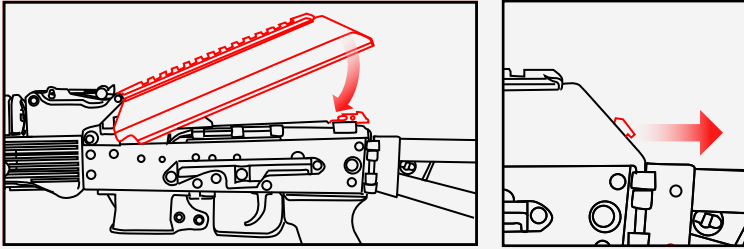 


Figure 2.2

FIGURE 2.2 — CLOSING THE DUST COVER

- As shown in figure 2.2, after ensuring all wirings are tucked neatly into the BATTERY STORAGE compartment. Lower the DUST COVER back onto the receiver until the PUSH BUTTON locks into place.



CAUTION

CAUTION - Always adhere to all Lipo Battery safety and guidelines. Use only 11.1V 1000 mAh 15c LIPO or 11.1 V 1000 nimh or lower. If your battery is hot, swelling, warm to the touch, disconnect the battery and. Extreme fire danger. Page for all warnings.

2.4 FOLDING STOCK

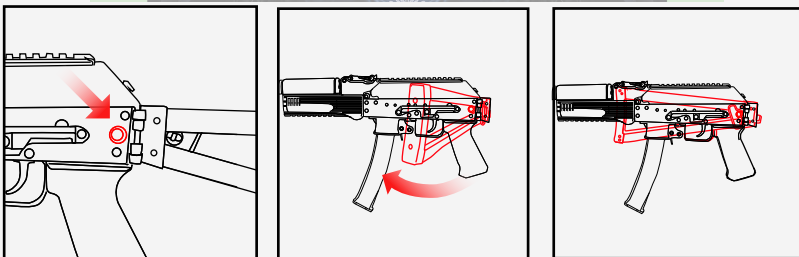 


Figure 2.3

FIGURE 2.3— FOLDING THE STOCK

- As shown in Figure 2.3, PRESS down on the FOLDING STOCK RELEASE BUTTON, unlocking it from the locked position.
- Fold the stock back onto the airsoft gun until it attaches to the RECEIVER, firmly snapping the stock into the locked closed position.

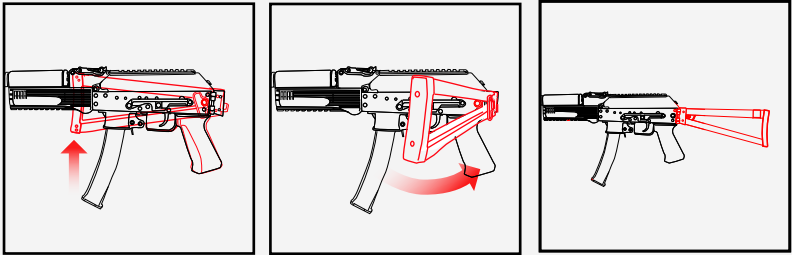 


Figure 2.4

FIGURE 2.4 — OPENING THE STOCK

- As shown in Figure 2.4, apply upwards force to the bottom rear folding stock, pushing up to remove pressure off the retaining clasp. This will allow for the stock to release and fold back into the open position.

3. GENERAL MAINTENANCE

3.1 GENERAL

 
 
Airsoft guns, like live firearms, must be cleaned and maintained with proper gun care. An unmaintained or neglected airsoft gun could result in malfunctions, misfires, locked gears, and or become inoperable. Whether target shooting, airsofting, or simulation training; be sure to take proper care of your airsoft gun.

3.2 CLEANING AND LUBRICATION

- Periodically use a inner varrel cleaning/unjamming rod with a fabric end to clear out any debris, obstructions, or dust occumulated from prolonged storage.
- Use a small amount of silicone lubricant oil to maintain the moving parts of your airsoft gun.

3.3 QUICK CHANGE SPRING

The airsoft gun comes equipped with a quick access spring port allowing for the replacement of universal springs.

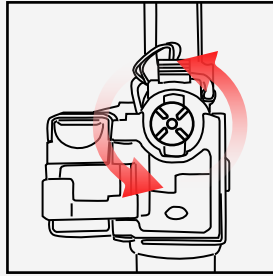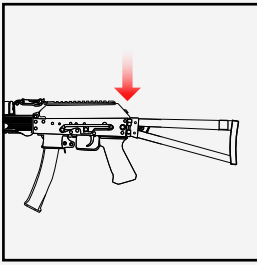

2.5MM

Figure 2.6

FIGURE 2.6 — QUICK CHANGE SPRING PORT

- As shown in Figure 2.6, located at the rear end of the receiver is the QUICK CHANGE SPRING PORT. CLOSE the FOLDING STOCK and LIFT the DUST COVER to access.
- Use a 2.5mm Hex Key and ROTATE the alignment cap counter-clockwise to access the cover for the Quick Change Spring.

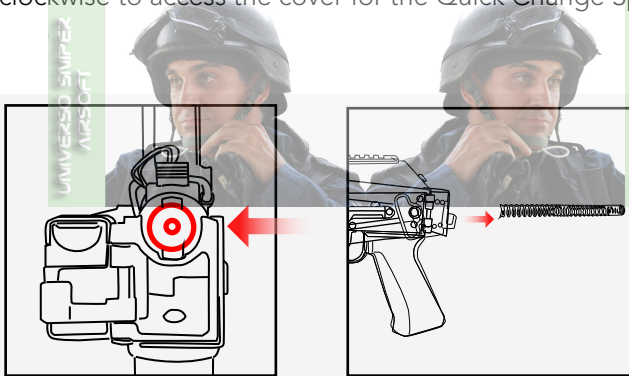 


Figure 2.7

FIGURE 2.7 — QUICK CHANGE SPRING REMOVAL

- As shown in Figure 2.7, use a slotted head screw driver to push in and release the spring. Remove and replace the with universal spring to adjust the FPS of the airsoft gun.

4. TRANSPORTATION

4.1 Transport the airsoft rifle/pistol in a carrying case to protect it from shocks and drops.

 
5. STORAGE

5.1 As packed by the manufacturer, store the airsoft rifle/pistol for no longer than 12 months without re-preservation (shorter periods in damp cold or humid environments).

5.2 Store the airsoft gun in dry premises without sharp temperature fluctuations, away from heating devices. Aggressive impurities should be absent in the ambient air. The airsoft gun should be always unloaded, the magazine detached and the safety should be in the (Safe) "S" position. The airsoft gun should be cleaned and lubricated before storage. Store in a gun safe or other proper secure system inaccessible to minors.



6. SCHEMATICS

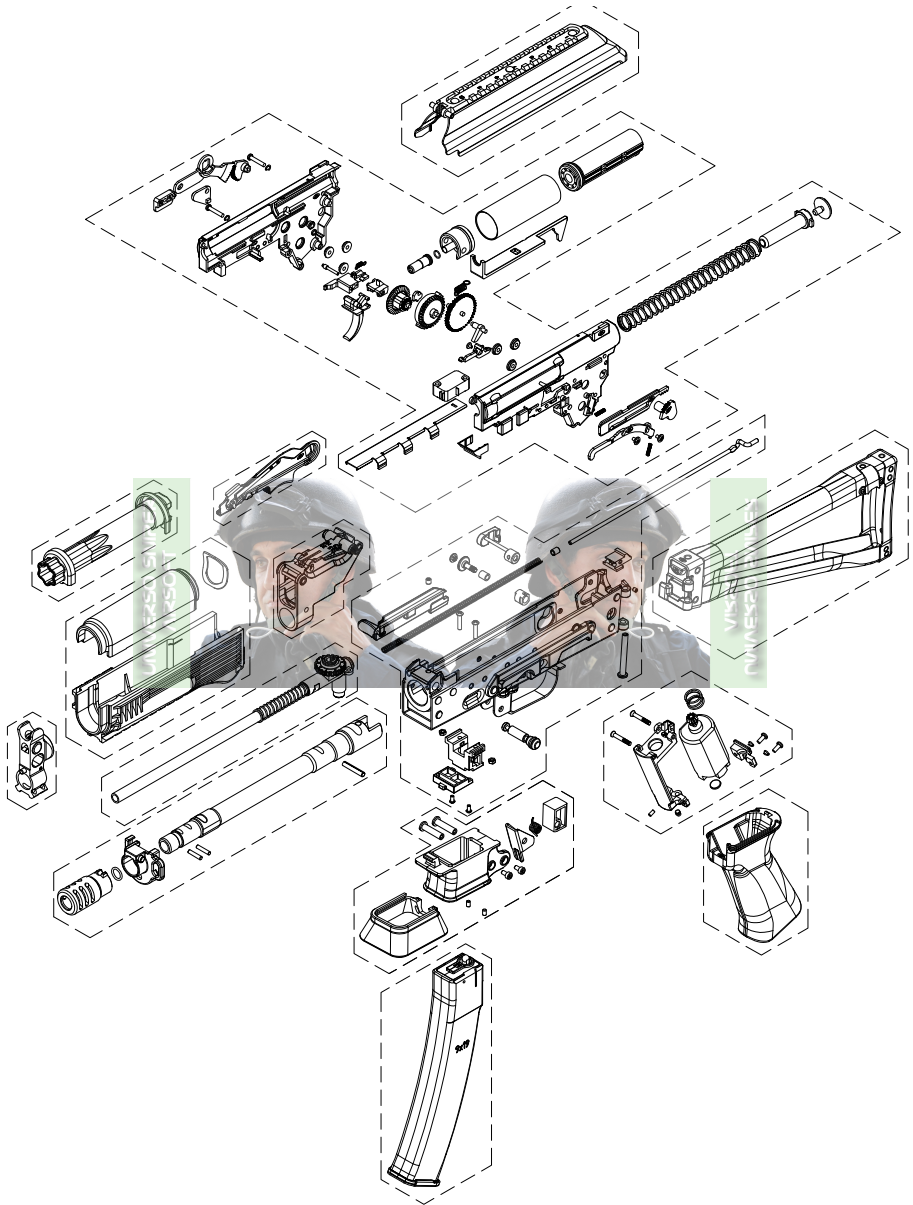

7. WARRANTY




LANCER TACTICAL LIMITED WARRANTY:

Lancer Tactical airsoft guns are manufactured to the highest quality standards. Each firearm is tested and the quality is assured before the airsoft gun leaves the factory. All airsoft guns manufactured by Lancer Tactical have a limited 1 year warranty to the original purchaser. Original retail purchase date is verified by your sales receipt and proof of purchase from an authorized dealer.

This Limited Warranty covers defects in material and/or workmanship for a period of 1 year from the date of purchase.

This warranty does not cover:

- Damage to the airsoft gun caused by failure to provide proper care, storage and maintenance.
- Accidents, misuse, negligence, abuse or unreasonable use.
- Use of the airsoft gun with loaded, reloaded, defective or improper BBS.
- Damage caused by barrel obstruction.
- Unauthorized gearbox adjustment, disassembly, repairs, or modifications.
- Normal wear and tear, including barrel bore wear or corrosion.
- FINISH OR SURFACE COATINGS
- Loss or damage occurring during return shipment.
- Physical injury or property damages resulting in whole or in part from criminal use or negligent, or IMPROPER handling.
- This warranty does not cover second and subsequent owners of this firearm.

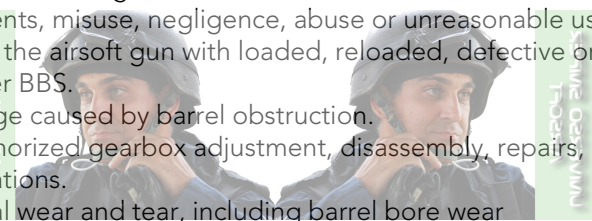

If you discover a workmanship defect during the warranty period, Lancer Tactical will, at its option, repair or replace the airsoft gun with a comparable airsoft gun at no charge.

A service or handling charge may be required for non warranty repairs. Lancer Tactical excludes and will not pay incidental or consequential damages with respect to economic loss, injury or property damage resulting from the breach of either the express or implied warranty.

If you have any questions, concerns or service or warranty issues please email our customer service department at info@lancertactical.com. Customer service will provide shipping instructions. If you do not have an owner's manual, please download it from our website at www.lancertactical.com/owners-manual.

For warranty registration, please visit:
www.zionarms.com/warranty-registration.



This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.p65Warnings.ca.gov



Este producto puede exponerlo a productos químicos como el plomo, que el estado de California sabe que causan cáncer y defectos congénitos u otros daños reproductivos. Para más información ir a www.p65Warnings.ca.gov





Kalashnikov USA | kalashnikov-usa.com | (754) 222-1407

Distribution by Lancer Tactical

Lancer Tactical | lancertactical.com | (562) 287-8918