

電池安裝方式適用槍型: STK-74 / RPKS74MN / TMS / LCK-106 ; 需拆下下護木內的散熱片槍款有: LCK-74MN / LCKS-74M / LCK-104 / LCK-105 / LCKMMS / G-03M / G-04M / PP-19-01
(Battery installation for STK-74 / RPKS74MN / TMS / LCK-106 ; There are some models have to unload the heat sink: LCK-74MN / LCKS-74M / LCK-104 / LCK-105 / LCKMMS / G-03M / G-04M / PP-19-01)




1. 將A組裝至BOX後與HOP-UP一起組裝至槍身。
After assemble A and BOX, put into Receiver with HOP-UP.



2. 以B固定選擇片。
Use B to fix the Selector.



3. 以C固定握把。
Use C to fix the Grip.

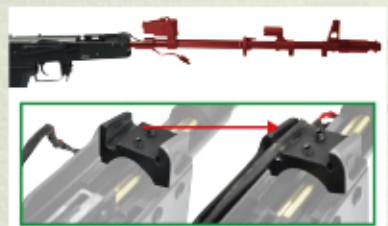


4. 將紅區域組裝至槍身後，BOX線要放入凹槽內(如線框圖示)。
Assemble Red Area to Receiver and put the Wire Assembly of Gear Box into groove (as picture of green frame)



5. 以D固定HOP-UP。
Use D to fix the HOP-UP.



6. 以E固定內槍管。
Use E to fix the Inner Barrel.

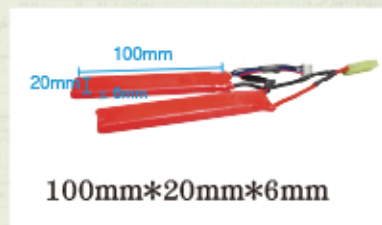


7. 電池只適用兩片式7.4V鋰電電池 (尺寸:100mm*20mm*6mm)。
Only for 7.4V Li-Po battery Two-Piece type. (size:100mm*20mm*6mm)



8. 如槍款下護木有散熱片需先將散熱片拆下，電池依圖示放入下護木，並將線整理整齊後，組裝上下護木。
If the handguard have heat sink inside, then have to unload it first. The battery is placed in the Lower Handguard as picture, put Wire Assembly in order and assemble Upper and Lower Handguard.



9. 將F組裝至槍身內。
Assemble F into Rear Sight Block.

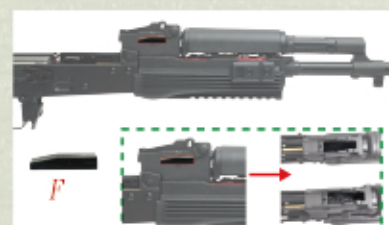


10. 再依序組裝槍機組、上蓋即組裝完成。
Assemble Bolt Carrier Set, Top Cover in order and completed.



電池安裝方式適用槍型: LCKS-74UN (Battery installation for LCKS-74UN)



組裝步驟1~7同A區
Assembly step is same as 1-7 of A area.

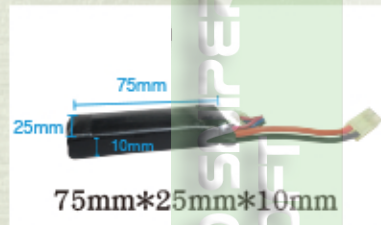

8. 電池只適用兩片式7.4V鋰電電池 (尺寸:75mm*25mm*10mm)。
Only for 7.4V Li-Po Battery Stick type. (size:75mm*25mm*10mm)



9. 電池依圖示放至上護木，將線整理整齊後組裝上護木。
The battery is placed in the Upper Handguard as picture, and assemble after putting Wire Assembly in order and assemble Upper Handguard.




10. 再依序組裝槍機組、上蓋即組裝完成。
Assemble Bolt Carrier Set, Top Cover in order and completed.




*以上產品詳細組裝步驟請參考LCT官網組裝影片
Above product details and installation steps, please refer to installation video of LCT official website.



電池安裝方式適用槍型: LCK-12 / LCK-15 / LCK-16
(Battery installation for LCK-12 / LCK-15 / LCK-16)

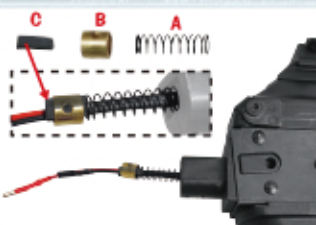

1. 依序將A、B組裝至槍機組上再將C組裝至槍內，此裝置可避免線在折疊時被折斷。
Assemble the A and B accordingly, then put C into B. This device is for protection the wire which might be clipped when folds the buttstock.

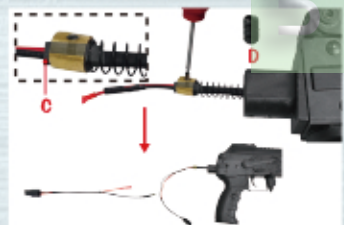


2. 以D固定C線，組裝線，C的作用在於防止折疊時線被折斷。
Use D to fix C which is in order to prevent the wire be broken when folds the screw.




3. 將線橫穿過E以紅箭頭方向固定，再以F固定。電池只適用兩片式7.4V鋰電電池 100mm*20mm*6mm 棒狀11.1V鋰電電池 95mm*18mm*18mm。
To cross the wire to E by red arrow direction, then fixed by F. The compatible batteries are 7.4 V two-piece 100mm*20mm*6mm and 11.1V stick 95mm*18mm*18mm.



4. 固定前把槍機組裝至固定孔下，避免線被受損，以G固定。
Ensure the wire be set under the hole, then fixed by G.

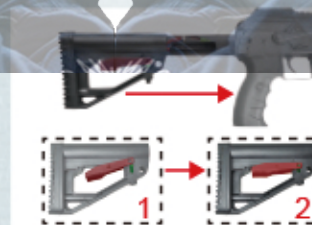


5. 組裝槍機前，先將紅區域往外拉開移至槍機上方(如圖2)，組裝完成後再將紅區域恢復(如圖2)。
Before assemble the butt stock, be sure to move the part (as red block) outward to the green position, then recover to red position.

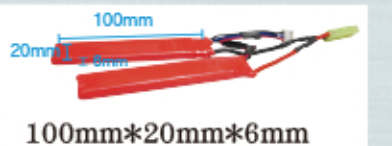

電池安裝方式適用槍型: TX-MIG / TX-5
(Battery installation for TX-MIG / TX-5)



電池只適用兩片式7.4V鋰電電池 100mm*20mm*6mm。
The compatible batteries are 7.4 V two-piece 100mm*20mm*6mm.

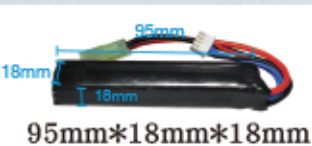

電池安裝方式適用槍型: TX-M / TK-104
(Battery installation for TX-M / TK-104)



電池只適用兩片式7.4V鋰電電池 100mm*20mm*6mm。
The compatible batteries are 7.4 V two-piece 100mm*20mm*6mm.



電池安裝方式適用槍型: LCK-74 / LCK-74M / LCKM Economy / LCKM-63 / TX-63 / RPK
(Battery installation for LCK-74 / LCK-74M / LCKM Economy / LCKM-63 / TX-63 / RPK)



1. 將槍托底板，以紅箭頭方向拆下。
To take apart the butt plate following the red arrow direction.



2. 電池只適用兩片式7.4V鋰電電池 100mm*20mm*6mm; 棒狀11.1V鋰電電池 95mm*18mm*18mm。
The compatible batteries are 7.4 V two-piece 100mm*20mm*6mm and 11.1V stick 95mm*18mm*18mm.



3. 將槍托底板，以紅箭頭方向組裝。
To assemble the butt plate following the red arrow direction.

電池安裝方式適用槍型: LTS-Keymod13.5 / LTS-Keymod9.5
(Battery installation for LTS-Keymod13.5 / LTS-Keymod9.5)



95mm*18mm*18mm



75mm*25mm*10mm



100mm*20mm*6mm

請依槍款可放的電池空間選擇適合的電池尺寸，以免發生危險。
Please choose the suitable batteries based on the battery room space in order to prevent any hurts.



The AEGs are only for 18 years old and above. All products are only for airsoft and collection purpose. DO NOT MODIFY.
このエアガンは、使用者、管理者対象年齢18才以上の競技銃です。
依照法規使用本產品須年滿十八歲，所有產品皆符合法令規定，禁止危險改造。