

STEP-1 REMOVE ORIGINAL BOLT 移除槍機飾片



Detach the dust cover.
分離上機匣蓋。


PLEASE CHECK
THE VIDEO FIRST!




Operation Video




1 Loosen the screw from receiver catch button by a hex driver.
使用六角板手鬆開機匣扣止付螺絲。

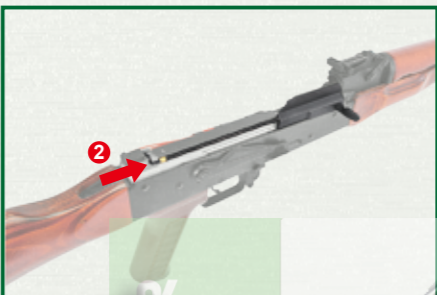

2 Push the guide pole forward and detach from the button.
將彈簧導桿往前推動使其與機匣扣分離。

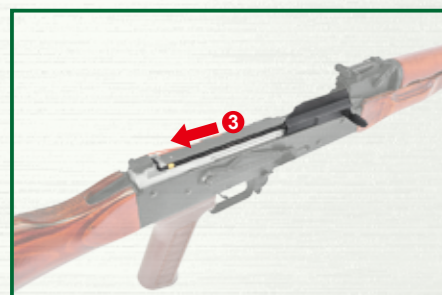

3 Remove the spring assembly.
移除彈簧總成。

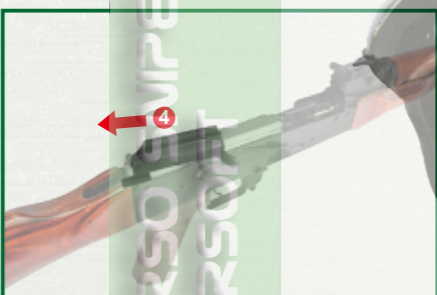


4 Pull the charging handle backward to the end and detach it from the receiver.
拉動槍機拉柄至槍身底部，向上拉起移除。

STEP-2 REMOVE CATCH BUTTON 移除機匣扣


HAND TOOLS 手工具




- A. Hammer 鎚
- B. Flat screwdriver 一字起子
- C. Metal file 金屬銼刀

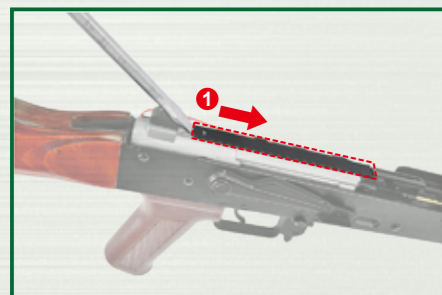

1 Using a flat screwdriver and hammer, Move the gearbox clip forward until contact with HOP-UP chamber.
使用鐵槌搭配一字起子，將齒輪箱夾片往前推動直到抵住HOP-UP座。

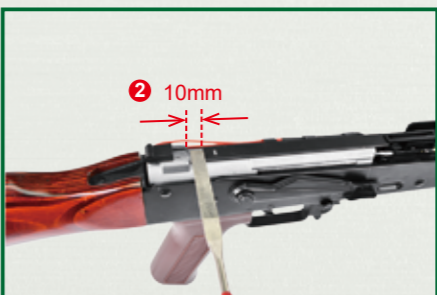


2 File the area (10mm wide) of gearbox shell to the same level with catch button area.
以銼刀打磨露出的區域(10mm寬)，使其與機匣扣底部平面等高。

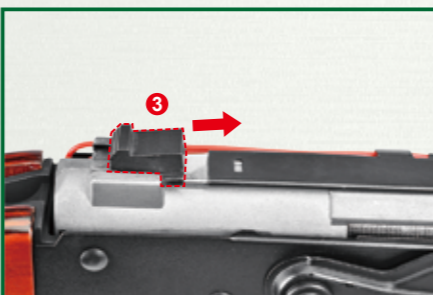


3 Remove the catch button.
移除機匣扣。

STEP-3 INSTALL DUMMY BOLT & SPRING 安裝仿真槍機與覆進簧

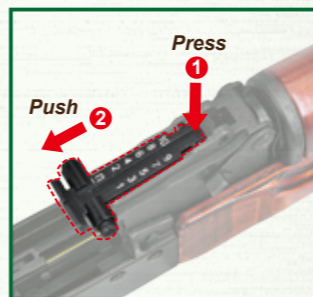

1 Press the rear sight downward then push it backward to remove the scale.
將表尺下壓並往後推出。

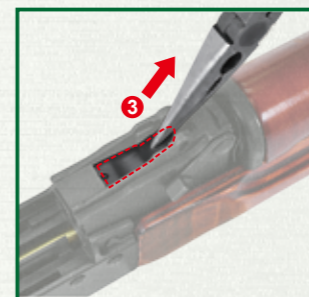


3 Remove the Leaf spring by a needle-nose plier.
使用尖嘴鉗移除表尺彈片。




4 Upside down the receiver. Put the plastic brick into the sight mount by a finger.
將槍身上下顛倒，以手指頭將塑膠塊置入表尺座。



5 Slide the plastic brick to the position (shown as photo). Let the brick be embed by finger pressing.
將塑膠塊滑動至照片位置，以手指按壓使塑膠塊嵌入表尺座。

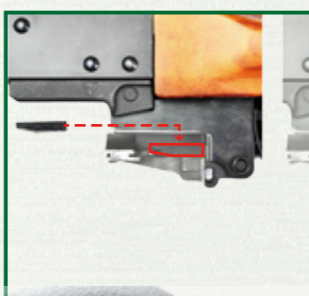


6 Insert the dummy bolt to the foremost position.
插入裝飾槍機並推動至最前方位置。

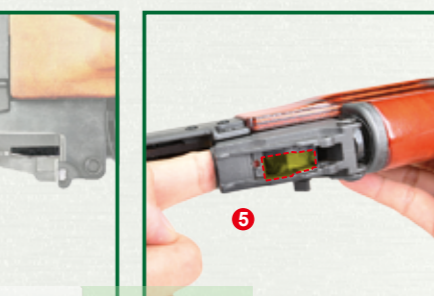


7 Flip over whole gun.
將槍身轉正。



8 Insert the spring assembly into the dummy bolt.
將覆進簧總成插入裝飾槍機位置。

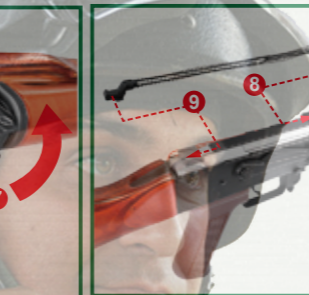

9 Slide the catch button back into the mount of gearbox.
將機匣扣推入齒輪箱尾座。

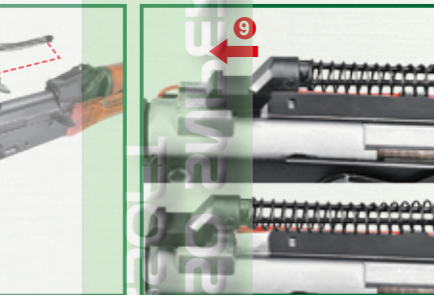

STEP-4 FINISH



1 Slide the rear sight back into the mount.
重新安裝表尺。



2 Attach the cover with receiver.
蓋回機匣蓋。

3 Pull the charging handle to make sure the dummy bolt slide smoothly.
拉動槍機拉柄數次，確認槍機可順暢移動。

NOTICE 注意事項

PK286 適用電池安裝於後托的LCK槍型，型號如下，非LCT生產型號恕無法安裝：
PK286 is applicable for following LCK models with a power socket in the buttstock.
Non-LCT production models cannot be installed:

LCK-47 / LCK-74 / LCK-74M / LCKM / LCKM Economy / LCKM-63 / RPK / TX-5 / TX-63 / TX-M / TX-MIG / LTS-Keymod 9.5 (13.5)