

 **G&G ARMAMENT**  
Company ASG System  
**Airsoft Rifle**  
*6mm Electric Semi/Full Auto System*

• <b>WARNING</b> .....	P2.P3. P4. P5
• <b>COMPONENTS</b> .....	P6.P7
• <b>BATTERY SETTING</b> .....	P8
• <b>BATTERY TYPES</b> .....	P9
• <b>MAGAZING LOADING</b> .....	P10
• <b>MAGAZING SETTING</b> .....	P11
• <b>FIRING MODE</b> .....	P12
• <b>SAFETY</b> .....	P13
• <b>SIGHT ADJUSTMENT</b> .....	P14
• <b>HOP-UP ADJUSTMENT</b> .....	P15
• <b>FIELD STRIPPING</b> .....	P16.P17
• <b>SPRING RELEASE</b> .....	P18
• <b>CAUTION</b> .....	P19

 
# **CONTENTS**

**WARNING** HANDLING CAUTIONS & INSTRUCTION MANUAL  
Always read through this manual before operation.




**G&G ARMAMENT**  
Complete AEG Series

**警告**  
WARNING

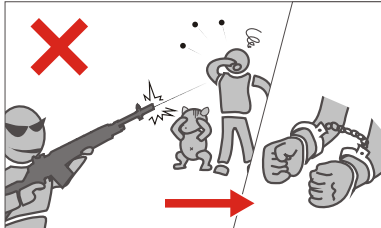


You may be punished if you damage public or personal properties or injure a person or animal even you are shooting for a practical joke. Always observe manners and enjoy healthy sport shooting.

**警告**  
WARNING

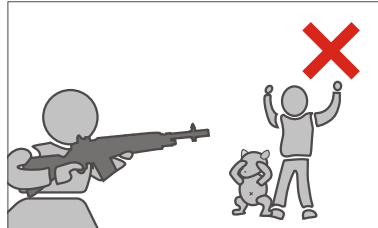

Never direct the muzzle towards a person, animal or other dangerous directions.

**警告**  
WARNING

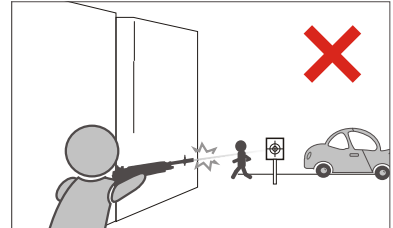


Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

2


3

**警告**  
WARNING

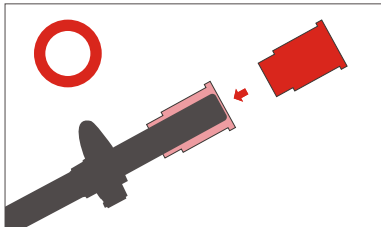


Make sure to attach the barrel end safety cap to the muzzle, except when you shooting, for preventing accidental, sudden discharge and for the dust proof propose. Never pull the trigger with the barrel end safety cap being attached.

**警告**  
WARNING

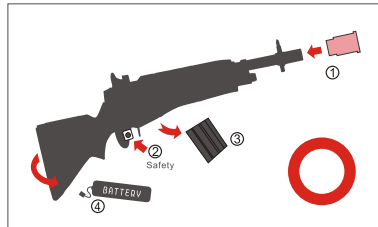

Safety procedure:  
1 - Attach the safety cap to the muzzle.  
2 - Set the selector lever to the safety position.  
3 - Remove the magazine.  
4 - Remove the battery.

**警告**  
WARNING

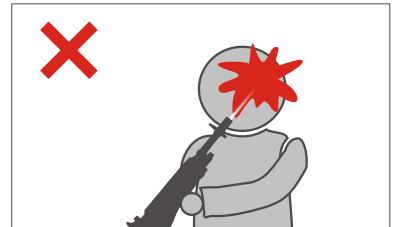

Looking in to the muzzle is extremely dangerous, regardless of with or without BBs being installed. If a BB bullet hits your eye, you may in the worst case, loose your sight.

**Airsoft Rifle**  
6mm Electric Semi/Full Auto System

 
**WARNING** HANDLING CAUTIONS & INSTRUCTION MANUAL  
Always read through this manual before operation.

**WARNING** HANDLING CAUTIONS & INSTRUCTION MANUAL  
Always read through this manual before operation.



**G&G ARMAMENT**  
Complete AEG Series

**警告**  
WARNING

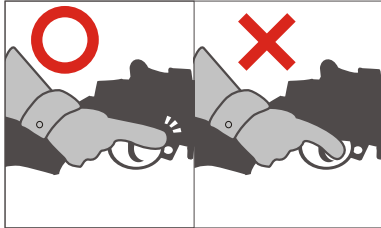


Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless the safety cap is removed and you are ready to shoot a target.

**警告**  
WARNING



When shooting the air guns for a target or game, you and all participants must wear goggles or other eye protective gear, also paying attention to ricochets. Pay sufficient attention also to third personnel other than participants.

**警告**  
WARNING

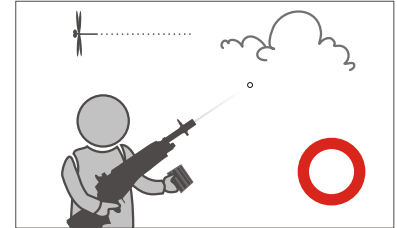


There are cases that BBs remain in the gun after the magazine is disconnected. After removal of the magazine, direct the muzzle towards a safe direction and pull the trigger to confirm that no BBs remain in the gun, then attach the safety cap.

4


5

**警告**  
WARNING

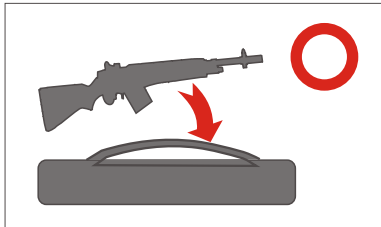


When you carry the air gun, attach the safety cap, set the selector lever to the safety position and always put it in a case or bag.

**警告**  
WARNING

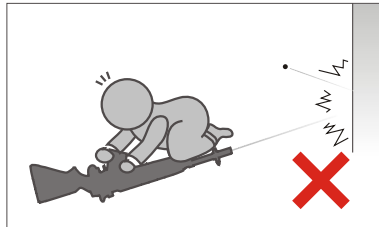

Always attach the safety cap to the muzzle, remove the battery and store the air gun in a case or bag and at a place out of reach by children.

**警告**  
WARNING

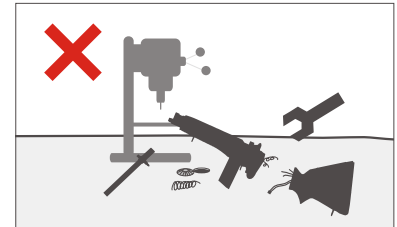

This air gun is manufactured under consideration of appropriate performance and operability. Disassembling or modifying the gun may generate danger or adversely affect the performance.


**Airsoft Rifle**  
6mm Electric Semi/Full Auto System

**WARNING** HANDLING CAUTIONS & INSTRUCTION MANUAL  
Always read through this manual before operation.

# COMPONENTS




 G&G ARMAMENT  
Complete AEG Series

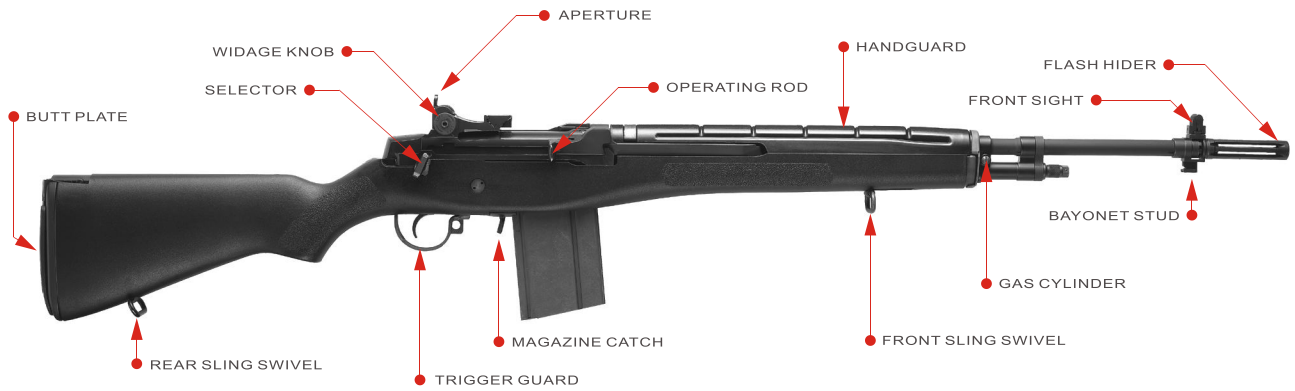

6

 7

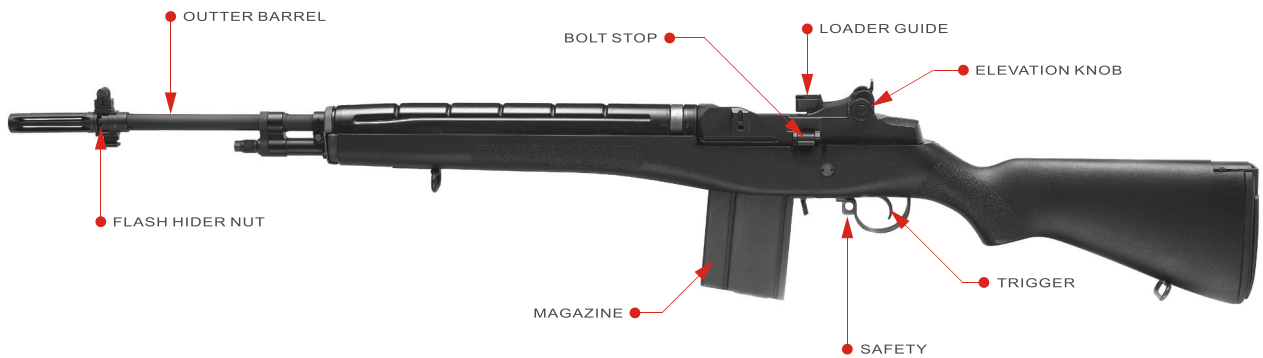

**Airsoft Rifle**  
6mm Electric Semi/Full Auto System


# COMPONENTS
 
## ▪ BATTERY SETTING



G&G ARMAMENT  
Complete AEG Series

1

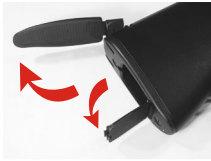


Open the butt plate and battery cover.

2



Pull out the connector  
and insert battery in the stock.

 3

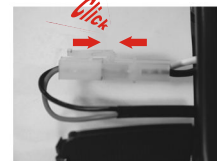

Connect the connector  
and set the connector in the space  
of stock and close the cover.

8

9



### BATTERY SELECTIONS

8.4 V -1800mAh M100  
9.6 V -1800mAh M110 - M120  
10.8V -1800mAh M130  
12 V -1800mAh M130 & UP

 
**Airsoft Rifle**  
6mm Electric Semi/Full Auto System

▪ BATTERY TYPES


## ▪ MAGAZING LOADING



G&G ARMAMENT  
Complete AEG Series

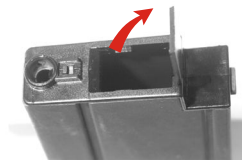


 
Open BB cover at the top of magazine and insert BBs to the magazine.

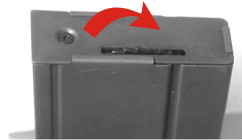

Close BB cover and turn the gear at the bottom all the way until the sound changed.

10

  11

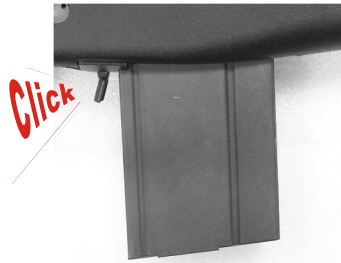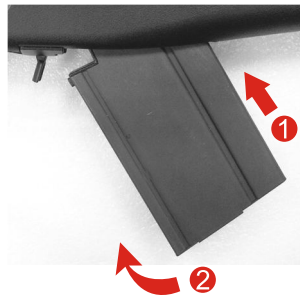

Make sure to set the magazine upwards and connect it firmly until a **'CLICK'** sound is heard.


**Airsoft Rifle**  
6mm Electric Semi/Full Auto System

## ▪ MAGAZING SETTING

 
## ▪ FIRING MODE



**G&G ARMAMENT**  
Complete AEG Series

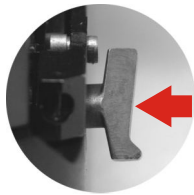

**PUSH AND TURN**

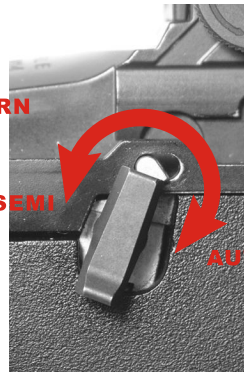 

**SEMI**

 
**AUTO**

**SEMI-AUTO:**  
Push selector and turn counter clockwise

**FULL-AUTO:**  
Push selector and turn clockwise


**SEMI-AUTO:**  
Will fire one shot each time when trigger is pulled.

**FULL-AUTO:**  
Will fire automatically when trigger remains pulled.

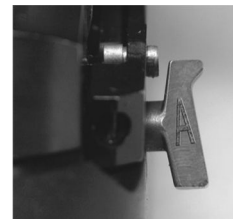


12

 13

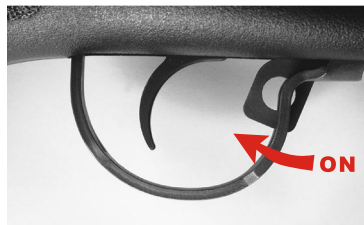

**ON**

 **SAFETY ON:**  
Trigger can not be pulled and will not fire.

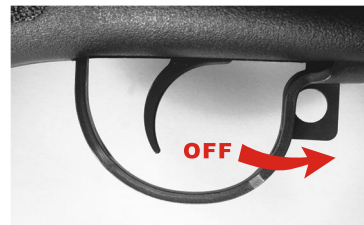

**OFF**

**SAFETY OFF:**  
Will fire when trigger is pulled.

 
**Airsoft Rifle**  
6mm Electric Semi/Full Auto System

▪ **SAFETY**

# ▪ SIGHT ADJUSTMENT



G&G ARMAMENT  
Complete AEG Series

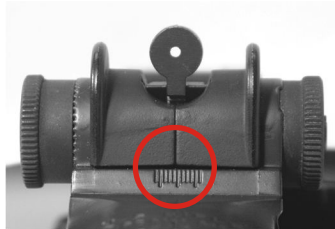


THE RECEIVER IS MARKED IN MILLIMETERS FOR EASY USE.




14

 15

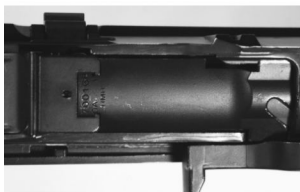


① **PULL**

 Pull operation rod to open the bolt.

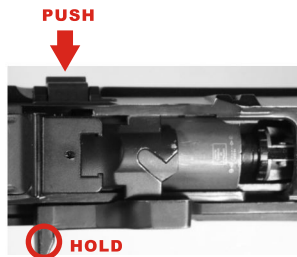

② **HOLD**

 Don't let go of the operation rod  
Before stocking the bolt with bolt stop.

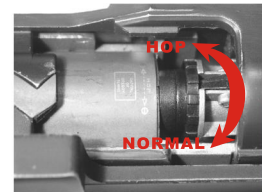

③

Turning hop-up dial To adjusting  
an ideal BB bullet flying.

The hop-up dial can only be turned  
a certain amount, Turning to much  
will damage it.

**Airsoft Rifle**  
6mm Electric Semi/Full Auto System

# ▪ HOP-UP ADJUSTMENT



 
# FIELD STRIPPING



G&G ARMAMENT  
Complete AEG Series



1 PULL DOWN THE TRIGGER GUARD.

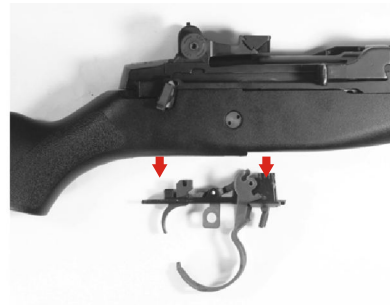


2 TAKE OFF THE TRIGGER GROUP.

16

17

 3 SEPARATE THE UPPER GROUP FROM THE STOCK.

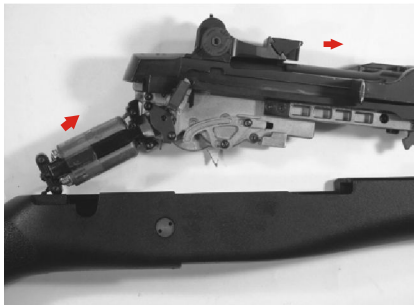

4 AFTER DISASSEMBLY.




**Airsoft Rifle**  
6mm Electric Semi/Full Auto System

# FIELD STRIPPING

 
## ■ SPRING RELEASE



G&G ARMAMENT  
Complete AEG Series

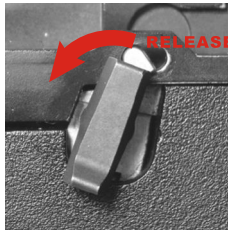

 **FOR NORMAL USE:**  
Turn (do not push) the selector backward to release the spring.

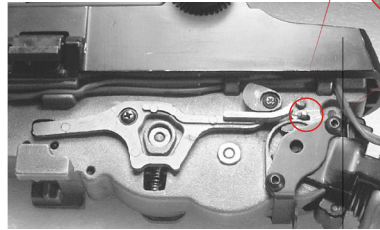

**WHEN DISASSEMBLED:**  
Pull the release lever (on left side of gear box) to release the spring.

18

19

## ■ CAUTION

Always attach the safety cap and disconnect the magazine to avoid sudden operation upon connecting battery.

Be careful so as not to catch your fingers in the movable parts.

Always set the lever to "safe" before firing.

Do not disassemble beyond what is necessary, or the gun may be damaged.

Always use "**G&G ARMAMENT**" BBs for this gun, we shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.

Since a tight barrel is used, use of dirty BBs or those with burrs causes jamming and possible fatal damage to the gear box.

Turning hop-up dial excessively cause clogging of bb, keep pulling trigger with bb clogged damages the piston and gears.

Never hold the gun sideways as bb will curve right or left.

We shall not be held responsible for any damage or accidents arising from the wrong operation or modification.

Disassembly is designed for appropriate maintenance, not for modification.

**Airsoft Rifle**  
6mm Electric Semi/Full Auto System

■ CAUTION



Guay Guay Trading CO., LTD.  
[www.guay2.com](http://www.guay2.com)

Copyright 2005

Guay Guay Trading Company., Limited.

All right reserved.

No part of this publication may be reproduced,  
store in a retrieval system or transmitted in  
any form or by any means, electronic, mechanical,  
photocopying, recording or otherwise,  
without the permission of the copyright holder.

**Please consult your dealer or us for overhaul  
maintenance, repair or parts replacement.**

DEALER