



Pull the handguard locking pin out.

Remove the handguard.









- May be hazardous up to 50 meters.
 - Adult supervision required.

Wrong Too much hop-up (Return the lever toward Normal)

A WARNING



 
Connect the connector.



Assemble the handguard



Insert the handguard locking pin.



Shooting & Hop-up adjustment



magazine.

Load the BBs & Install Magazine



Open the cover of magazine and load G&G 5.95mm BB pellets into the magazine



After the BB pellet had been loaded, close the cover and turn the gear on the bottom of the magazine until it clicks



Set the magazine upward Connect firmly till a click sound is heard



When not firing the gun or during storage always set the selector to the Safe Mode and attach the protective cap on the muzzle



The gun will fire one shot each time as pulling the trigger.



The gun will fire automatically while the trigger remains pulled.

WARNING

It is strongly recommended the use of G&G BB pellets only. Using low quality BB pellets will shorten product life span and void

Manufactured by G&G ARMAMENT WWW.GUAY2.COM



Rear sight adjustment



Loosen the rear sight fixing screw and turn the adjusting screw with a ecrawdriver



Turn for adjustment.
Use the small size for precision





Removing clogged pellets

Return the hop up dial to the Normal position and insert the cleaning rod from the lead adge of the barrel.
 To remove clogged BB's, carefully insert the cleaning rod inside the barrel with the flat tip facing down as shown below.







New Blow Back Pneumatic system

to the faith of mimicking real life firearms, G&G is proud to present its new Pneumatic Blow Back system to its line of ft guns. Conventional airsoft blowback utilizes tow hook springs to mimic real life bolt actions, which often lead to





























Maintenance when pellet speed becomes low

Drop a few drops of silicone oil or Teflon oil from the pellet entrance.
 Insert BB pellets into the magazine and fire around 1 to 2 magazines.
 To complete the cleaning, use the cleaning rod (with cotton), to remove

Do not jam the cleaning rod into the barrel by force.
Should the BB's remains inside the barrel after following the instruction above, with the protection cap over the barrel,point the gun to a safe direction, and discharge any loosened BB's in semi-automatic mode.



Instruction Manual

Parts list

NO.	Parts Name	NO.	Parts Name
EGM Q5 -01	Handguard set	EGM Q5 -13	Flash suppressor set
EGM Q5 -02	Lower receiver set	EGM Q5 -14	Electric wire set
EGM Q5 -03	Upper receiver set	EGM Q5 -15	Barrel housing set
EGM Q5 -04	Inner barrel	EGM Q5 -16	Stock set
EGM Q5 -05	Hop-up rubber set	EGM Q5 -17	Magazine release set
EGM Q5 -06	Hop-up set	EGM Q5 -18	Inner handguard set
EGM Q5 -07	Rear sight set	EGM Q5 -19	Selector lever set
EGM Q5 -08	Outer barrel set	EGM Q5 -20	Metal magazine
EGM Q5 -09	Cocking lever outer tube set	EGM Q5 -21	Motor set
EGM Q5 -10	Cocking lever set	EGM Q5 -22	Gear box set
EGM Q5 -11	Front sight set	EGM Q5 -23	Select plate
EGM Q5 -12	Back housing set	EGM Q5 -24	Grip bottom set

Contact G&G ARMAMENT

Address	11F-3,NO.27,Lane169,Kangning St.,Shijr City,Taipei County 221,TAIWAN				
TEL	886-2-2692-2000	FAX	886-2-2692-4000		
Website	www.guay2.com	Sales Department Mail	b2b@guay2.com		
Technology support Department Mail support@guay2.com					

 You may buy all of the groups' parts from G&G ARMAMENT support Dep. E-Mail: support@guay2.com

Manufactured by G&G ARMAMENT WWW.GUAY2.COM