


Push the Slide Realeas Lever to the Slide.
Pull the Slide backwards and hold.
Remove the Slide.

Remove the Outer Barrel

Use Allen Key adjust the Hop-Up.

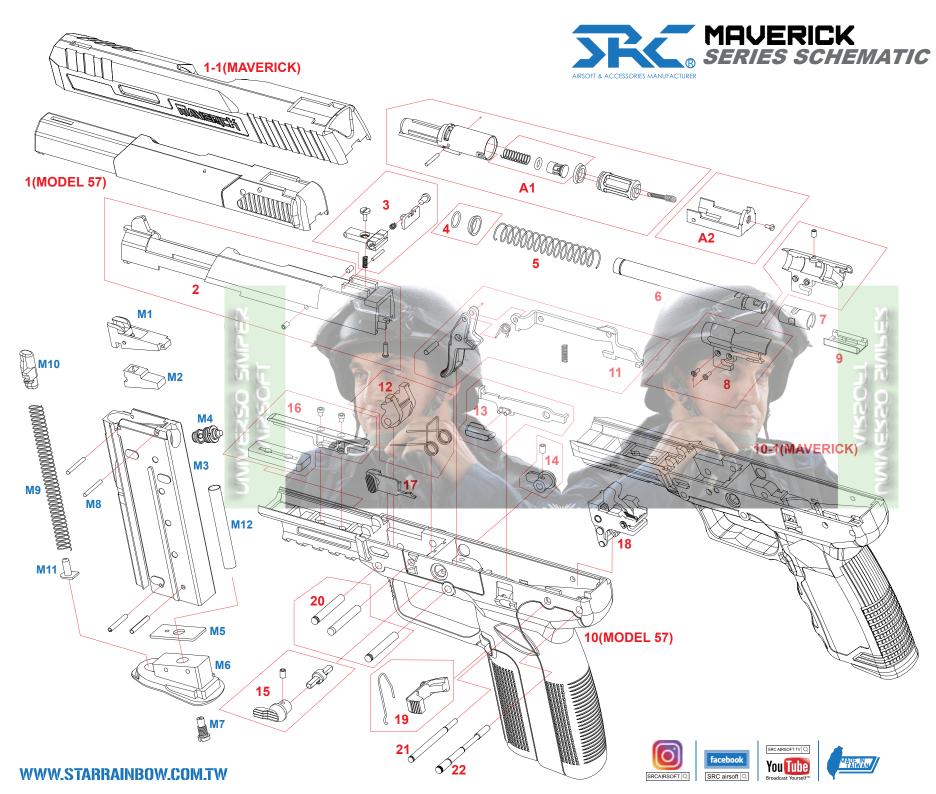

Parts List

NO.	DESCRIPTION
M1	MAGAZINE LIP
M2	MAGAZINE RUBBER
M3	MAGAZINE FRAME
M4	VALVE
M5	MAGAZINE SEAL
M6	MAGAZINE BASE
M7	GAS VALVE
M8	PIN
M9	SPRING
M10	BB FOLLOWER
M11	SPRING GUIDE
M12	GAS TUBE

NO.	DESCRIPTION
A1	Air Nozzle
A2	Air Nozzle Base
1	SLIDE(57)
1-1	SLIDE(MAV)
2	SLIDE BASE
3	REAR SIGHT SET
4	BARREL FIXING RINGS
5	RECOLIL SPRING
6	BARREL
7	HOP UP BUCKING
8	HOP UP CHAMBER
9	HOP UP BUCKING BASE
10	RECEIVER FRAME(57)
10-1	RECEIVER FRAME(MAV)
11	TRIGGER SET
12	SLIDE LOCK
13	SLIDE CATCH
14	SAFTY LEVER-R
15	SAFTY LEVER-L
16	RAIL FIX
17	SLIDE RELEASE BUTTON
18	HAMMER SET
19	MAGAZINE CATCH
20	PIN-A
21	PIN-B
22	PIN-C