



MODEL NO : GB-0731



SR-1911

Full Metal Cal.6mm Airsoft Gun

GBB INSTRUCTION MANUAL

MADE IN TAIWAN

UNIVERSO SNIPER
AIRSOFT


Dealer



星虹玩具有限公司
STAR RAINBOW CO.,LTD

Address : Room D2, No. 36, Alley 82, Lane 422, Minzu Rd., Lujhou City,
Taipei County 247, Taiwan (R.O.C.)
TEL:886-2-82853848
FAX:886-2-28484622
E-mail:src@starrainbow.com.tw
Web:www.starrainbow.com.tw

SR SR-1911

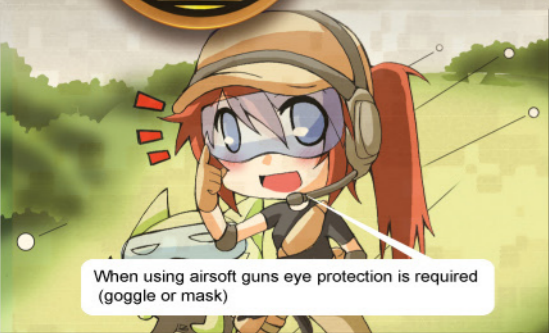

SR-1911 PARTS DESCRIPTION





SR-1911

6mm cal. Airsoft Pistol


GAS INJECTION & LOADING BBS



PRESS THE MAGAZINE CATCH AND REMOVE THE MAGAZINE BY PULLING IT DOWNWARD.

⚠ WARNING

TURN THE SAFETY LEVEL SELECTOR TO SAFE MODE . KEEP THE SELECTOR ON SAFE MODE UNTIL YOU ARE READY TO SHOOT.

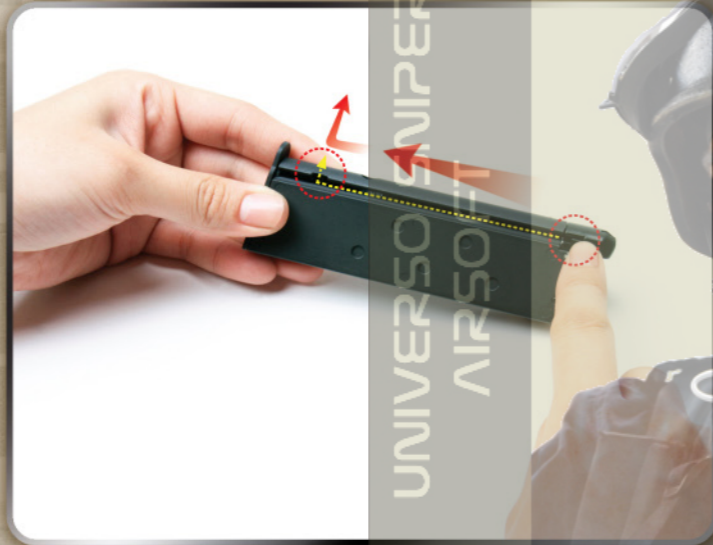

PULL THE MAGAZINE SPRING-LOADED FEEDER BACK AND LOCK INTO THE NOTCH



LOAD BBs INTO THE MAGAZINE AS SHOW ABOVE. ONCE FILLED, RELEASE THE FEEDER SLIDE FROM THE LOCK NOTCH. YOU ARE NOW READY TO FILL THE MAGAZINE WITH GAS

⚠ WARNING

GREEN GAS IS FLAMMABLE. KEEP AWAY FROM OPEN FLAME WHEN LOADING AND DURING USE.



- 1 TURN THE MAGAZINE UPSIDE DOWN WITH GAS REFILL INLET FACING UPWARDS.
- 2 KEEPING THE GAS CYLINDER INVERTED AND VERTICAL TO THE MAGAZINE, INJECT GAS UNTIL COMPLETELY FILLED.



SR-1911

6mm cal. Airsoft Pistol

SHOOTING

⚠️WARNING

ALWAYS KEEP YOUR FINGER OFF THE TRIGGER UNTIL YOU ARE READY TO FIRE THE GUN. MAKE SURE THE MUZZLE IS ALWAYS POINTED IN A SAFE DIRECTION.



INSERT THE MAGAZINE UNTIL YOU HEAR IT CLICK INTO PLACE. THE GUN IS NOW READY TO FIRE.



⚠️WARNING

GREEN GAS IS FLAMMABLE. KEEP AWAY FROM OPEN FLAME WHEN LOADING AND DURING USE.



PULL THE SLIDE BACKWARDS AND RELEASE.

WARNING

DO NOT HOLD PISTOL CLOSE TO YOUR FACE WHEN FIRING. INJURY CAN OCCUR FROM THE BLOW BACK ACTION

⚠️WARNING

WARNING - WHEN FIRING THIS GUN, THE SLIDE MOVES RAPIDLY BACKWARDS AND FORWARDS (BLOW BACK ACTION). TO AVOID INJURY, KEEP FINGERS OFF THE SLIDE. DO NOT HOLD PISTOL CLOSE TO THE FACE OR HEAD.



Blow Back Action

AIM THE GUN IN A SAFE DIRECTION AND FIRE AT YOUR TARGET. THE UPPER RECEIVER WILL CYCLE (BLOW BACK ACTION), ALLOWING THE PISTOL TO FIRE IN SEMI-AUTOMATIC MODE.



SR-1911

6mm cal. Airsoft Pistol

DISASSEMBLY

Disassemble the SR-1911 Slide

⚠ WARNING

ALWAYS KEEP YOUR FINGER OFF THE TRIGGER UNTIL YOU ARE READY TO FIRE THE GUN. MAKE SURE THE MUZZLE IS ALWAYS POINTED IN A SAFE DIRECTION.

⚠ WARNING

GREEN GAS IS FLAMMABLE. KEEP AWAY FROM OPEN FLAME WHEN LOADING AND DURING USE.



1 REMOVE THE MAGAZINE AND SET THE SELECTOR SWITCH TO FIRE MODE.



2 PULL BACK ON THE SLIDE AND HOLD LIKE SHOWN ABOVE



3 PUSH THE SLIDE RELEASE BUTTON.



4 REMOVE THE SLIDE STOP.




5 REMOVE THE SLIDE .



SR-1911

6mm cal. Airsoft Pistol

HOP-UP ADJUSTMENT

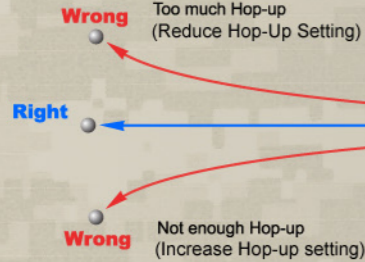

TOO MUCH HOP-UP
TO REDUCE THE HOP-UP SETTING ,ROTATE THE HOP-UP DIAL TOWARDS NORMAL.



NO ENOUGH HOP-UP
TO INCREASE THE HOP-UP SETTING ,ROTATE THE HOP-UP DIAL TOWARDS HOP.

UNIVERSO SNIPER AIRSOFT



REASSEMBLY

⚠ WARNING

ALWAYS KEEP YOUR FINGER OFF THE TRIGGER UNTIL YOU ARE READY TO FIRE THE GUN. MAKE SURE THE MUZZLE IS ALWAYS POINTED IN A SAFE DIRECTION.



INSTALL THE SLIDE.



PULL BACK ON THE UPPER SLIDE AND HOLD IT IN PLACE AS SHOWN ABOVE




INSTALL THE SLIDE STOP.



SR-1911

6mm cal. Airsoft Pistol

SR-1911 SCHEMATIC

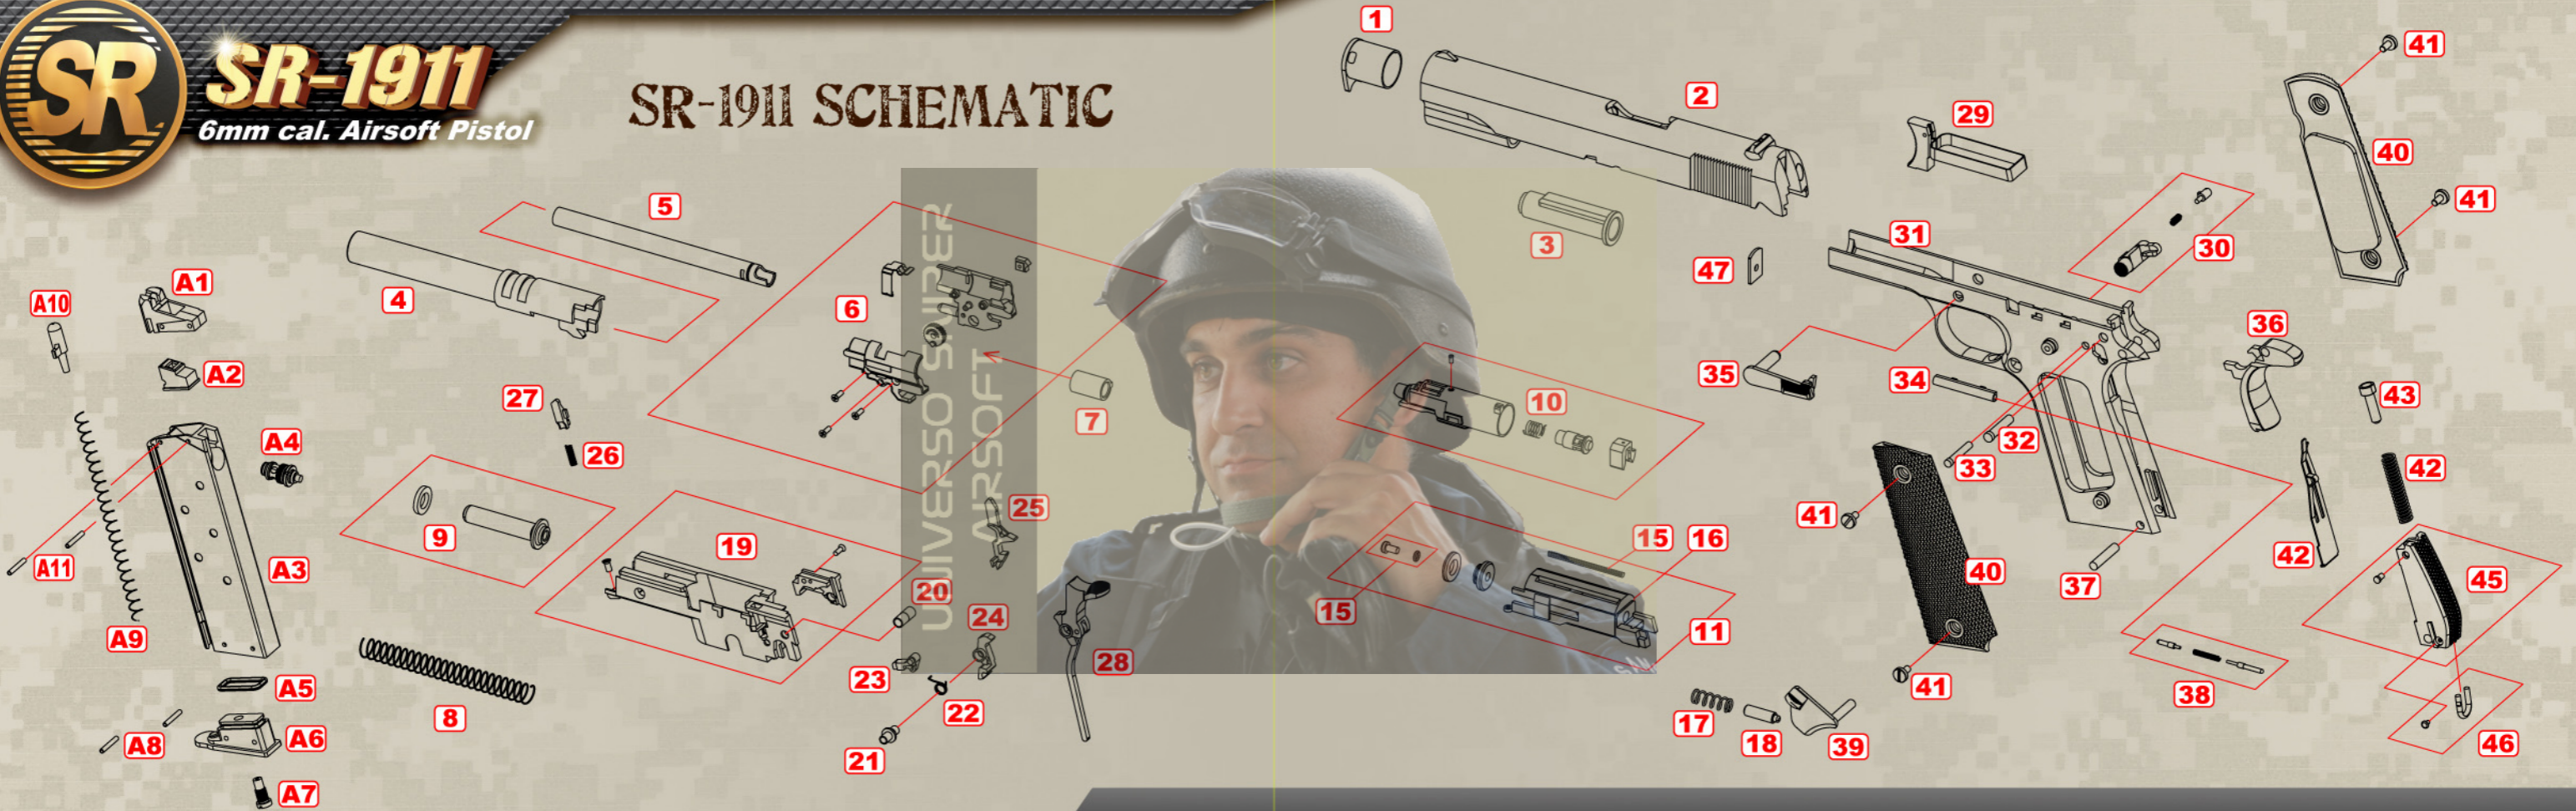



SR-1911
6mm cal. Airsoft Pistol

SR-1911 PARTS LIST

You can buy all parts from your local dealer or reseller.

NO	DESCRIPTION	NO	DESCRIPTION	NO	DESCRIPTION
1	Barrel Bearing	21	Sear base	41	Grip screw
2	Slide	22	Sear Spring	42	Sear Spring
3	Recoil Spring plug	23	Impact pin	43	Mainspring screw
4	Outer Barrel	24	Sear	44	Mainspring
5	Inner Barrel	25	Disconnecter	45	Mainspring Housing
6	Hop Up Chamber	26	Shear Spring	46	Lanyard mount
7	Hop Up Bucking	27	Shear	47	Firing pin stop
8	Recoil Spring	28	Hammer set		Magazine set
9	Recoil Spring Guide	29	Trigger	A1	Magazine Lip
10	Air Nozzle	30	Magazine catch	A2	Air Nozzle Rubber
11	Air Nozzle base set	31	Lower Receiver	A3	Magazine Frame
12	Screw & O Ring	32	Hammer pin	A4	Valve
13	Piston O Ring	33	Sear pin	A5	O Ring
14	Piston	34	Plunger base	A6	Magazine base
15	Nozzle Spring	35	Slide stop	A7	Gas Valve
16	Air Nozzle base	36	Grip safety	A8	Pin
17	Firing pin Spring	37	Mainspring Housing pin	A9	Magazine Spring
18	Dummy Firing pin	38	Plunger set	A10	Magazine Bar
19	Hammer base	39	Safety	A11	Pin
20	Hammer Axle	40	Grip set		

MEMO

