



SR36

SERIES

6mm Cal. AIRSOFT RIFLE



UNIVERSO SNIPER
AIRSOFT

Special thanks

KSK(Kommando Spezialkräfte) Prague , Czech Republic

S.M.O.G. Baden (Germany)



星虹玩具有限公司
STAR RAINBOW TOYS CO.,LTD

Address : Room D2. No. 36, Alley 82, Lane 422, Minzu Rd., Lujhou City ,
Taipei County 247 ,Taiwan (R.O.C.)

TEL: 886-2-82853848

FAX: 886-2-28484622

E-mail: src@starrainbow.com.tw

Web: www.starrainbow.com.tw

Dealer



MADE IN TAIWAN

INSTRUCTION MANUAL


SR36

SERIES

6mm Cal. AIRSOFT RIFLE



SAFETY INFORMATION

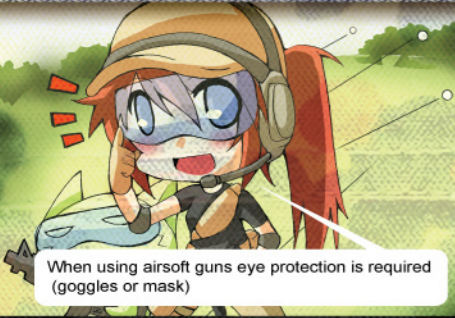

When using airsoft guns eye protection is required (goggles or mask)

Never place your finger on the trigger until you are ready to fire the gun. Always put the gun in safe mode when not in use. Treat every gun as if it is loaded.



Please keep away from children



BBs may remain in the barrel after magazine removal. To avoid injury, never look directly into the barrel and ensure the gun is always pointed in a safe direction.



Disassembly or modification of this product may result in damage to your Airsoft gun, loss of warranty, and/or serious injury.



Please select a safe place to fire your airsoft gun. Always know your state and local laws concerning airsoft gun use.



Do not aim or shoot at humans, animals, buildings, or vehicles.



Please use a firearm case or bag when transporting your airsoft gun.

SR36 SERIES MODELS



SR36E
GE-0631



SR36C
GE-0636



SR36KV
GE-0637



SR36E2
GE-0632



SR36KSK
GE-0633



SR36MG
GE-0635



SR36K
GE-0634

SR36

SERIES
6mm Cal. AIRSOFT RIFLE

SR36 SERIES PARTS DESCRIPTION



UNIVERSO SNIPER AIRSOFT



1

Installing the Battery (Handguard type)

STEP 1



Push the Locking pin.

STEP 2



Pull the locking pin from handguard

STEP 3



Disassemble the Handguard.

STEP 4



Release the Bayonet mount use allen key(1.5mm).

STEP 5



Rotate the bayonet mount 180°

STEP 6



Please use a fully charged SRC 8.4v Battery. (Mini type)

Connect the battery leads.

Installing the Battery (Handguard type)

STEP 7



Insert the Battery.

STEP 8



Reinstall the Handguard.

STEP 9



Reinstall the Locking pin and turn the bayonet mount back to position.

2

Installing the Battery (Retractable Folding Stock type)

STEP 1



Please use a fully charged SRC 8.4v Battery. (Large type)

1.Pull the stock release lever and hold .
2.Pull to back remove the Stock

STEP 2



1.Pull the battery lead from stock . 2.Insert the Battery.

WARNING

- 1.Remove the battery from device when not in use.
- 2.Please use high-quality, CE approved batteries.

SR36

SERIES

6mm Cal. AIRSOFT RIFLE

Installing the Battery (Retractable Folding Stock type)

STEP 3



Connect the battery leads

STEP 4



1. Check all battery leads into the Stock.

STEP 5



1. Push the stock release lever and hold it
2. Push the stock forward.

STEP 6



Install complete

WARNING

1. Remove the battery from device when not in use.
2. Please use high-quality, CE approved batteries.

3 Installing the Battery (External battery case type)



STEP 1



Please use a fully charged SRC 8.4v Battery (Mini type)

STEP 2



Open the cover.

STEP 3



Insert the battery.

STEP 4



1. Let the battery lead through the bottom of the hole.
2. Close the cover.

STEP 5



Connect the battery leads

STEP 6



Push the battery lead into the Tactical Rail system.

STEP 7



Reinstall the external battery case.

SR36

SERIES
6mm Cal. AIRSOFT RIFLE



4 Loading the Magazine

WARNING

Use SRC Precision BBs only. The use of low-quality BBs may cause damage to your airsoft gun.

STEP 1



Open the BB well cover and fill with BBs

STEP 2



Rotate the wheel on the bottom of the magazine until you hear the clicking sound change.

STEP 3



Insert the magazine until heard the click . The gun is now ready to fire.

5 Shooting Modes

Safe mode



Semi mode



Auto mode



6 Hop-up Adjustment

Wrong

Hop-Up set to high
(Rotate the Hop-Up dial towards NORMAL)

Best position Right

Wrong

Hop-Up set to low
(Rotate the Hop-Up dial towards HOP)

WARNING

- Always keep finger off the trigger until you are ready to fire. Make sure the muzzle is pointing in a safe direction.
- Keep the selector on safe mode until you are ready to shoot.



Hop-Up set to high

(Rotate the Hop-Up dial towards NORMAL)

Hop-Up set to low

(Rotate the Hop-Up dial towards HOP)



Pull the cocking lever to the rear , exposing HOP UP adjust knob , to reduce the Hop-up affect , dial the knob counter-clockwise .




To increase the Hop-Up setting, rotate the hop-up dial towards HOP.


WARNING

- Remove the battery from device when not in use.
- Please use high-quality, CE approved batteries.

7 Rear Sight Adjustment

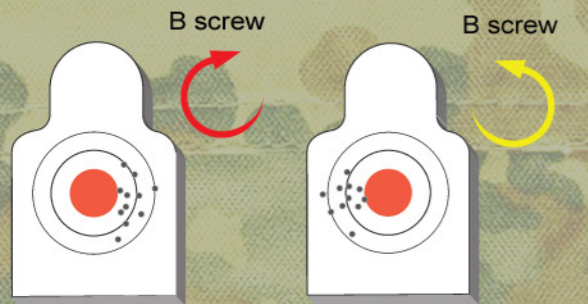

If BBs hit to the right of the target, turn Screw B to the left.
If BBs hit to the left of the target, turn Screw B to the right.

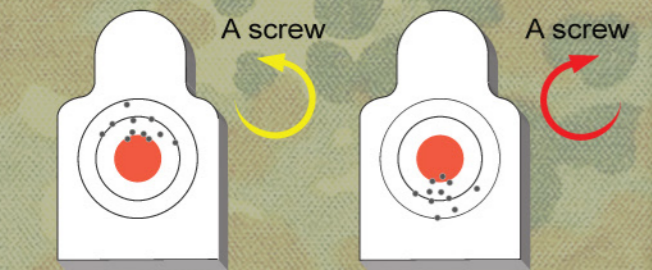

If BBs hit high on the target, turn the rear sight to the left.
If BBs hit Low on the target, turn the rear sight to the right.




SCREW B **SCREW B**



SCREW A **SCREW A**

Front Sight & Rear Sight Adjustment

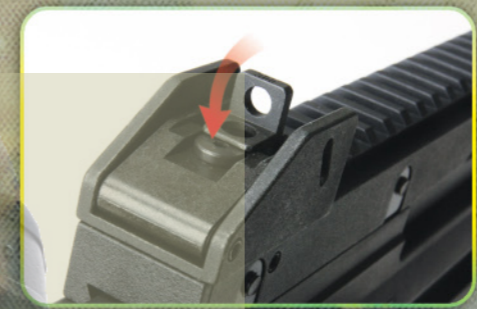

For precision shooting



For normal shooting



SR36 KV Foldable Rear Sight Adjustment



SR36 KV Foldable Front Sight Adjustment




8 TROUBLESHOOTING


Problem : AEG does not function



Please check the connectors

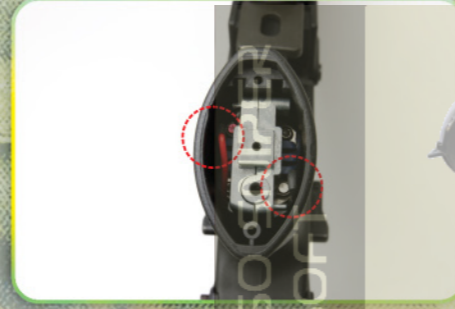

Please check the motor wiring connections.

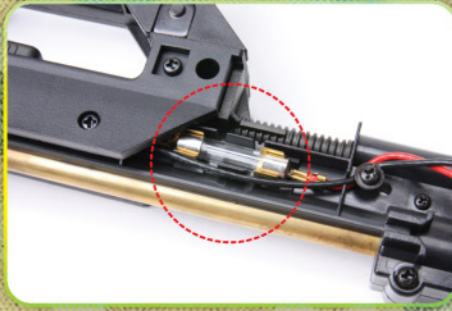

Please check the fuse




Please use a screwdriver to adjust the gap of gears.

TROUBLESHOOTING


Problem: Clearing jammed BBs




Remove the magazine.

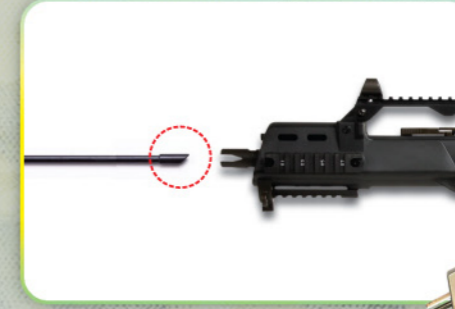

Turn off the Hop-Up by rotating the hop-up dial all the way towards NORMAL. Use the correct end of the cleaning rod.

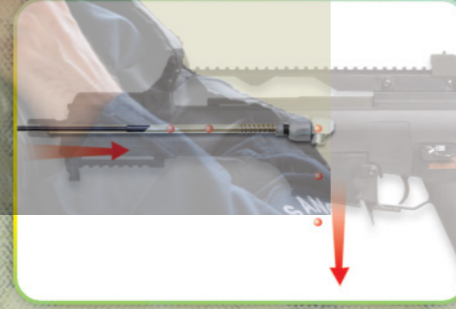

Insert the Cleaning rod into the Barrel to remove the jammed BBs..

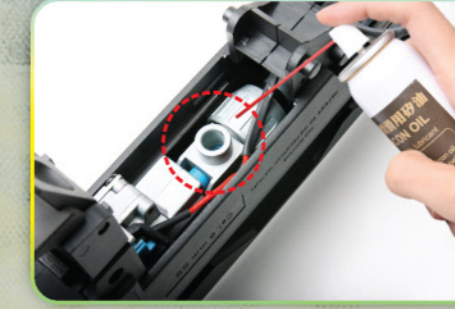

Use Airsoft Safe Silicone to lubricate the hop up chamber. Use silicone lubricant sparingly..


9 SR36 SERIES PARTS LIST

6MM CAL. AIRSOFT RIFLE

NO	DESCRIPTION	NO	DESCRIPTION
SG36-01	470 Rounds Magazine	SG36-46	SR36KV Handguard /w 4pcs Rail set
SG36-02	Metal Hop up Chamber	SG36-49	SR36K Aluminum Outer Barrel
SG36-03	SR36K Flash Hider	SG36-50	SR36C Flash Hider
SG36-04	SR36K Aluminum Outer Barrel	SG36-51	SR36KV Carrying Handle
SG36-05	Metal Cocking Lever	SG36-52	SR36 MAG(2300 Rounds Electric Drum Magazine)
SG36-06	Selector	UP-21	SR36 KSK Aluminum Tactical Handguard
SG36-07	Outer Barrel base	P-101	Visual-2 Extended Battery case
SG36-08	Gear Box set	SG36-09	Trigger set
SG36-13	Motor base	SG36-10	Gear Box Safety Lever
SG36-17	Standard Flash Hider	SG36-11	Gear Box Selector Plate
SG36-18	SR36E Aluminum Outer Barrel	SG36-12	Gear Box Control Lever
SG36-19	SR36E Handguard	SG36-14	Wire set
SG36-21	SR36 Carrying Handle Scope	SG36-15	Air Nozzle
SG36-22	SR36 Carrying Handle	SG36-16	Tappet plate
SG36-23	Metal Magazine Release Button	SAK-16	Gear Box Combine Plate
SG36-27	SR36 Upper Receiver set	UP-04	Aluminum Cylinder head
SG36-28	Magazine Base	UP-05	Aluminum Piston head
SG36-29	Magazine Grip	UP-07	Aluminum Spring Guide
SG36-30	SR36 Motor Plate	UP-08/SM4-08	Chromed Cylinder / Cylinder
SG36-42	SR36K Handguard /w 3pcs Rail set	UP-09	High Performance Piston
SG36-43	SR36C Handguard /w 3pcs Rail set	UP-38	"Strength" 6 Steel Teeth Piston
SG36-44	SR36 Folding Stock	UP-10	3 PCs Steel Gear set
SG36-45	SR36KV Retractable folding Stock	SM4-14	Anti-Reverse Latch

10 SR36 Series Schematic | Gear Box |

6MM CAL. AIRSOFT RIFLE

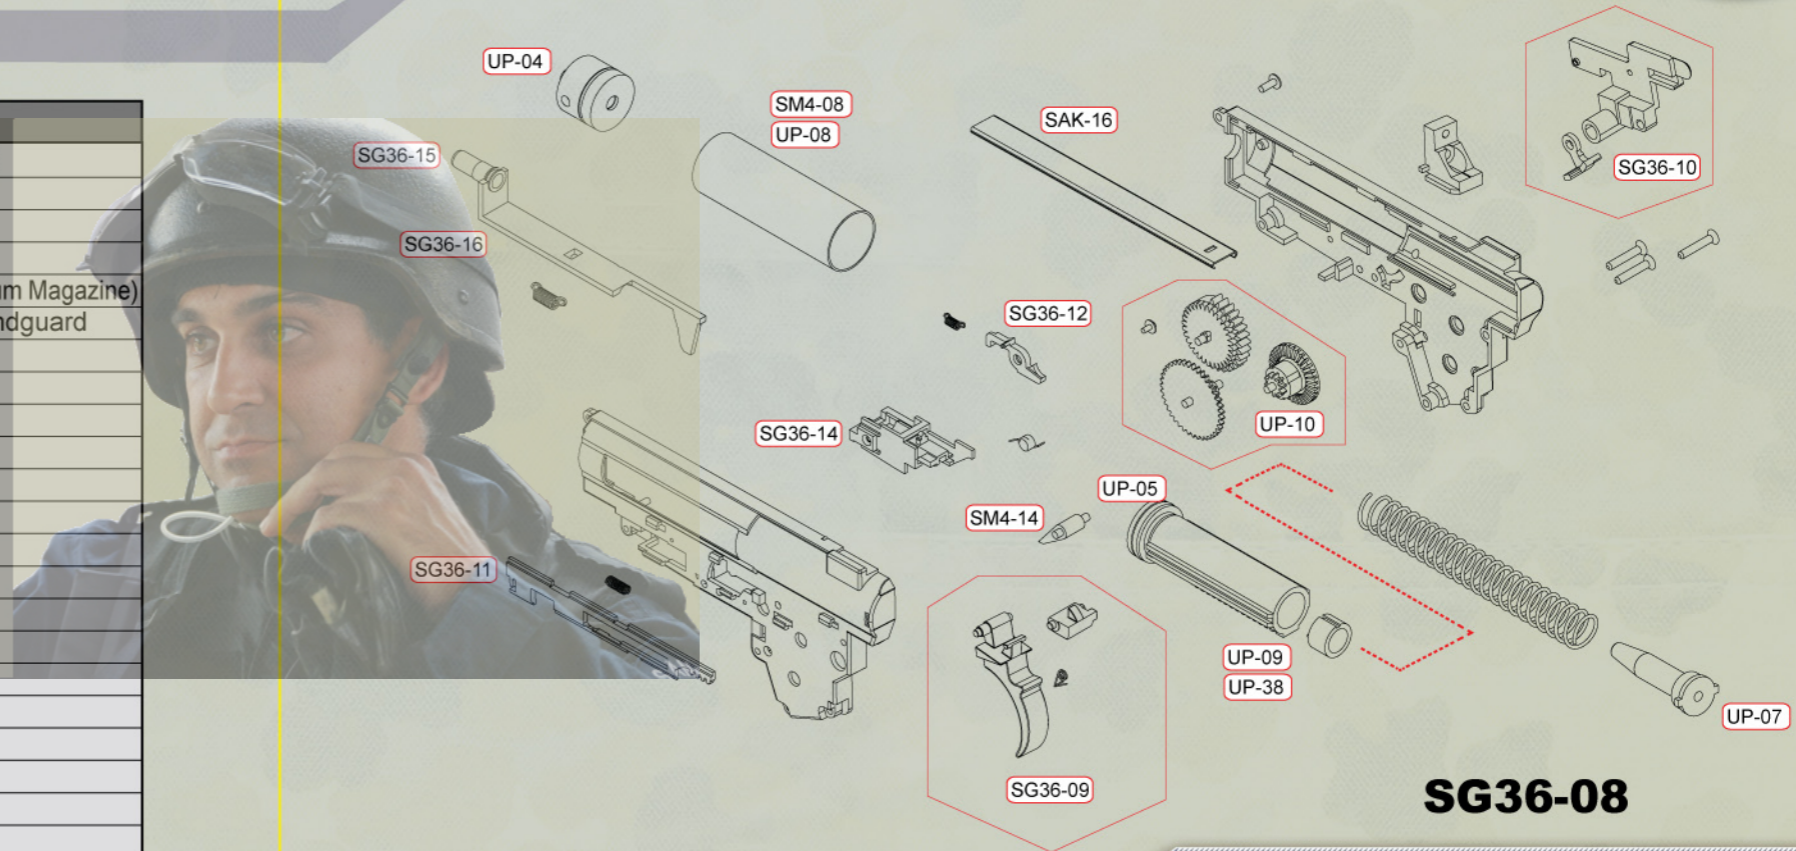

SG36-08

