



UNIVERSO SINGAPORE  
AIRSOFT



**MASCHINENPISTOLE 40/41**  
**SRC KAL.6MM GE 0640/41 TM III**  
**STEEL STAMPED / ELECTRIC BLOW BACK**



MADE IN  
TAIWAN

**SR40/41 INSTRUCTION MANUAL**



UNIVERSO SNIPER  
AIRSOFT



WWW.STARRAINBOW.COM.TW



# PRODUCT ADVISORY

## **WARNING!**

Do not change, obscure, alter, remove, or obliterate any coloration or markings on this gun. The coloration and/or markings on this product, including the blaze orange barrel tip are designed to comply with applicable state and federal law and regulations.

## **WARNING!**

This product maybe mistaken for a firearm by law enforcement officers or others. Any person who changes, alters, removes, or obliterate any coloration or markings that are required by state or federal law or regulation, in anyway that makes this product look more like a firearm is guilty of a misdemeanor.


## **WARNING!**

The open display, brandishing and/or exposing of this product in any "public place" may cause confusion and maybe a crime.

The team "public place" means any area opened to the public, including but not limited to, streets, sidewalks, bridges, alleys, plazas, parks, driveways, front yards, parking lots, automobiles, whether moving or not, and buildings opened to the general public including those that serve food or drink, or provide entertainment, and the doorways and entrances to buildings or dwellings.


## **WARNING!**

Every person who excepts in self-defense, draws or exhibits this product in a threatening manner against another in such a way as to cause a reasonable person apprehension or fear of bodily harm is guilty of a misdemeanor punishable by imprisonment in the county jail for a team of not less than 30 days.

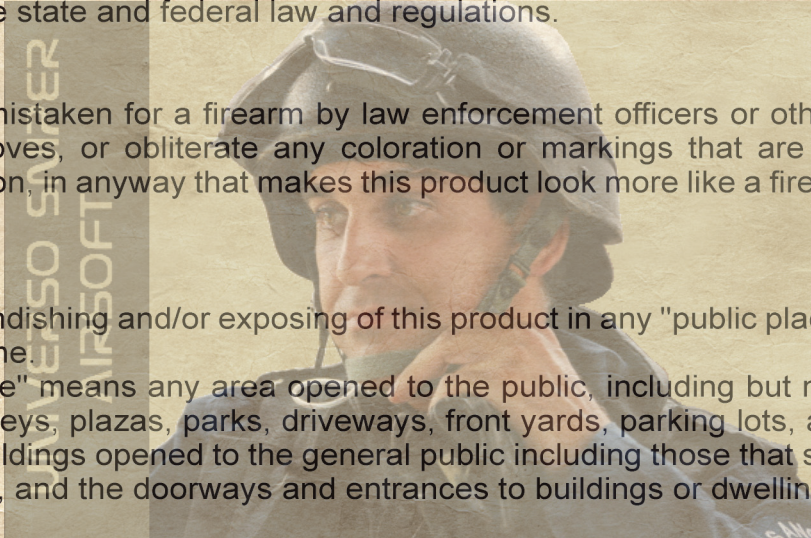




# SR40 COMPONENT

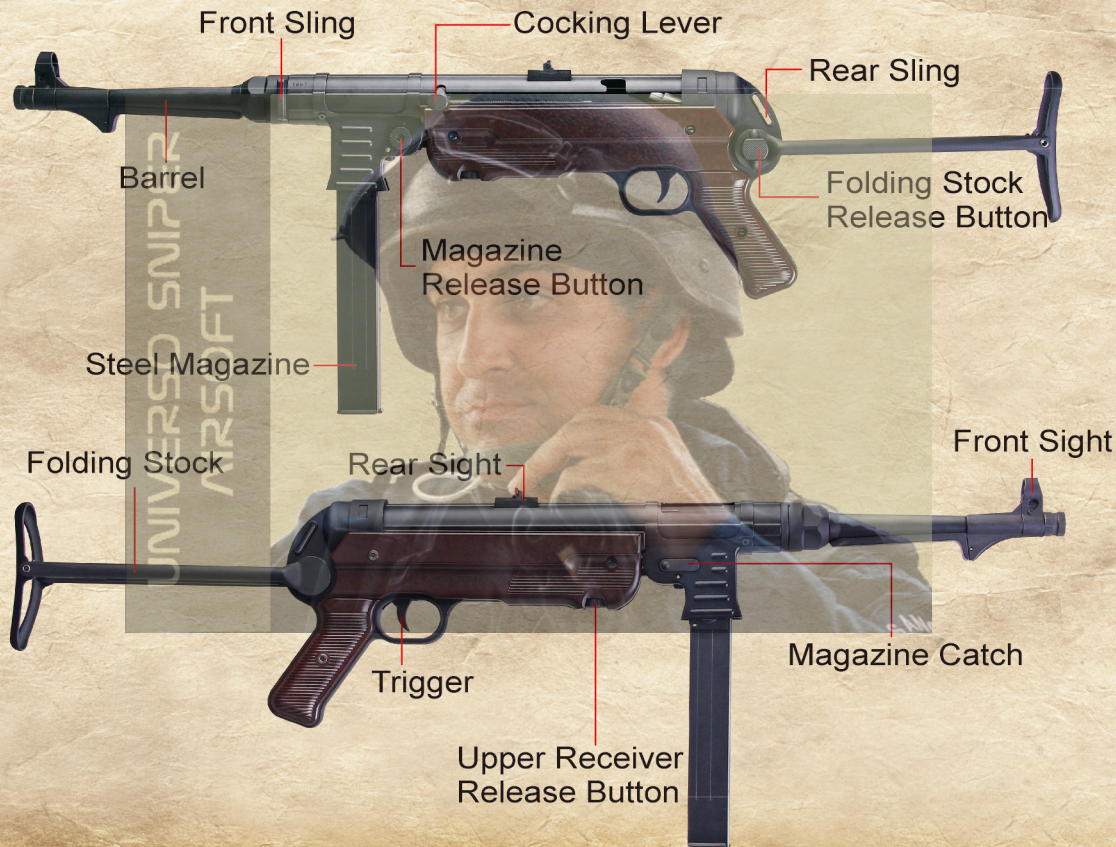



# SR41 COMPONENT

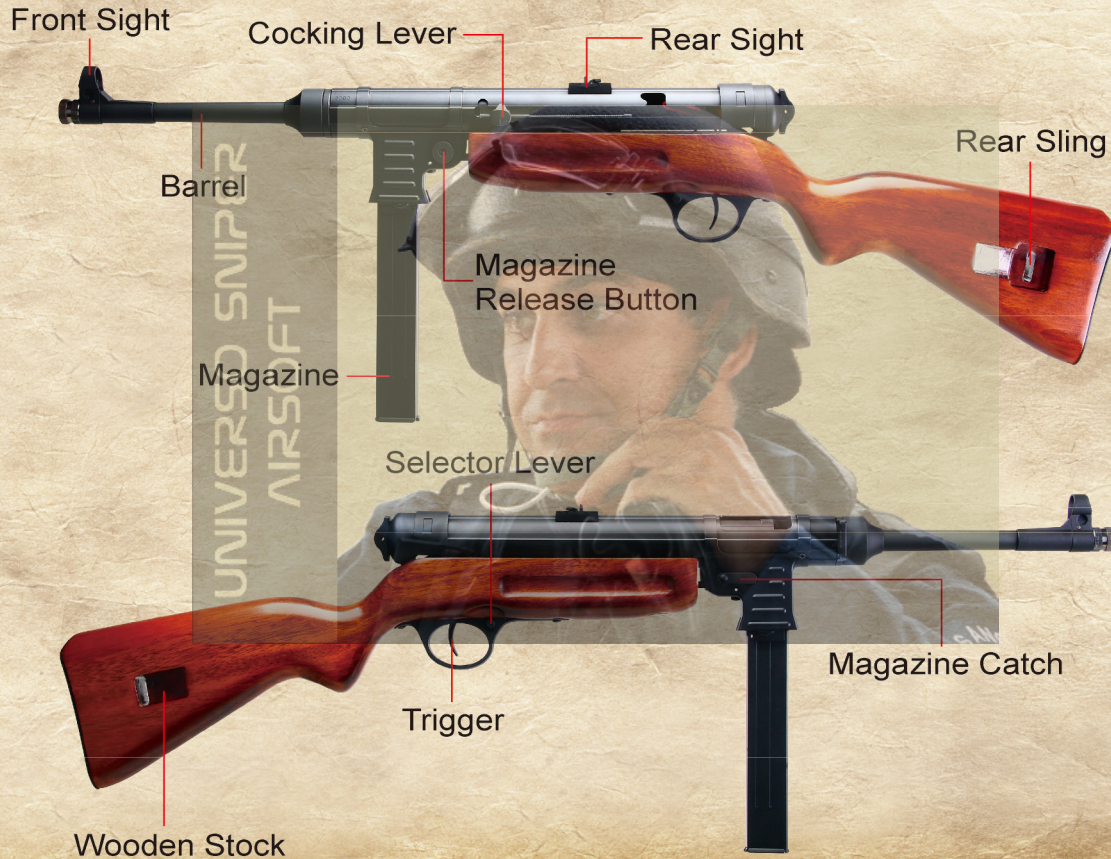




# INSERT BATTERY



1. Pull the receiver release button and roat at 180°



2. Disassemble the upper and lower receiver by pulling them in the opposite way

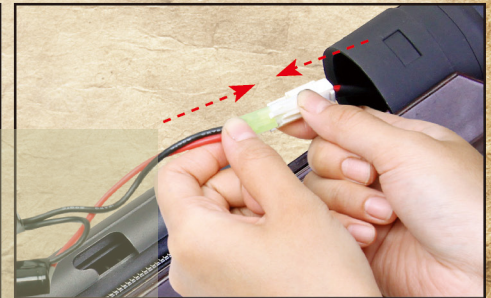

3. Connect the battery with wire



4. Put the battery inside the receiver



5. Assemble the upper and lower receiver by pushing them in the same direction

## **WARNING!**

Please use a fully charged SRC 8.4 battery (Mini type)



# MAGAZINE OPERATION




1. Open the cover of magazine and insert BBs into the magazine



2. Turn the gear at the button until heard click sound




3. Insert the magazine as picture shows until the "click" sound is heard

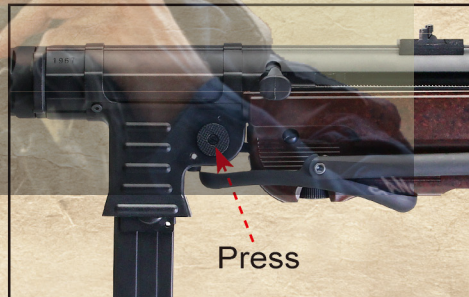


4. Press the magazine release button to release the magazine



# SR40/41 SERIES TROUBLESHOOTING

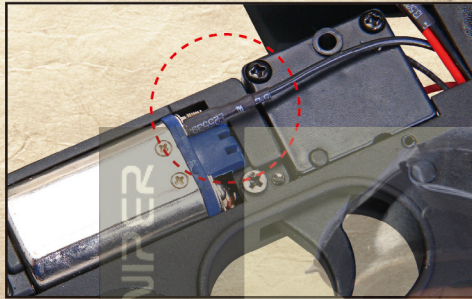


Please check the motor wiring connections

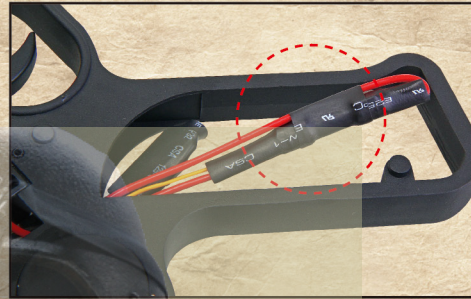

Please check the connectors




When the gear noise become shrilly

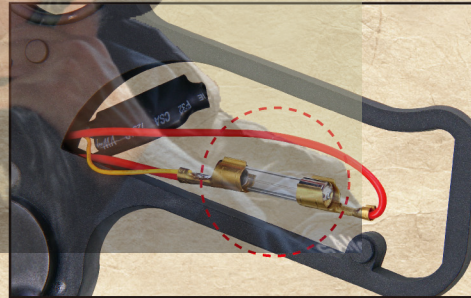

Please check the fuse



# FOLDING STOCK OPERATION

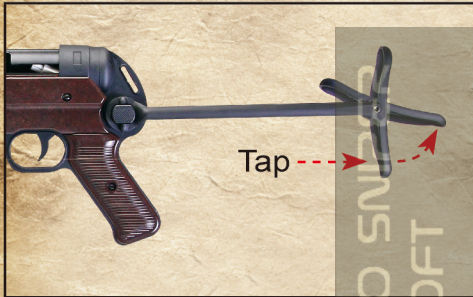

1. Tap the end of stock, and rotate the stock



2. Press the stock release button to fold the stock



3. Rotate the stock until the "click" sound heard

## **WARNING!**

Do not aim or fire at a human or animal



# HOP UP ADJUST



1. Pull the charging handle and hold the hop up chamber will appear

2. Adjust the hop up as picture shows

Too much hop up

Best

Not enough hop up



Shoot a few rounds; exam the trajectory and make further adjustments, as needed. The best position is when the bullets fly horizontally and the longest flying distance is obtained.




# CLEARING JAMMED BBS



1. Push the magazine release button and remove the magazine




2. Turn off the hop up by moving the hop up lever all the way towards the normal setting. Use the slanted end of the cleaning rod

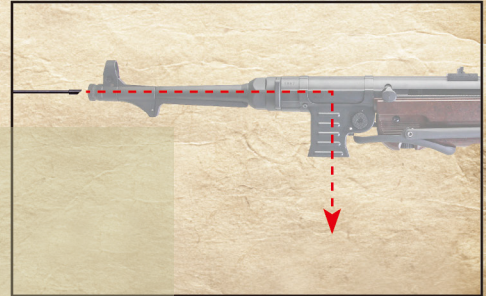

3. Insert the cleaning rod into the barrel to remove the jammed BBs



4. Use airsoft safe silicon to lubricate the hop up chamber and magazine lip

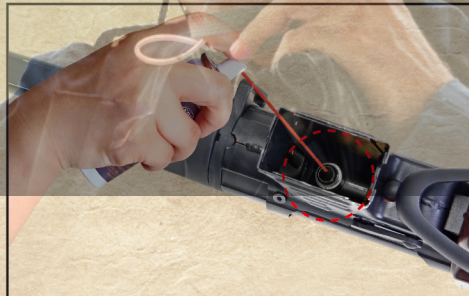

5. Use silicon lubricant sparingly




SRC silicon Oil

**WARNING!** Use SRC precision BBs only.



# SR40/41 SHOOTING MODES SET

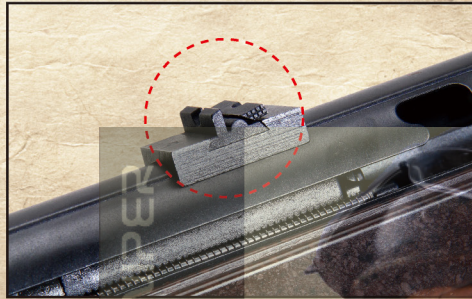


1. Pull the second rear sight when the target is in a certain distance



## AUTO MODE

Press the button from the right

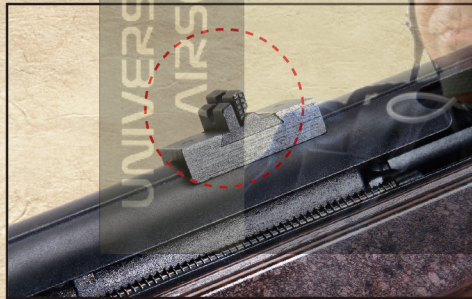

2. Put the second rear sight down, when the object are closed to aim




## SEMI MODE

Press the selector lever button from the left




# SR40 SERIES SCHEMATIC

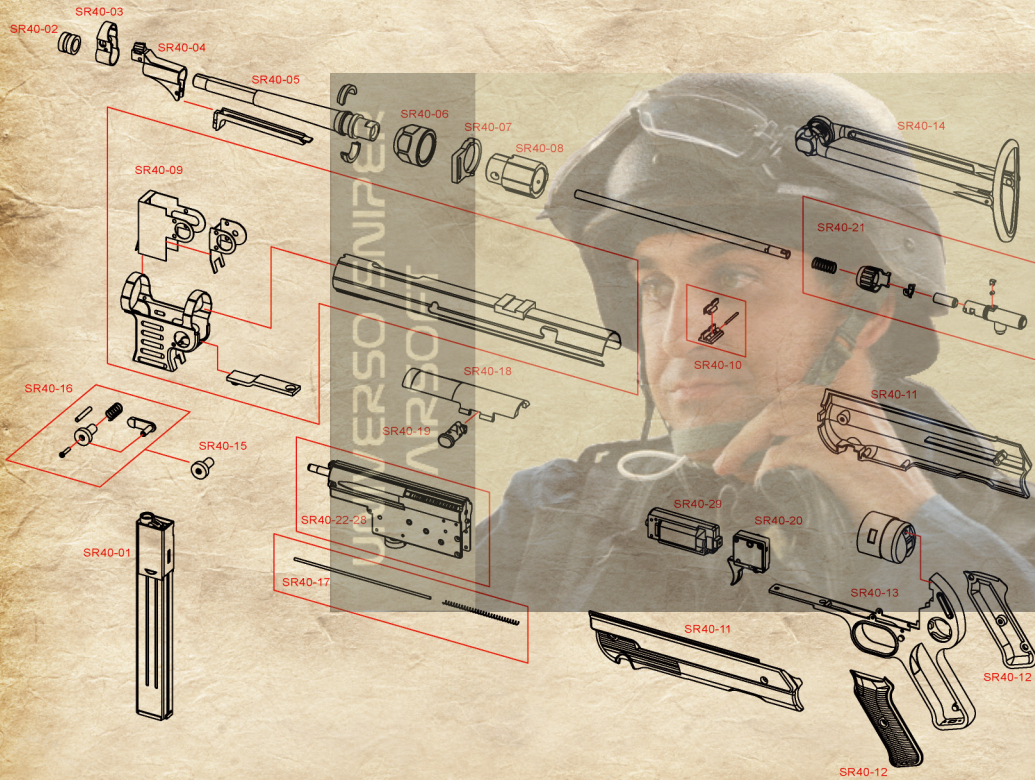

<b>SR40-01</b>	280 Rounds magazine
<b>SR40-02</b>	Flash hider
<b>SR40-03</b>	Front sight ring
<b>SR40-04</b>	Front sight set
<b>SR40-05</b>	Aluminum barrel(w/ fix ring)
<b>SR40-06</b>	Barrel fix nut
<b>SR40-07</b>	Front sling
<b>SR40-08</b>	Barrel base
<b>SR40-09</b>	Frame
<b>SR40-10</b>	Rear sight
<b>SR40-11</b>	Receiver cover
<b>SR40-12</b>	Grip
<b>SR40-13</b>	Frame
<b>SR40-14</b>	Folding stock set
<b>SR40-15</b>	Receiver release button
<b>SR40-16</b>	Magazine catch set
<b>SR40-17</b>	Bolt fix set
<b>SR40-18</b>	Bolt
<b>SR40-19</b>	Cocking Handle
<b>SR40-20</b>	Trigger &FET wire set
<b>SR40-21</b>	Hop Up Chamber
<b>SR40-22</b>	SR40 Gear box set
<b>SR40-23</b>	SR40 Aluminum Cylinder
<b>SR40-24</b>	SR40 Cylinder(black)
<b>SR40-25</b>	SR40 Piston
<b>SR40-26</b>	SR40 Tappet Plate
<b>SR40-27</b>	Air Nozzle MP40
<b>SR40-28</b>	Gear Box
<b>SR40-29</b>	SR40 Motor Base
<b>SR40-30</b>	SR40 Sling
<b>SR40-31</b>	SR40 Magazine Pouch
<b>SR40-32</b>	SR40 110 Rounds Low-Cap Magazine
<b>SR40-33</b>	SR41 WOOD STOCK
<b>SR40-34</b>	SR41 FRONT SIGHT
<b>SR40-35</b>	SR41 GEARBOX BASE
<b>SR40-36</b>	SR41 Outer Barrel
<b>SR40-37</b>	SR41 Barrel Nut
<b>SR40-38</b>	SR41 Receiver
<b>SR40-39</b>	SR41 Trigger



# SR41 SERIES SCHEMATIC

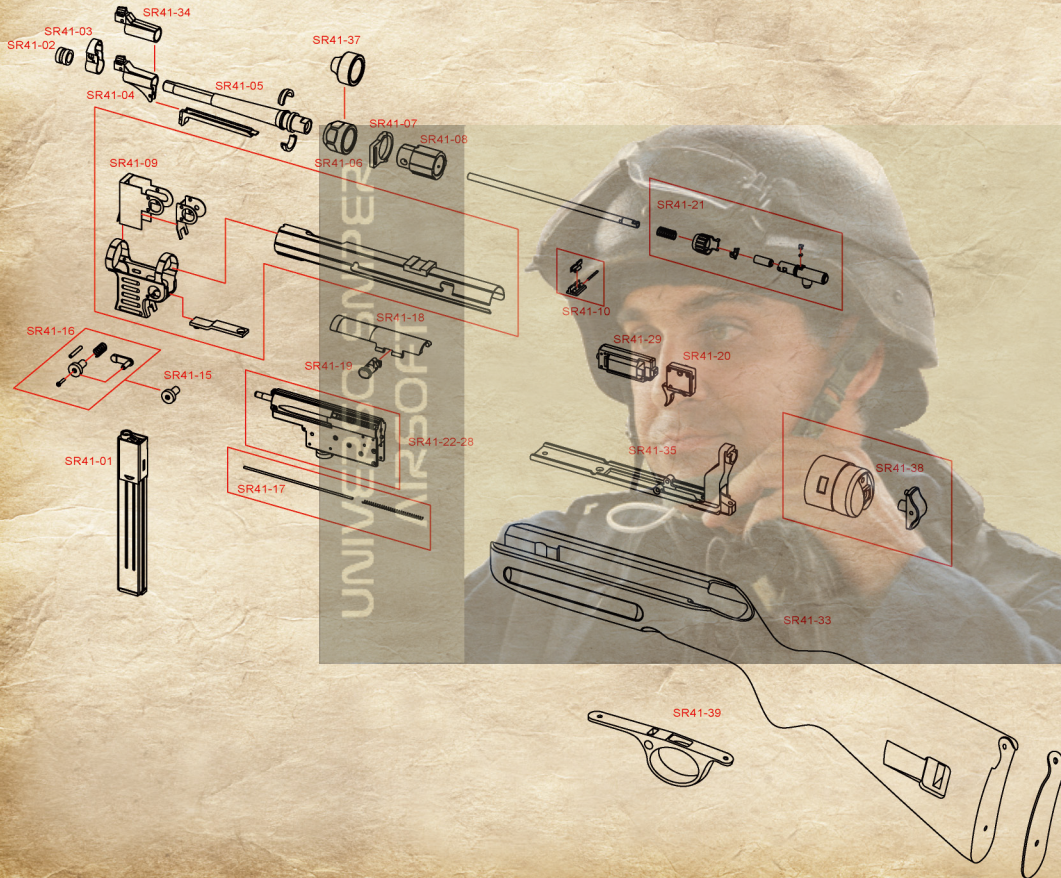

<b>SR41-01</b>	280 Rounds magazine
<b>SR41-02</b>	Flash hider
<b>SR41-03</b>	Front sight ring
<b>SR41-04</b>	Front sight set
<b>SR41-05</b>	Aluminum barrel(w/ fix ring)
<b>SR41-06</b>	Barrel fix nut
<b>SR41-07</b>	Front sling
<b>SR41-08</b>	Barrel base
<b>SR41-09</b>	Frame
<b>SR41-10</b>	Rear sight
<b>SR41-11</b>	Receiver cover
<b>SR41-12</b>	Grip
<b>SR41-13</b>	Frame
<b>SR41-14</b>	Folding stock set
<b>SR41-15</b>	Receiver release button
<b>SR41-16</b>	Magazine catch set
<b>SR41-17</b>	Bolt fix set
<b>SR41-18</b>	Bolt
<b>SR41-19</b>	Cocking Handle
<b>SR41-20</b>	Trigger &FET wire set
<b>SR41-21</b>	Hop Up Chamber
<b>SR41-22</b>	SR40 Gear box set
<b>SR41-23</b>	SR40 Aluminum Cylinder
<b>SR41-24</b>	SR40 Cylinder(black)
<b>SR41-25</b>	SR40 Piston
<b>SR41-26</b>	SR40 Tappet Plate
<b>SR41-27</b>	Air Nozzle MP40
<b>SR41-28</b>	Gear Box
<b>SR41-29</b>	SR40 Motor Base
<b>SR41-30</b>	SR40 Sling
<b>SR41-31</b>	SR40 Magazine Pouch
<b>SR41-32</b>	SR40 110 Rounds Low-Cap Magazine
<b>SR41-33</b>	SR41 WOOD STOCK
<b>SR41-34</b>	SR41 FRONT SIGHT
<b>SR41-35</b>	SR41 GEARBOX BASE
<b>SR41-36</b>	SR41 Outer Barrel
<b>SR41-37</b>	SR41 Barrel Nut
<b>SR41-38</b>	SR41 Receiver
<b>SR41-39</b>	SR41 Trigger



# TROUBLE SHOOTING

SYMPTOM	CAUSE	ACTION
No operation at all	Selector lever set to SAFE	Set the selector lever to AUTO or SEMI
	Battery is not charged	Charge the battery
	Battery connector is disconnected	Connect the connector
	Expired motor life(50,000)	Replace the motor
	FUSE is blown out	Replace the FUSE
Motor is revolving but gun doesn't work	Faulty gear	Purchase the replacement gear from the dealer
	Bullets are clogged in the chamber	Using the cleaning rod to remove the bullet
	Bullets are clogged in the magazine	Shake the magazine and confirm use SRC precision BBs
Malfunction of SEMI auto	Deviation in gear timing	Set to SEMI after firing 2~3 sec in FULL AUTO
	Faulty gear lever	Purchase the replacement parts from the dealer
Malfunction of FULL auto	Deviation in gear timing	Set to SAFE first then set to FULL auto again
	Faulty gear lever	Purchase the replacement parts from the dealer
Firing circle slow	Insufficient battery power	Charge the battery and make sure use SRC batteries
Shooting distance short	Hop up system doesn't working	Adjust HOP UP
	Faulty BB bullets	Please use SRC precision BBs
	Faulty O-ring	Purchase the replacement parts from the dealer
Loud or other	Operation doesn't correctly	Purchase the replacement parts from the dealer



UNIVERSITY OF AIRSOFT



**SRC**<sup>®</sup>  
WWW.STARRAINBOW.COM.TW



SRC AIRSOFT TV

