



EN



SOFT-AIR-PISTOL

P99 FIXED SLIDE



THIS AIRGUN IS INTENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER. Adult supervision required.

RULES FOR SAFE FIRING:

1. Get to know the single parts of your new soft-air pistol
2. Operation of the safety
3. Loading the gun
4. Proper aiming and firing
5. Hop-Up
6. Care and maintenance
7. Use of the barrel extension.
8. Safe gun handling
9. Technical data

YOU AND OTHERS WITH YOU SHOULD ALWAYS WEAR SHOOTING GLASSES TO PROTECT YOUR EYES. READ ALL INSTRUCTIONS BEFORE USING. BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS REGARDING THE USE AND OWNERSHIP OF THIS AIRGUN. Please read this owner's manual completely. Treat this pistol with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.

- ⚠ WARNING:** Not a toy. Adult supervision required. Misuse or careless use may cause serious injury, particularly to the eyes. May be dangerous up to 100 yards (91.44 meters).
- ⚠ WARNING:** Never assume that because the air pistol no longer fires a BB and/or the magazine is removed from the grip frame a plastic BB is not lodged in the barrel. Always treat the soft air pistol as though it is loaded and with the same respect you would a firearm.
- ⚠ WARNING:** Do not brandish or display this soft air pistol in public - it may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.
- ⚠ WARNING:** Never leave a cocked or loaded gun unattended!
You should store this gun in unloaded and decocked condition. Put the safety "ON SAFE" and make carefully sure that the barrel is clear. Keep the gun away from children and persons not skilled in the use of arms. Keep gun and projectiles separate from each other so that unauthorized persons have no access to it.
- ⚠ WARNING:** The gas used for blow-back weapons is inflammable. Do not smoke while handling the gun. Gas must only be charged in well-ventilated rooms. Do not fire into naked flames!

 
04-07 2265004

VELOCITY 350 ft/s	GAS	26 ROUNDS
★★★★ AUTHENTIC REPLICA	DOUBLE ACTION	HOP-UP ADJUSTABLE

OPERATION INSTRUCTIONS	3-7
MODE D'EMPLOI	8-12
MANUAL DE INSTRUCCIONES	13-17

1. GET TO KNOW THE SINGLE PARTS OF YOUR NEW SOFT-AIR PISTOL

It will help you to understand these instructions if you get to know the designation of the parts of your gun. Carefully read and understand these instructions in order to enjoy shooting this gun.

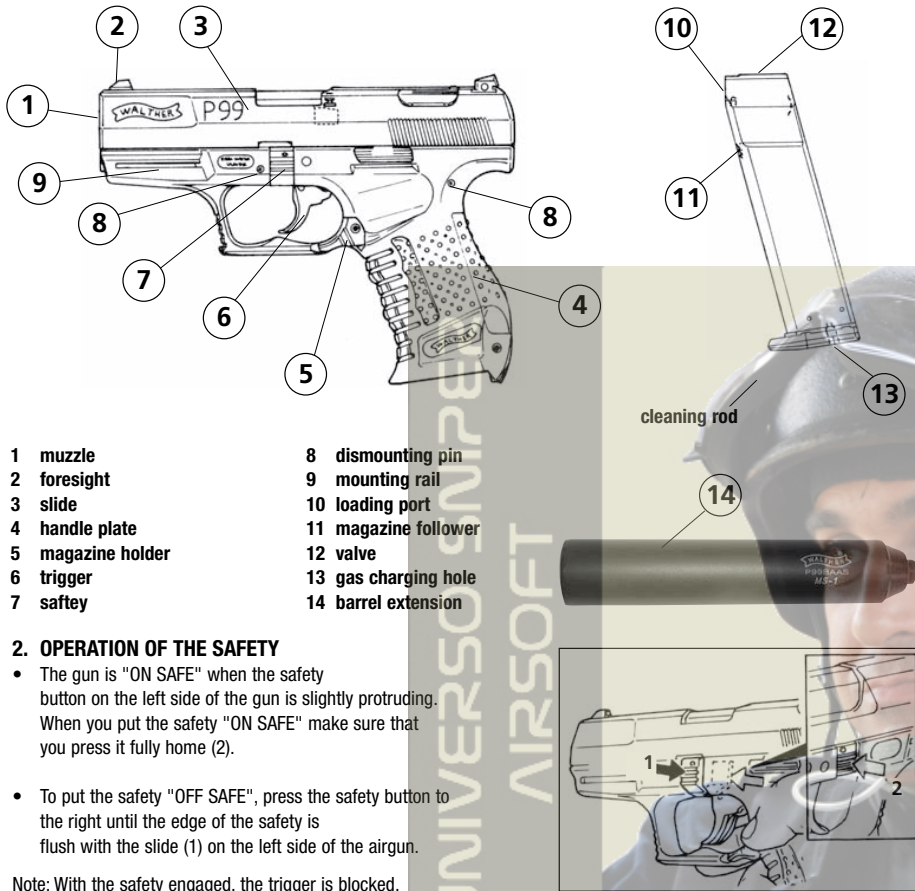

- | | |
|-------------------|----------------------|
| 1 muzzle | 8 dismantling pin |
| 2 foresight | 9 mounting rail |
| 3 slide | 10 loading port |
| 4 handle plate | 11 magazine follower |
| 5 magazine holder | 12 valve |
| 6 trigger | 13 gas charging hole |
| 7 saftey | 14 barrel extension |

2. OPERATION OF THE SAFETY

- The gun is "ON SAFE" when the safety button on the left side of the gun is slightly protruding. When you put the safety "ON SAFE" make sure that you press it fully home (2).
- To put the safety "OFF SAFE", press the safety button to the right until the edge of the safety is flush with the slide (1) on the left side of the airgun.

Note: With the safety engaged, the trigger is blocked.

WARNING: You should make it a habit to leave the safety always in the "ON SAFE" position until you really intend to fire.

3. LOADING THE GUN

 
3.1 Removing the magazine:

To remove the magazine, press the magazine holder down and remove the magazine.

3.2 Charging gas:

Shake the gas container well before charging the airgun.


WARNING: Gas is flammable! Do not smoke!

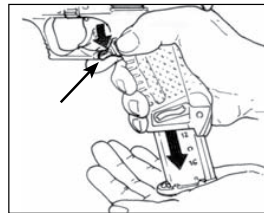

Keep the magazine in the illustrated position, with the gas charging hole at the top. Keep the gas container vertical and press the charging tube into the gas charging hole. As soon as the tank in the magazine is full there will be a discharge of gas.

3.3 LOADING THE MAGAZINE

 Pull the follower down and load it with up to 20 BBs as illustrated.

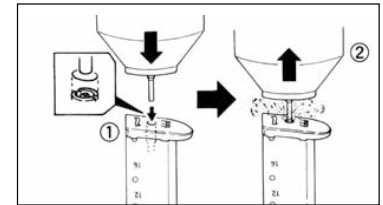

Note: Warranty expires if non-recommended BBs are used. It's recommended to use precise BBs from UMAREX-USA/Walther.

 
WARNING: Use .24 caliber (6 mm) plastic BBs only in this soft air pistol. Use of any other ammunition can cause injury to you or damage to the soft air pistol.

3.4 Inserting the magazine

Push the magazine into the gun until the magazine locks into place.

4. PROPER AIMING AND FIRING

WARNING: Make sure that the muzzle of the gun always points into a safe direction. Never aim at animals or persons. Always treat your gun as if it was loaded and ready to fire.

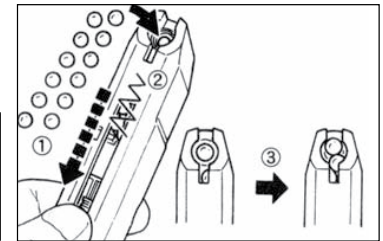

Aim at a safe target. Hold the gun in a way that you see rear sight and foresight in one line. The foresight must be right in the centre of the rear sight notch. Now you lift the gun until the lower edge of the bull's eye of the target is on the upper edge of the foresight. Upper edge rear sight - upper edge foresight - lower edge target must all be in one line.

wrong: right:

 
 
 
 
In case the rear sight is out of adjustment, adjust it as follows:
point of impact too far right - turn adjustment screw clockwise
point of impact too far left - turn adjustment screw anti-clockwise

Firing:

- check safety (must be "OFF SAFE")
- pull trigger
- The projectile will be fired.



5. HOP-UP

A special system called the "hop-up" has been fitted to the gun. This system causes the projectile to rotate when fired, thus providing a higher rate of energy. This will increase the range by up to 50% and will make shooting more accurate.

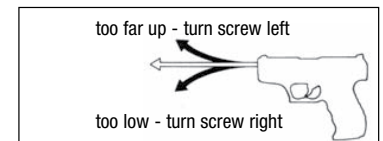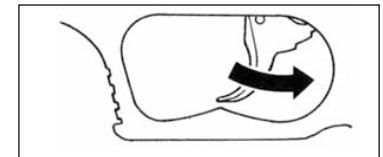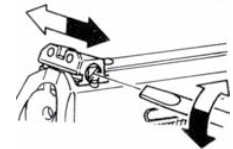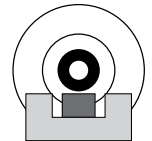

Hop-Up Adjustment

  To adjust the Hop-Up, turn the screw to the right by approx. half a turn. Then make the other adjustments up or down (right and left).

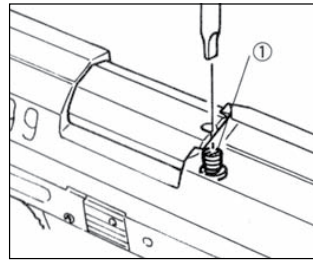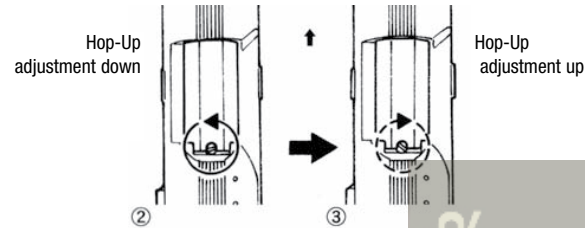


6. CARE AND MAINTENANCE

Good care and maintenance of the gun will provide you with many years of pleasant shooting with the gun. The metal parts on the outside have to be cleaned from time to time. Use a soft cloth slightly dampened with gun oil.

WARNING: Never attempt to clean the gun without having put the safety to "safe" first, remove the magazine and check the barrel, it must be clear.



6.1 Unloading

 Remove the magazine. Remove the BBs from the magazine until the follower is visible at the loading port.




Push a cleaning rod through the barrel. This would cause a BB left in the barrel to fall out through the magazine well.

  To discharge the gas tank, use a pin to press the valve stud until all gas is discharged. Take care to point away from yourself and do not point discharge hole towards others around you.

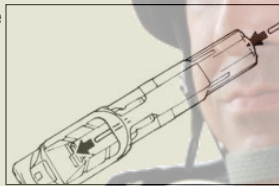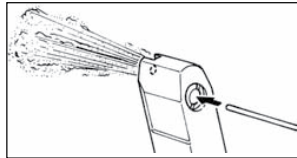

7. USE OF THE BARREL EXTENSION

 Attach the barrel extension as illustrated

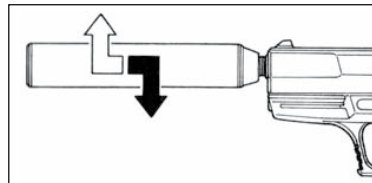

8. SAFE GUN HANDLING

You should be fully familiar with the proper and safe handling of your gun. Bear in mind that your new gun features a high muzzle velocity, this requires extra care. In respect to the basic rules of safe gun handling it is to be understood that simply touching the gun is to be interpreted as gun handling.

- Always treat a gun as if it was loaded.
- Always put the safety of a gun to "ON SAFE" when loading it so that there can be no unintentional discharge. Keep your finger away from the trigger, it should be straight and should rest on the trigger guard. The trigger is only to be touched when you are absolutely sure you can fire in a safe direction.
- Only use the kind of projectiles suitable for your gun.
- Always keep the muzzle pointed in a safe direction.
- This gun may only be discharged in your own house, on authorized shooting ranges and inside enclosed private property. It is to be made sure that no projectile can leave the enclosed property.
- The maximal range of the projectiles may exceed 150 metres, think about what you may hit before shooting.
- Never transport a loaded gun. Only load your gun when you intend to fire it.
- Never aim your airgun at persons or animals. Avoid ricochets. Never fire at smooth, hard surfaces or water.
- Before you discharge your gun, make sure that target and surrounding area are safe.
- Always check your gun before you transport it or take it over from another person, it must be unloaded.
- Make sure that you always have full control over the muzzle of your gun, even if you stumble or fall down.
- Safety shooting glasses should always be worn when firing the gun.
- Always store your gun in a safe place and in unloaded condition. Unauthorized persons (persons not familiar with the use of weapons, children and minors) must not have access to it, ammunition is to be kept in a separate place.
- The gun together with its operating instructions may only be handed over to persons who have reached the age of 16 (or older) and who are fully familiar with the handling of it.
- Modifications or repairs of weapons are only to be performed by authorized agencies or by a skilled gunsmith.
- Never leave a loaded gun unattended.
- Only unloaded weapons are to be handed over to another person.

9. TECHNICAL DATA

Action: Soft-Air-gun with gas actuation
 Cal.: .24 (6 mm BB)
 Energy: 0,7 Joule
 Weight: 1,5 - 1,6 lbs
 Reach: max. 175 yds. (150 m)

VELOCITY
350 ft/s

6 mm
SOFT-AIR

26
ROUNDS





WARRANTY | GARANTIE | GARANTÍA

EN This product is warranted to the retail consumer for 90 days from date of retail purchase against defects in material and workmanship; and is not transferable. WHAT IS COVERED: Replacement parts and labor. WHAT IS NOT COVERED: Transportation charges to UMAREX USA for defective product. Damages caused by abuse or failure to perform normal maintenance. Any other expense. CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. WARRANTY CLAIMS for U.S. and Canadian Customers: Please return product to your nearest distributor. If you do not know your distributor, please visit www.umarex-usa.com and click on "warranty and repair service" or call (479) 646 - 4210 and ask for our assistance. IMPLIED WARRANTIES: ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO 90 DAYS FROM DATE OF RETAIL PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. To the extent any provision of this warranty is prohibited by federal, state, or municipal law which cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

F La présente garantie protège l'acheteur au détail de ce produit contre les défauts de fabrication et de matériaux pendant 90 jours à compter de la date d'achat et elle n'est pas transférable. CE QUE COUVRE LA GARANTIE : Les pièces de rechange et la main d'œuvre. CE QUE NE COUVRE PAS LA GARANTIE : Les frais d'expédition du produit défectueux à UMAREX-USA. Les dommages résultant de l'utilisation abusive ou d'un entretien défaillant. Tous les autres frais. LES DOMMAGES INDIRECTS, LES DOMMAGES FORTUITS ET LES FRAIS ACCESSOIRES, Y COMPRIS LES DOMMAGES MATÉRIELS. CERTAINS ÉTATS N'AUTORISENT PAS LA LIMITATION OU L'EXCLUSION DES DOMMAGES FORTUITS OU INDIRECTS; PAR CONSÉQUENT, IL SE PEUT QUE LES LIMITATIONS OU EXCLUSIONS CI-DESSUS NE S'APPLIQUENT PAS DANS VOTRE CAS. REVENDICATIONS DE GARANTIE pour les clients américains et canadiens: Veuillez retourner le produit chez le distributeur le plus proche. Si vous ne connaissez pas votre distributeur, rendez-vous sur notre site www.umarex-usa.com et cliquez sur « garantie et service après vente » ou appelez-nous au (479) 646- 4210 et demandez notre assistance. GARANTIES IMPLICITES: TOUTE GARANTIE IMPLICITE, Y COMPRIS LA GARANTIE DE QUALITÉ MARCHANDE ET D'ADAPTATION À UN USAGE PARTICULIER, EST LIMITÉE À 90 JOURS À COMPTER DE LA DATE D'ACHAT AU DÉTAIL DU PRODUIT. CERTAINS ÉTATS N'AUTORISENT PAS LA LIMITATION DES GARANTIES IMPLICITES; PAR CONSÉQUENT, IL SE PEUT QUE LA LIMITATION CI-DESSUS NE S'APPLIQUE PAS DANS VOTRE CAS. Si une clause de cette garantie est interdite par la loi, elle devient non applicable. Cette garantie confère à l'acheteur des droits précis et celui-ci pourrait en avoir d'autres selon son lieu de résidence.

E La presente garantía protege al comprador minorista de este producto contra los defectos de fabricación y defectos de materiales durante los 90 días siguientes a la compra y es no transferible. LA GARANTÍA CUBRE: piezas de recambio y mano de obra. LA GARANTÍA NO CUBRE: cargos de envío del producto defectuoso a UMAREX USA. El daño causado por un uso abusivo o debido a un mantenimiento deficiente. Cualesquiera otros gastos. DAÑOS INDIRECTOS, DAÑOS FORTUITOS - DAÑOS MATERIALES INCLUIDOS - O GASTOS ADICIONALES. ALGUNOS ESTADOS NO PERMITEN LA LIMITACIÓN O EXCLUSIÓN DE LOS DAÑOS FORTUITOS O INDIRECTOS DE LA GARANTÍA, POR LO TANTO, EN ALGUNOS CASOS ESTA LIMITACIÓN NO SERÁ APLICABLE. RECLAMACIONES DENTRO DEL PERIODO DE GARANTÍA para clientes de EE.UU. y Canadá: Rogamos que devuelva el producto al distribuidor más cercano. Si no conoce a su distribuidor autorizado, rogamos que visite la página web www.umarex-usa.com y pinche sobre „Garantía y servicio de reparación” o llame al (479) 646-4210 pidiéndonos asistencia. GARANTÍAS IMPLÍCITAS: CUALQUIER GARANTÍA IMPLÍCITA, INCLUSIVE LAS GARANTÍAS IMPLÍCITAS DE COMERCIALIZACIÓN Y ADECUACIÓN CON UN FIN EN PARTICULAR, ESTÁ LIMITADA A 90 DÍAS A PARTIR DE LA FECHA DE COMPRA MINORISTA. ALGUNOS ESTADOS NO PERMITEN LIMITACIONES EN LA DURACIÓN DE UNA GARANTÍA IMPLÍCITA, DE MODO QUE LAS LIMITACIONES ANTERIORES PODRÍAN NO SER APLICABLES A USTED. En la medida que cualquier disposición de esta garantía esté prohibida por las leyes federales, estatales o municipales que no puedan prevenirse, dicha disposición no será aplicable. Esta garantía le otorga derechos legales específicos y otros derechos adicionales no mencionados en la presente, porque varían dependiendo del estado o país donde se aplique la garantía.

