 





警告
WARNING

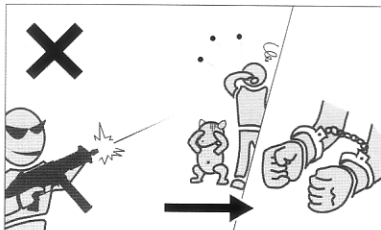


You may be liable for damaging public or personal property or for injuring a person or an animal even if you only meant to shoot as a "practical joke" Always observe good manners and enjoy fun sport shooting.

 警告
WARNING

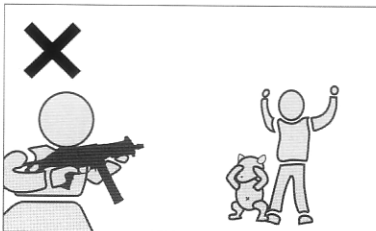


Never direct the muzzle towards a person, and animal or any other dangerous direction.

 警告
WARNING

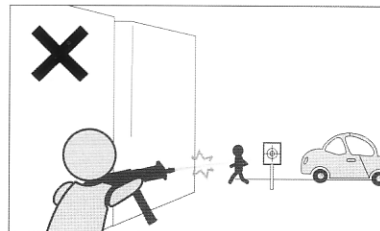


Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

 警告
WARNING

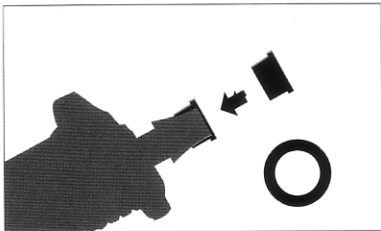


Make sure to attach the barrel and safety cap to the muzzle, except when you are shooting. Do this to prevent accidental, sudden discharge and also for dust protection purposes. NEVER pull the trigger while the barrel and the safety cap is attached.

 警告
WARNING

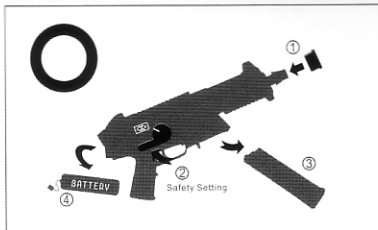

Safety procedure:
1 - Attach the safety cap to the muzzle.
2 - Set the selector lever to the safety position.
3 - Remove the magazine.
4 - Remove the battery.

 
警告
WARNING

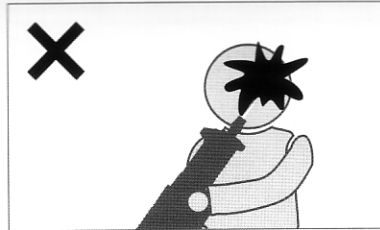

Looking into the muzzle is extremely dangerous regardless of BB's having been installed or not. If you get hit in the eye by a BB bullet, you may in worst case, loose your eye sight.




 警告
WARNING

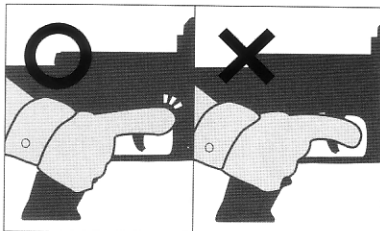


Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless the safety cap is removed and you are ready to shoot a target.

 警告
WARNING

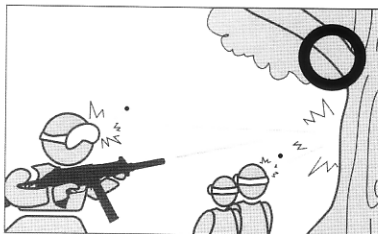


When shooting the air guns for target practice or in a game situation, you and all participants must wear goggles or other eye protective gear. Also, pay attention to ricochets. It is important to pay attention to third parties other than the participants.

 警告
WARNING

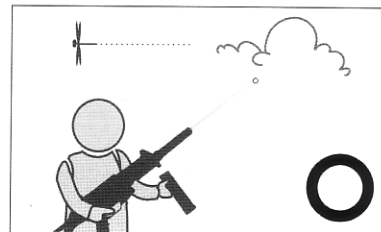


There may be cases where some BBs remain in the gun after the magazine has been disconnected. After removal of the magazine, direct the muzzle towards a safe direction and pull the trigger to confirm that no BBs remain in the gun, then attach the safety cap.

 警告
WARNING

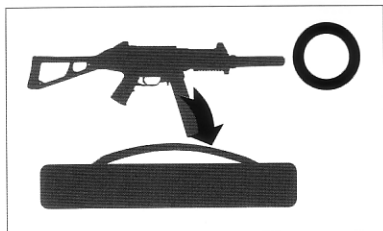


When you carry the air gun, attach the safety cap, set the selector lever to the safety position and always put it in a case or bag.

 警告
WARNING

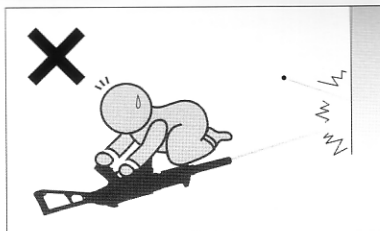

Always attach the safety cap to the muzzle, remove the battery and store the air gun in a case or bag and at a place out of reach by children.

 警告
WARNING

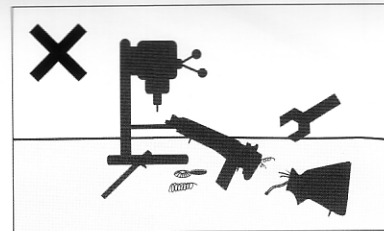

Disassembling or modifying the gun may adversely affect the performance and make it dangerous.

Components



G&G ARMAMENT
Complete AEG Series



Uber Machine Gun
6mm Electric Semi/Full Auto System

 
Components

▪ Battery setting and battery type




G&G ARMAMENT
Complete AEG Series

1

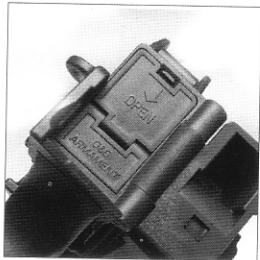

Fold the buttstock to see the battery cover.

 2

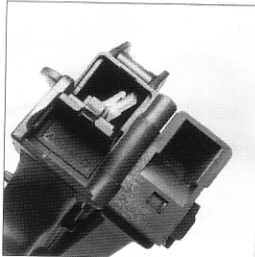


Open the battery cover on the back of upper receiver.

3




Pull out the connector and insert battery into the upper receiver.

 4

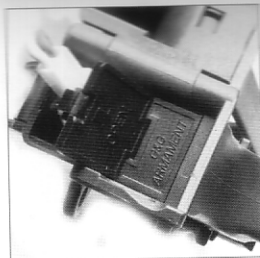

Connect the connectors then insert into upper receiver and close battery cover.

 Recommended battery type:

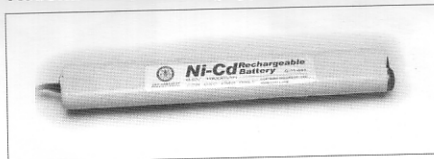


G&G UMG type 9.6V 1000mAh Ni-Cd rechargeable battery


▪ Magazine loading



 G&G ARMAMENT
Complete AEG Series

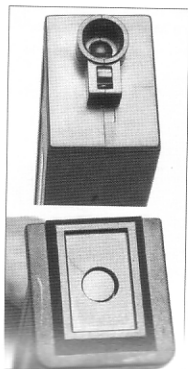


1

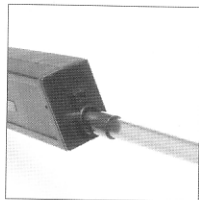 


Connect the BB charger muzzle to the top of the magazine.

 2

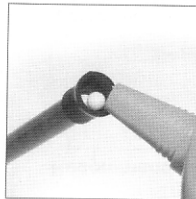


Feed the BBs into the charger.

 3

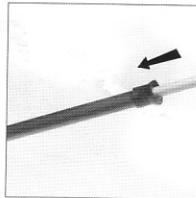

Push the BBs into the magazine with the charging rod.

 70 rounds magazine(standard)

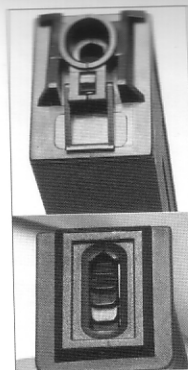

1



Open the cover on the top of the magazine.

2



Feed the BBs till it's full.

3



Close the cover and turn the gear at the bottom all the way till the clicking sound changes.

530 rounds Hi-cap magazine(option)

Uber Machine Gun
6mm Electric Semi/Full Auto System

 
▪ Magazine loading

Magazine setting and release



G&G ARMAMENT
Complete AEG Series


1

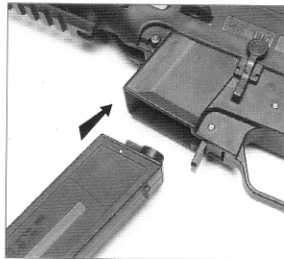

To set the magazine:

Set the magazine upward and connect firmly till a "click" sound is heard.

 2

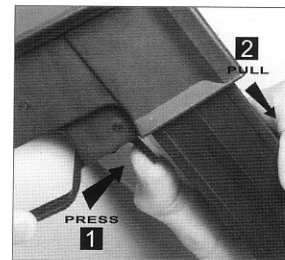

To release the magazine:

hold the magazine then push the magazine catch and pull out the magazine out.

1



Safety on:

Trigger can not be pulled and gun will not fire.

 
2



Semi auto:

One shot each time when the trigger is pulled.

3

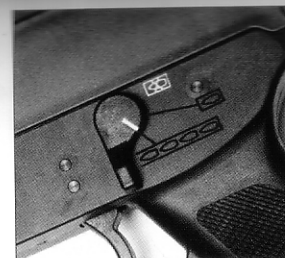

Full auto:

Automatic firing when trigger remains pulled.

 
Uber Machine Gun
6mm Electric Semi/Full Auto System

▪ Firing mode and safety


▪ Rear sight adjustment



G&G ARMAMENT
Complete AEG Series

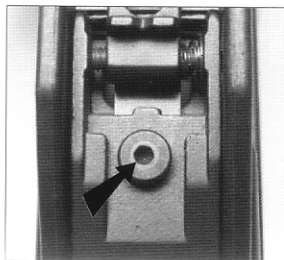


 Elevation adjusting screw:
for rear sight up/down adjustment.

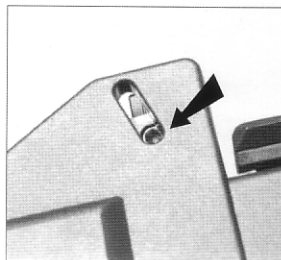


Windage adjusting screw:
for rear sight left/right adjustment.

 
Battle sight (flip manually)

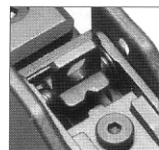

For precision shooting

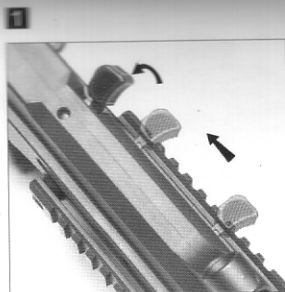 

 1
Pull the cocking lever backward and lock to open the bolt.

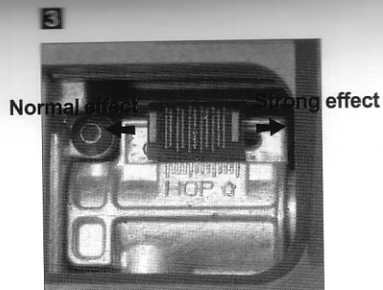


3
Slide the Hop-up adjustment piece forward or backward to change the Hop-up effect.

▪ Field stripping




 G&G ARMAMENT
Complete AEG Series

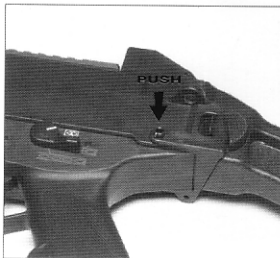

Push the locking pin.

 2

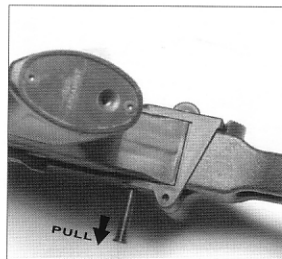

Pull out the locking pin.

3



 
Push hop-up chamber forward.

4



Pull the lower receiver of the same time.

5

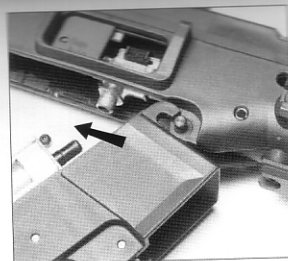

Release lower receiver.

Uber Machine Gun
6mm Electric Semi/Full Auto System

 
▪ Field stripping

▪ Field stripping



G&G ARMAMENT
Complete AEG Series

1

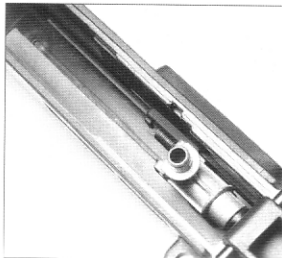


Turn the hop-up chamber and pull out.


2



 3

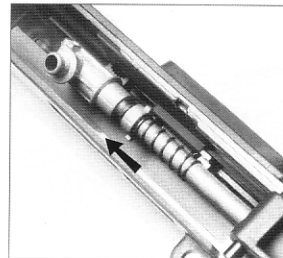


1

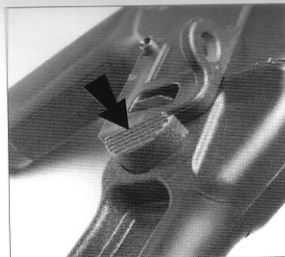 

Press the buttstock lock.

 2

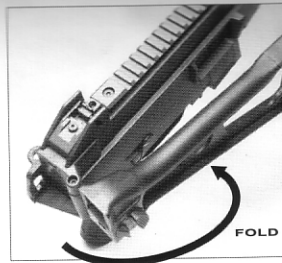

Fold the buttstock to the right side.



Pull up the buttstock to catch the hook.

Uber Machine Gun
6mm Electric Semi/Full Auto System

 
▪ Buttstock folding

▪ Attach the sound suppressor




G&G ARMAMENT
Complete AEG Series

1

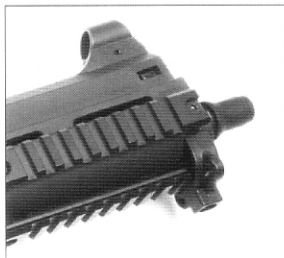


To attach the sound suppressor:

 2

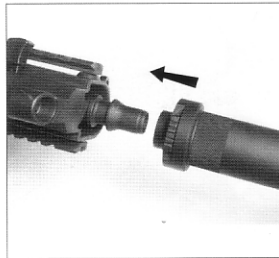

Insert outer barrel into the sound suppressor

 3

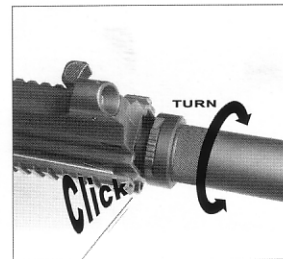

Push and turn the sound suppressor till a "click" sound is heard.

1



 
To remove the sound suppressor:

2



Press the barrel locking piece.

3

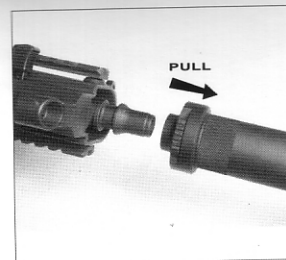


Pull the sound suppressor out.


▪ Bolt and bolt catch



 G&G ARMAMENT
Complete AEG Series

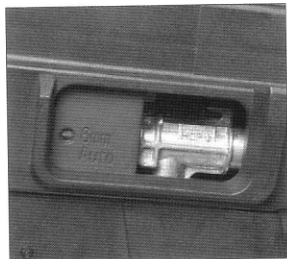


1

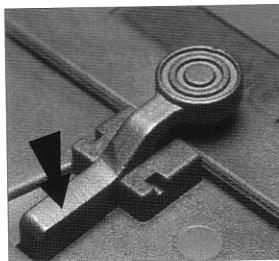 

Press the lower part of the bolt catch to stop the bolt when the cocking lever is pulled backwards to open the bolt.

 2

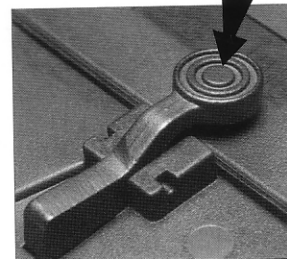

Press the upper part of the bolt catch to release the bolt.

CAUTION

Always attach the safety cap and disconnect the magazine to avoid sudden operation upon connecting the battery.

Be careful so as not to catch your fingers in the movable parts.

Always set the lever to "safe" before firing.

Do not disassemble beyond what is necessary, or the gun may be damaged.

Always use "G&G ARMAMENT" BBs for this gun. We shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.

Since a tight barrel is used, use of dirty BBs or those with burrs causes jamming and possible fatal damage to the gear box.

Turning hop-up dial excessively causes clogging of BB.
Keeping pulling the trigger with BB clogged damages the piston and gears.

Never hold the gun sideways as BB will curve right or left.

We shall not be held responsible for any damage or accidents arising from the wrong operation or modification of the gun.

Disassembly is designed for appropriate maintenance, not for modification.

Uber Machine Gun
6mm Electric Semi/Full Auto System

CAUTION