



# CQB NAVY SEAL UTG5 AIRSOFT SUBMACHINE GUN

## OWNER'S MANUAL



- ✦ 2 Stocks for Most Versatile Configuration
- ✦ New Generation Gear Box
- ✦ Rugged and Robust Construction
- ✦ Hefty Weight
- ✦ Double Combat Wind-up Magazines
- ✦ Tactical Double-Rail Systems
- ✦ Adjustable Hop-up System
- ✦ Fully Functional Select Fire
- ✦ Spectacular Power and Accuracy
- ✦ Excellent Shooting Performance
- ✦ Matte Black Non-glare Finish
- ✦ Certified Quality Battery Charger and 1050mah Rechargeable Batteries



Spare Magazines

**WARNING: NOT A TOY. FOR AGES 18 YEARS AND UP. MISUSE OR UNSAFE USE MAY CAUSE SEVERE INJURIES. EYE PROTECTION REQUIRED. THE PURCHASER AND THE USER SHOULD READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE USING THE GUN AND SHOULD OBEY ALL LAWS CONCERNING THE USE AND OWNERSHIP OF AIRSOFT GUN. DO NOT BRANDISH OR DISPLAY THIS PRODUCT IN PUBLIC - IT MAY CONFUSE PEOPLE AND MAY BE A CRIME. POLICE AND OTHERS MAY THINK IT IS A FIREARM, DO NOT CHANGE THE COLORATION AND MARKINGS TO MAKE IT LOOK MORE LIKE A FIREARM. THIS IS DANGEROUS AND MAY BE A CRIME.**

- Always treat the airsoft gun with the same respect and safety precaution as you would with a firearm.
- Airsoft gun must be kept out of the reach of minors.
- Always wear protective goggles for airsoft sport.
- Use .24 caliber (6mm) plastic BBs only. Strongly recommend using NeonFire Premium Precision Ground 6mm BB Pellets. Low quality BB pellets may clog and damage the rifle. Do not re-use BBs.
- DO NOT MODIFY OR ALTER YOUR AIRSOFT GUN. Attempts to modify the airsoft gun in any way inconsistent with this manual may make it unsafe to use and cause serious injuries.
- Do not store away the airsoft gun loaded. Make sure all BB's are unloaded from the airsoft gun. Always store it in a secure location.



### WARNING - CAUTION



Never look into the barrel with bare eyes.



Never point the gun to another person within shooting range.



Do not shoot at any target with hard surface within close range. Ricochet pellets may injure yourself.



Do not brandish in public, do not alter the coloration and warnings - such an action is dangerous and may be a crime.

# 1 Component Chart

- ① Front Sight
- ② Hanguard
- ③ Double Combat Wind-up Magazines
- ④ Spare Double Combat Wind-up Magazines
- ⑤ Magazine Release Lever
- ⑥ Trigger
- ⑦ Safety/Fire Selector
- ⑧ Three-Position Retractable Stock
- ⑨ Windage/Elevation Adjustable Rear Sight
- ⑩ Deluxe Double Rails Claw Mount
- ⑪ Hop-up Adjustment Switch
- ⑫ Full Size Fixed Stock
- ⑬ Battery Charger
- ⑭ 1050mah Battery

 


**Warning!** Before you follow the assembly instruction, make sure to remove the magazine and set the Fire/Safety Selector to the "SAFE" position.



# 2 Load Pellets

- Hold and disengage the Magazine by pressing the Magazine Release Lever.
- Slide open the Magazine Cap.
- Insert 6mm pellets into the Magazine. It can hold up to 150 pellets.
- Close the Magazine Cap.
- Rotate the Wind Up Wheel to draw BBs up into the Ready Tube. Stop when the wheel gets tight.
- Insert the loaded magazine back into the gun.
- **To remove magazine**, hold the Magazine Release Lever to disengage the magazine.

 **DO NOT** feed BBs from the Ready Tube.



**Warning!** Always use NeonFire Premium Precision Ground 6mm BB Pellets for accuracy and safety. Never re-use pellets.

# 3 Install/Replace Battery

- Locate and remove the Locking Pin (Fig 3.1).
- Pull the Foregrip off (Fig 3.2).
- Disconnect the Wire Socket.
- Install or replace the battery.
- Re-connect the Wire Socket. Tuck the battery and wire inside the Foregrip.
- Put the Foregrip back on carefully. Re-insert the Locking Pin in place.



## 4 Install & Replace Stock

The airsoft rifle comes with a pre-installed 3 position retractable stock and an additional full size fixed stock for your shooting preference.


### Extend / Collapse The Retractable Stock

- To extend the Stock, hold the Stock with your right hand. Use your middle fingers to push the Stock Position Lever outward/up and pull the Stock handle backward. Release the lever to ensure the handle is fully engaged (Fig 4.1).
- To collapse the stock, hold the Stock with your right hand. Use your middle fingers to push the Stock Position Lever outward/up and push the Stock handle forward. Release the lever to ensure the handle is fully engaged.
- There are 3 different positions for your comfortable shooting.



### Uninstall Retractable Stock

- Locate and remove the screw with a flat screwdriver (Fig 4.2). Remove the Locking Pin from the other side (Fig 4.3).
- Carefully pull the stock backward to the end (Fig 4.4).
- Slightly stretch the 2 Stock Sliding Prongs outward and pull the Stock out. **Be careful to catch 2 small parts (Position Spring and Position Pin) that will be released from the opening at the other side of the rifle body.**
- Store the released Stock, Position Spring and Position Pin properly. Retractable Stock cannot be re-installed without the Position Spring and the Position Pin.

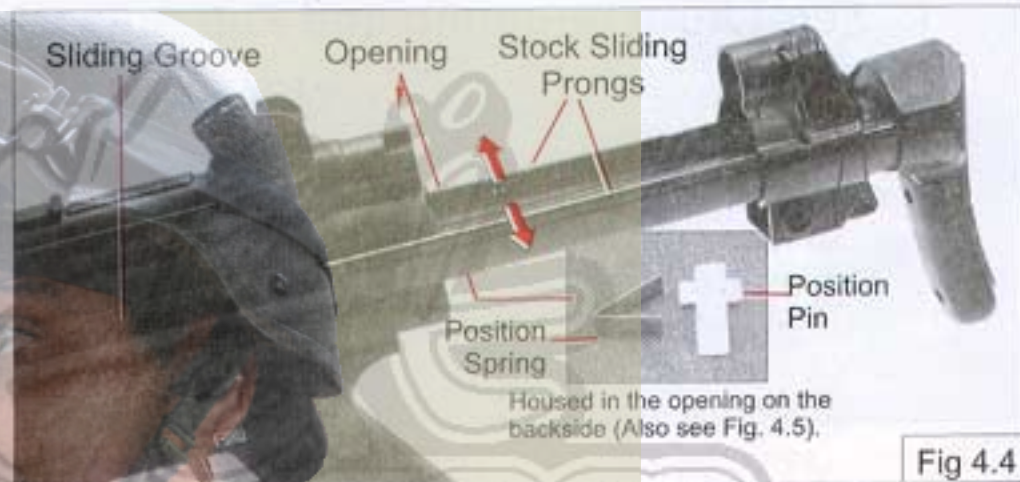

### Install Retractable Stock

- Install the Position Spring into the opening of the rifle body (Fig 4.5).
- Install the Position Pin on top of Position Spring, dropping the shorter post into the recessed area of the opening (Fig 4.6).
- Align the Stock Prongs with the top of the Position Pin and slowly slide both prongs into the Sliding Groove (Fig 4.7).
- Install the Locking Pin (Fig 4.3) and fasten the screw on the other side (Fig 4.2).



### Install the Full Size Stock

- Align the Full Size Stock with the Sliding Groove (Fig 4.8).
- Slide the stock along the Sliding Grooves fully.
- Install the Locking Pin (Fig 4.9) and fasten the screw with a flat screwdriver on the other side (Fig 4.10).



### Uninstall the Full Size Stock

- Unfasten the screw with a flat screwdriver (Fig 4.10).
- Remove the Locking Pin on the other side (Fig 4.9).
- Slowly slide the Stock out (Fig 4.8).

## 5 Optional: Install The Claw Mount

- Loosen the Locking Screw with an Allen wrench.
- Position the Claw Mount legs on Mount Rest on the gun. Fasten the screw with an Allen wrench.



## 6 Firing (Ensure complete safety of environment before firing.)



- Activating the trigger carelessly is extremely dangerous. Never set the Safety/Fire Selector off the "SAFE" position or put your finger on the trigger unless the protective plug is removed and you are ready to shoot at a target.

### 1. Semi Auto Shooting and Full Auto Shooting

- Set Fire/Safety Lever to "Semi Auto" position or to "Full Auto" position.
- Hold the gun firmly and rest the stock at a comfortable position.
- Aim the rifle at your target and pull the trigger to fire.

Fire/Safety Selector



Fire/Safety Selector



### 2. Adjust Variable Hop-Up System for Best Shooting

- Locate the Hop-Up Switch at the left side of the rear Foregrip.
- Slide the Hop-Up Adjustment Switch to a desired position.
- Shoot a few pellets, exam the trajectory and make further adjustment if necessary.

Hop-Up Adjustment Switch



### 3. Wind Up More Pellets for Continuous Shooting

While the magazine is designed to hold large capacity BBs, it requires BBs to be fed by batches into Ready Tube. When a batch of BBs is used up, rotate the Wind Up Wheel to draw Bbs into the Ready Tube for more shots.



Wind Up Wheel

## 7 Maintenance

- Keep the rifle in clean condition.
- Regularly clean the barrel with soft cleaning rod.
- Never used dirty, damaged or distorted pellets.