




⚠ WARNING ⚠	
 18 Years or older	<ul style="list-style-type: none"> Operation of this air gun is for training purposes only, at legal training facilities. Users will follow all applicable air gun laws and regulations. Sales and usage restricted to persons 18 years of age or older.
 Injury Caution	<ul style="list-style-type: none"> Plastic BB's can reach 50 to 60 meters and up to 300 fps. Careless shooting and mis-handling may result in severe eye damage and or other injuries. Always wear eye and body protection. Never point or shoot at people or animals.
 Please read manual!	<ul style="list-style-type: none"> Always follow safe handling and precaution listed in the manual. Understand fully all operations of this air gun. Use this air gun with full recognition of its caution warnings. Use within full compliance of State and local laws.
CHOKING HAZARD keep away from small children.	Contact your Dealer for a replacement manual.

9 mm

WARNING! NOT A TOY!

• This is an AIRGUN. Must be adult (18+) to purchase. Adult supervision required when used by minor. Do not brandish or shoot at others. For training purpose only.
• Do not remove, alter or impair the federal required orange color markings!

SEMI / FULL AUTO

**NO. KG-07H SERIES
FOR AGE ABOVE 14 YEAR OLD**



- * REPRODUCTION DISASSEMBLY
- * MOVEABLE BUTT
- * ADJUSTABLE HOP UP
- * CO2 POWER
- * ADJUSTABLE FRONT / BACK SIGHT
- * MAGAZINE COULD BE INSTALLED BY KWC KW-042

KWC®

KIEN WELL TOY INDUSTRIAL CO., LTD.

HEAD OFFICE : NO. 22, LANE 308, SEC. 3, TUNG-MEN RD., E ZONE (701), TAINAN, TAIWAN. R.O.C.

TEL : 886-6-269-1815 ~ 7

FAX : 886-6-269-8364


HOME PAGE : www.kwc.com.tw

E-MAIL (SALES DEPT.) : kwc@ms8.hinet.net

E-MAIL (DESIGNING DEPT) : kwc.huang@msa.hinet.net

OPERATION


1. RELEASE MAGAZINE

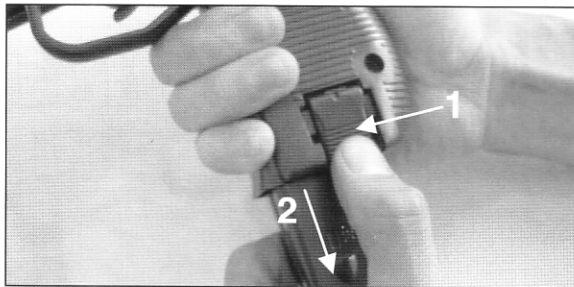

▲ Press magazine catcher and pull down magazine

CAUTION: Prevent falling down magazine to ground or it will be broken easily


2. CO2 LONG MAGAZINE

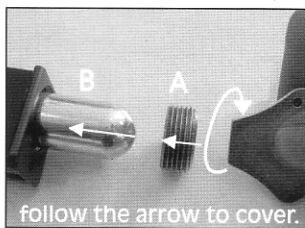

◀ Screw "bottom cover A" off by using minus screw driver. Place "Co2 gas cartridge B" inside the magazine. Screw "bottom cover A" to push "Co2 gas cartridge B" inside the magazine faster when you feel the cartridge is almost catch the bottom of magazine.

CAUTION: Release all of the Co2 gas out of the magazine in order to protect you magazine.

3. LOADING BB BULLET

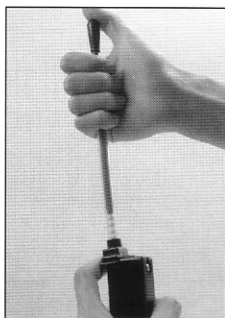


◀ Put the quick loader on the top of magazine and load BBs into the magazine.

* You could also load the BBs one pellet by one pellet.

CAUTION: BBs max quantity in one magazine is 38+ 1 pellets. If YOU load more than this quantity, you would possibly have any abnormal problems.

4. INSERTING THE MAGAZINE

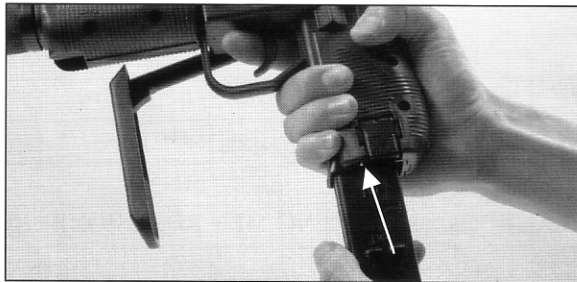

▲ Put on the magazine with full of BB until sound "CLICK"


5. CHAMBERING THE BB



▲ Pulling the UPPER HANDLE back. When the UPPER HANDLE has been pulled completely back, release the UPPER HANDLE. BB will be automatically chambered into the barrel.



CAUTION: The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

6. VARY SEMI AUTO AND FULL AUTO

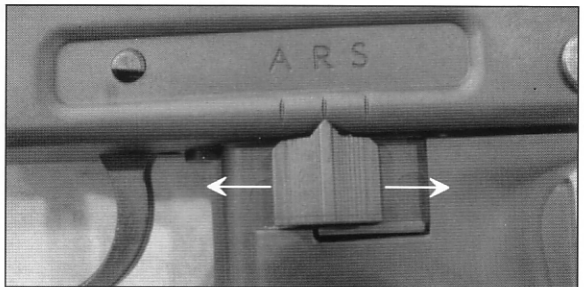

▲ A. Full auto. R. Semi auto. S. No shooting.

7. GRIP SAFETY

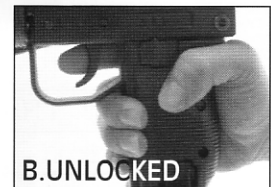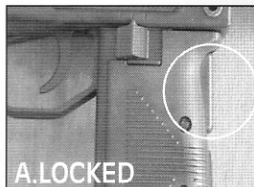


▲ This firearm can't be shot without holding GRIP SAFETY.

8. SHOOTING


* Aim the target and pull the trigger. Then the BB will be shot.

CAUTION: KWC design a switch on the MAGAZINE FOLLOWER. you could use this switch to shoot this firearm without loading BB. But for protecting the quality of this firearm, do not shoot it without loading BB too often.

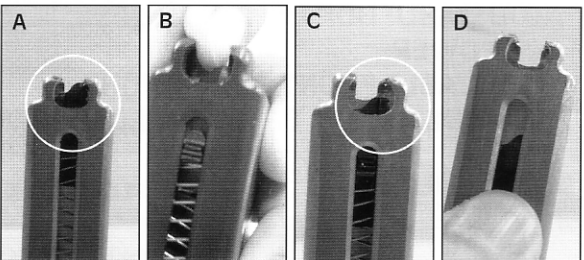


▲ A. Can't shoot without BB
 B. Press the MAGAZINE FOLLOWER and push the FOLLOWER UNIT.
 C. Now you can shoot it without BB
 D. If you intent to turn this firearm to Condition A, pull the FOLLOWER UNIT and let it go up by itself.

9. ADJUSTABLE HOP UP

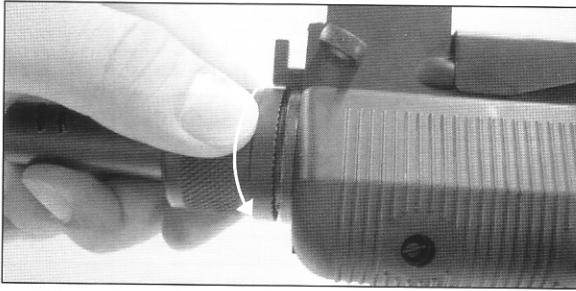


▲ HIGH HOP UP

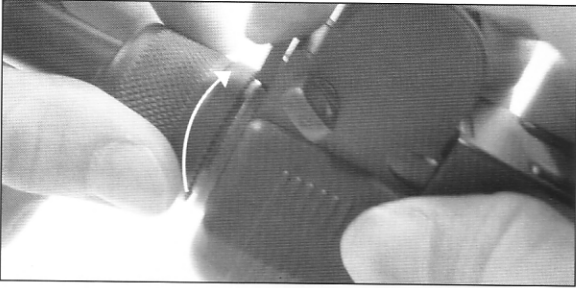


▲ LOW HOP UP

10. ADJUSTABLE FRONT / BACK SIGHT

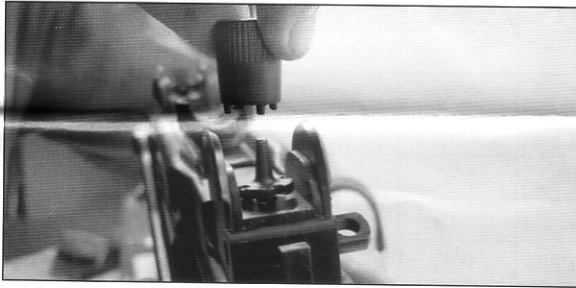


▲ FRONT SIGHT

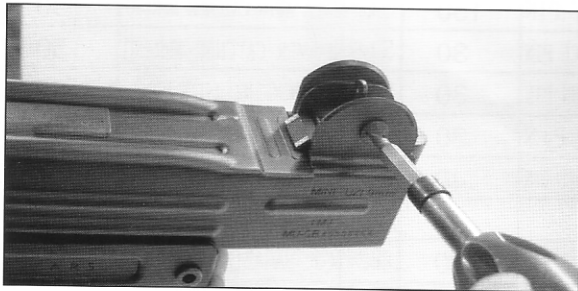


▲ REAR SIGHT

11. BUTT

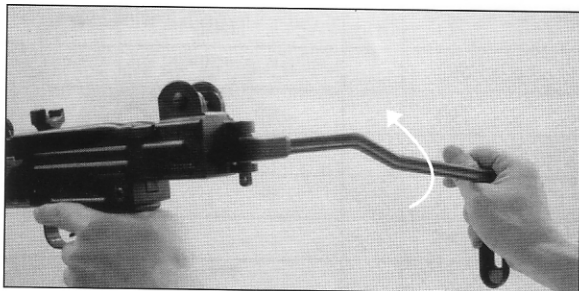


DISASSEMBLY


1. TAKE OFF SLIDE

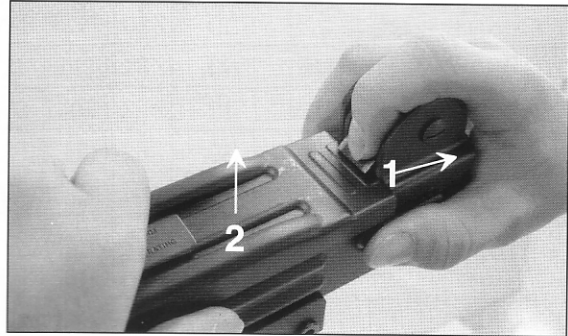


2. TAKE OFF CYLINDER

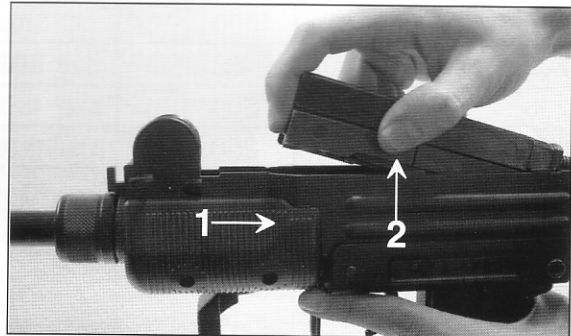

3. DISASSEMBLY FRAME

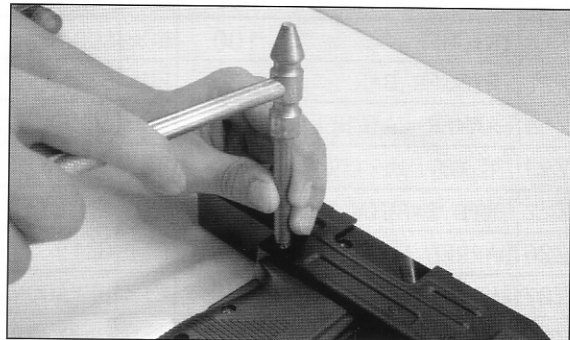

4. TAKE OFF OUTER BARREL

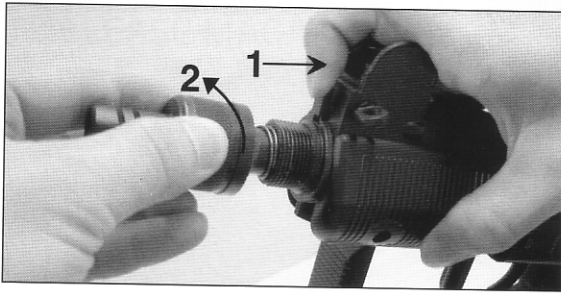

TROUBLE AND EXCLUSION

* CAN'T SHOOT

Please load the magazine and pull UPPER HANDLE.

* REASON YOU CAN'T SHOOT

- A. no BB
- B. out of CO2 or GAS
- C. UPPER HANDLE have not yet pulled
- D. Do not load the magazine before pull the UPPER HANDLE

* BB STUCK

- A. Do not load the BB with BB loader
- B. Bad BB

* EXCLUSION


- A. Pull the CYLINDER back as picture and clean the BB get stuck




- B. As the process of DISASSEMBLY, take off the CYLINDER and clean the BB get stuck.

MAINTENANCE GUIDE


- * We recommend the KWC's lube oil to spray into the CYLINDER when you shoot the gun over 2,000 BB pellets.

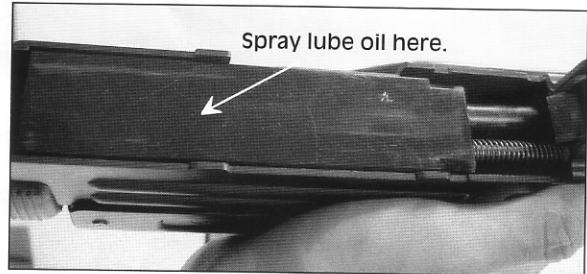

▲ Lubricate the CYLINDER

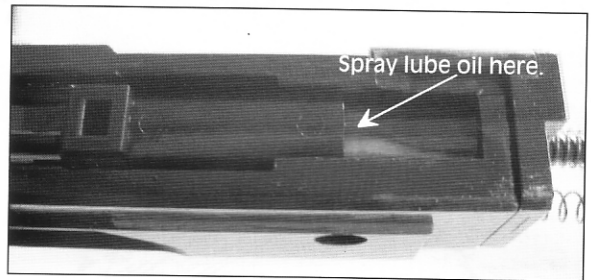

▲ Lubricate the NOZZLE

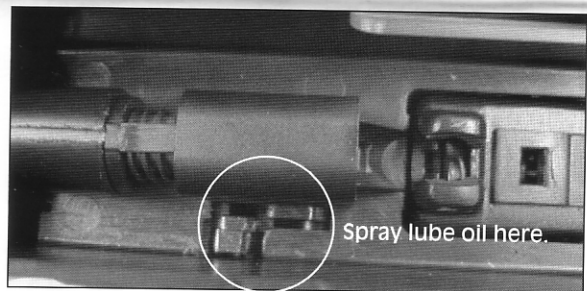


▲ Lubricate the COMBINE UNIT

WARNING-SAFETY GUIDELINES

This product is suitable only for 14 year old above. We will not be responsible for any accident of malfunction caused by improper handling, modification, alteration or disassembling of the KWC air/gas hobby pistol. You could enjoy the shooting exercise according to the correct operation.

1. Never brandish of fire this gun at any people, animal public or private property.
2. Do not put your finger on the trigger except shooting.
3. Do not load any BBs except shooting
4. Always be aware of your surrounding before shooting and select a safe area for target practice. Avoid places with people and animal.
5. Keep out of reach of small children.
6. Do not fire this gun at a fragile object and make sure no such object is behind your target.
7. Do not use other BB than the KWC's BB or re-use it.
8. Do not make any unauthorized modification on this gun or BB bullet.
9. Donot look directly into the gun.
10. Always wear eye protection or goggle to prevent injuries when you are shooting.

- * Wear protective eye wear & face mask when using AirSoft airguns.

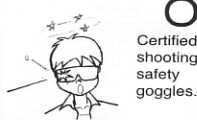

- * NEVER brandish of fire AirSoft airguns at animal. Or people beyond a certified and regulated AirSoft Sport arena. Brandishing a gun in public is against the law. Serious consequences could arise.



- * Read and understand the operating and safety manual using your AirSoft air guns



- * Be aware of you surroundings to avoid accidents.



- * Do not directly into the barrel to avoid accidental discharge of BB.




- * ALWAYS transport an AirSoft airgun inside a locked Carrying case. Make sure it's unloaded. Never carrying your AirSoft Sport Gun in open view. As a concealed weapon. Or brandish an AirSoft airgun in public.



- * Do not disassemble or modify your AirSoft airguns. Doing so will void all warranty Service by authorized centers only. Removal of the orange safety barrel marking is a federal offense.



KG-07H SERIES DISASSEMBLY DIAGRAM

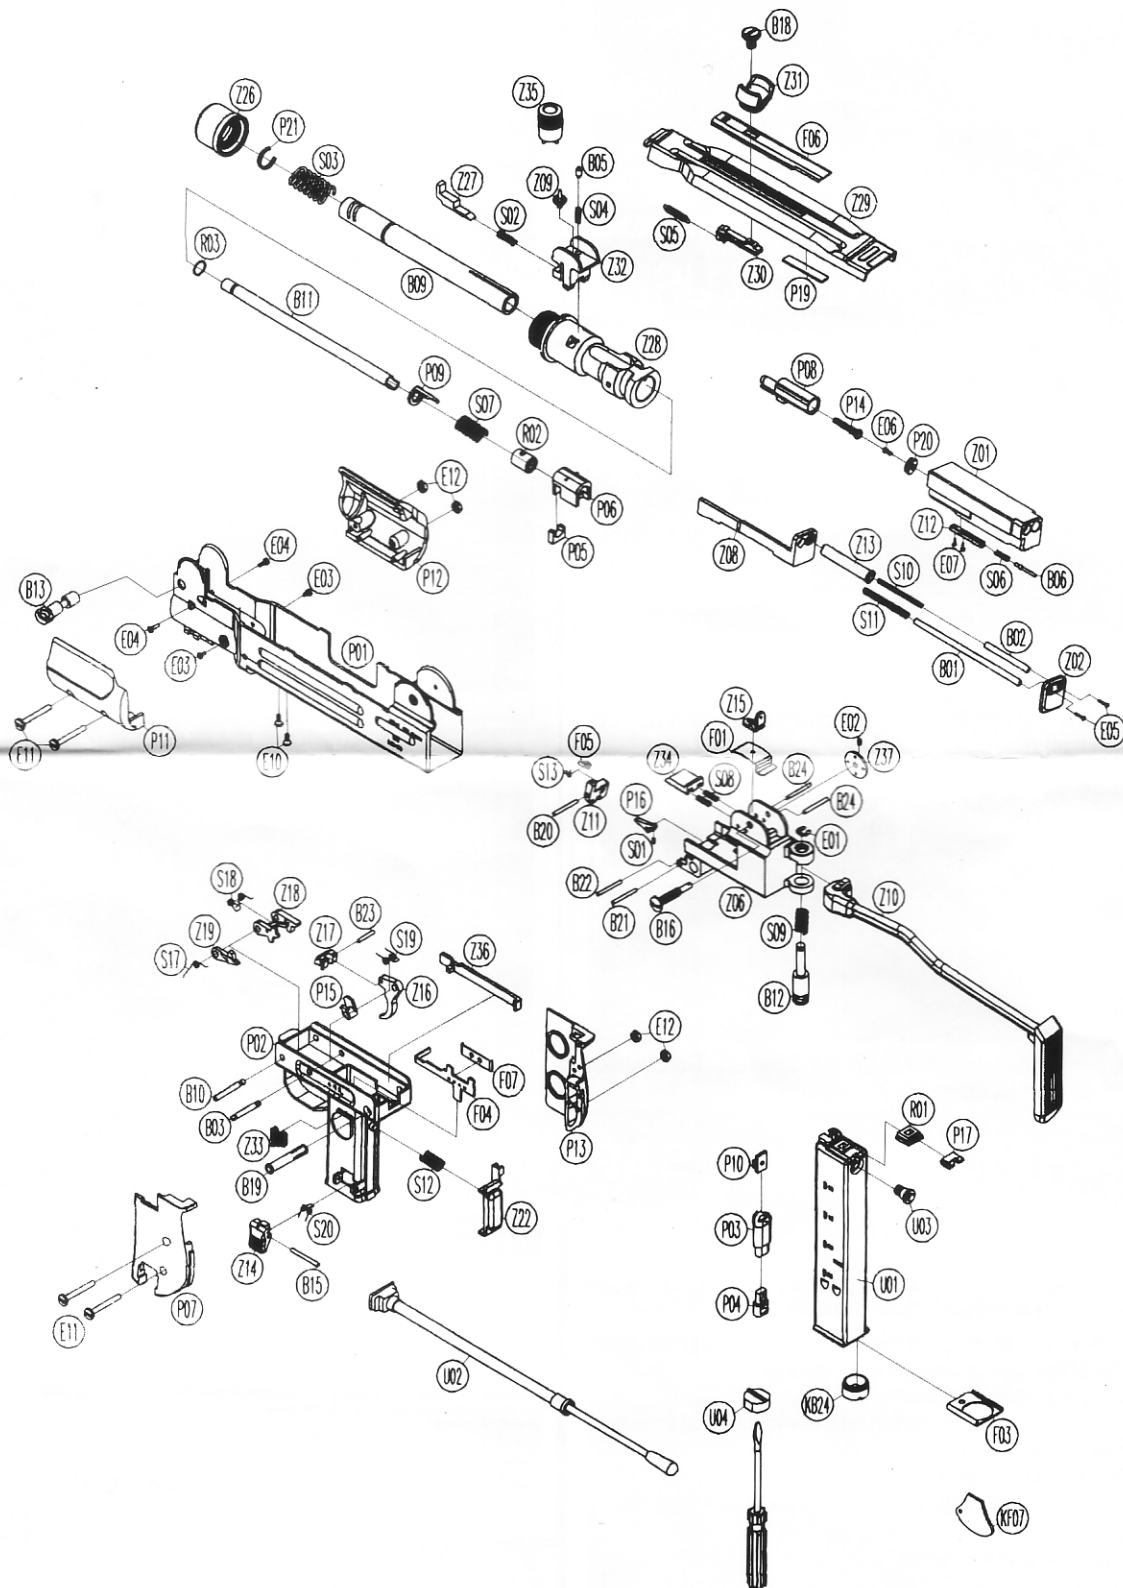

THE ACTURAL PARTS IS POSSIBLE DIFFERENT FROM THE PICTURE.

KG-07H SERIES PARTS LIST

No.	UNIT	PRICE	No.	UNIT	PRICE	No.	UNIT	PRICE
P01	FRAME	450	Z29	UPPER FRAME	300	R01	ROUTE PACKING	50
P02	UNDER FRAME	250	Z30	UPPER HANDLE BASE	60	R02	BULLET PACKING	100
P03	MAGAZINE FOLLOWER	50	Z31	UPPER HANDLE	50			
P04	MAGAZINE BASE LOCATION	40	Z32	FRONT SIGHT BASE	100	F01	FRONT SIGHT LEAF SPRING	50
P05	BARREL CATCHER	30	Z33	FULL/SEMI SWITCH	50	F03	MAGAZINE BASE	80
P06	BARREL PACKING	80	Z34	SLIDE CATCHER	50	F04	FULL/SEMI CONTROL BAR	80
P07	GRIP (LEFT)	120	Z35	FRONT SIGHT ADJUSTABLE UNIT	50	F05	FIRING PIN	40
P08	NOZZLE	100	Z36	GRIP SAFETY BAR	100	F06	UPPER HANDLE CHUTE	100
P09	HOP UP PLATE	50	Z37	REAR SIGHT SCREW	80	F07	SAFETY LOCATION LEAF SPRING	50
P10	FOLLOWER UNIT	30						
P11	HOLDING GURAD (LEFT)	120	B01	CYLINDER BASE RECOIL SPRING BAR	100	S01	FIRING PIN LOCATION SPRING	30
P12	HOLDING GURAD (RIGHT)	120	B02	HAMMER RECOIL SPRING BAR	50	S02	BARREL LOCATION SPRING	30
P13	GRIP (RIGHT)	120	B03	TRIGGER PIN	30	S03	BARREL LOCATION SPRING	50
P14	GAS CONTROL PART	40	B05	FRONT SIGHT LOCATION PIN	40	S04	FRONT SIGHT LOCATION PIN SPRING	30
P15	FULL AUTO CATCHER BAR	40	B06	NOZZLE RECOIL PIN	50	S05	UPPER HANDLE RECOIL SPRING	50
P16	FIRING PIN LOCATION	40	B09	OUTER BARREL	450	S06	NOZZLE RECOIL PIN SPRING	30
P17	GAS ROUTE PACKING	30	B10	HAMMER CATCHER PIN	100	S07	ADJUSTABLE HOP UP SPRING	30
P19	SLIDE	30	B11	INNER BARREL	300	S08	SLIDE CATCHER SPRING	30
P20	CYLINDER	50	B12	REAR BELT BUCKLE	100	S09	REAR BELT PIN SPRING	50
P21	BARREL	30	B13	FRONT BELT BUCKLE	100	S10	HAMMER BASE SPRING	80
			B15	MAGAZINE CATCHER PIN	40	S11	CYLINDER BASE SPRING	100
Z01	CYLINDER BASE	500	B16	REAR SIGHT SCREW	100	S12	GRIP SAFETY SPRING	50
Z02	HAMMER SPRING	60	B18	UPPER HANDLE SCREW	50	S13	FIRING PIN SPRING	30
Z06	BUTT BASE	300	B19	FRAME ASSEMBLY PIN	150	S17	FULL AUTO CATCHER SPRING	30
Z08	HAMMER	200	B21	FIRING PIN SUBSTANCE PIN	30	S18	HAMMER CATCHER SPRING	50
Z09	FRONT SIGHT	50	B22	FIRING PIN LOCATION PIN	30	S19	TRIGGER SPRING	50
Z10	BUTT	400	B23	TRIGGER BAR PIN	30	S20	MAGAZINE CATCHER SPRING	40
Z11	FIRING PIN SUBSTANCE	50	B24	REAR SIGHT LEAF SPRING PIN	40			
Z12	NOZZLE LOCATION	50				KF07	PLIER	50
Z13	HAMMER STABLE SPRING BASE	80	E01	E BUCKLE	30	KB24	C02 MAGAZINE BASE SET	100
Z14	MAGAZINE CATCHER	60	E02	HOLDER SCREW	30	U01	MAGAZINE	1500
Z15	REAR SIGHT	50	E03	SCREW	30	U02	BBLOADER	180
Z16	TRIGGER	100	E04	SCREW	30	U03	VALVE SET	250
Z17	TRIGGER BAR	60	E05	SCREW	30	U04	VALVE TOOL	80
Z18	HAMMER CATCHER	100	E06	SCREW	30			
Z19	FULL AUTO HAMMER CATCHER	50	E07	SCREW	30			
Z22	GRIP SAFETY	100	E10	SCREW	20			
Z26	BARREL LOCATION	150	E11	GRIP SCREW	40			
Z27	BARREL LOCATION SET	50	E12	HEXAGONAL SCREW	20			
Z28	FRAME INNER CASE	300						