




Smith & Wesson

M&P

9 / 9c Series

Asia

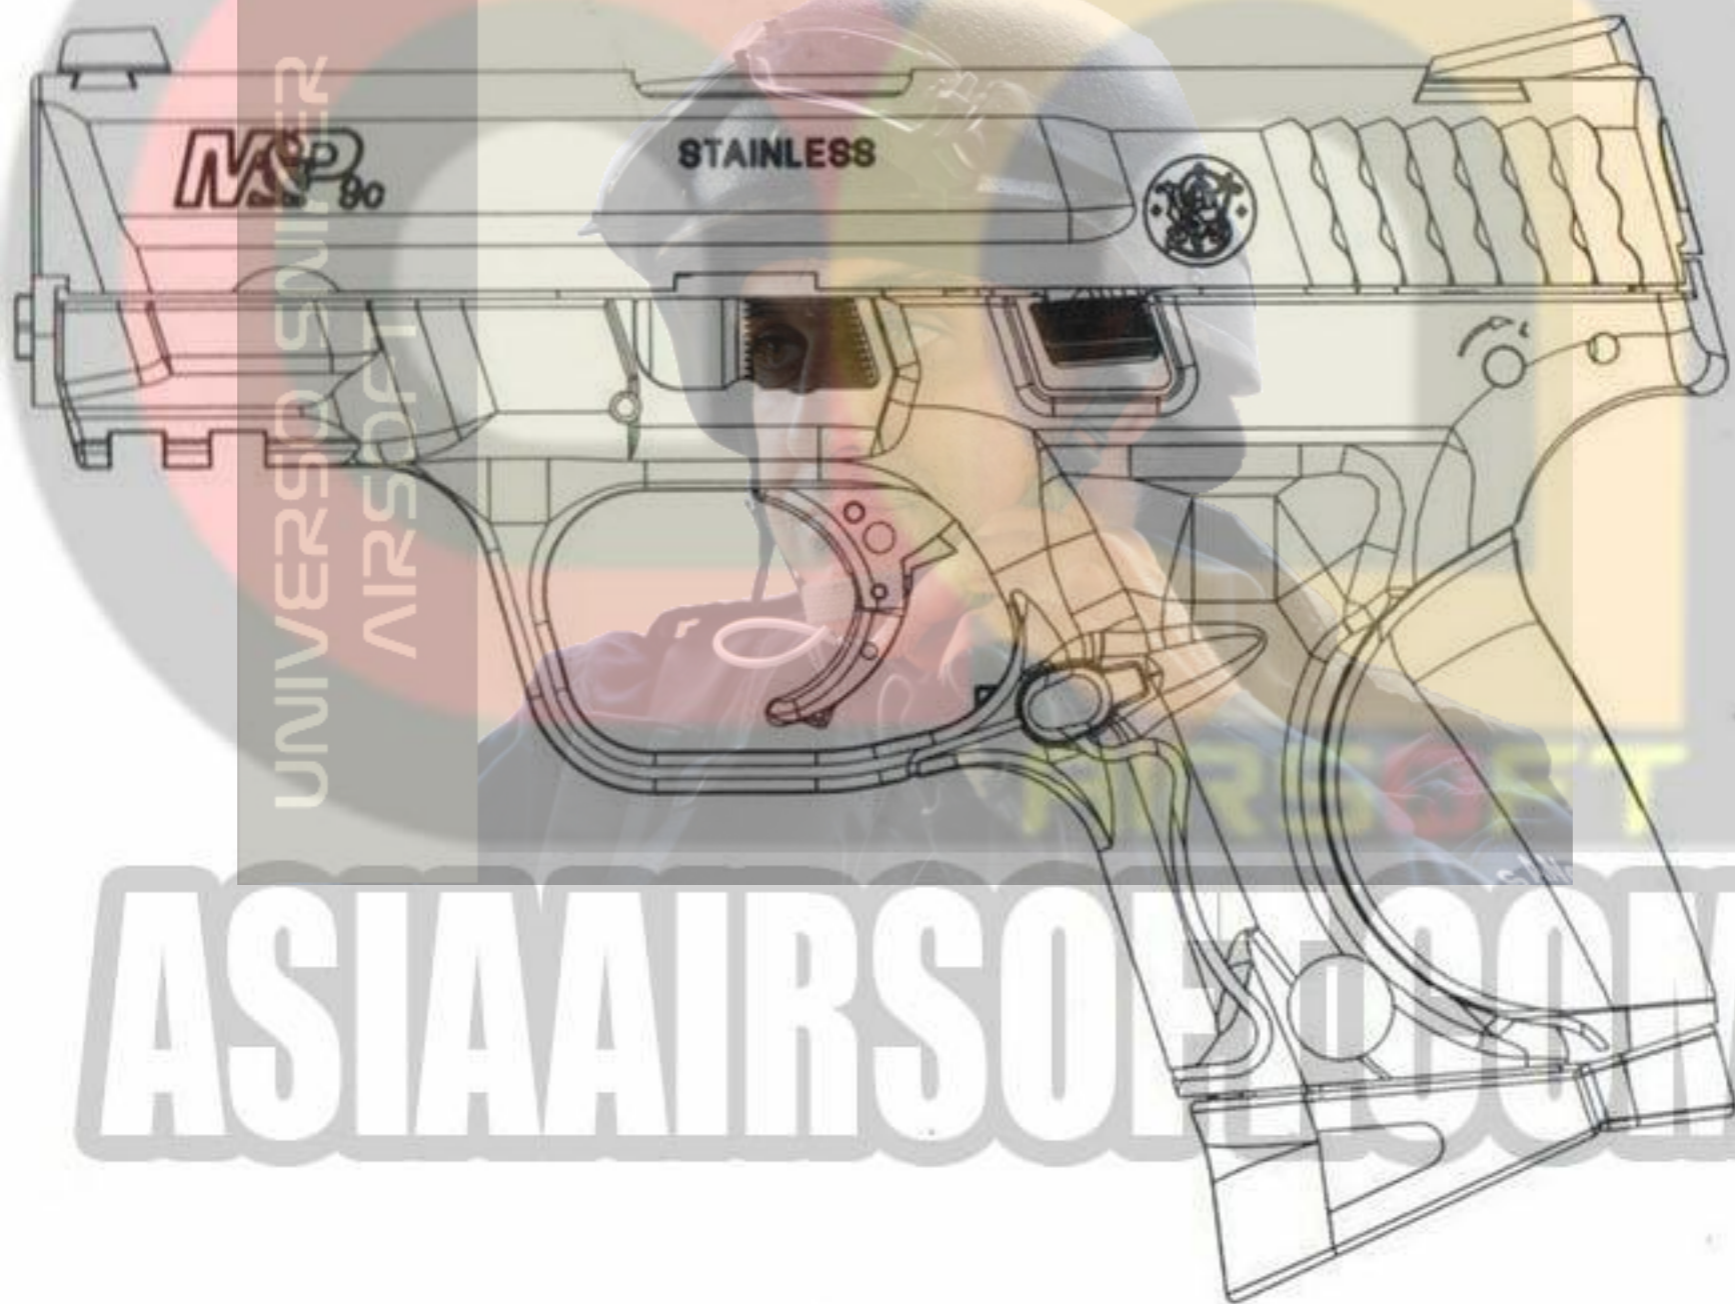

Instruction

6mm Gas Blow Back Pistol

Made in Taiwan

Manual

Before using GAS blowback pistol read and follow these manual



WARNING

- Always treat the gun as loaded.
- Always keep the gun pointed in a safe direction.
- Always keep your finger straight and off the trigger until you are ready to shoot.
- Never point the gun at anything you don't intend to destroy. And be sure of your target and what is beyond it.
- Wearing the goggle before firing the gun.

CONTENTS


02	Component Name
03	Safety Device
04	Load & Firing
08	Disassembly
09	Cleaning
10	Serial Number Plate & Dark Sights
11	Back Straps Switching
12	Magazine Release Button
13	Hop-up System & Adjust
14	Parts List

SPEC.


	M&P9C	M&P9
OVERALL LENGTH	170MM	194MM
CALIBER	6MM	6MM
WEIGHT(WITH MAGAZINE)	580G	730G
MAGAZNE CAPACITY	16+1	21+1
BARREL LENGTH	72MM	88.5MM
INNER BARREL INTERNAL DIAMETER	6.04MM	6.04MM
MUZZLE VELOCITY	80M/S	85M/S

● Component Name

RIGHT SIDE

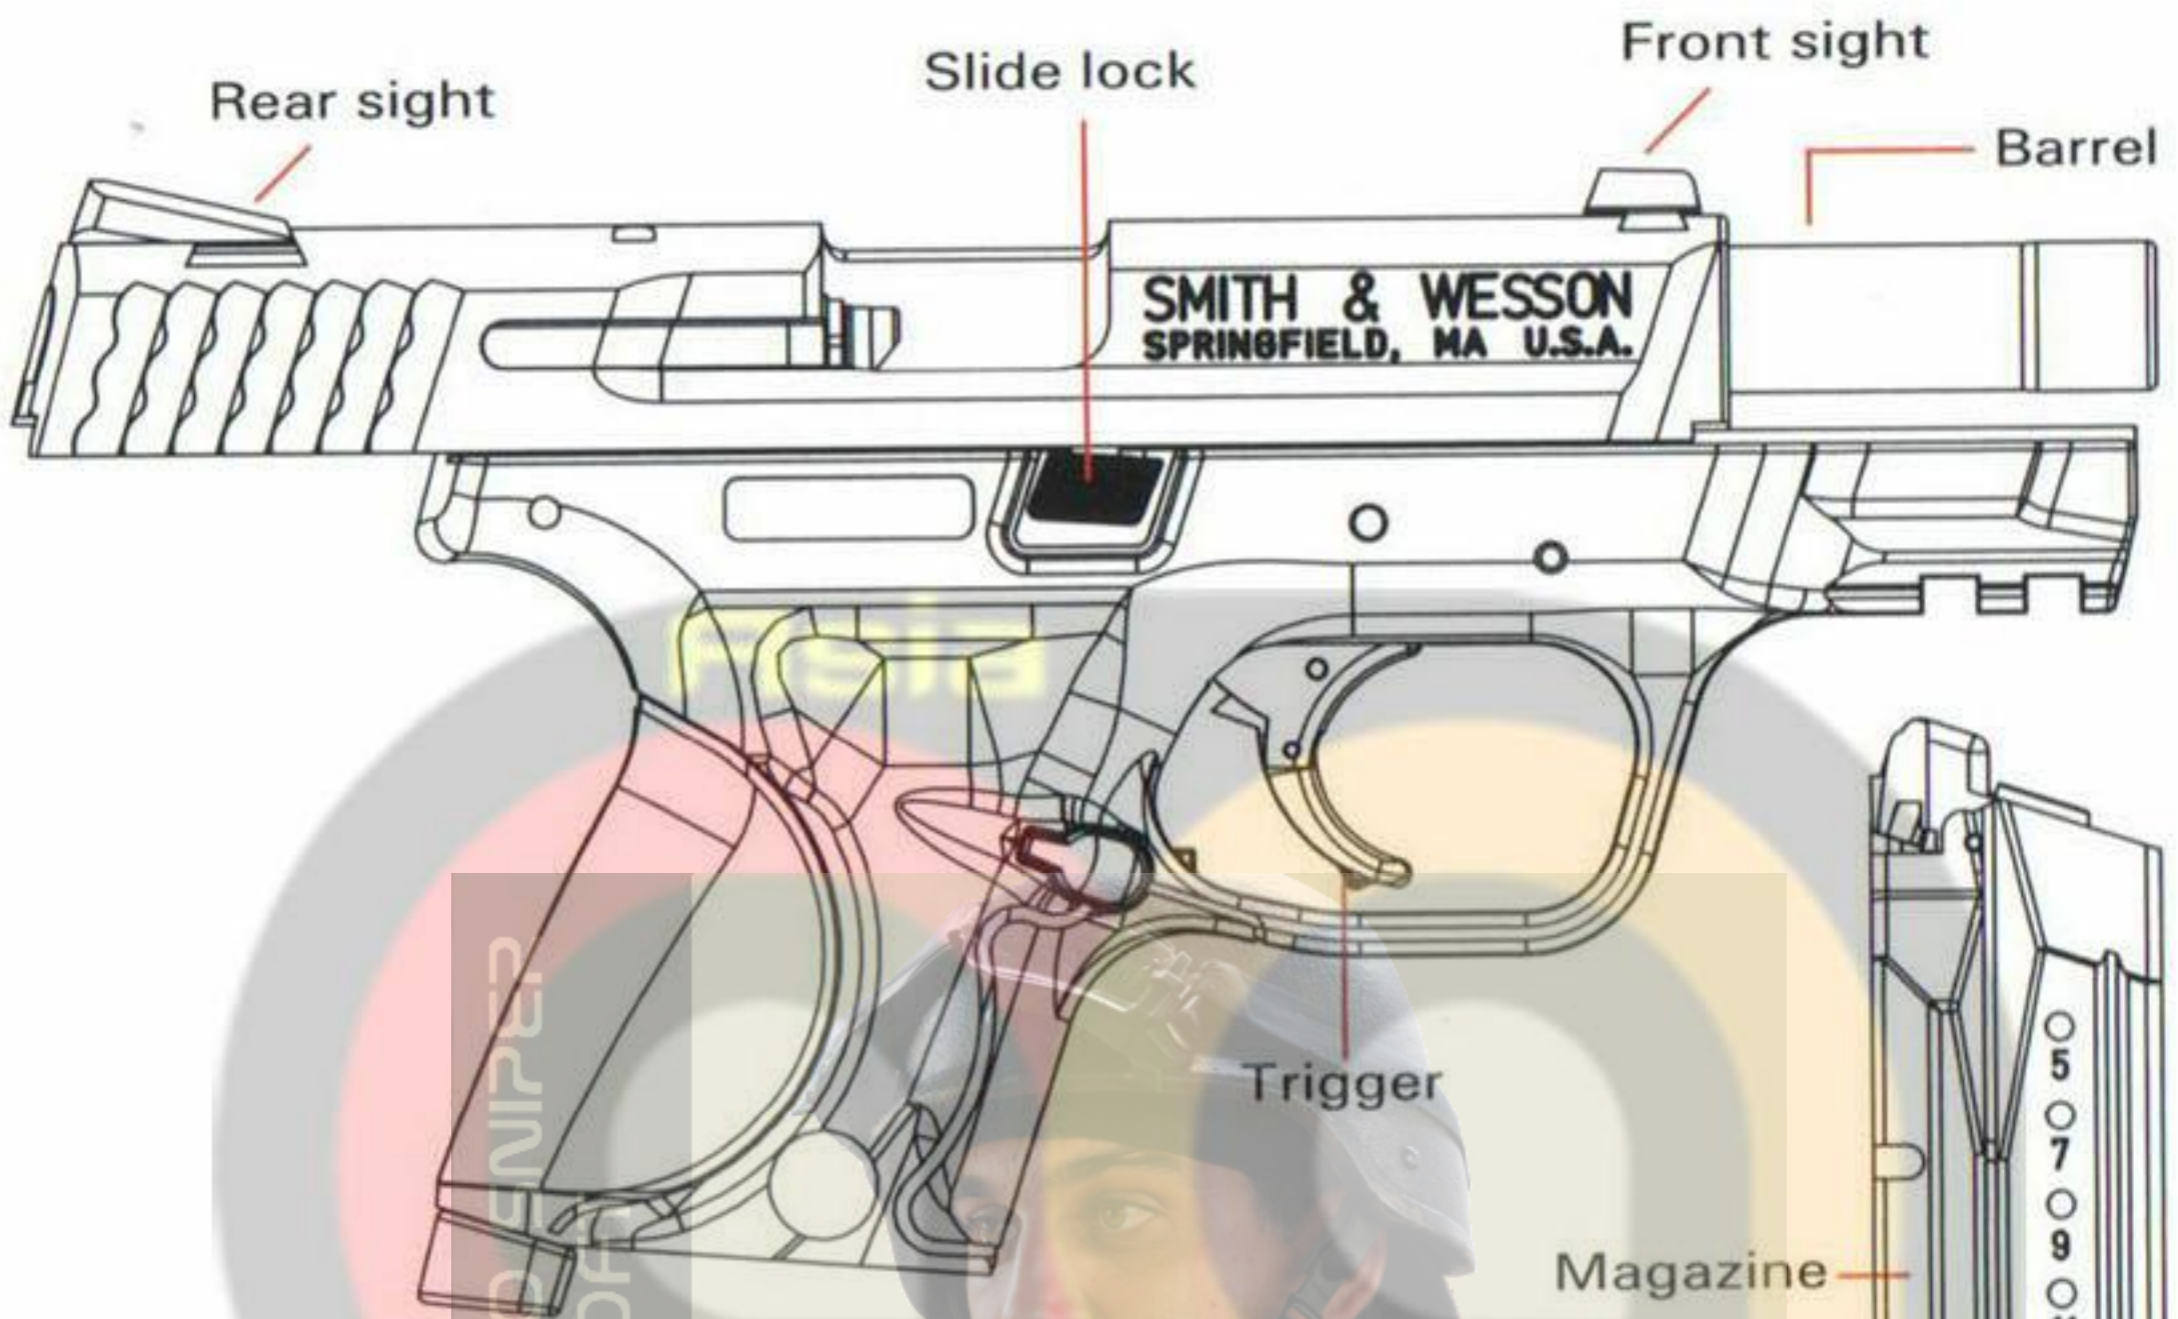



LEFT SIDE

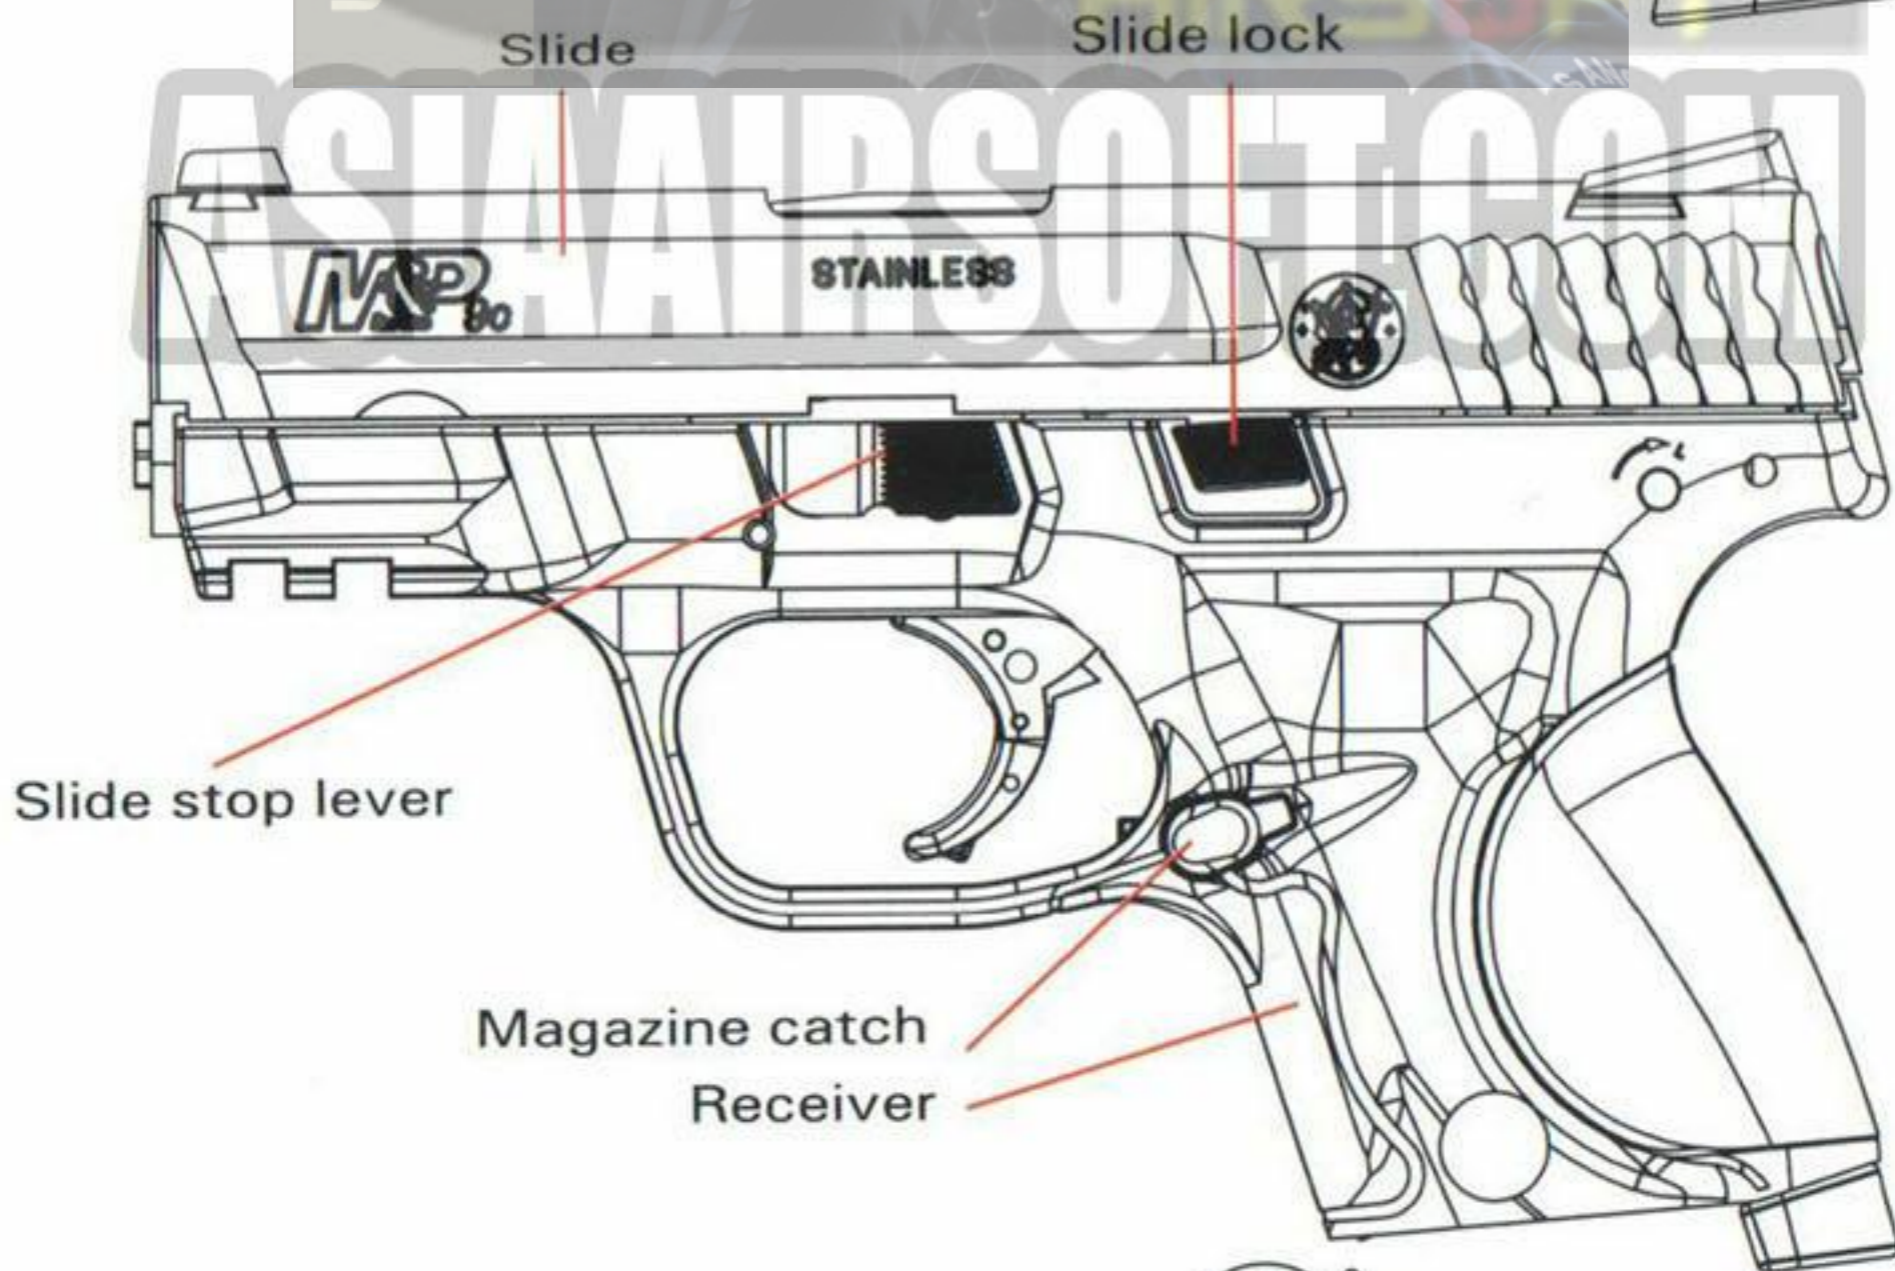

● Safety Device


NOTE:

THE SERIES HAS NO EXTERNALLY SAFETY DEVICES WHICH NEED TO BE ACTUATED SEPARATELY. ALL THE SAFETY OR SAFETY RELEASE DEVICES FUNCTION AUTOMATICALLY.

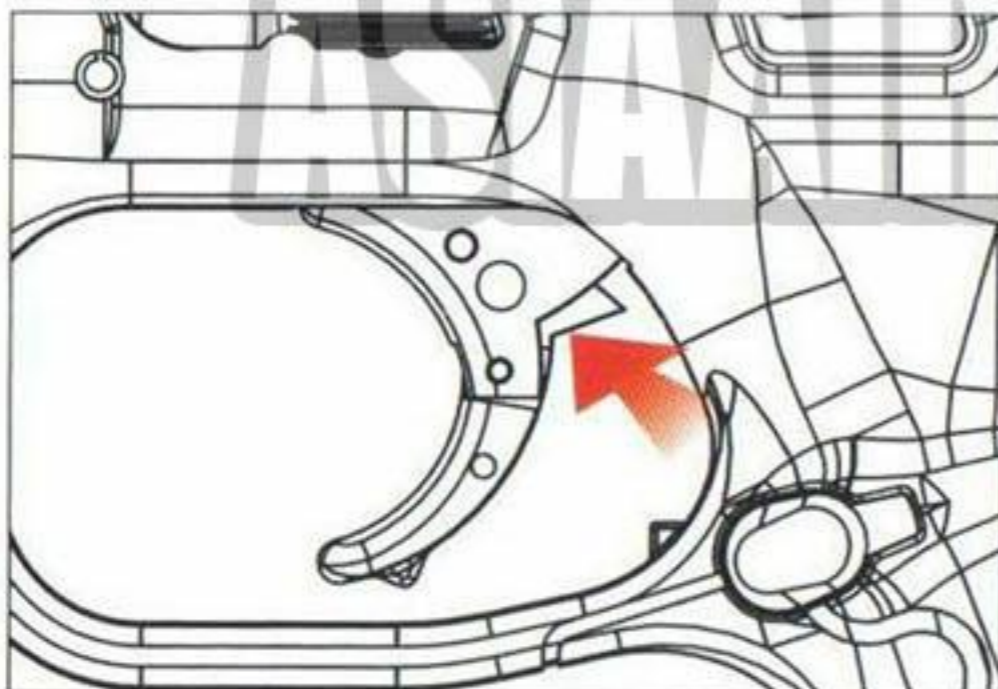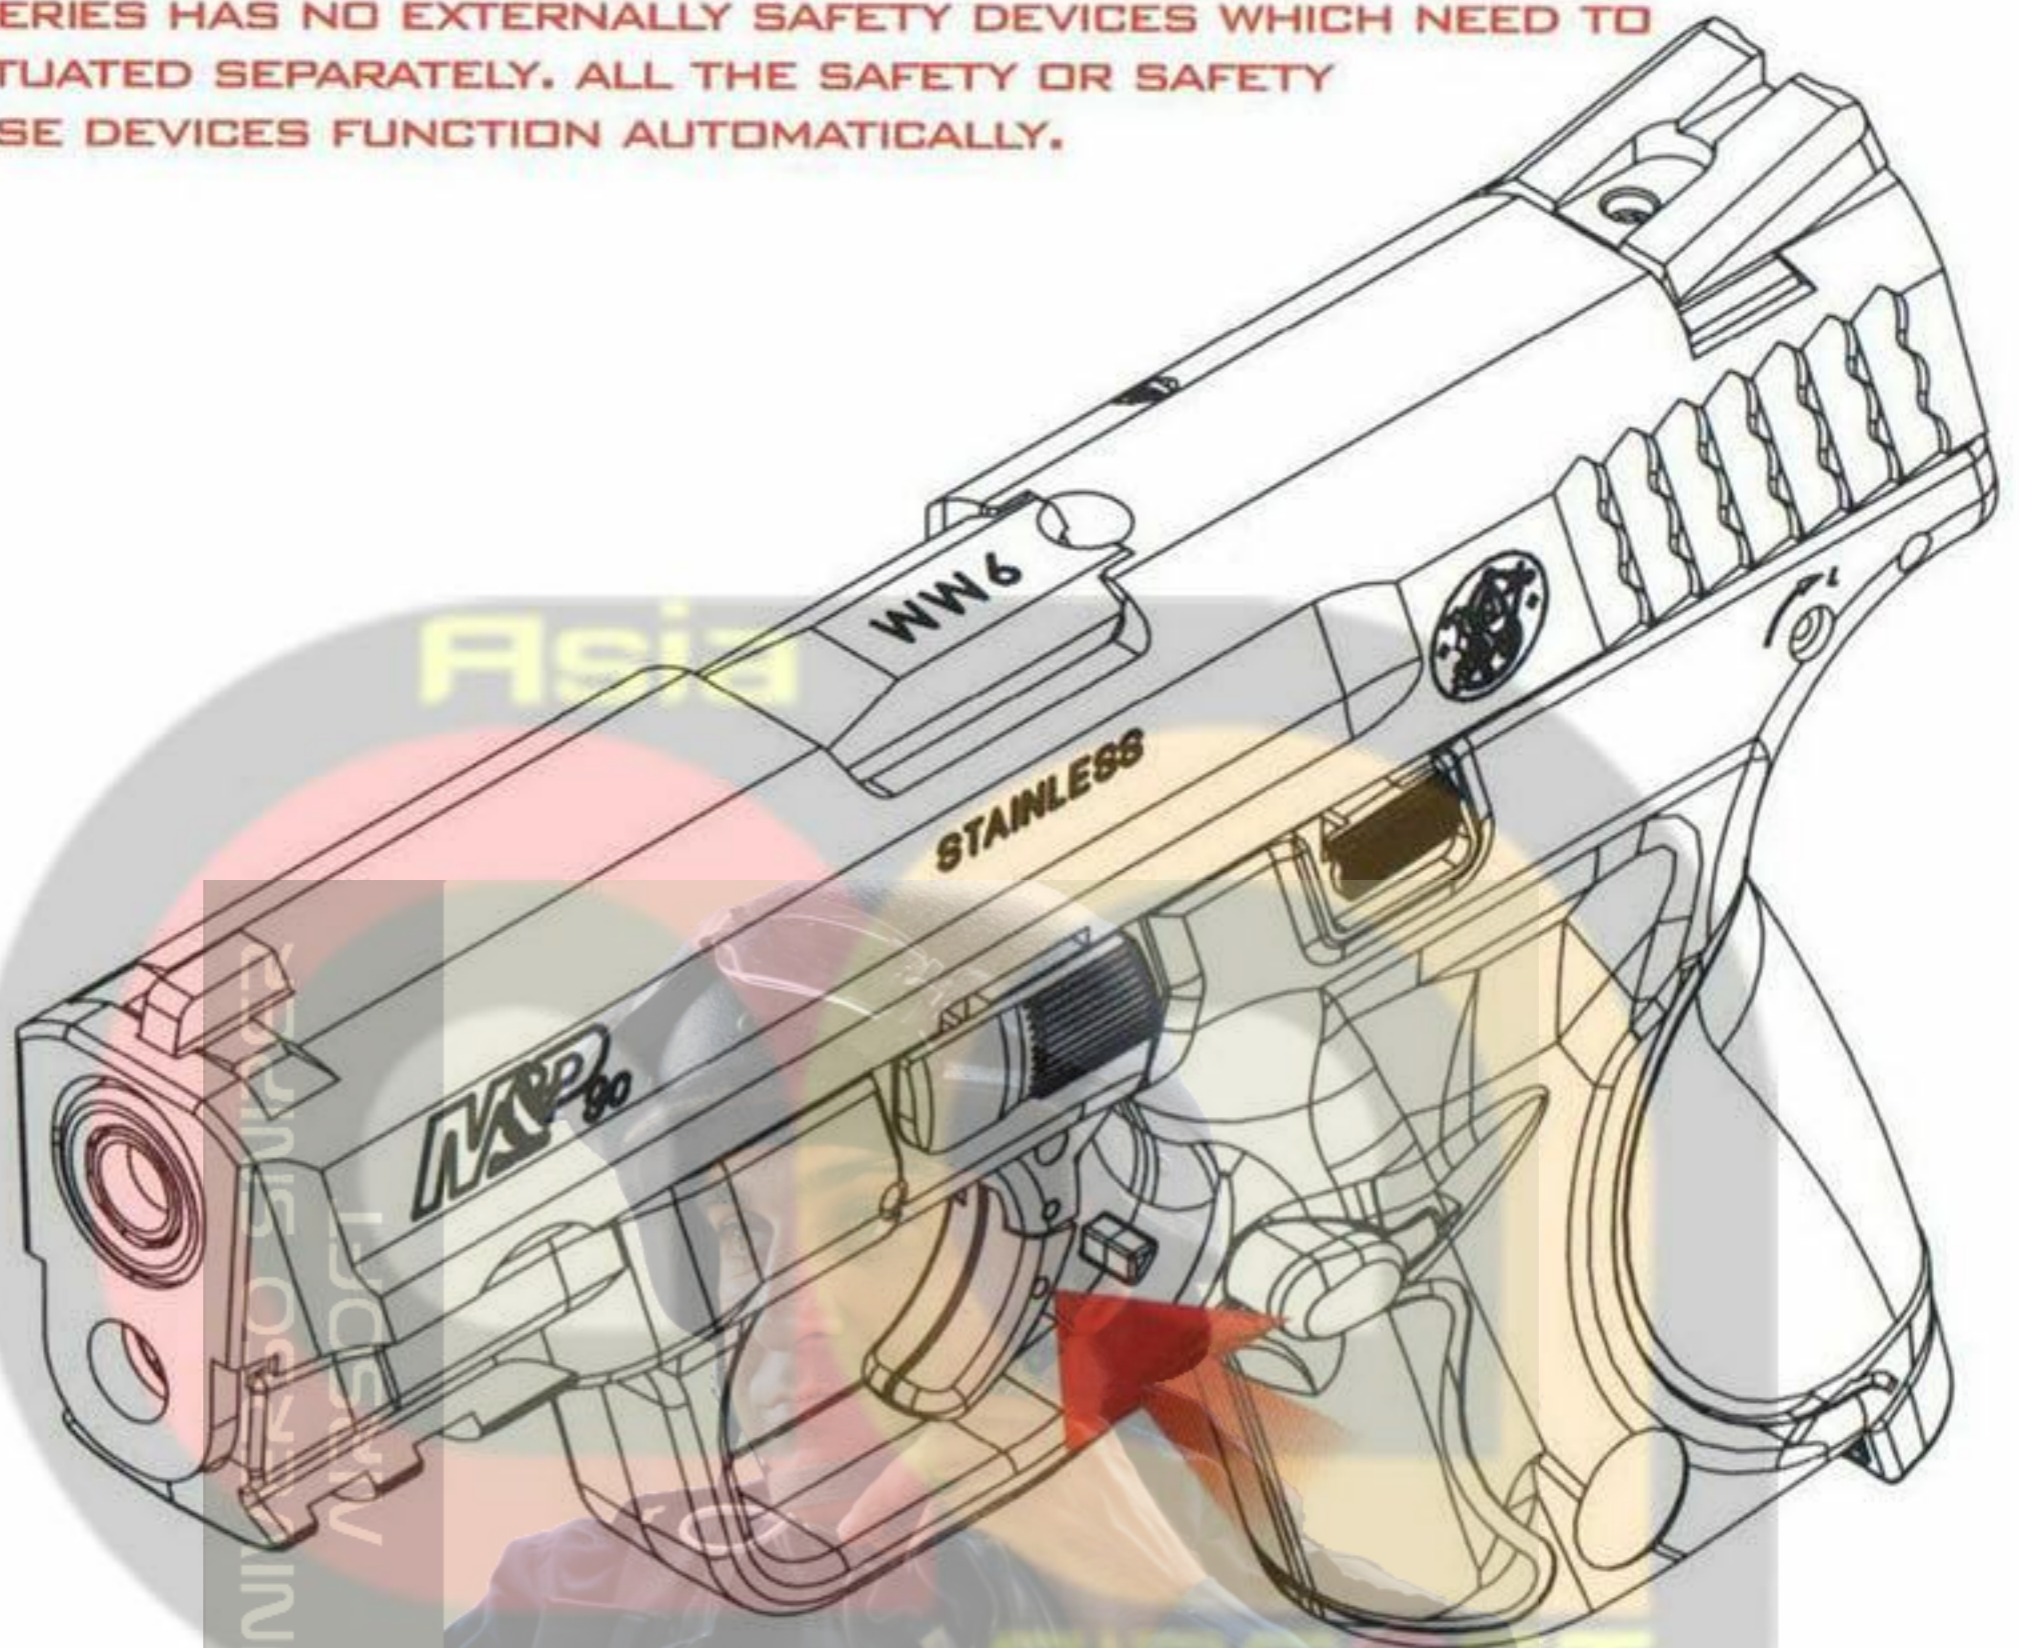

ENGAGE

To engage the safety, pull up the trigger safety. The gun is not ready to fire.

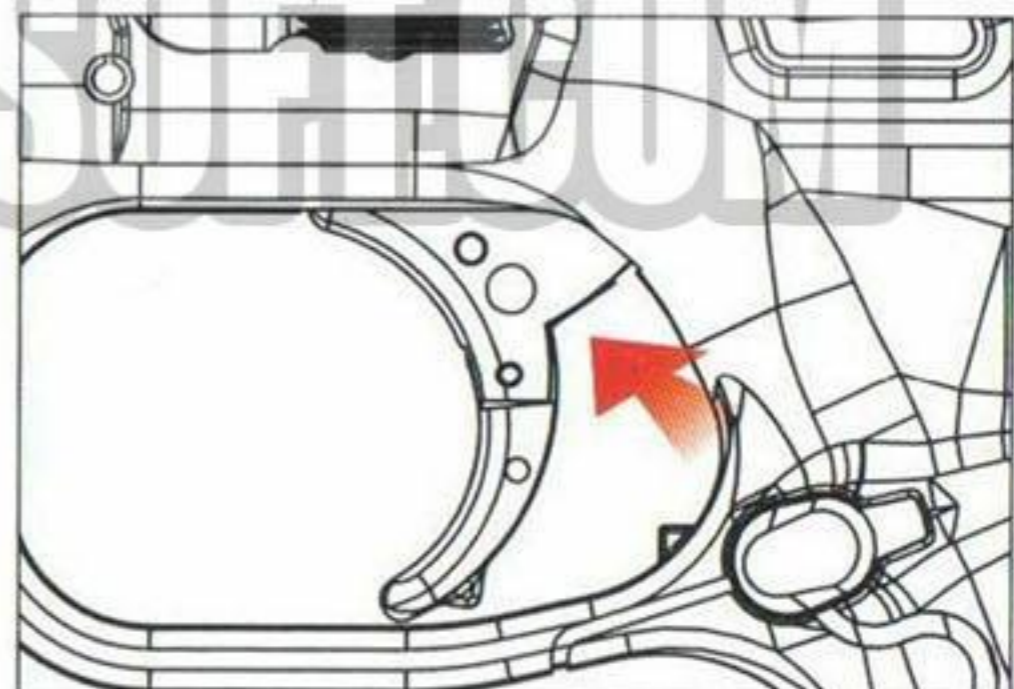

DISENGAGE

To disengage the safety, push down the trigger safety. The gun is ready to fire.

● Load & Firing

3-1. BB LOADING

1. Pull the magazine follower down and hold the magazine follower.
2. Insert BBs into the magazine and make sure the pellets is fully dual-lined (have no space between).

NOTE:

M&P9 Magazine MAX Capacity = 21+1 rounds

M&P9C Magazine MAX Capacity = 16+1 rounds



NOTE:

ALWAYS USE THE HIGH QUALITY BB BULLETS.

WE WILL NOT BE HELD RESPONSIBLE FOR ANY DAMAGE AND ACCIDENTS ARISING FROM USE OF BAD QUALITY BB BULLETS SUPPLIED BY OTHER MANUFACTURERS.


NEVER LET GO THE MAGAZINE FOLLOWER DURING THE LOAD PROCEDURE!! OTHERWISE, MAGAZINE FOLLOWER OR PELLET HOLDER WILL BE DAMAGED.



● Load & Firing

3-2. FILLING THE GAS

1. Push the Gas canister nozzle into the charging valve. Make sure the canister is in vertical position when charging.
2. Filling magazine until gas overflows from charging valve.

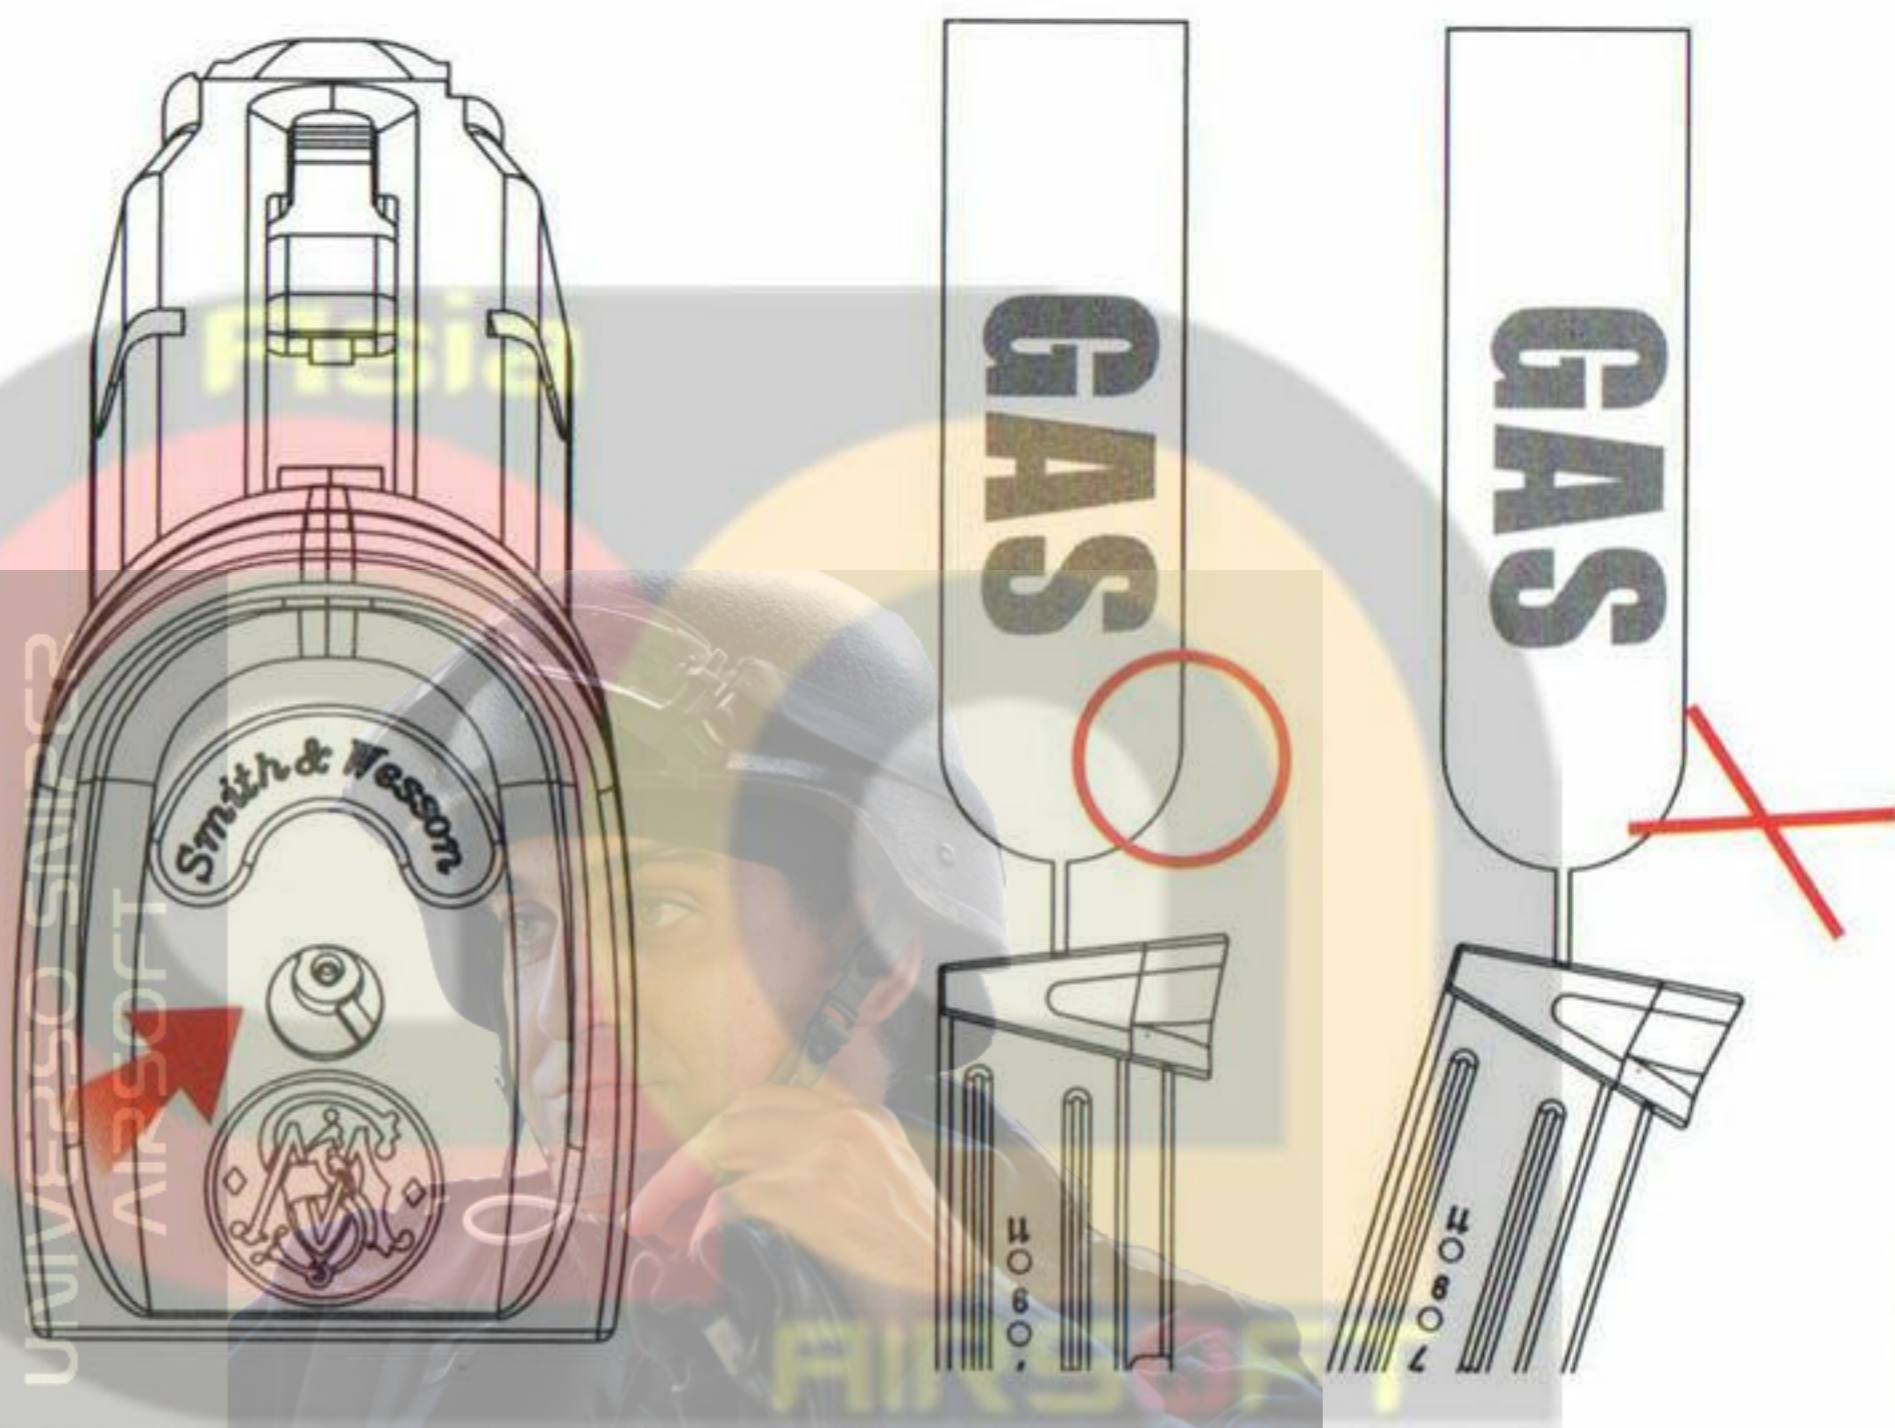

NOTE:

YOU MAY EXPERIENCE A DELAY ACTION IF SURROUNDING TEMPERATURE DROPS BELOW 20°C/68°F. REMEMBER, DO NOT EXPOSE MAGAZINE DIRECTLY UNDER THE SUN OR INCINERATE THE MAGAZINE, IT MAY CAUSE BURSTING. IT IS STRONGLY RECOMMENDED TO EMPTY GAS FROM MAGAZINE AFTER SHOOTING. BE SURE TO AVOID DIRECT GAS CONTACT WITH EYES OR SKIN WHEN THE GAS IS BEING RELEASED, IT WILL CAUSE FROSTBITE.


WARNING:

1. CHECK CANISTER FOR ANY CRACKS OR LEAKS BEFORE USING.
2. DO NOT EXPOSE CANISTER OVER 40°C/ 104°F
3. DO NOT LEAVE CANISTER DIRECTLY OVER
4. DO NOT BOIL CANISTER.
5. KEEP CANISTER AWAY FROM DIRECT SUNLIGHT.
6. DO NOT LEAVE CANISTERS IN VEHICLE .

● Load & Firing

3-3. CHECK THE PISTOL

1. Remove the Magazine.
2. Pull back the slide with free hand and lock it.
3. Check the chamber is no BB bullets.

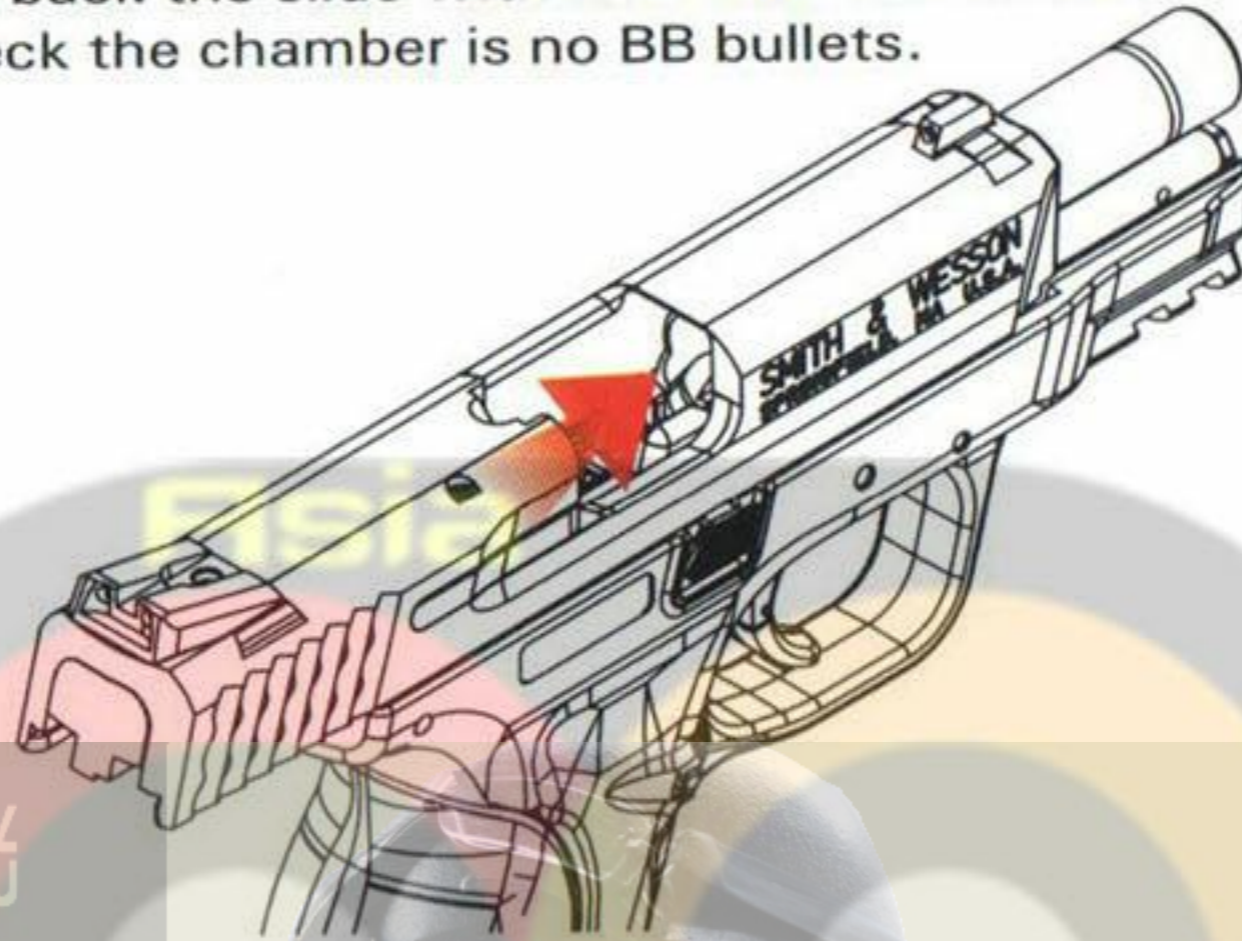

CAUTION:
BEFORE SHOOTING AND AFTER SHOOTING MUST CHECK THE CHAMBER.

WARNING:
DO NOT PUT YOUR FINGER INTO THE CHAMBER, IT'S DANGEROUS.

3-4. SETTING MAGAZINE

1. Place the magazine into the magazine well.
2. Push the magazine up until clicks into the locked position.
3. Pull the magazine done to assure that it has been locked in place.



CAUTION:
ALWAYS POINT THE BARREL IN A SAFE DIRECTION.




Smith & Wesson

● Load & Firing

3-5. CLICK

1. Pull back the slide with free hand and lock slide.
2. Press slide stop lever and allow slide to move forward.
3. The finger of the shooting hand remains outside the trigger guard.
4. The pistol is now secured and ready to fire.
5. After the last round of fire, the slide will be lock.

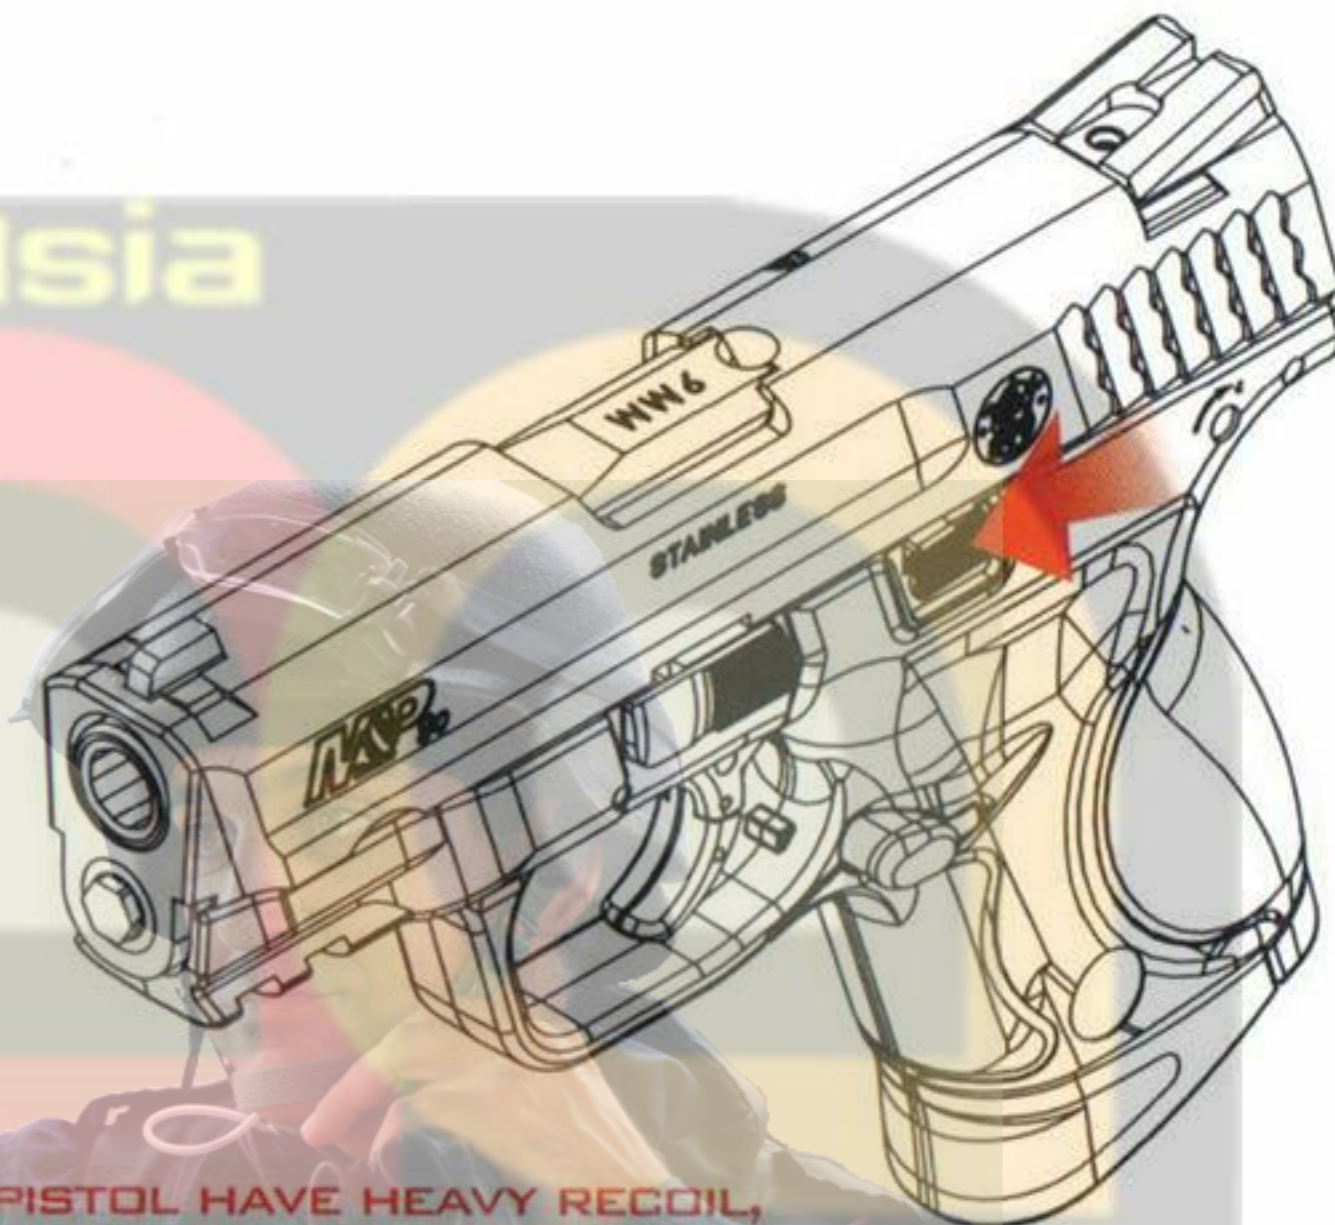


CAUTION:

GAS BLOW BACK PISTOL HAVE HEAVY RECOIL,
PLEASE GRASPED THE PISTOL.

3-6. SEMI & AUTO FIRING

Select firing mode by push the firing selector:






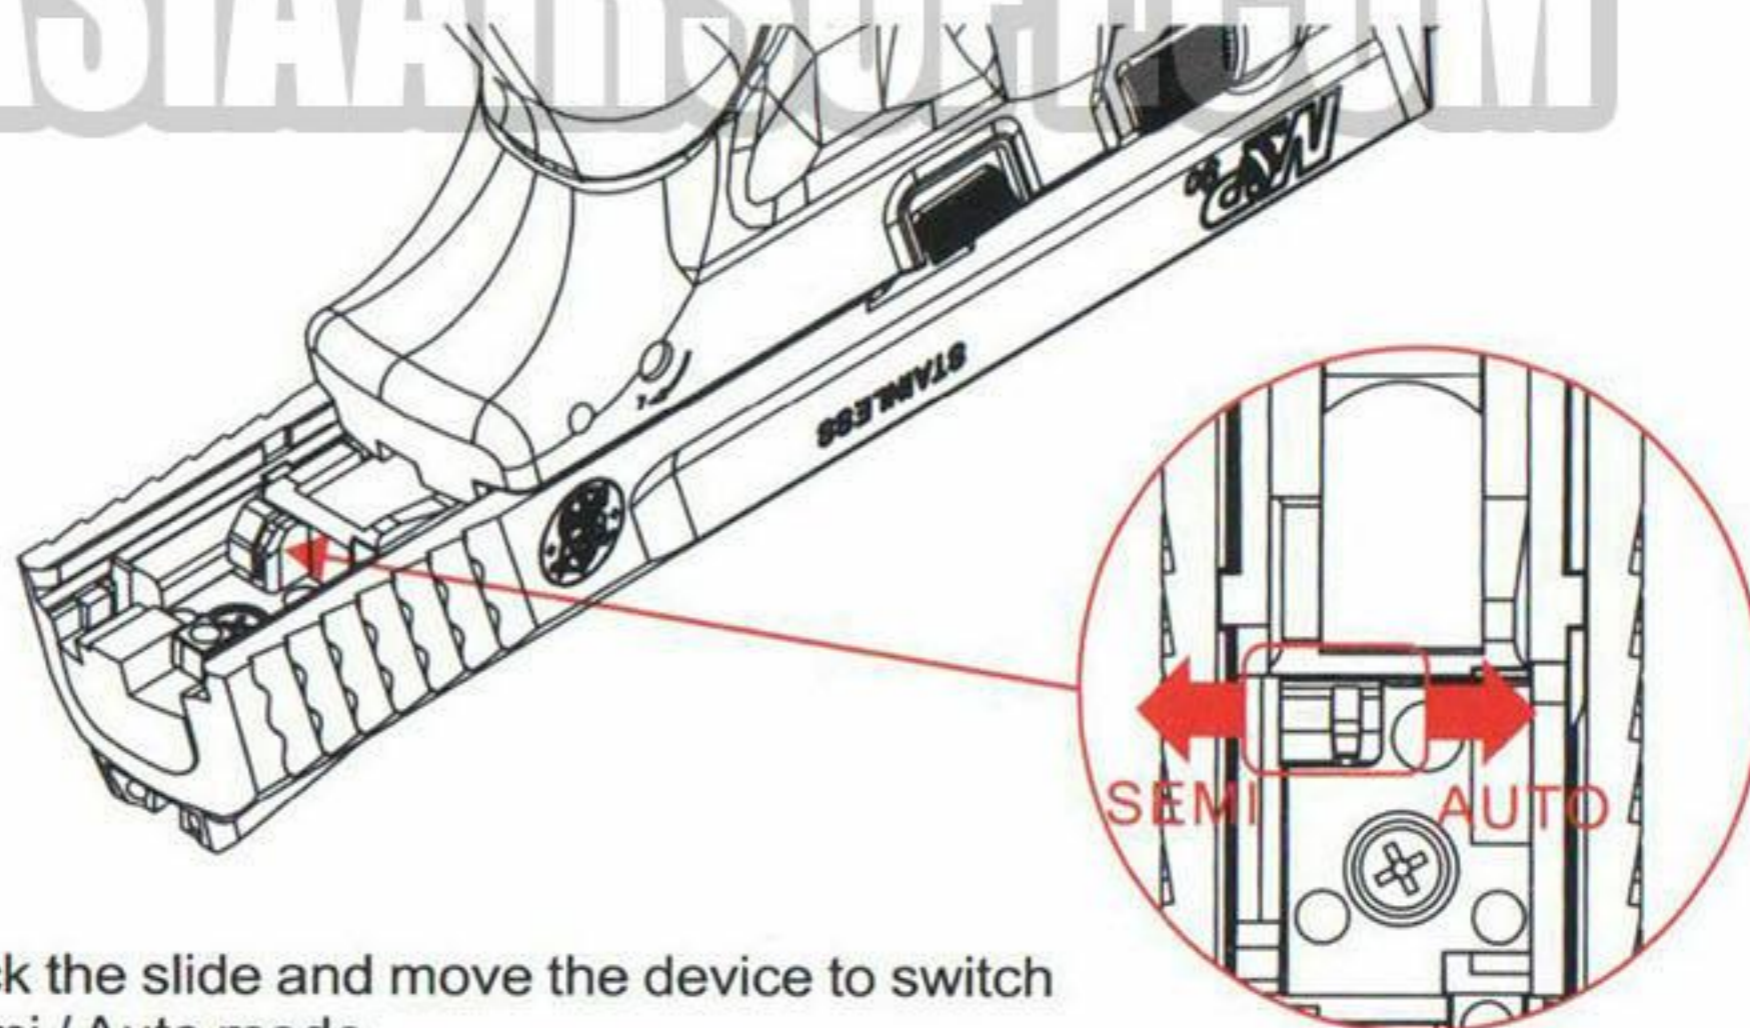


Lock the slide and move the device to switch
Semi / Auto mode.

● Disassembly


4-1. DISASSEMBLY

1. Press the magazine catch to remove the magazine.
2. Pull back the slide and allow the slide to spring forwards.
3. Pull down the Slide lock and push the slide forwards and separate slide from the receiver.
4. Take the recoil spring assembly out of slide.
5. Push the barrel set forwards, raise it and pull the barrel set backwards out of slide.
6. Pull the inner barrel set out of out barrel

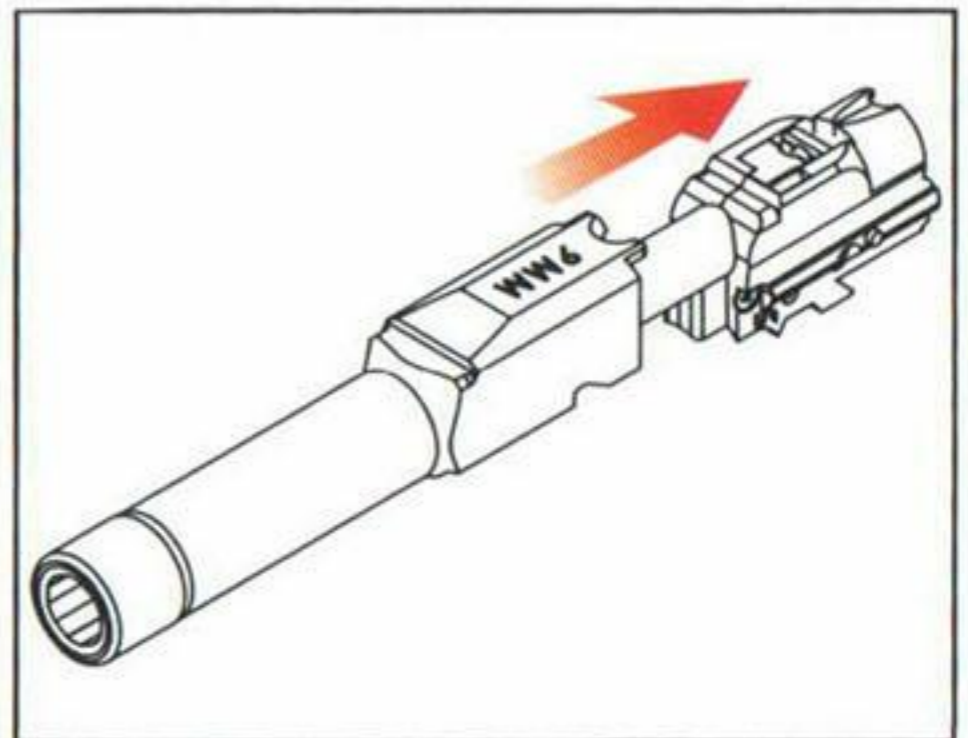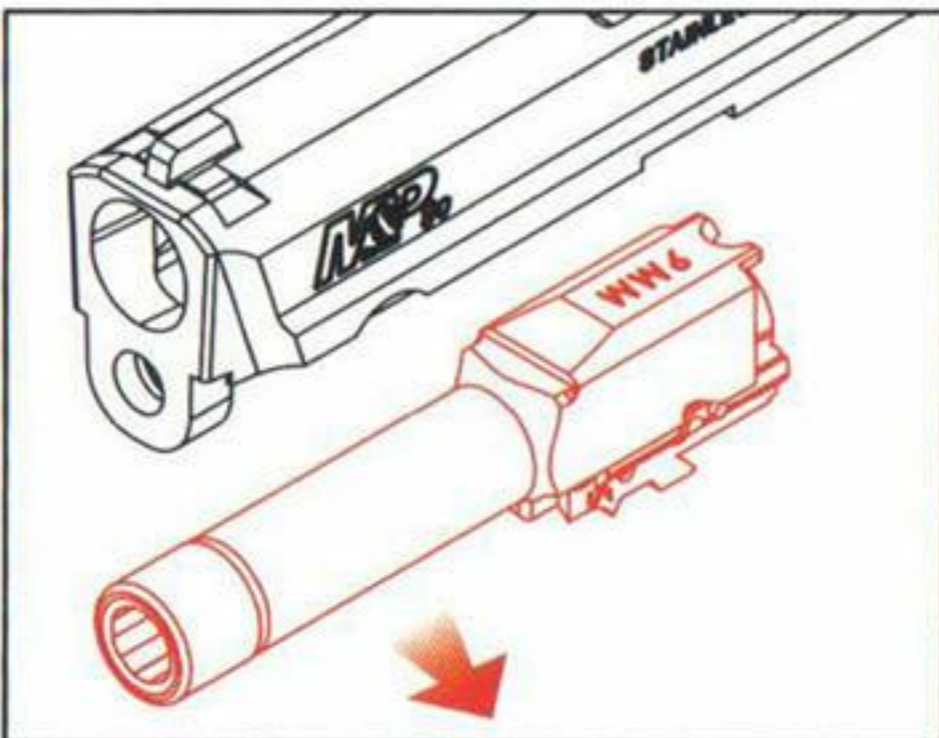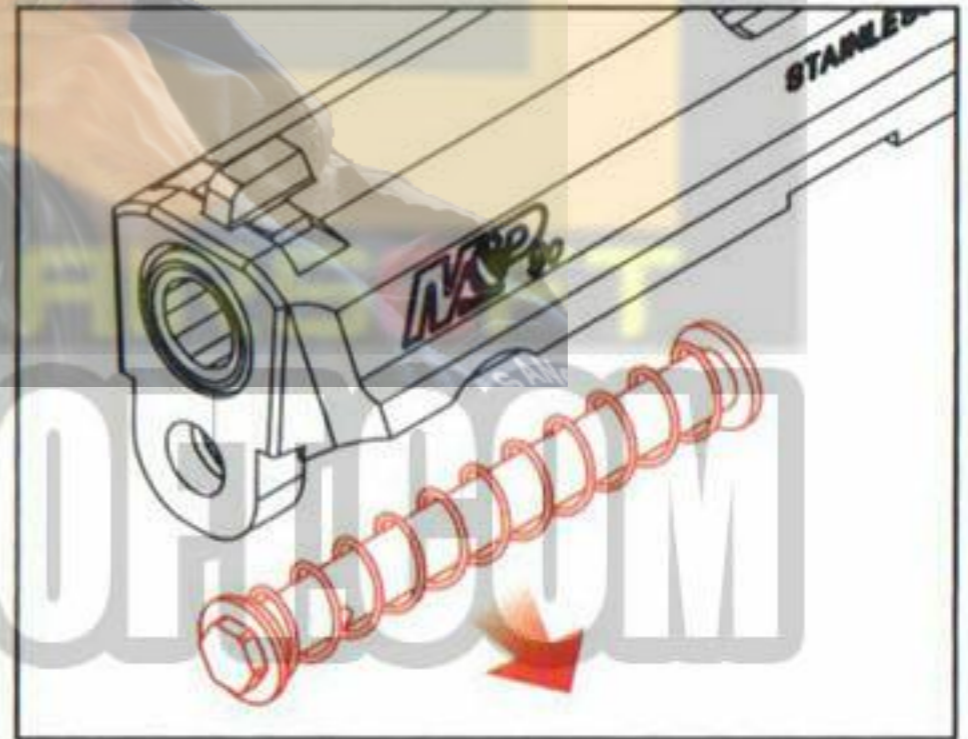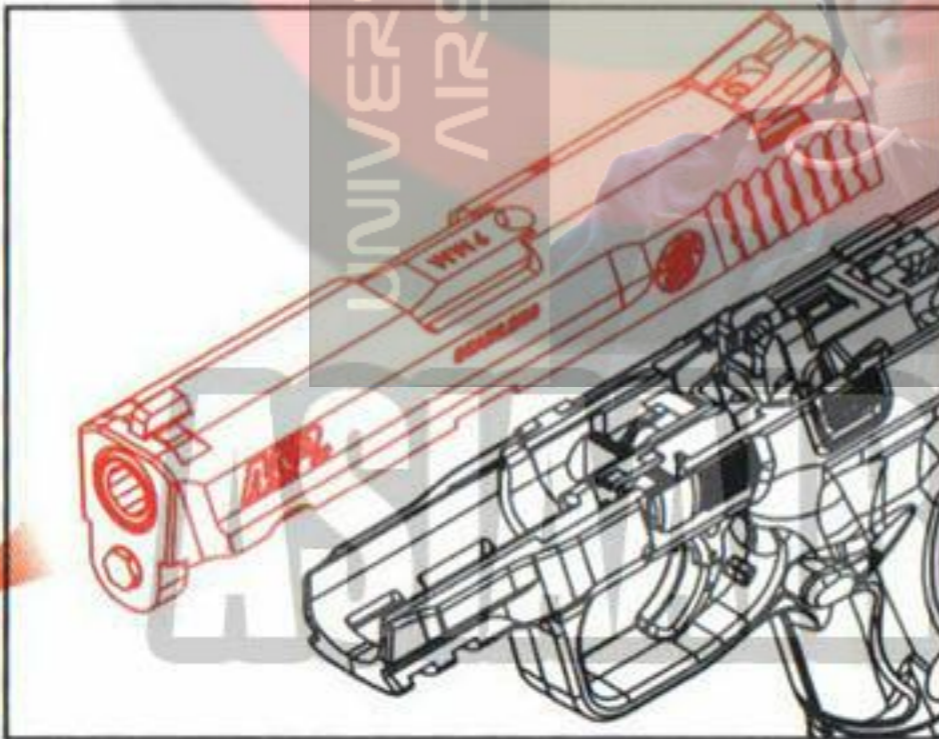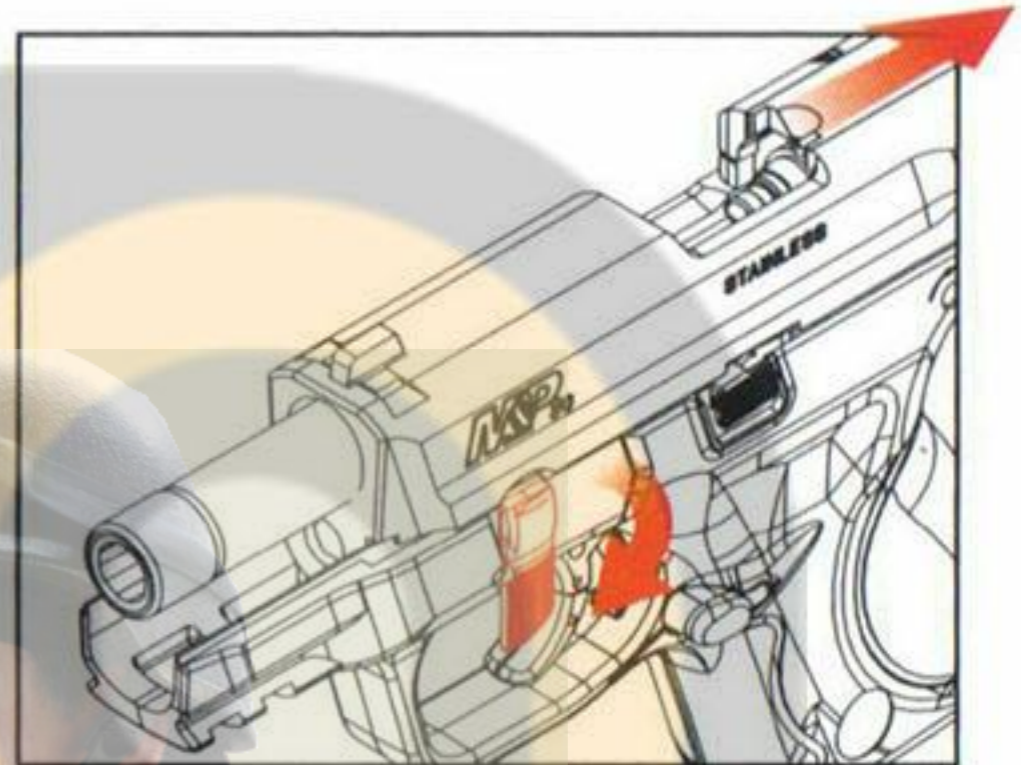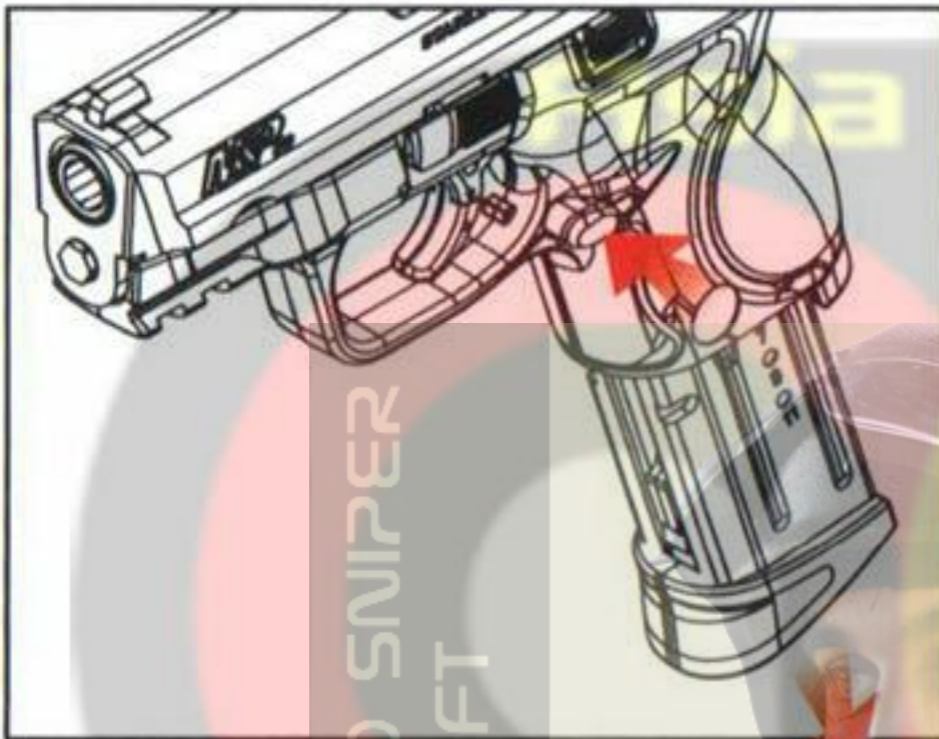

● Disassembly & Cleaning

4-2. MAIN COMPONENT

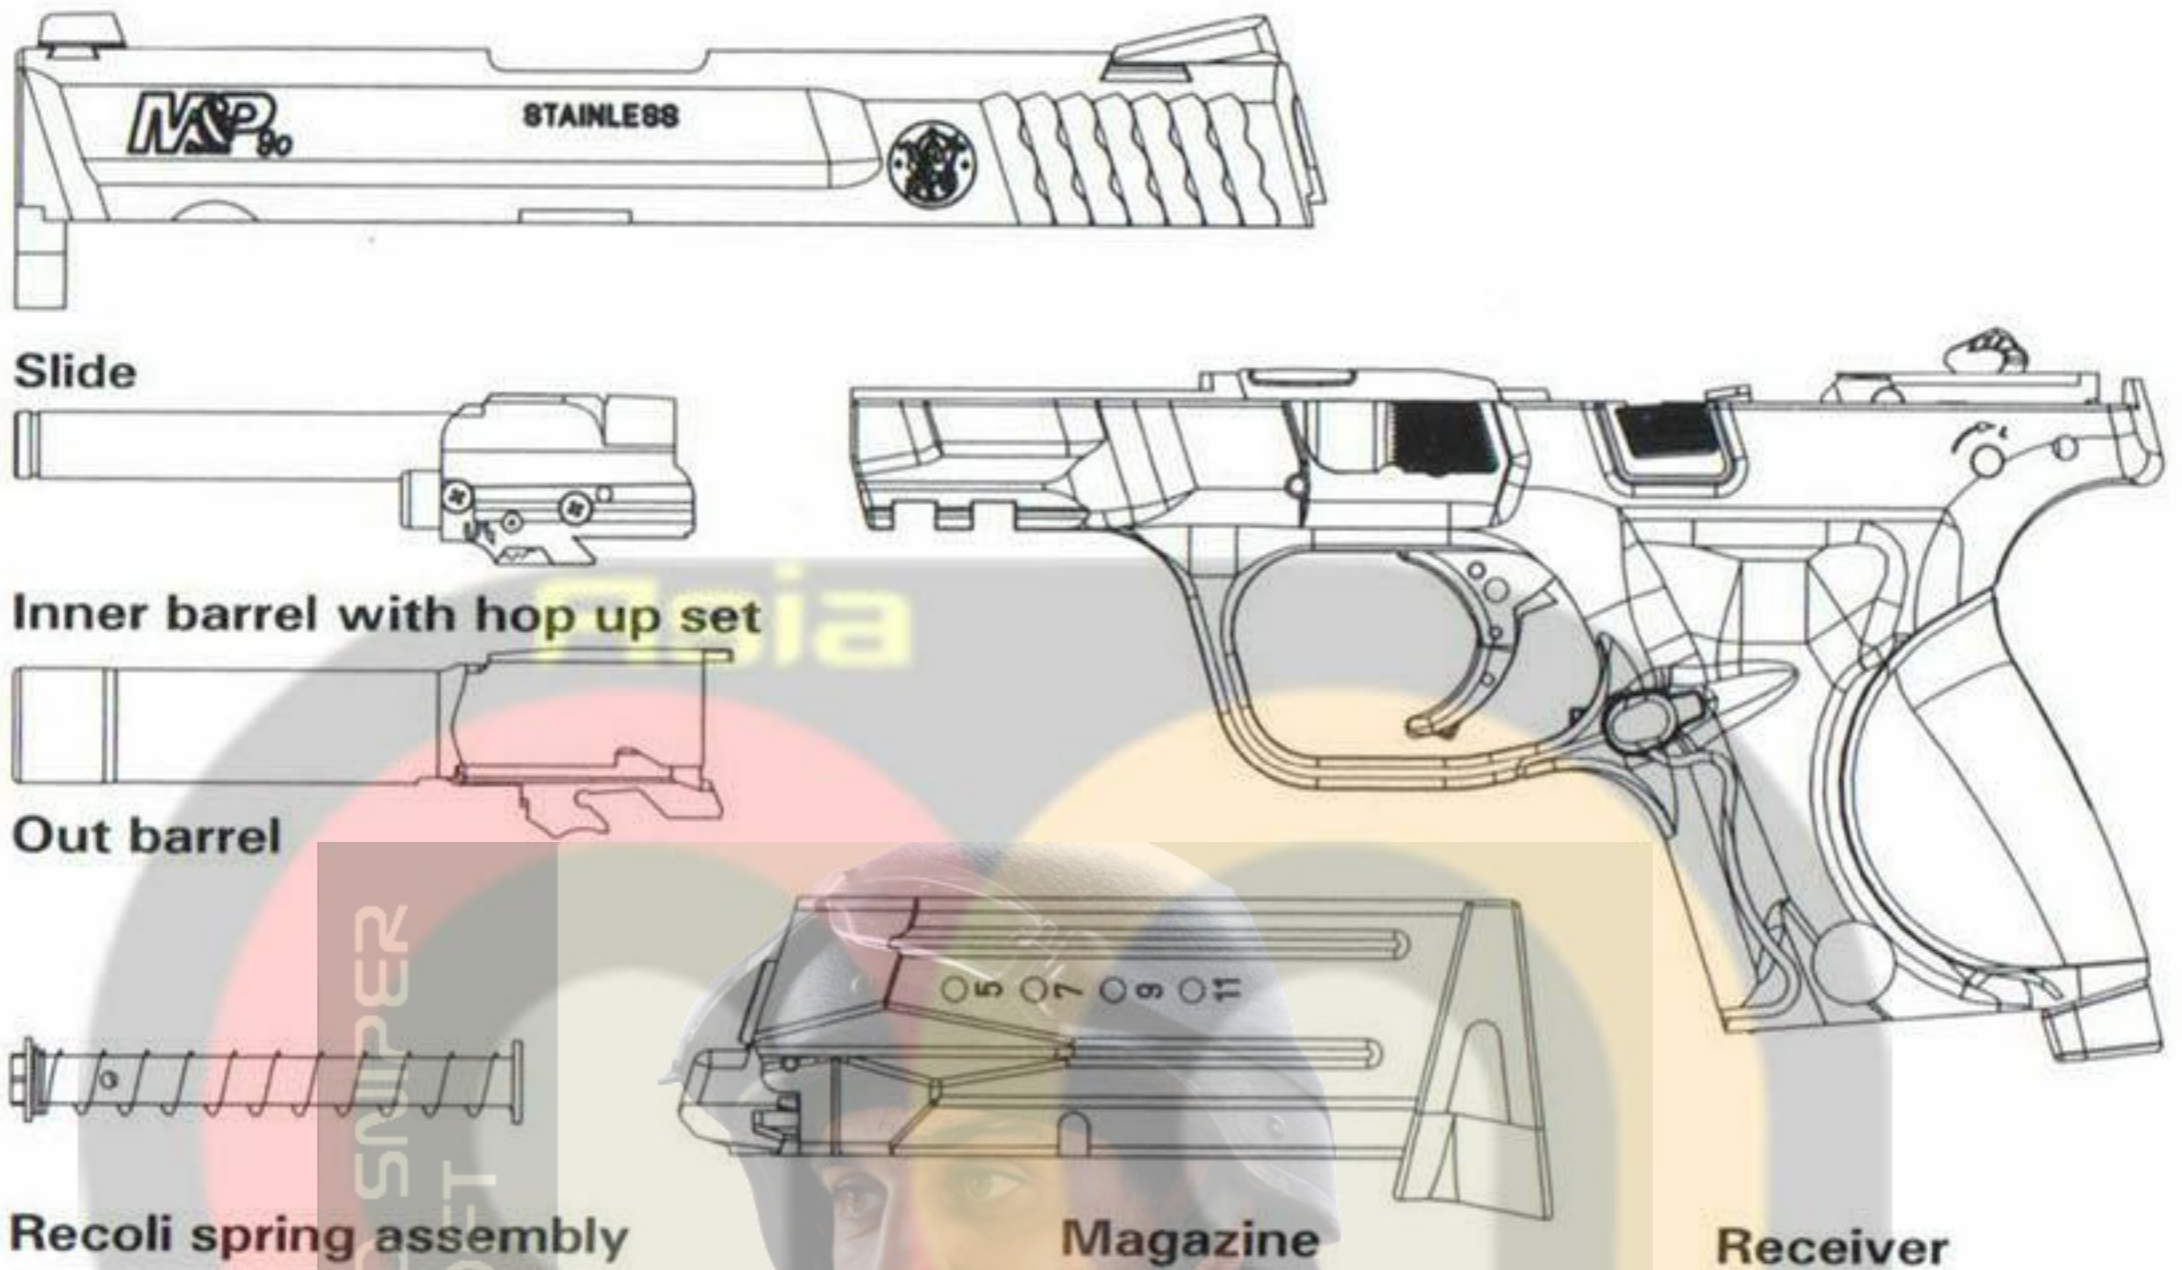

4-3. CLEANING

1. Receiver:

Apply gear grease over all faces contact with slide assembly.
Spray high viscosity silicone oil on the hammer set if encounter a sluggish hammer movement.
Use the high viscosity silicone oil to lubricate all rubber contact area.

2. Slide:

Apply gear grease over all faces contact with frame assembly's metal parts.

Spray high viscosity silicone oil inside the piston.
You could do it by pulling piston forward, and spray some into the internal space.

3. Magazine:


Use the high viscosity silicone oil to lubricate all rubber contact area.

4. Barrel & HOP UP system:

Spry silicone oil to the chamber for 0.5 to 1 sec and
Use patch holder to clean the inner barrel.

● Serial Number Plate & Dark Sights

5-1. SERIAL NUMBER PLATE

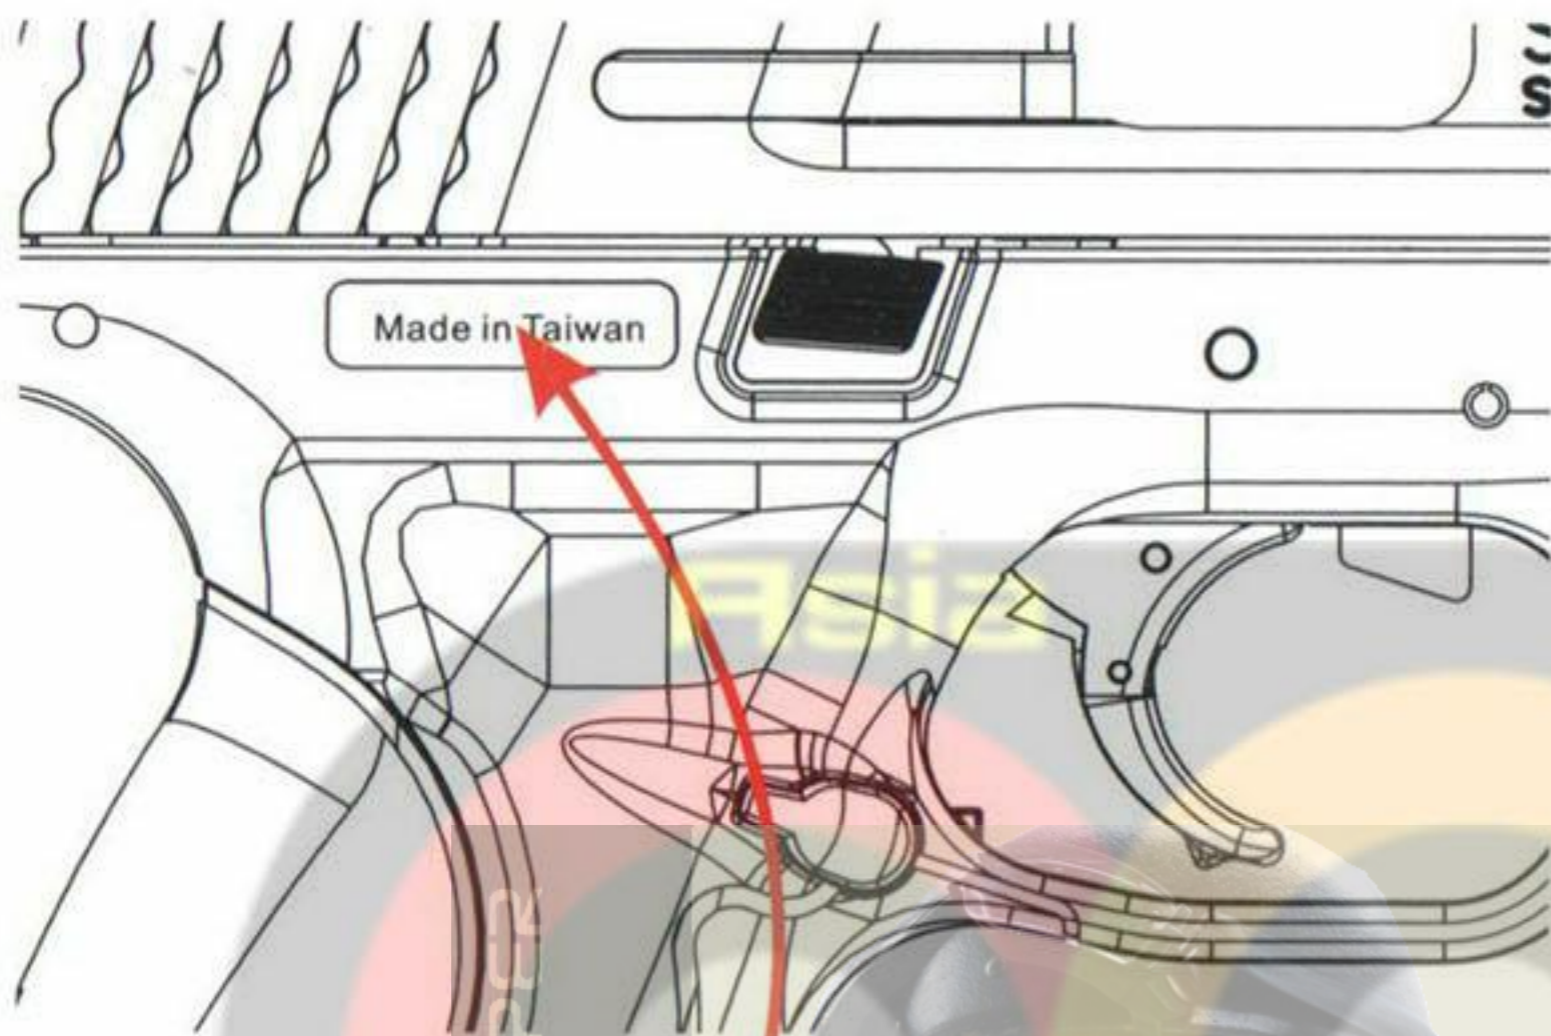


1. Clean the indicated surface and remove the oil.
2. Adhesive the serial number plate.
3. Paste it.

NOTE:
Serial number plate is included.

5-2. DARK SIGHTS INSTALLATION




Please Follow the illustration to instal the dark sight unit.

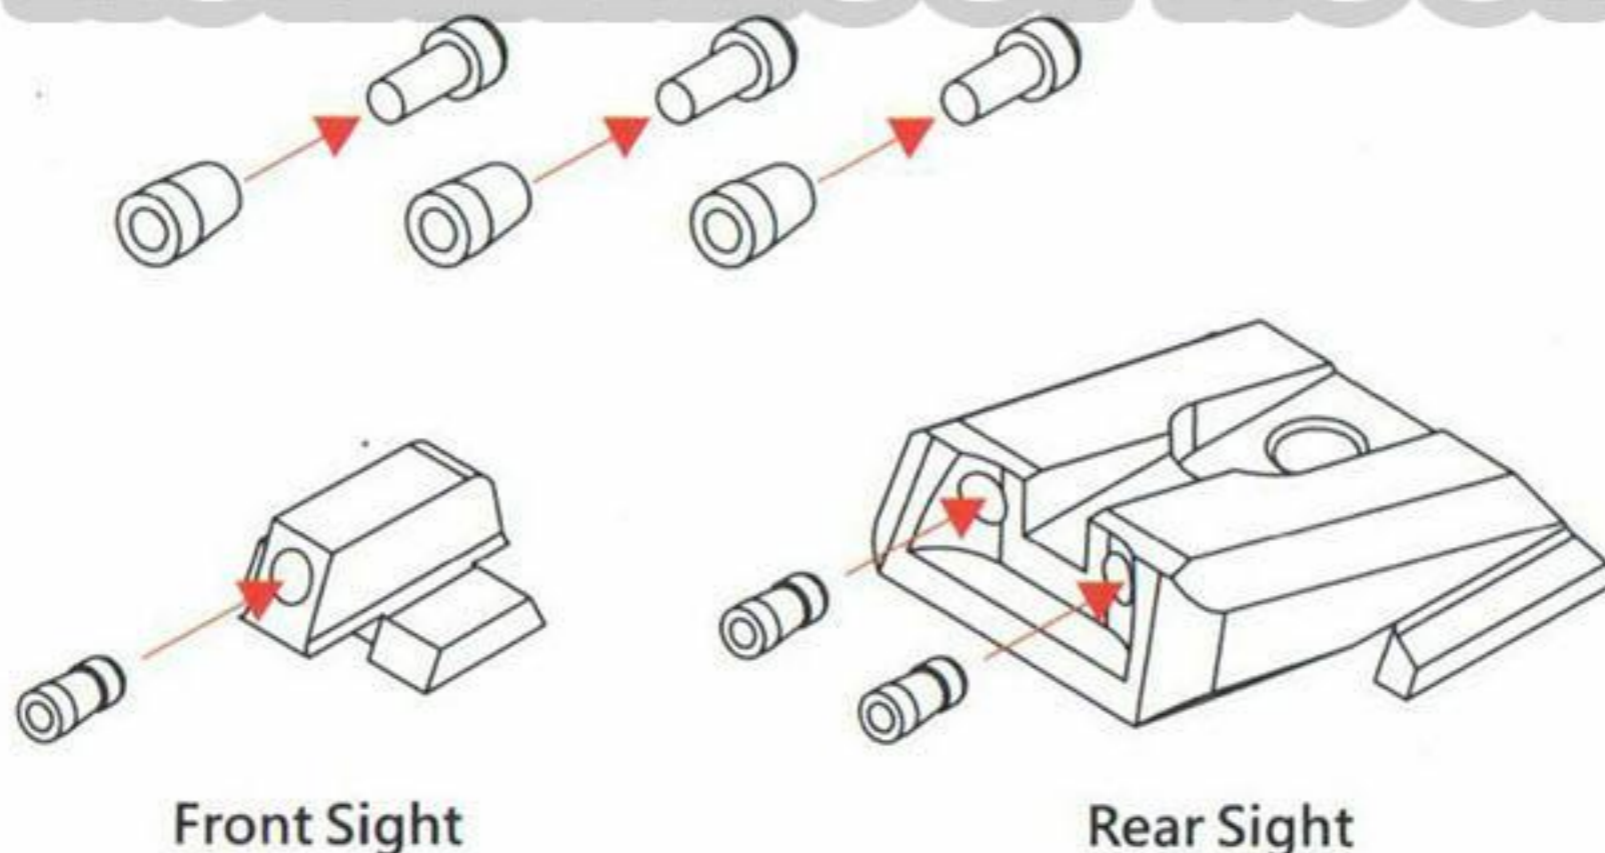

● Back Straps Switching

6. HOW TO SWITCH BACK STRAPS

1. Press the Magazine release button and take down the magazine.
2. Follow the indicated direction to rotate the frame tools.
3. Take down the frame tools.
4. Take off the back strap.

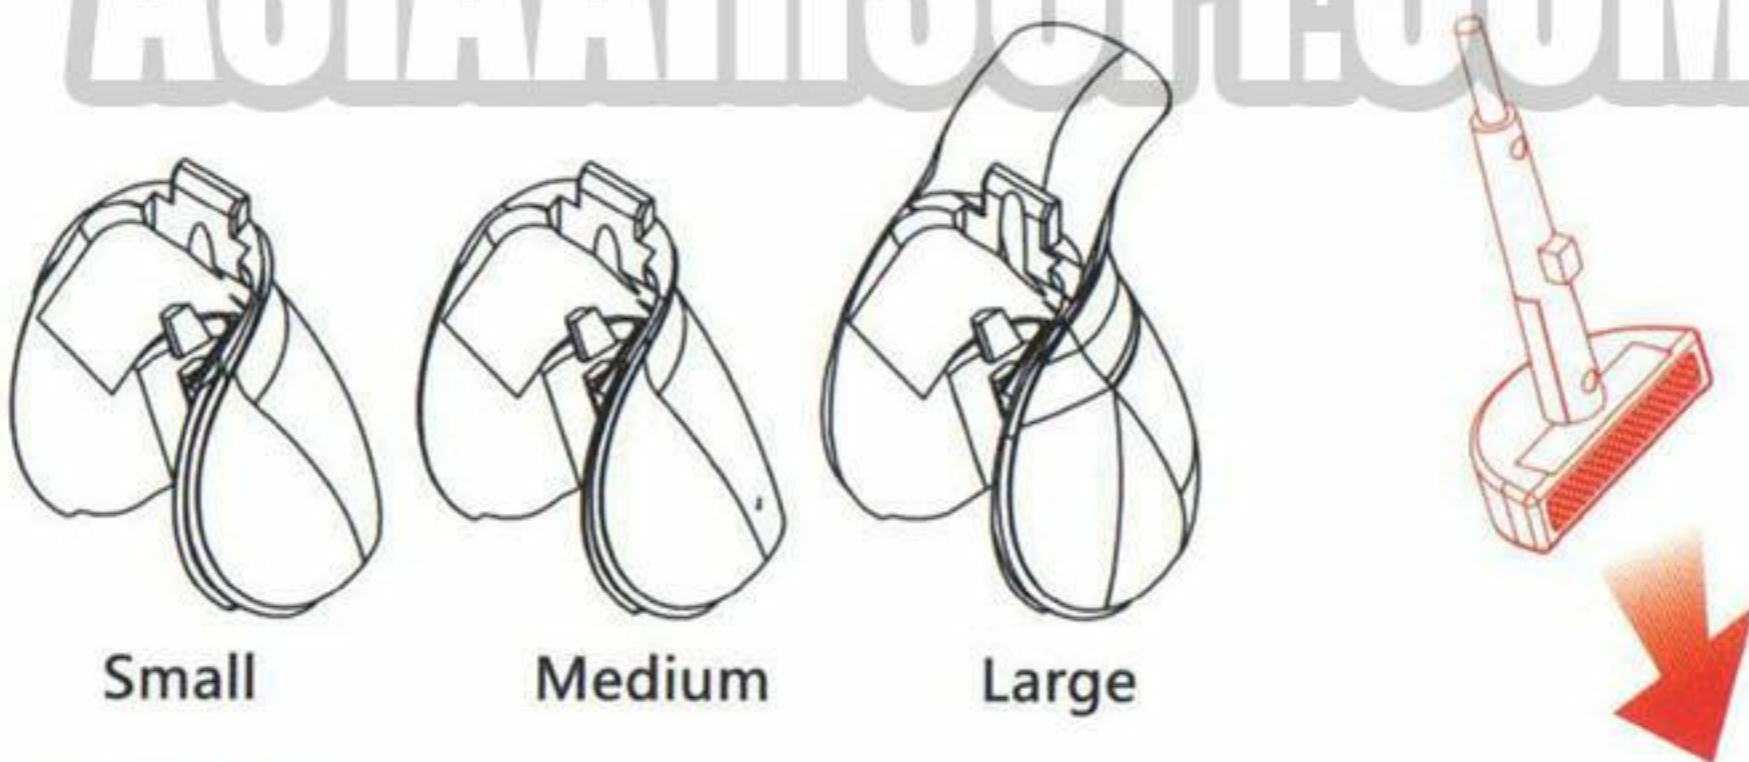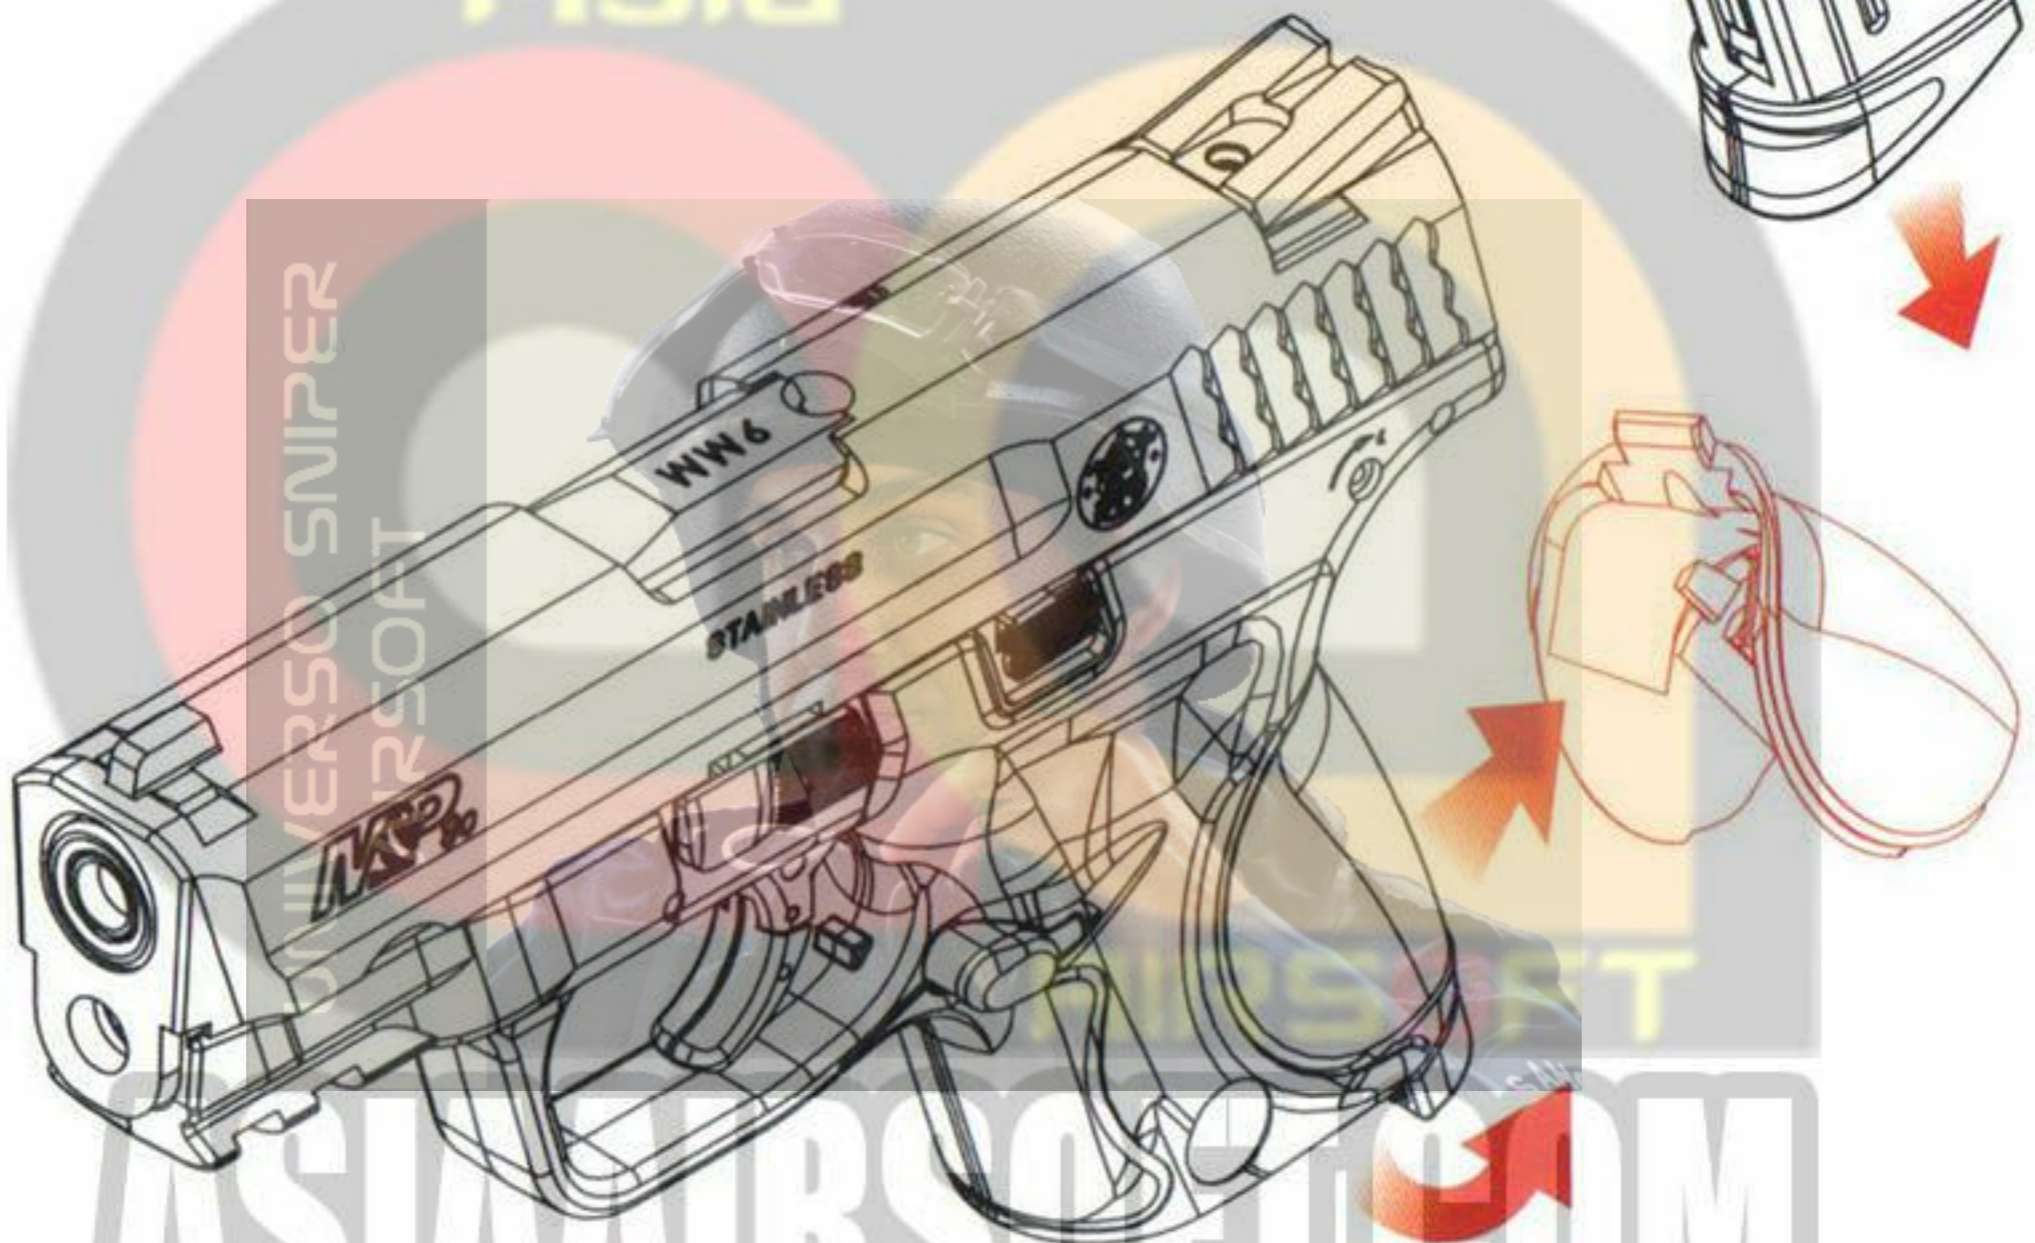
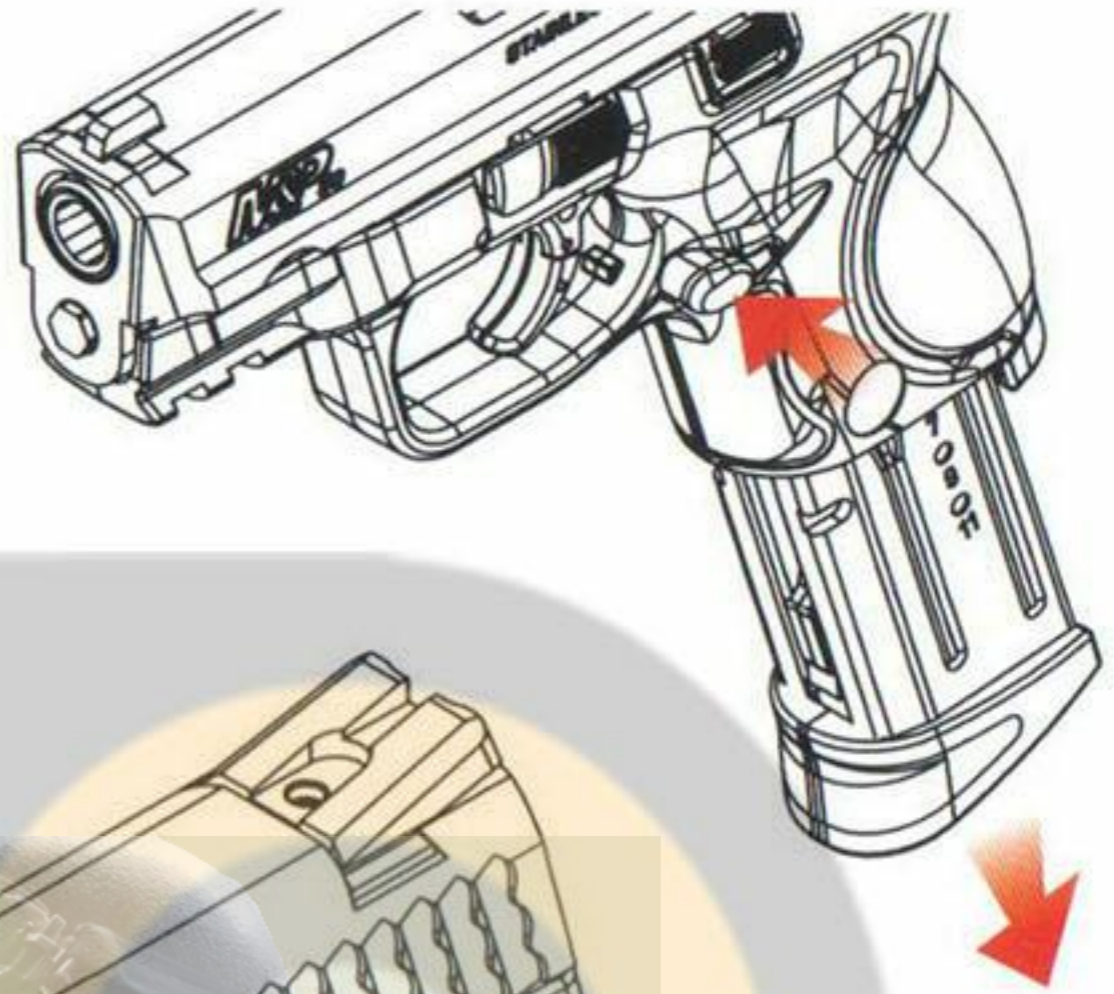


NOTE:
FACTORY PRODUCT COMES WITH M SIZE BACK STRAP.
S AND L SIZE BACK STRAPS ARE INCLUDED.

● Magazine Release Button

7. AMBITREXDOUS MAGAZINE RELEASE BUTTON

1. Take off the slide.
2. Release the indicated spring.
3. Take off the magazine release button.

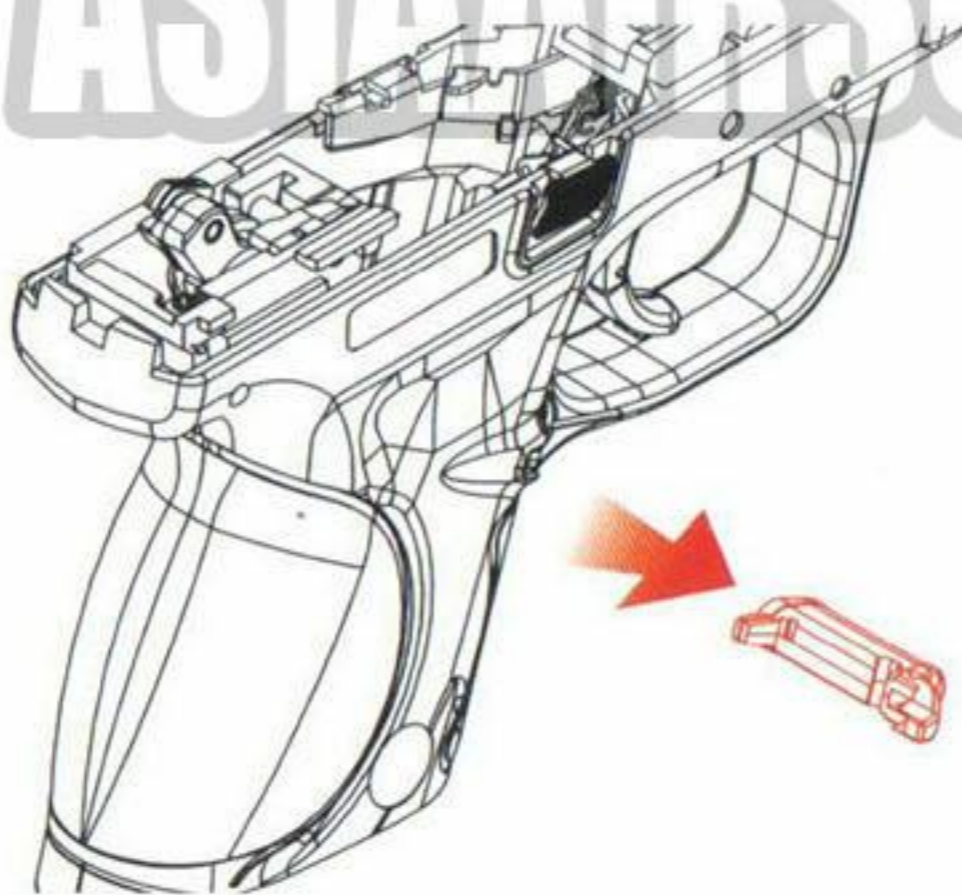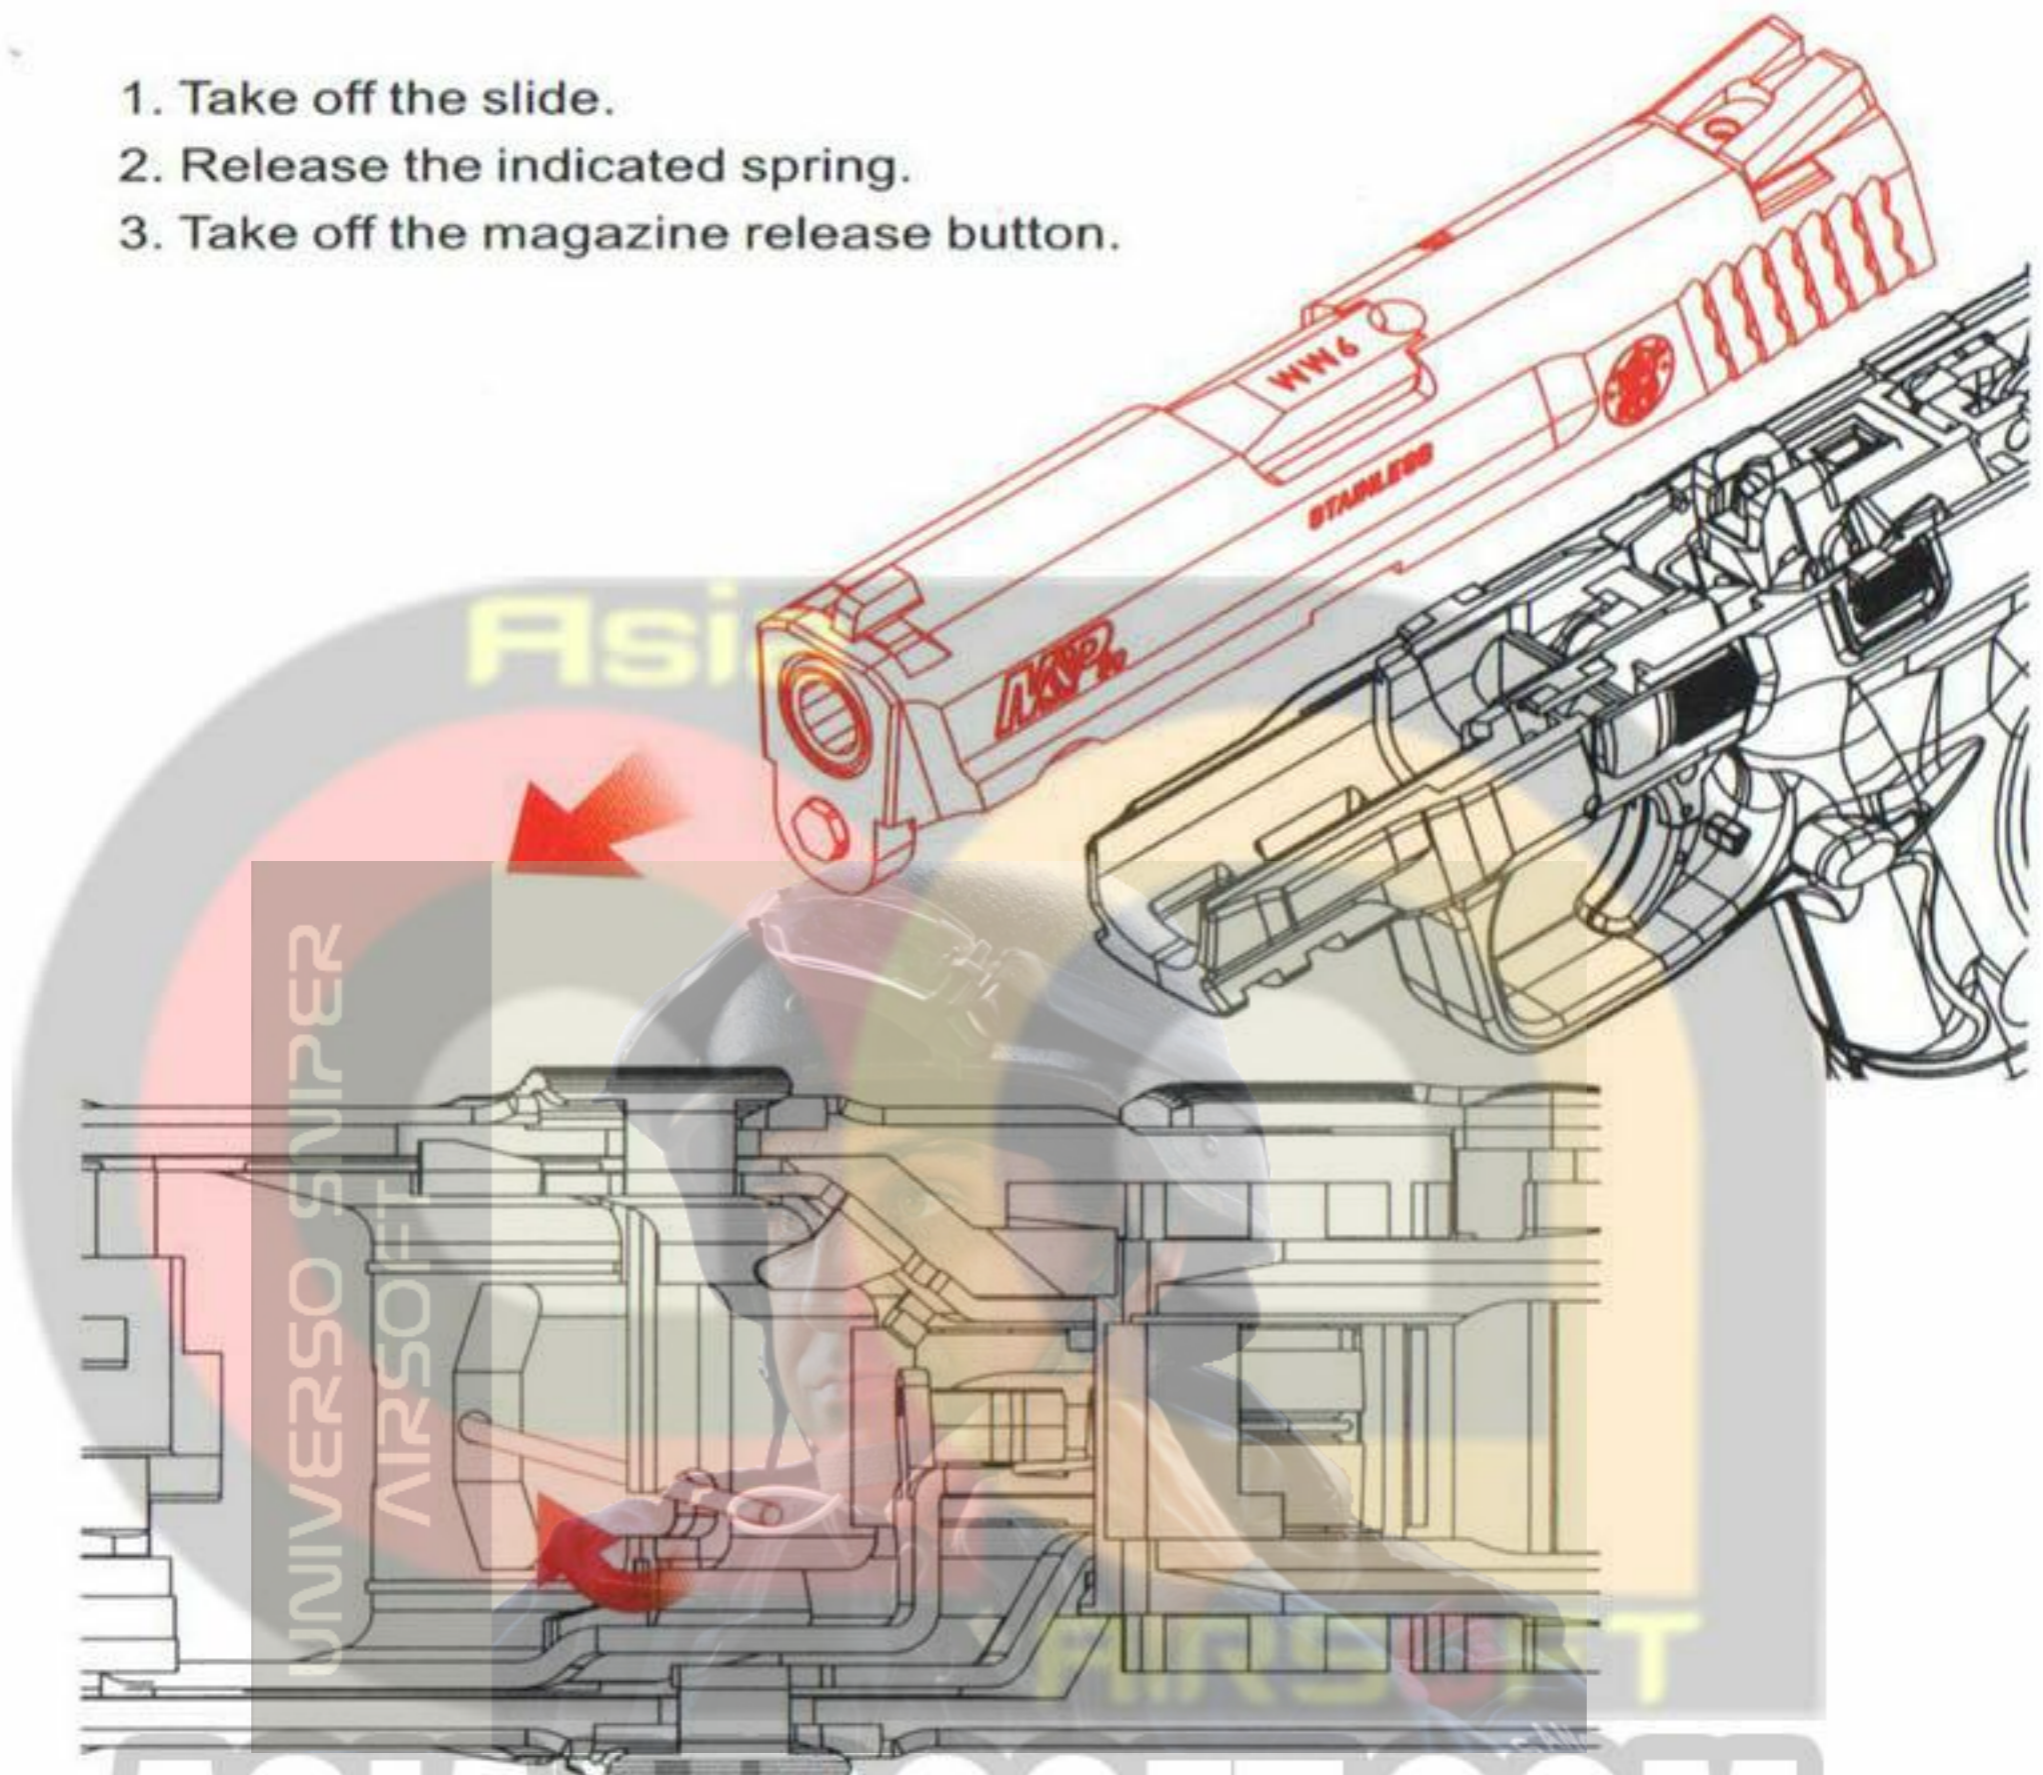


4. Change the direction
5. Put back the magazine release button
6. Hook up the spring.



● Hop-up System & Adjust


8-1. HOP-UP SYSTEM

1. Pull back the slide and allow the slide to spring forwards.
2. Pull down the slide lock and push the slide forwards and separate slide from the receiver.

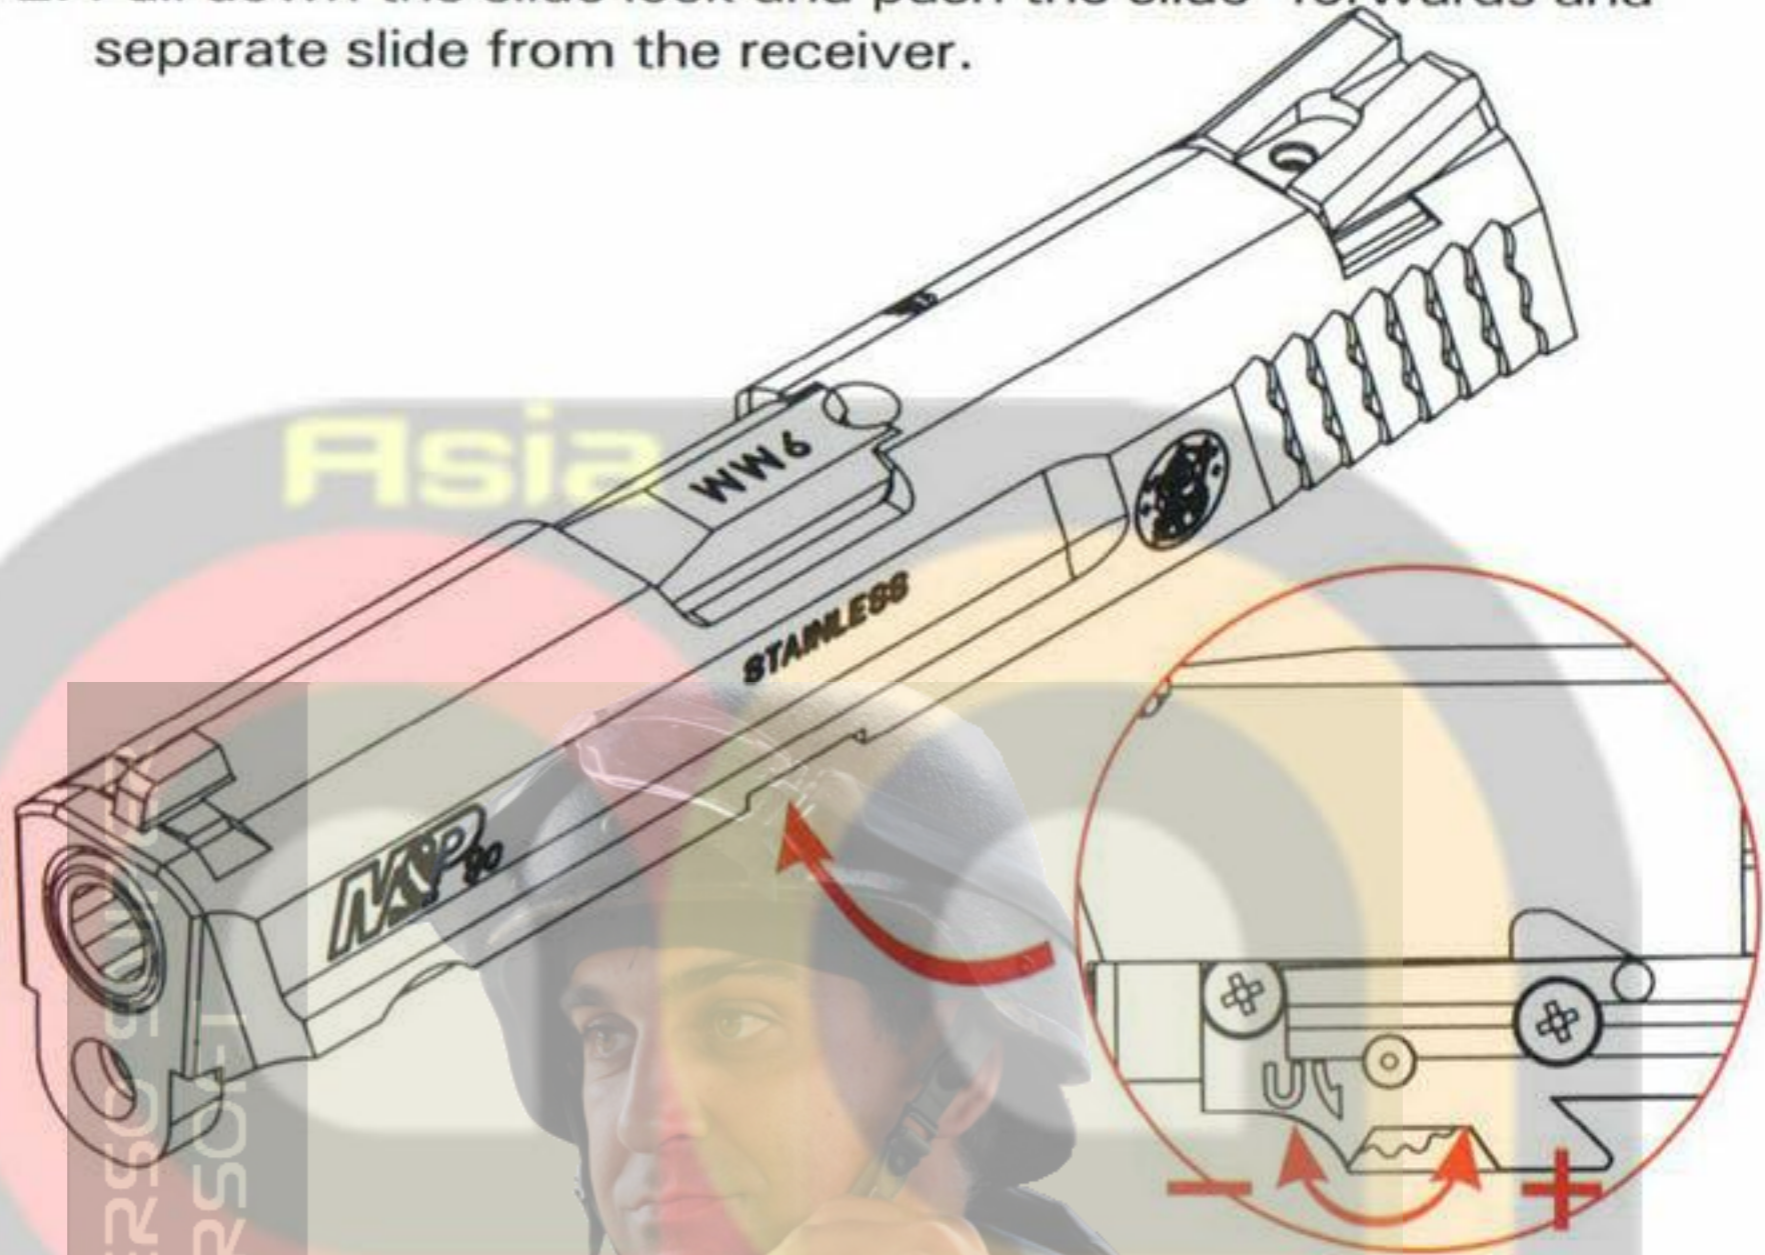


8-2. ADJUST THE HOP-UP

1. Turn the adjustment to backwards to give bullets more hop up.
2. Turn the adjustment to forwards to give bullets less hop up.

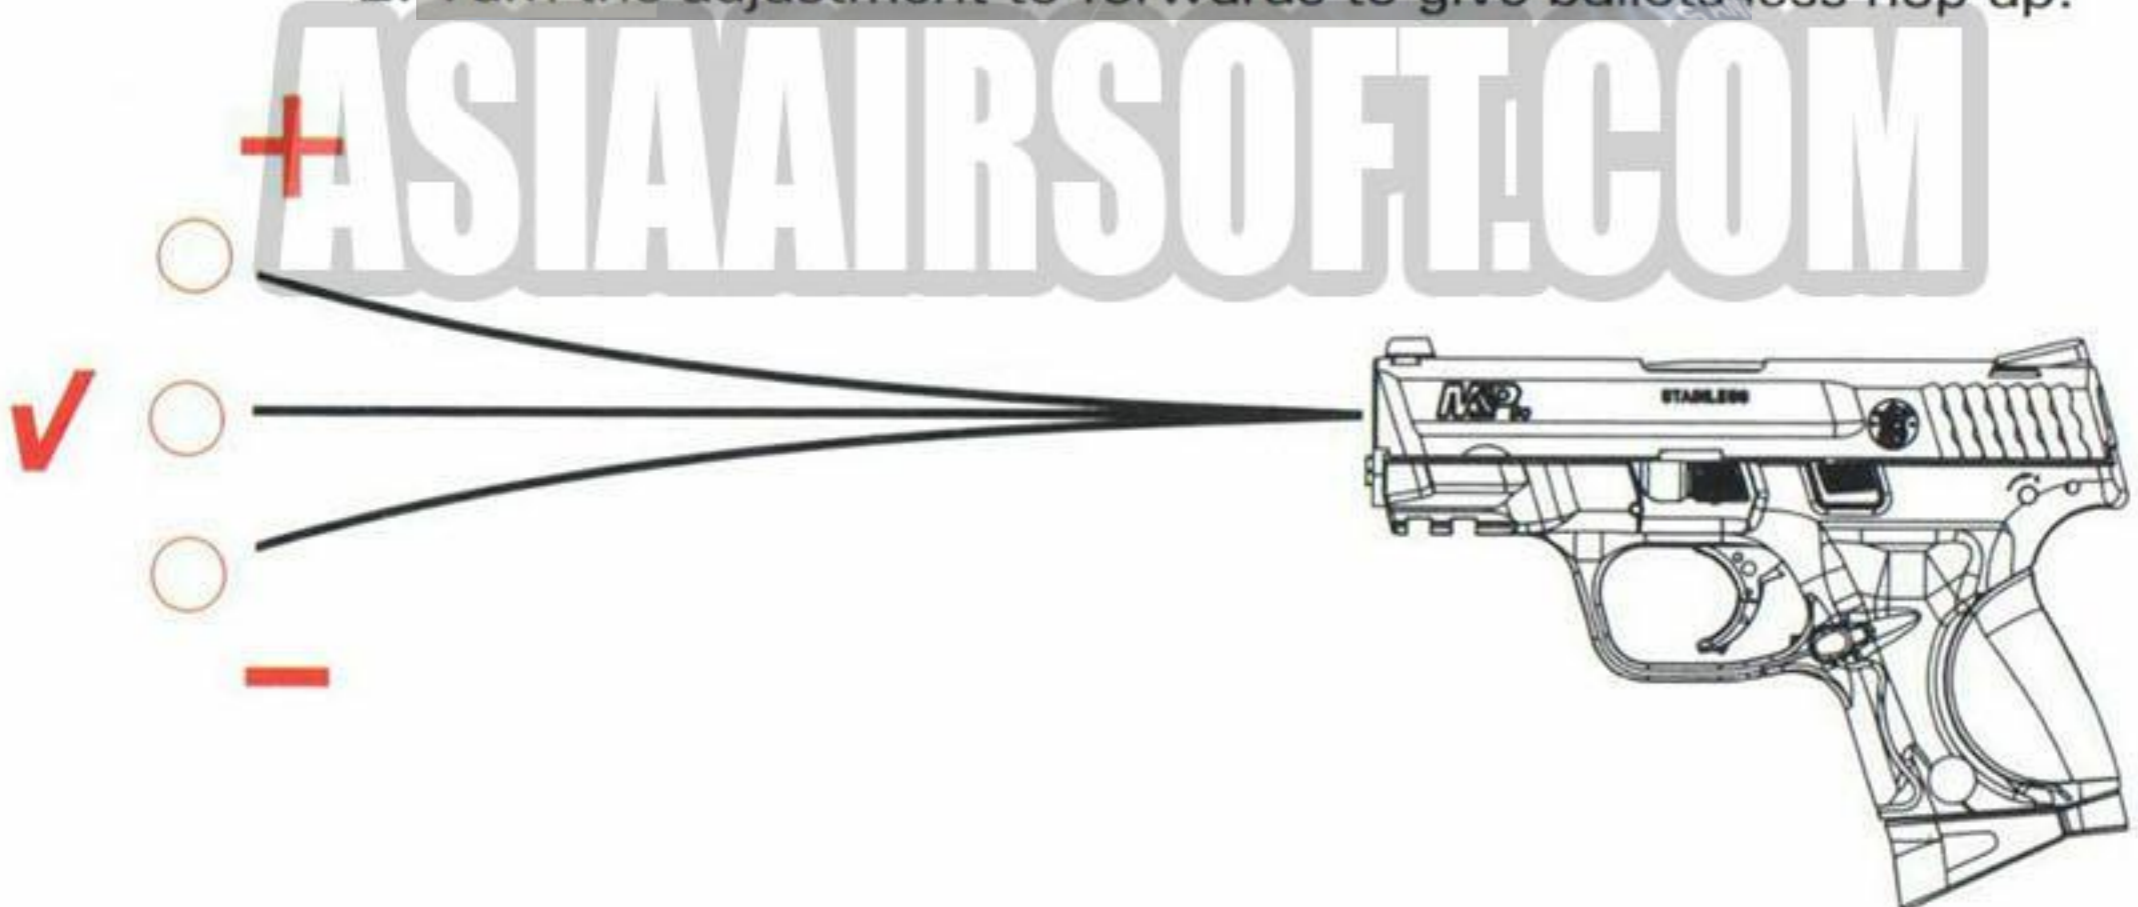

IF YOU HAVE OTHER STATES, PLEASE CONTACT WITH YOUR DEALER OR VISIT OUR WEBSITE [HTTP://WWW.STARK-ARMS.COM](http://www.stark-arms.com)

● Parts List

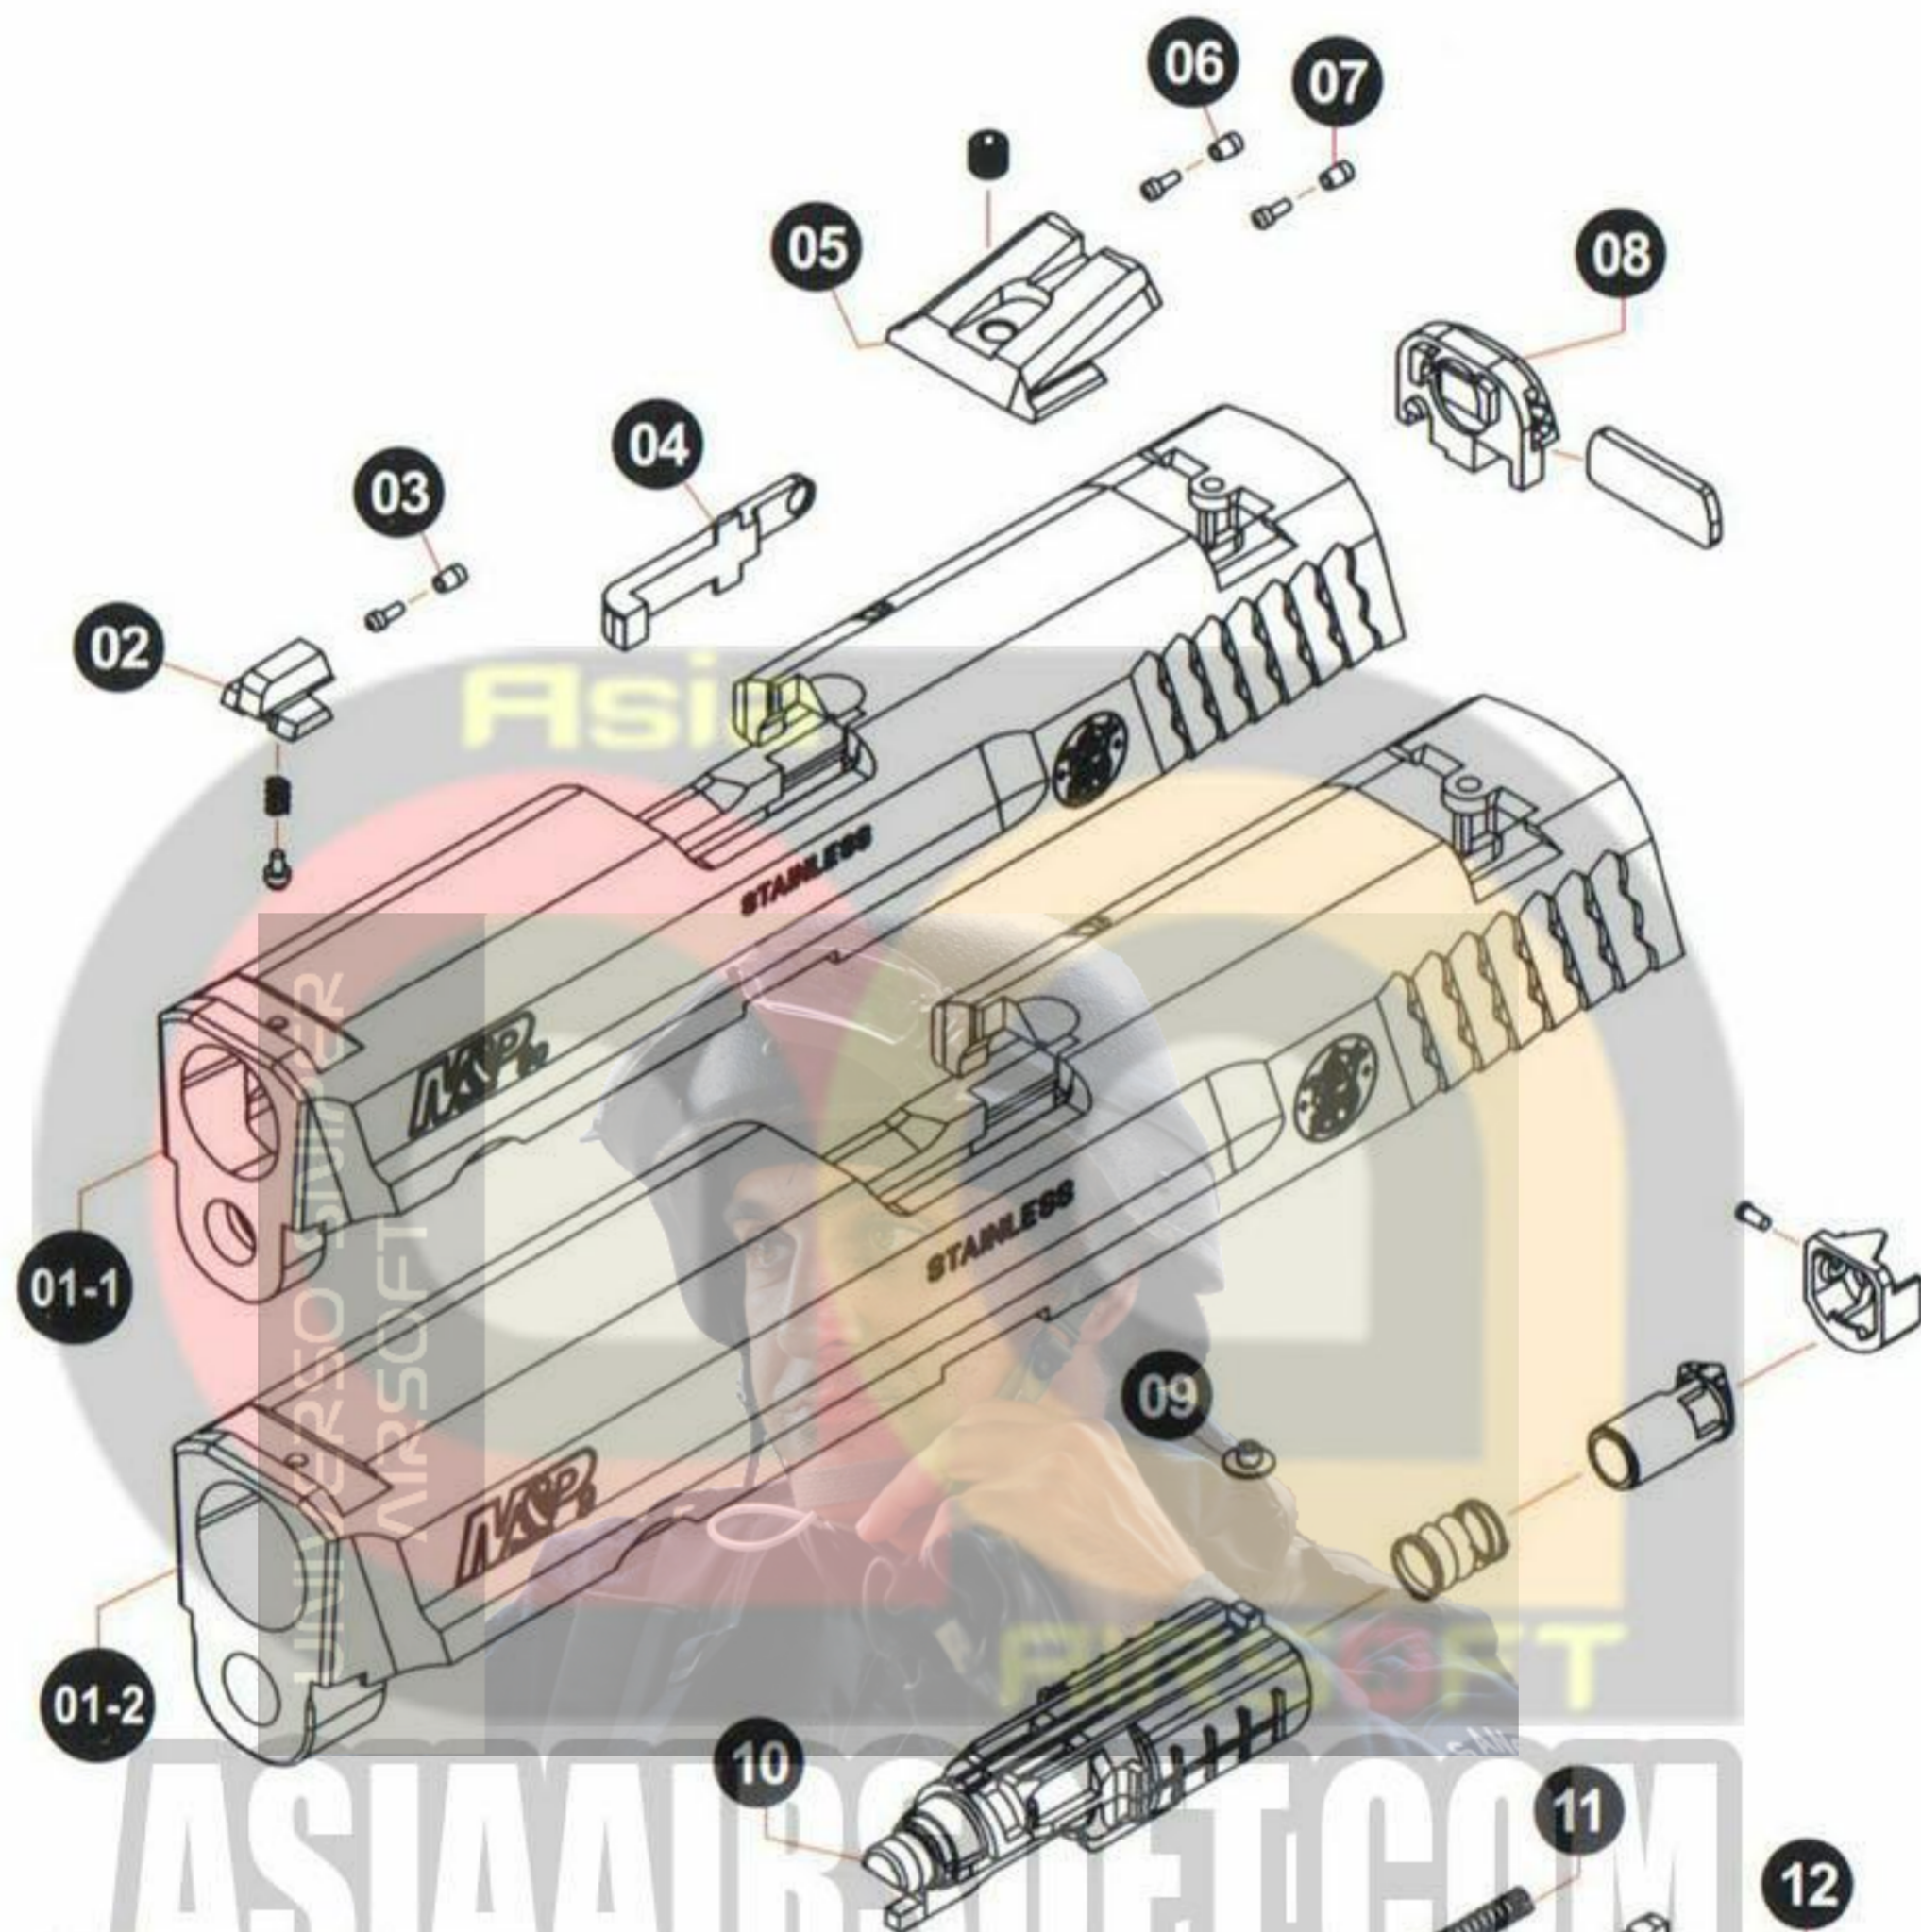



- 01-1 Slide for M&P 9C
- 01-2 Slide for M&P 9
- 02 Front Sight
- 03 Dark Sight Unit
- 04 Extractor
- 05 Rear Sight
- 06 Dark Sight Unit
- 07 Dark Sight Unit
- 08 Slide Cover Plate
- 09 Fake Fire Pin Housing Pin
- 10 Loading Nozzle
- 11 Loading Nozzle Spring
- 12 Gas control valve base




● Parts List

- 13-1 Outer Barrel for M&P 9C
- 13-2 Outer Barrel for M&P 9
- 14 Hop Up Rubber
- 15 Hop Up Chamber
- 16-1 Inner Barrel for M&P9C
- 16-2 Inner Barrel for M&P9
- 17-1 Recoil Spring Rod Assembly Complete for M&P9C
- 17-2 Recoil Spring Rod Assembly Complete for M&P9

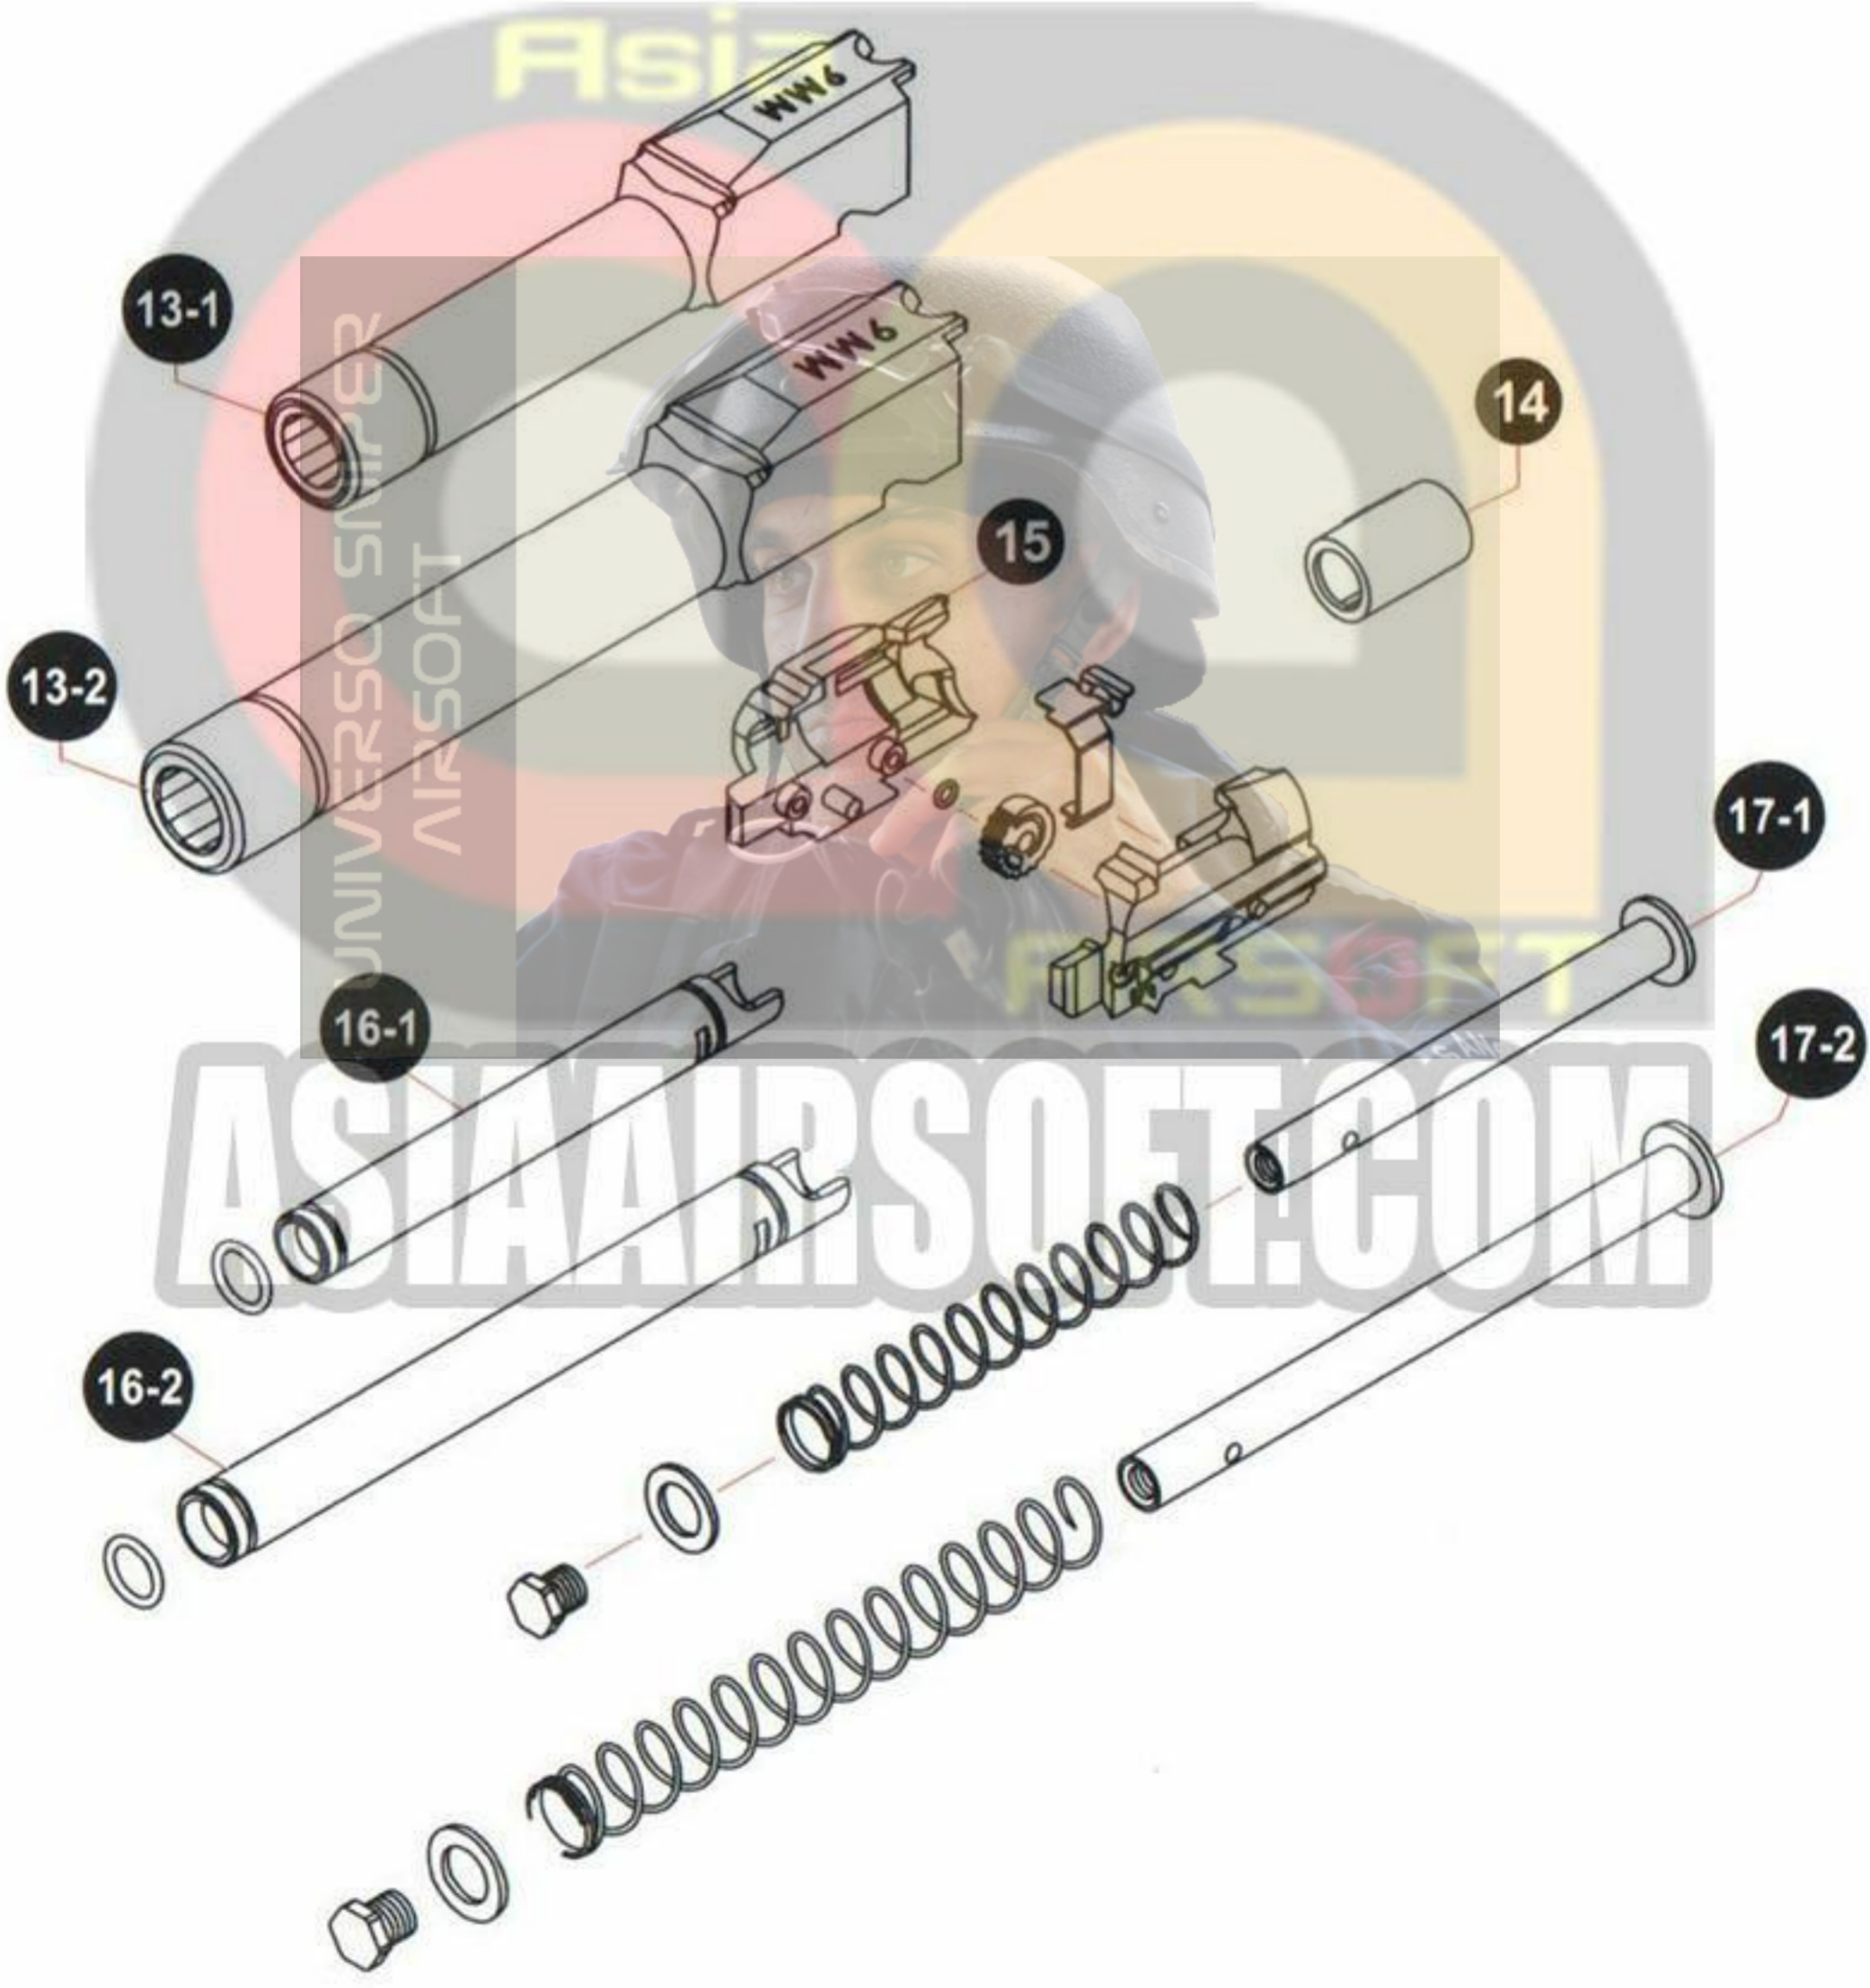


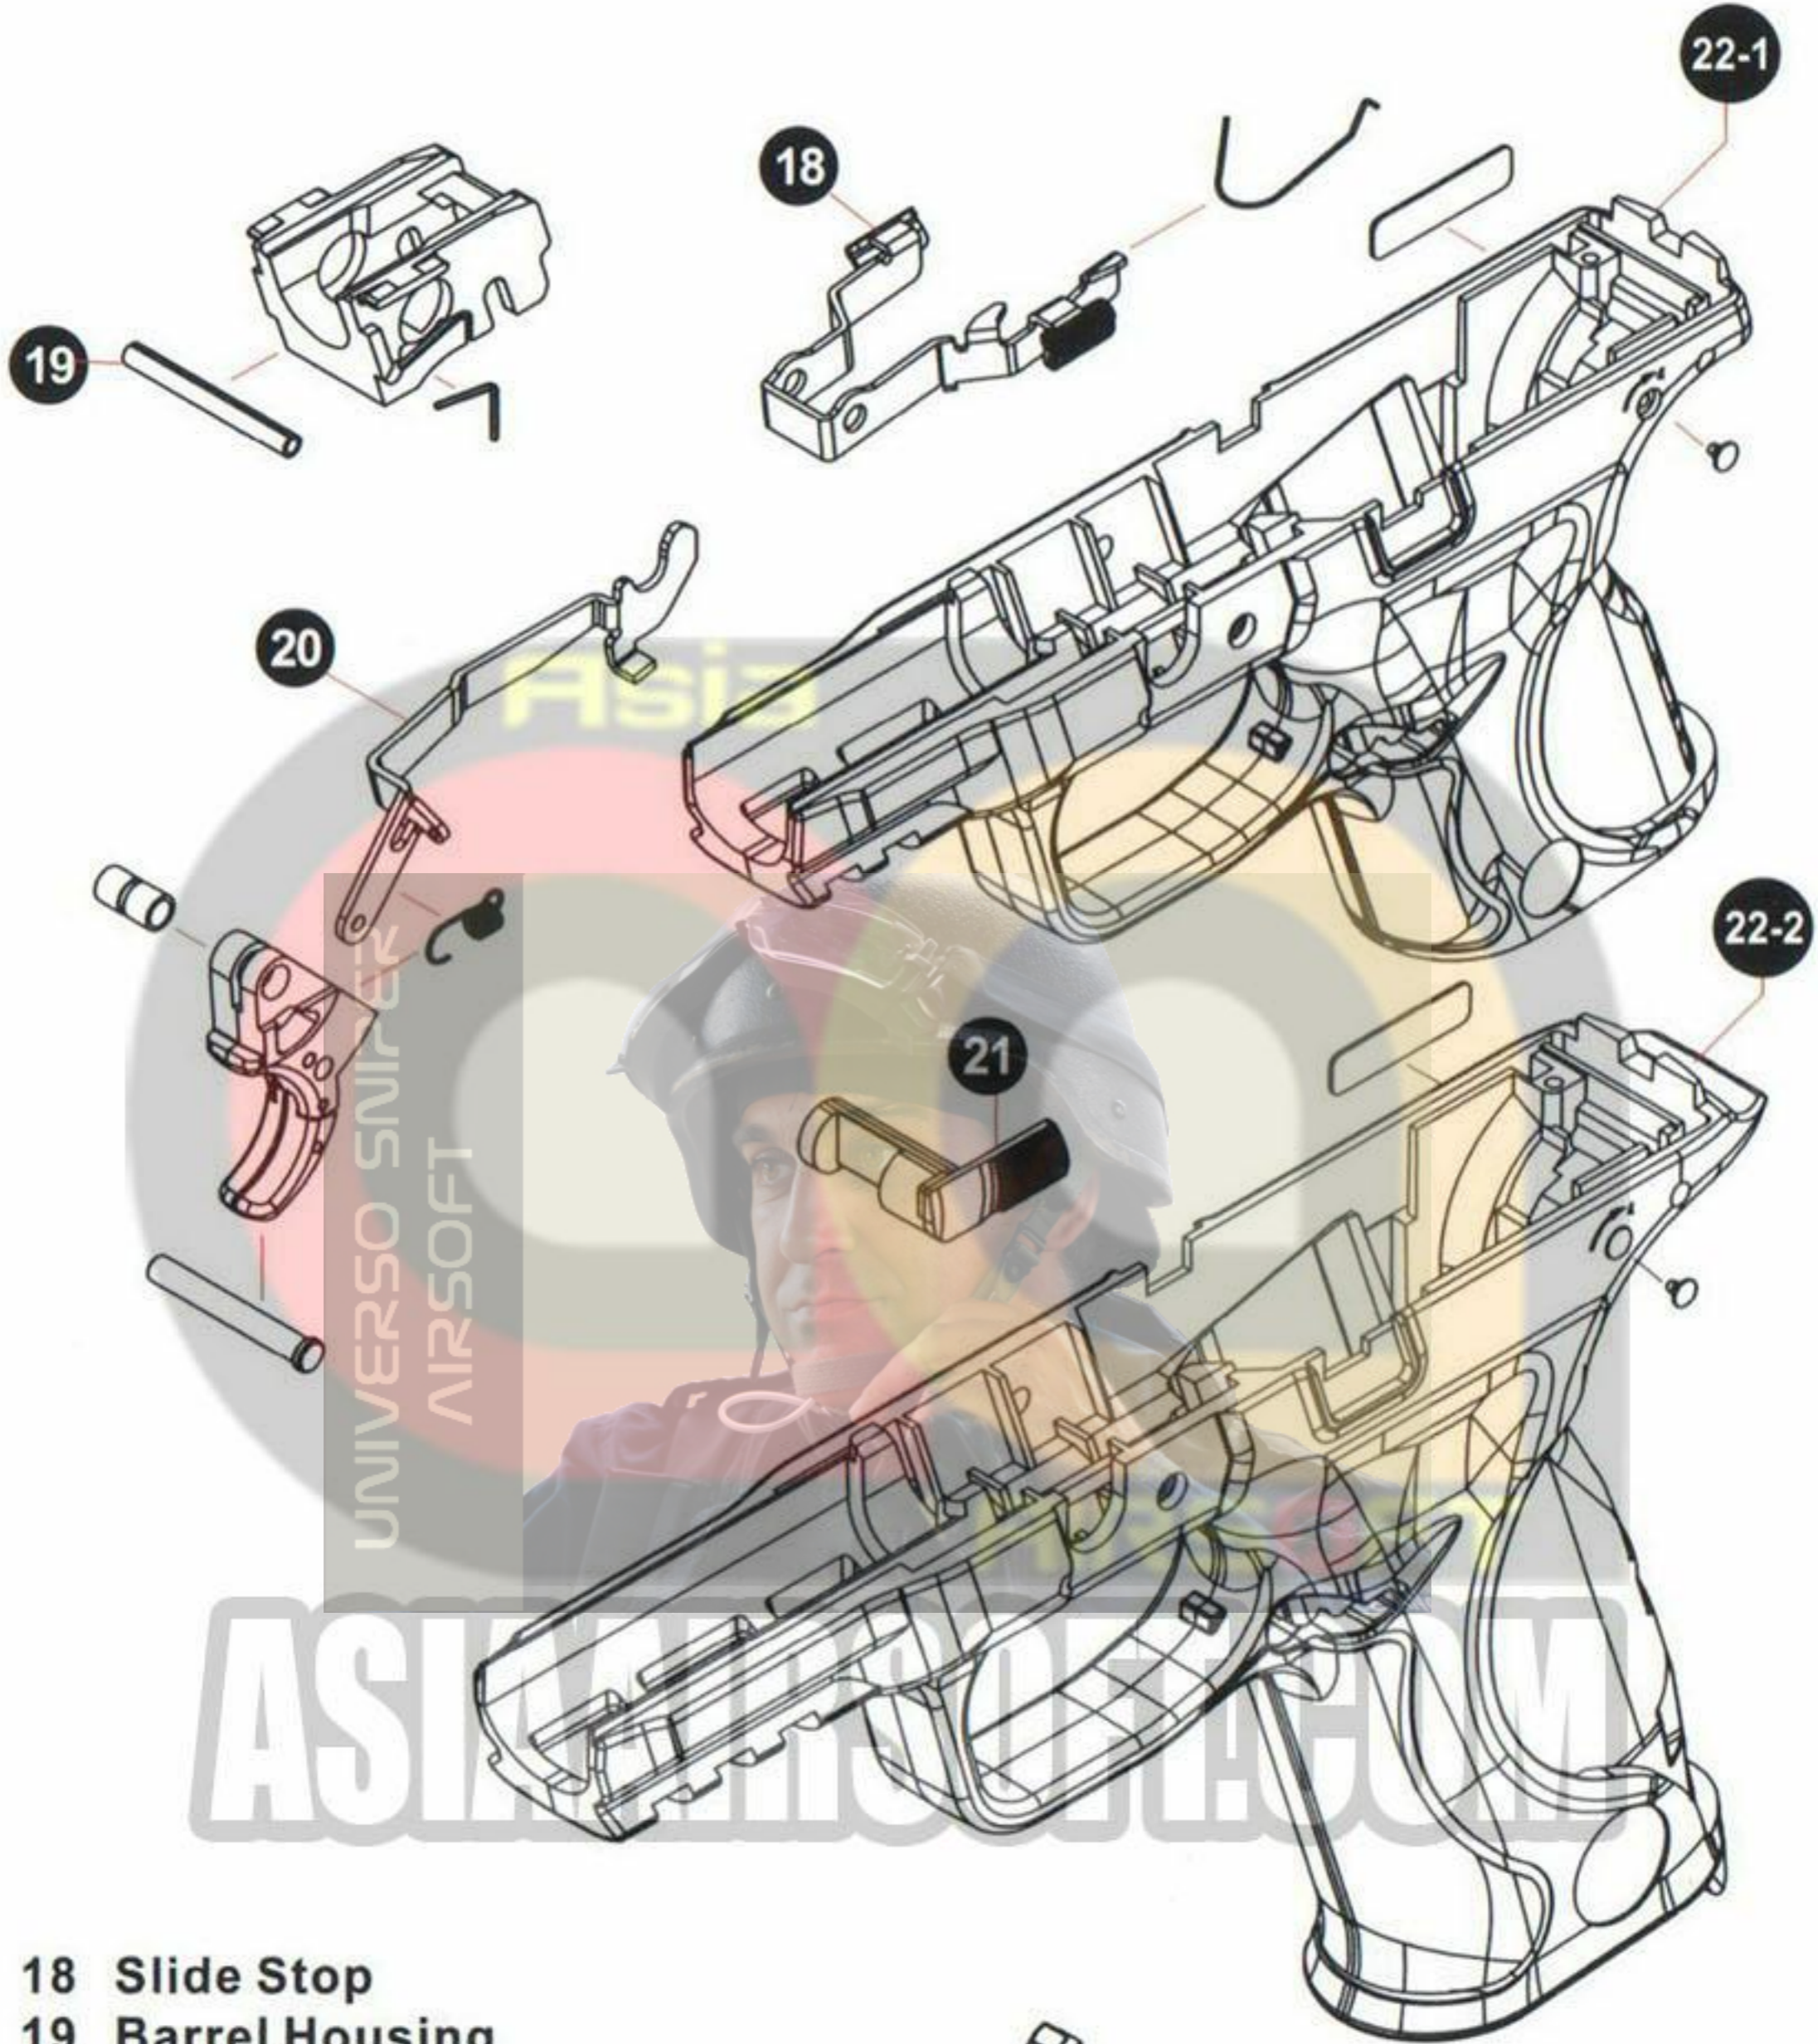


- 18 Slide Stop
- 19 Barrel Housing
- 20 Trigger Unit
- 21 Slide Lock Knob
- 22-1 Frame for M&P9C
- 22-2 Frame for M&P9
- 23 Magazine Catch
- 24-1 Frame Tools for M&P9C
- 24-2 Frame Tools for M&P9

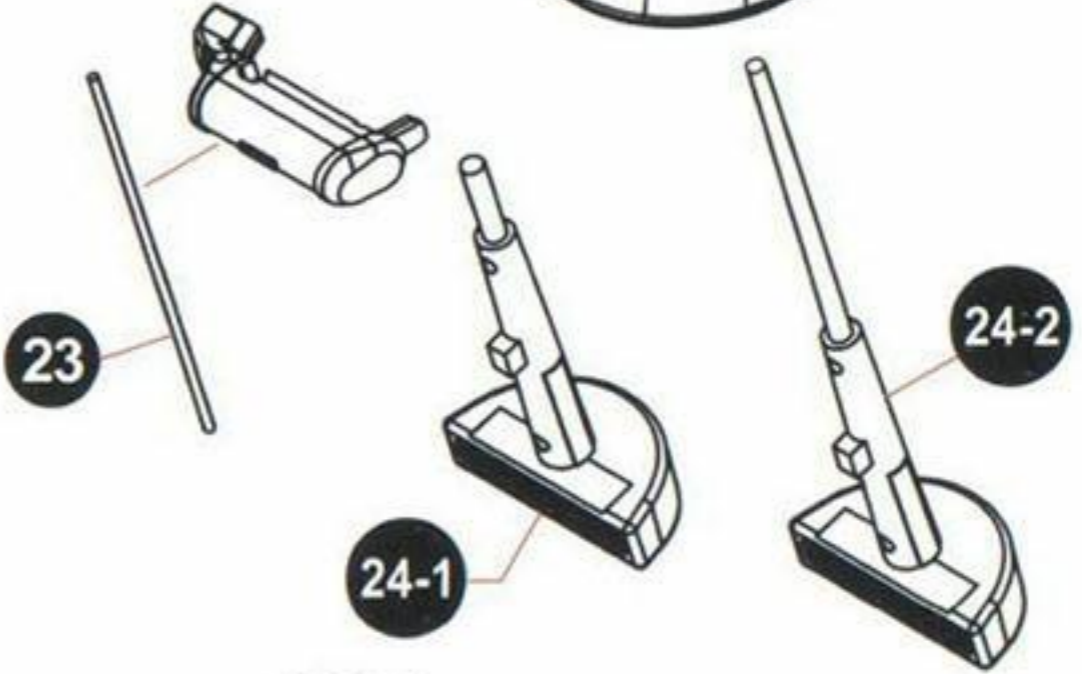


● Parts List

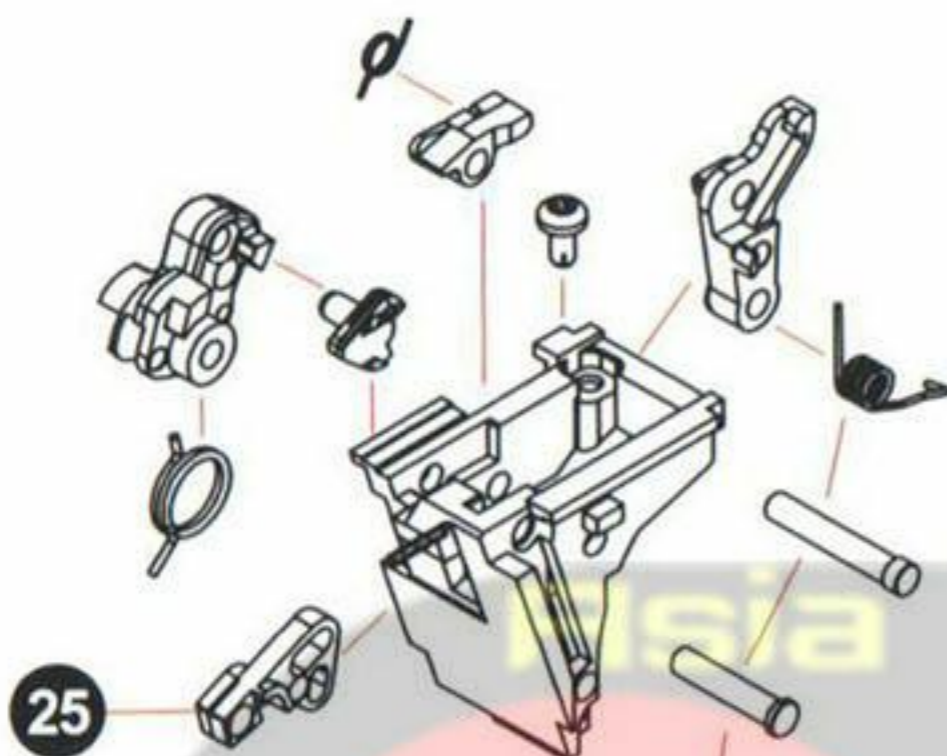

- 25 Trigger Housing Assembly Complete
- 26-1 Backstrap S for M&P 9C
- 26-2 Backstrap S for M&P 9
- 27-1 Backstrap M for M&P 9C
- 27-2 Backstrap M for M&P 9
- 28-1 Backstrap L for M&P 9C
- 28-2 Backstrap L for M&P 9

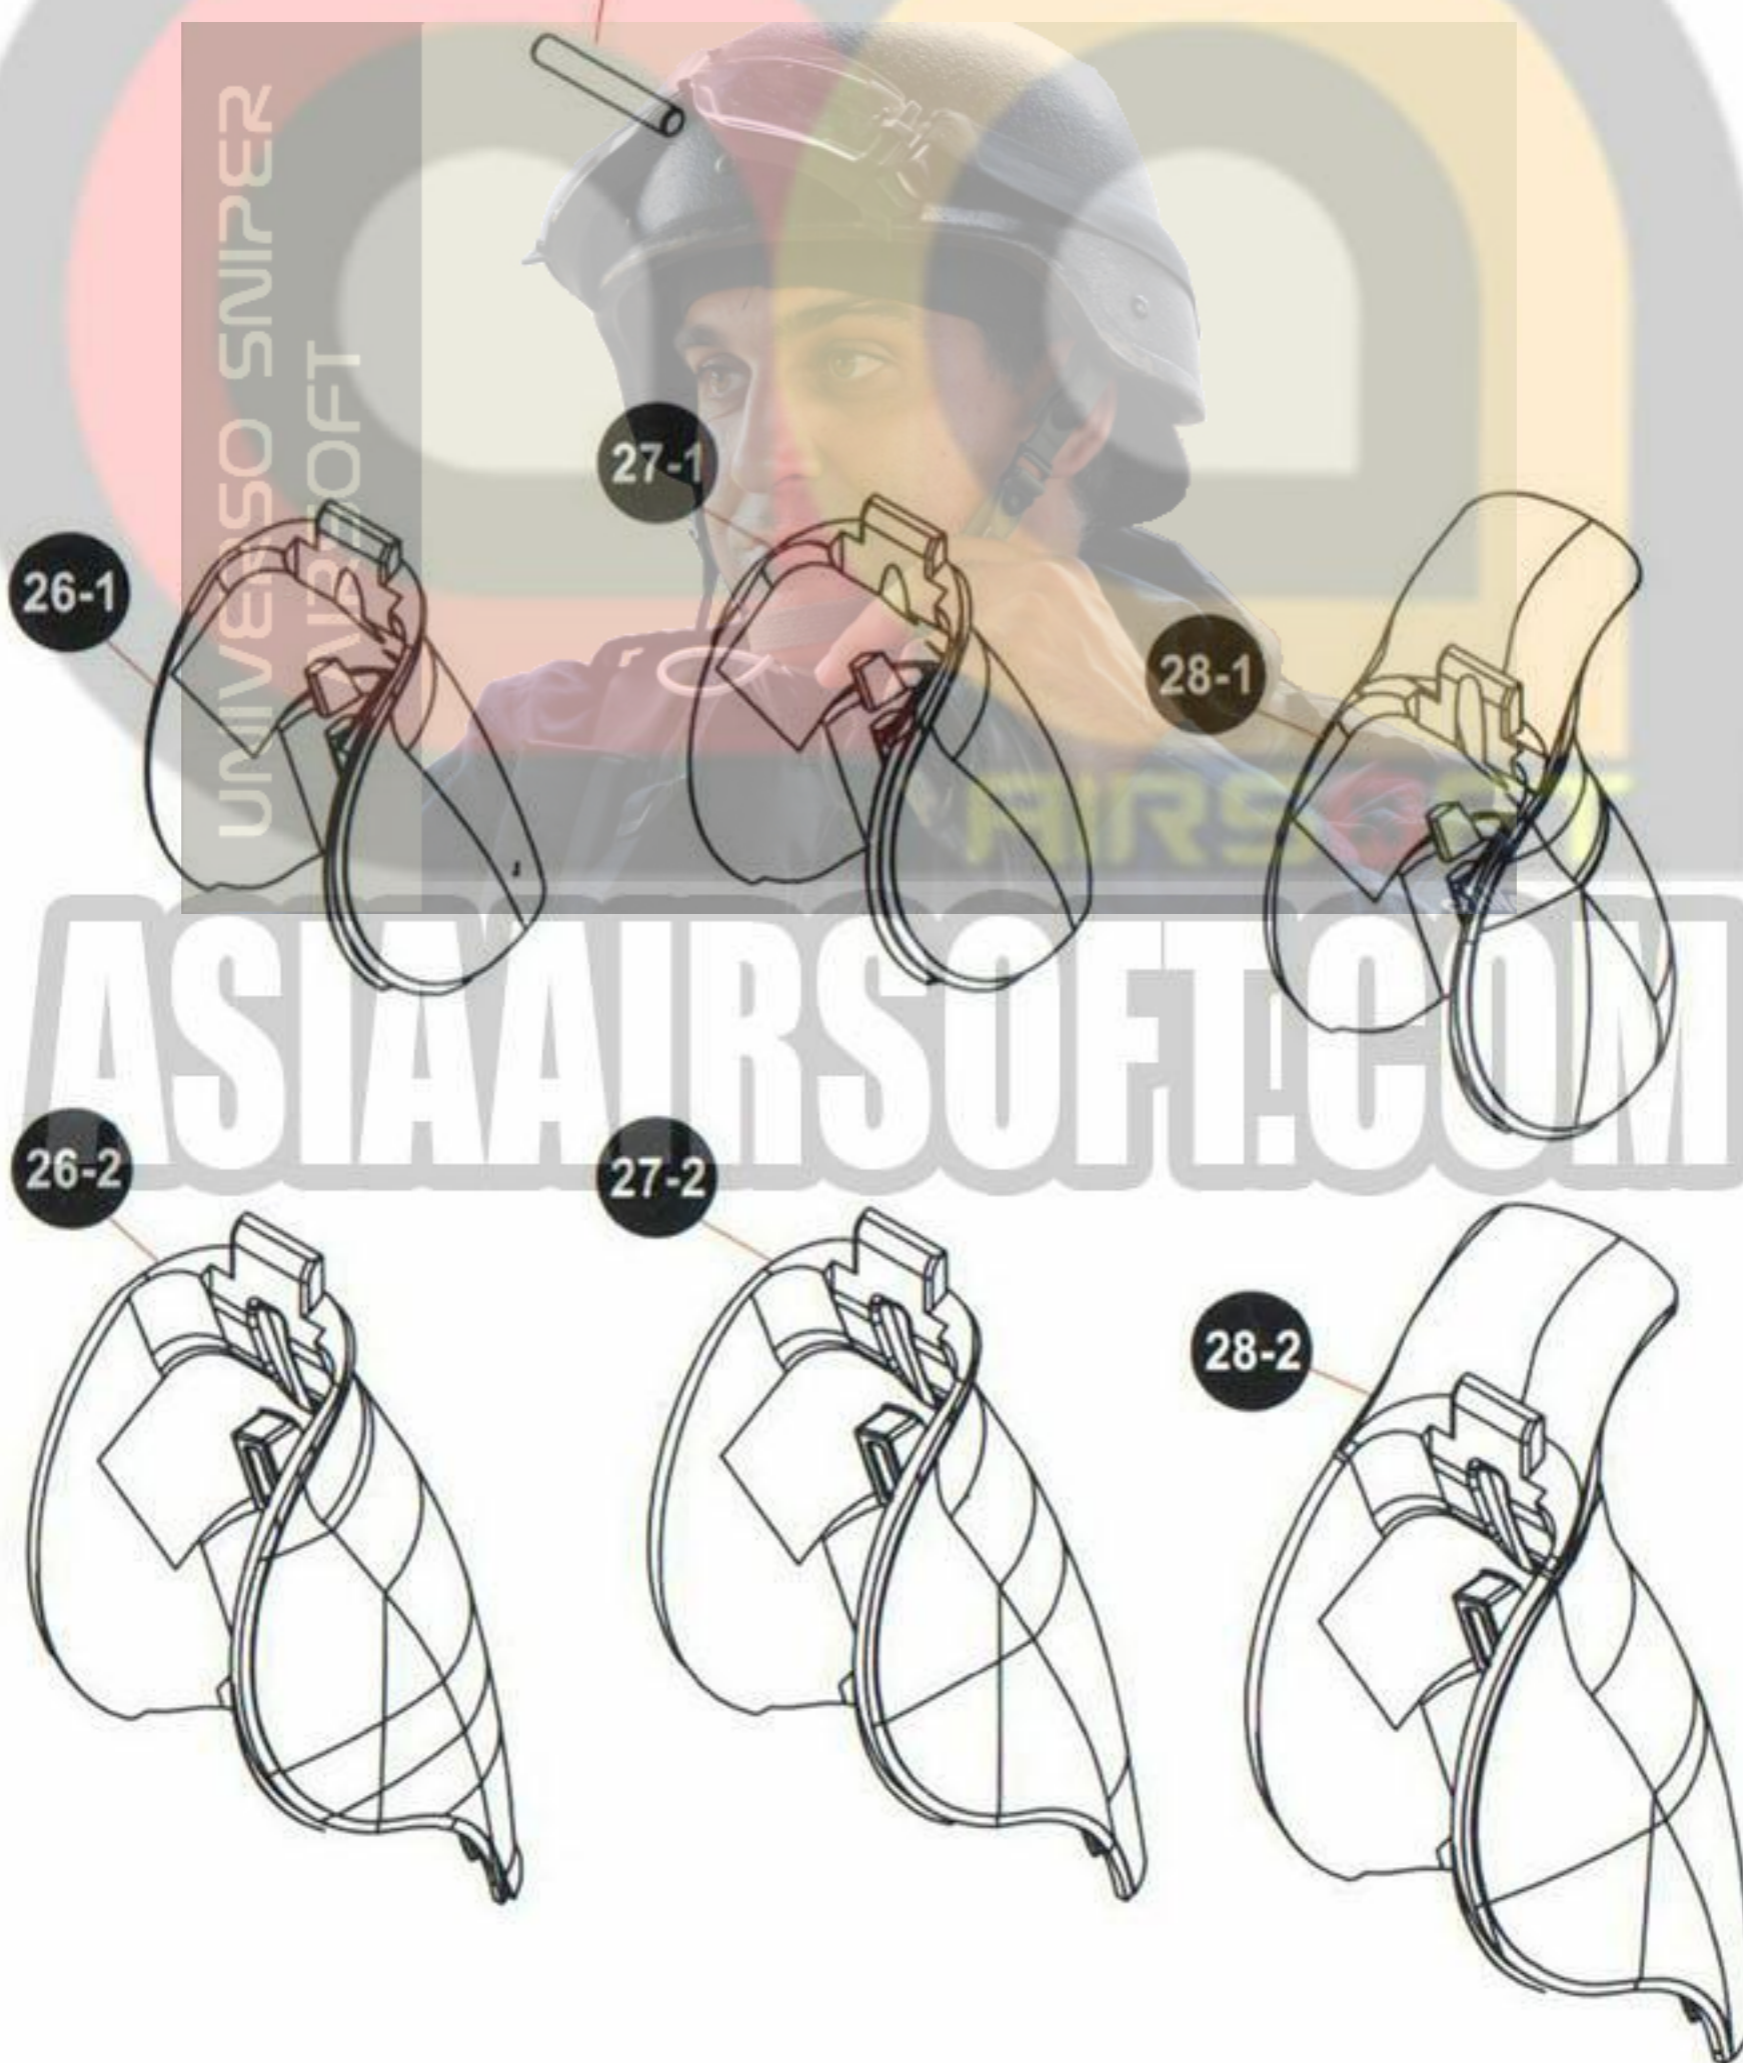

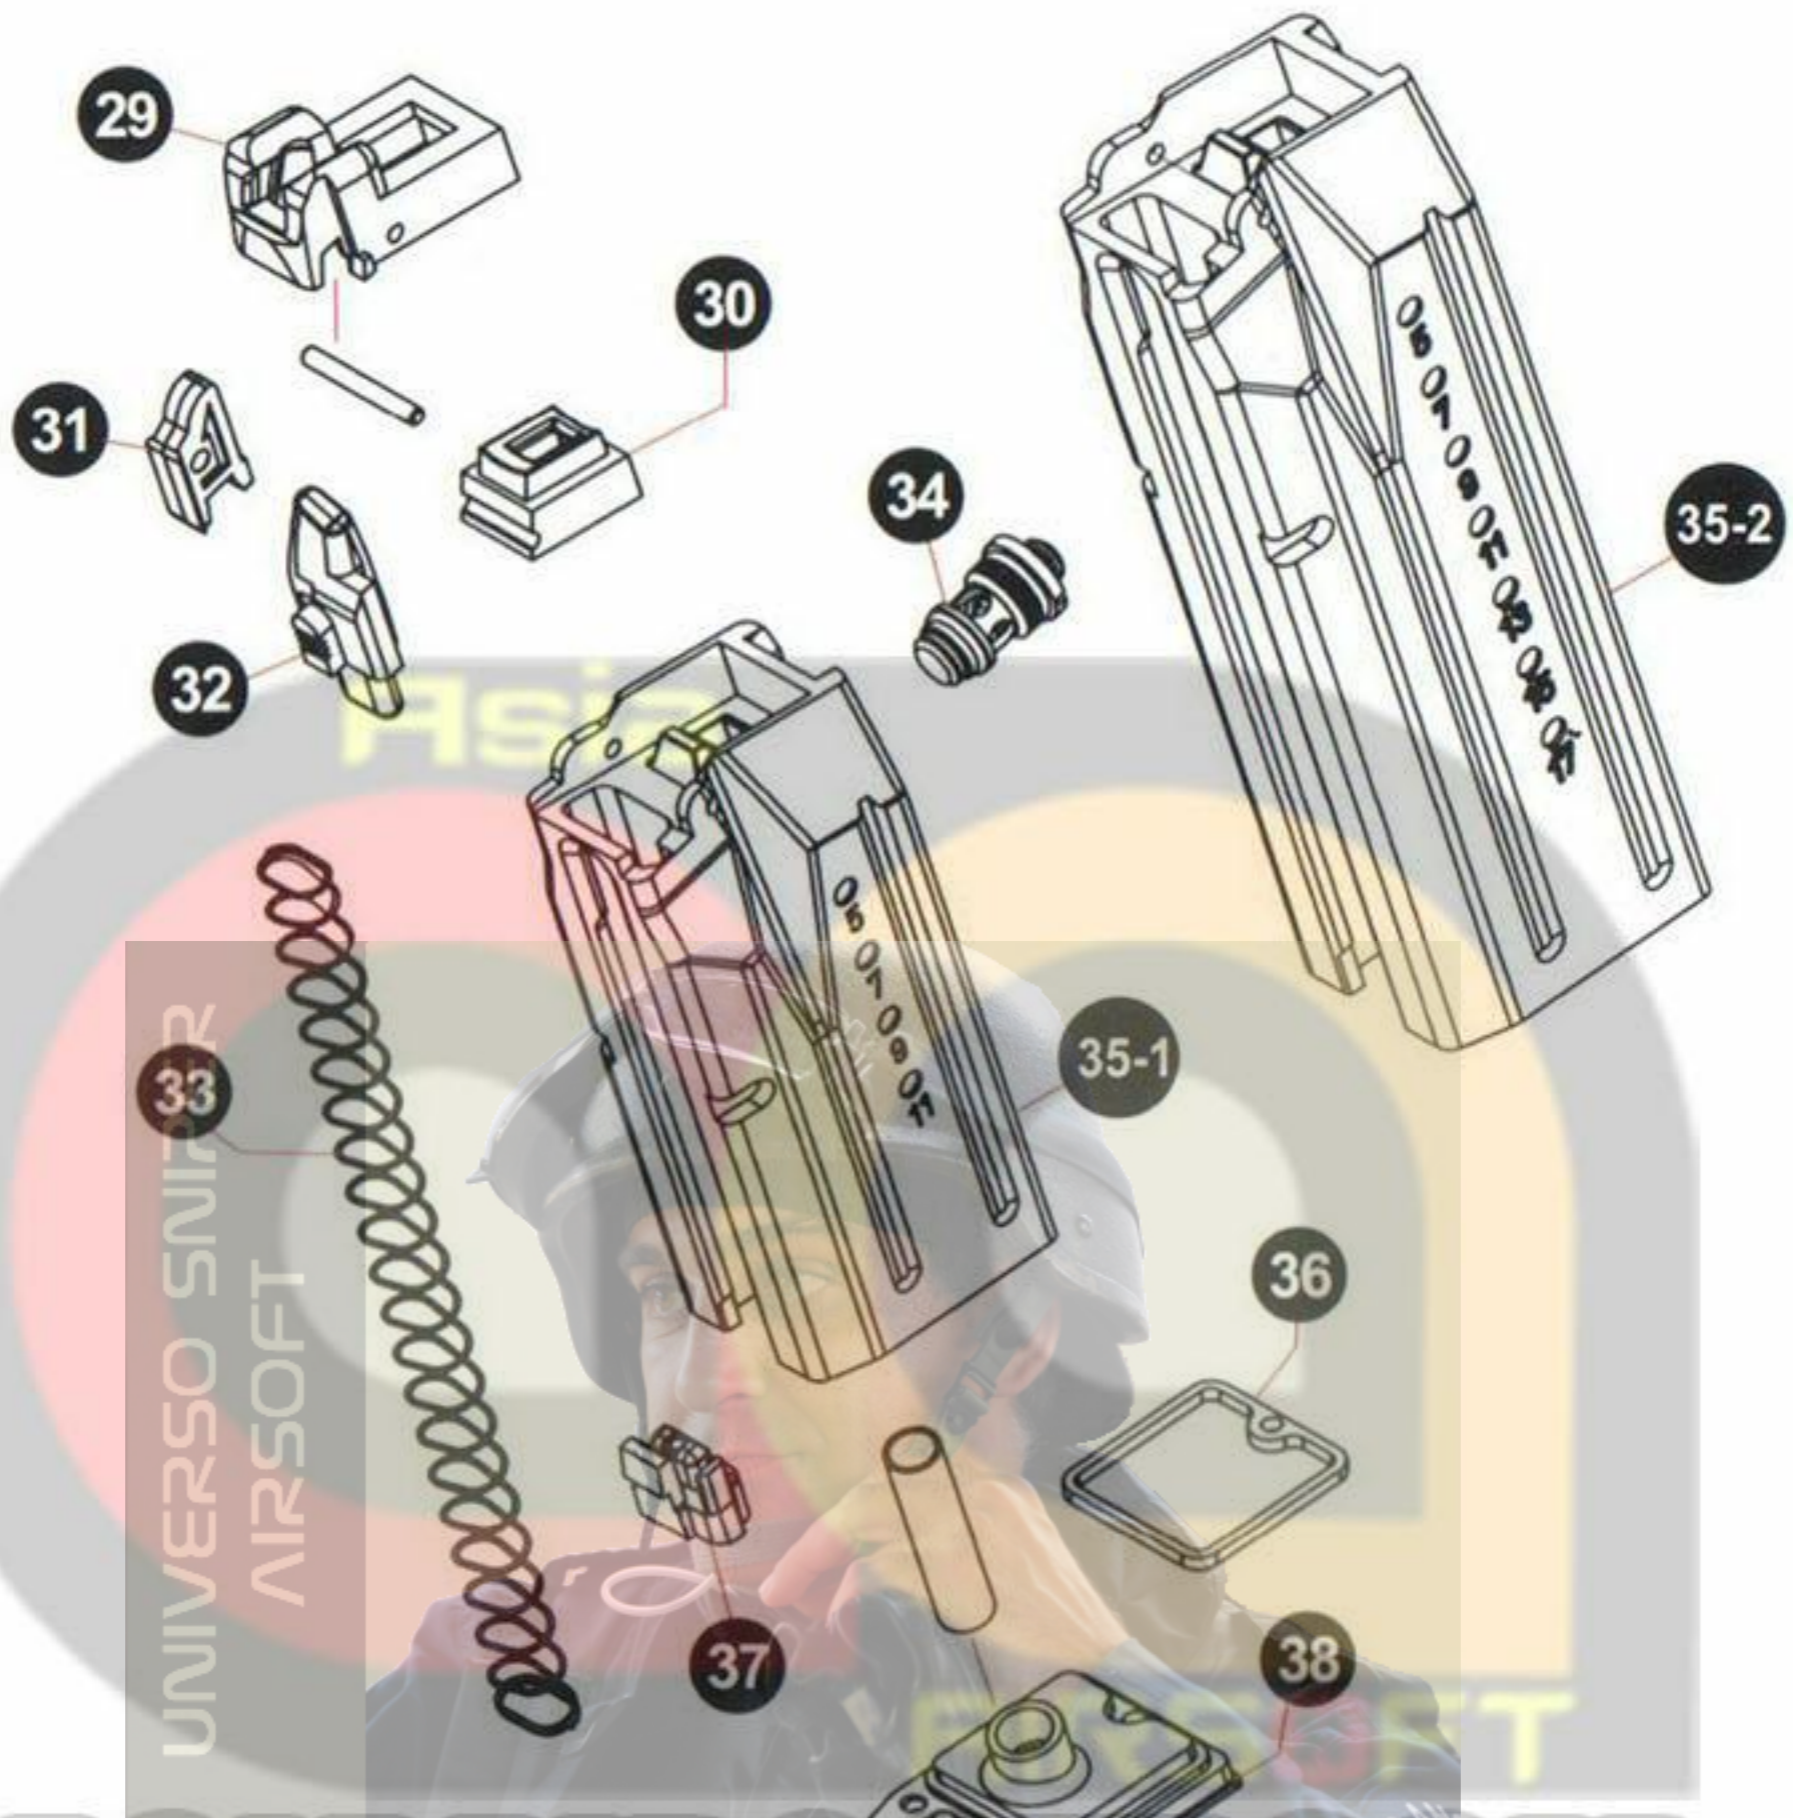

- 29 Magazine Lip
- 30 Nozzle Seal
- 31 Non-Slide Stop Device
- 32 Magazine Follower
- 33 Magazine Follower Spring
- 34 Magazine Valve
- 35-1 Magazine Case for M&P 9C
- 35-2 Magazine Case for M&P 9
- 36 Magazine Base Seal
- 37 Magazine Follower Spring Retainer
- 38 Magazine Base
- 39 Magazine Gas Jet
- 40-1 Magazine Plate for M&P 9C
- 40-2 Magazine Plate for M&P 9





ASIAAIRSOFT.COM



Smith & Wesson



9 / 9c Series

Ver.2012.12.24