

# 使用說明書

# VFC

HANDLING CAUTIONS AND INSTRUCTION MANUAL

## MK16 / MK17 MOD 0



VegaForce Company

TEL  
+886-2-22036630  
FAX  
+886-2-22036610  
E-Mail  
sales@gb-tech.com.tw  
ADD

No.68, Jianguo 2nd Rd., Xinzhuang Dist,  
New Taipei City 242, Taiwan



VegaForce Company

Automatic Electric Rifle

對象年齡18歲以上 User restricted to 18 years of age or older

注意  
Warning

使用前請務必詳讀此說明書  
Always read through this manual before operation.

警語	WARNING	2
各部名稱	COMPONENT NAME	3
選擇鈕、手動保險說明	SELECTOR LEVER & SAFETY SETTING	4
電池的安裝	SETTING BATTERY	5
彈匣的安裝	SETTING MAGAZINE	6
準星與照門的調整	SETTING THE FRONT SIGHTS AND REAR SIGHT	7
可動部的說明	MOVABLE PARTS	8
射擊	FIRING	11
可變 Hop-Up 系統的說明	VARIABLE HOP-UP SYSTEM	13
配件的裝著	THE EXAMPLE OF OPTION WEARING	16
故障內容自我診斷	TROUBLE CLINIC	17
分解圖、零件表	PARTS LIST	19
關於售後服務	AFTER SERVICE	25



**警告**

**在操作本產品之前，請務必詳讀此操作手冊**


- 請務必帶上護目鏡等護眼用具。
- 請勿射擊人或動物。
- 隨意用 BB 槍開玩笑可能會觸及法律。
- 嚴禁望向槍口。
- 請將槍口朝向安全的地方。
- 射擊時無論遠近，隨時確認射擊區內是否有行人或車輛經過。
- 避免任意不經意地扣處扳機。
- 除非完成射擊準備，否則切勿將手指放入扳機。
- 不用或搬運時，請務必放置於槍盒等容器內。
- 請存放在兒童拿不到的地方。
- 禁止擅自改造或加強槍枝結構。
- 非射擊時請將選擇鈕切換到保險位置。

**WARNING!**

**Always read through this manual before operation.**

- Always wear eye protective gear.
- Never aim or shoot a person or animal as the target.
- You may be punished if you are shooting for a practical joke.
- Never look into the gun muzzle.
- Always direct the muzzle towards a safe direction.
- Never shoot the air gun at places where people and cars pass cross.
- Avoid pulling the trigger carelessly.
- Please put away your fingers from the trigger, except when you are ready to shoot a target.
- Always put the gun in a case or bag when you are carrying it.
- Store the gun at places out of reach by children.

# 1 各部名稱 Component name

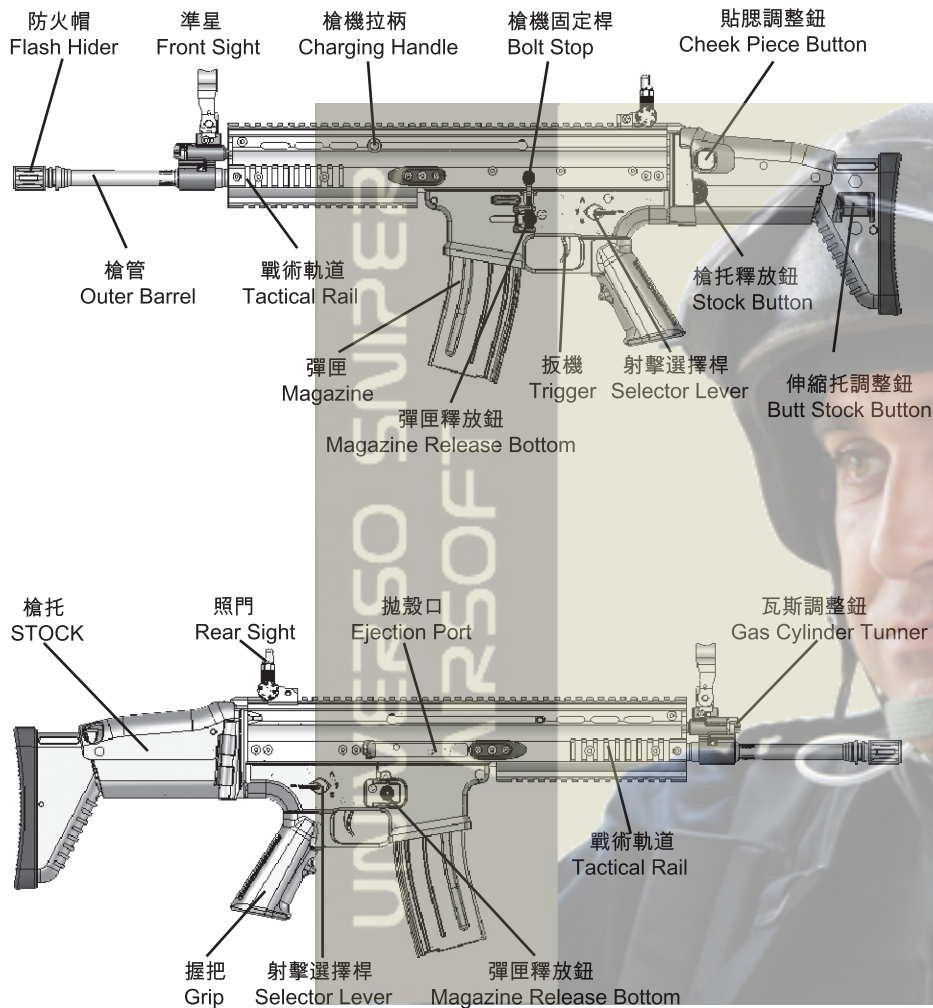

※配件會因款式不同而有所差異。  
 ※ The accessory would be changed base on the different model.


# 2 保險說明

## 警告·注意

- 請勿一邊扣動扳機一邊扳動選擇鈕，否則將導致動作不良，或發生意外。
- 在關保險狀態，強制扣動有可能會導致故障。


※選擇鈕未扳至正確位置有可能會導致射擊模式發生錯誤。

## 保險

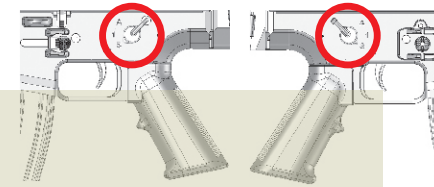


保險（無法扣動扳機）  
 不射擊或一般存放時，  
 務必將選擇鈕設定至  
 保險位置。

## 半自動

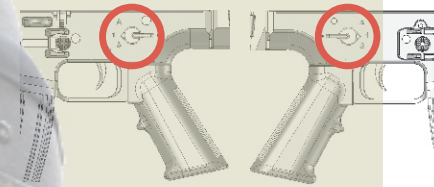

半自動  
 扣著一次扳機只會發射  
 一顆子彈。

## 全自動

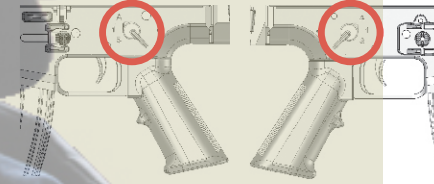

全自動（連發）  
 扣著扳機不放會  
 連續發射子彈。

# 2 Selector Lever and Safety Setting

## WARNING · CAUTION

※ Be careful not to catch your fingers in the moveable parts.

- Never operation the Selector while pulling the trigger. Otherwise, malfunctions are possible, resulting in accidents.
- Pulling the trigger with the Selector being set to safe may damage the gun.

Safety Setting (The trigger can not be pulled)  
 Always set the lever to the Safety position when you are not firing the gun or during storage.

Semi Auto (Single Shot)  
 The gun will fire one shot each time the trigger is pulled.

Full Auto (Automatic Shot)  
 The gun will fire automatically while the trigger remains pulled.




### 3 電池的安裝

(電池必須先行充電完畢)

※安裝電池前先卸下彈匣。

1. 拆下槍托底板。

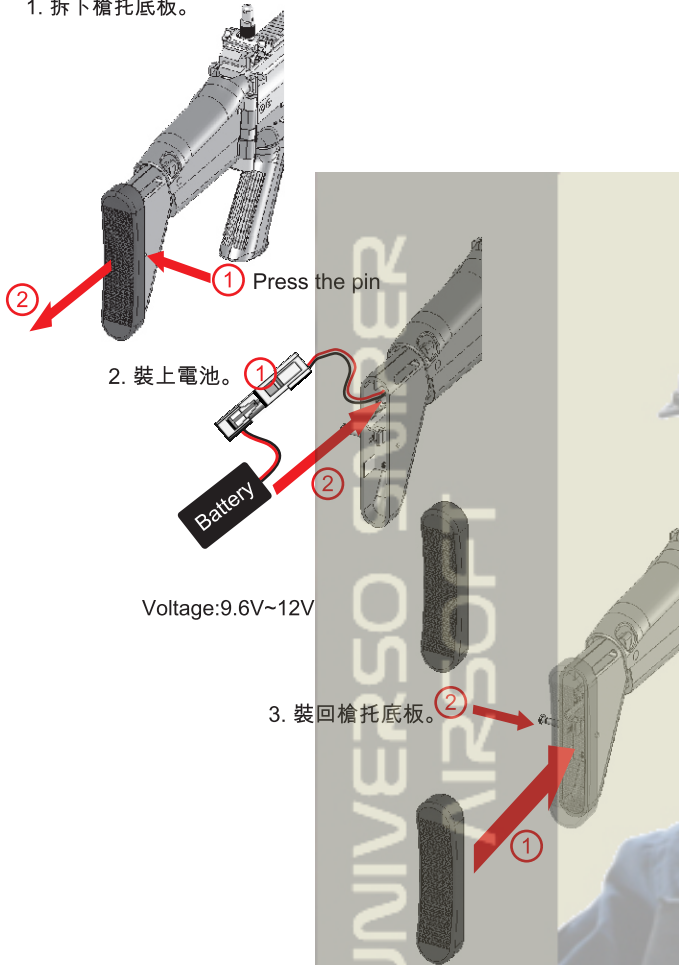


#### 警告·注意

- 電池安裝時，請將槍口朝向安全的位置，並將選擇鈕設定於保險位置。

### 4 彈匣的安裝

#### 警告·注意

- 請使用優良的 BB 彈。若因使用其他品質粗劣之 BB 彈所造成的故障，本公司一概不負保固責任。

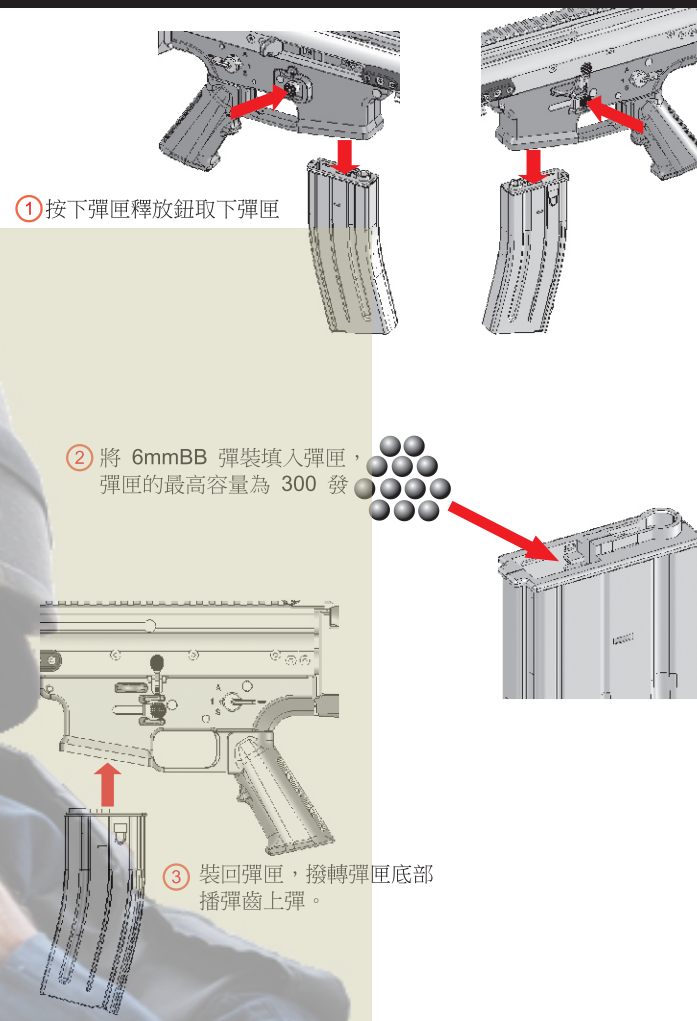

### 4 Selector Lever and Safety Setting

#### WARNING · CAUTION

- Always use the High quality BB for this air gun. We will not be held responsible for any damage and accidents arising from use of bad quality bullets supplied by other manufacturers.

1. Press the magazine release lever to remove the magazine.
2. Insert 6mm BB bullets into the magazine. The magazine is capable of containing 300 bullets.
3. Insert the magazine, then turn the gear on the bottom of magazine to load bullets.

### 3 Selector Lever and Safety Setting

※ The magazine is done under the condition that is removed.

1. Detach the bottom plate of stock.
2. Set up the battery.
3. Put the bottom plate back.


#### WARNING · CAUTION

- Direct the muzzle towards a safe direction and set the selector lever to the Safety position.



## 5 照門的調整


※準星與照門可摺疊，方便搭配各種光學瞄具使用。

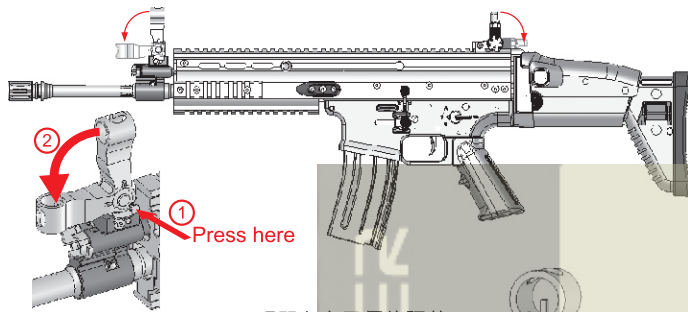


① Press here

照門左右風偏的調整：

轉動照門右側的風偏旋鈕，  
就可以調整照門的左右位置。

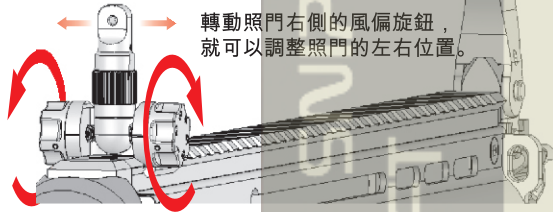

照門上下的調整：  
轉動照門上方的上下調整旋鈕，  
就可以調整照門的上下位置。

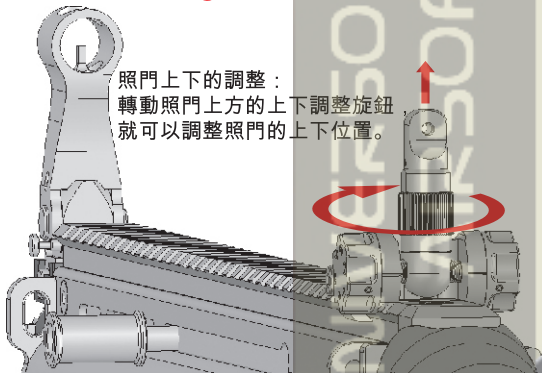

### 警告·注意


- 旋轉照門時請小心勿被夾傷。

## 6-1 彈匣的安裝

### 警告·注意

- 操作槍托時，請小心勿被夾傷。

1. 調整貼腮板位置 (三段可調)

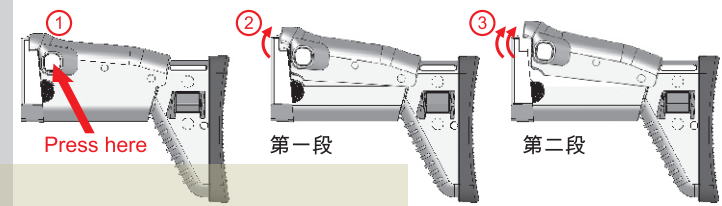


① Press here

第一段

第二段


2. 調整槍托長度 (六段可調)

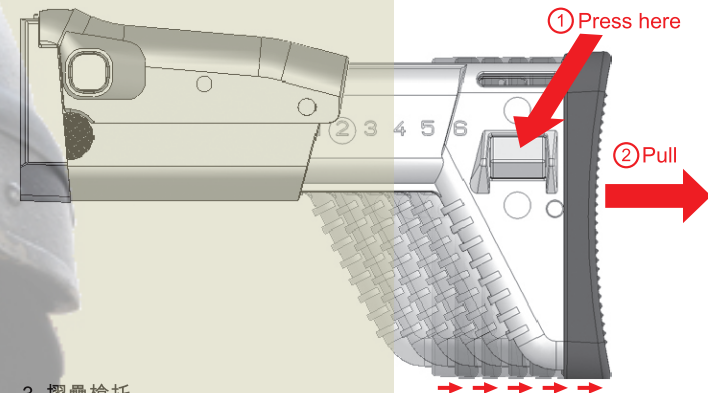

① Press here

② Pull

3. 摺疊槍托

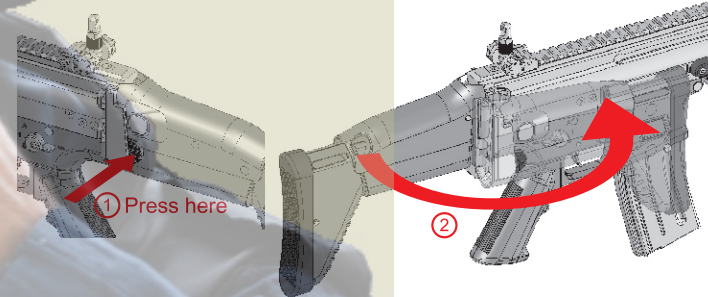

① Press here

②

## 6-1 Selector Lever and Safety Setting

### WARNING · CAUTION

- Be carefully not to catch your fingers when operating the buttstock.

※ Be careful not to catch your fingers in the movable parts.

1. Pressing the cheek piece button can adjust the position of cheek piece. ( 3 levels adjustment )
2. Pressing the retractable button can adjust stock length. ( 6 levels adjustment )
3. Pushing the buttstock button can fold the stock.

## 5 Setting the Rear Sight

1. Windage adjustment:

Turn the windage knob for windage adjustment.

Forward: Move the sight to right.

Backward: Move the sight to left.

2. Elevation adjustment:


Turn the elevating knob for elevation adjustment.

Clockwise: Long distance


Anticlockwise: Short distance

## 6-2 更換槍管


1. 旋下瓦斯鋼管旋鈕，取出內藏的工具。

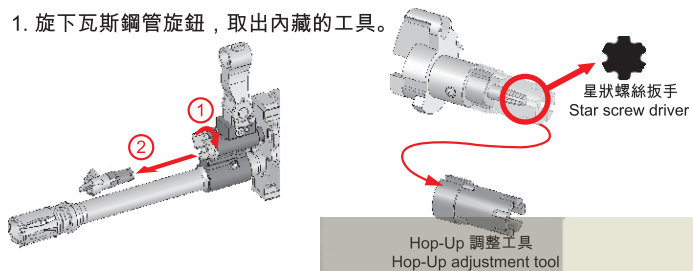


2. 用此工具將槍身兩側各三處星形螺絲用工具轉鬆，即可拆下槍管。

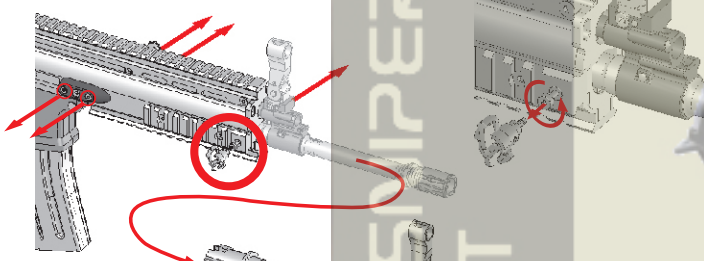

3. 取出 380mm 內管，轉下防火帽及延伸外管。

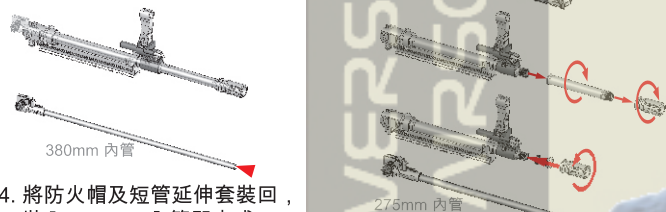

4. 將防火帽及短管延伸套裝回，裝入 275mm 內管即完成槍管更換。

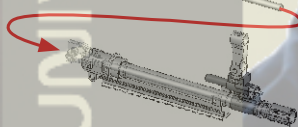

## 警告·注意


- 更換槍管時請小心勿被活動零件夾傷。

## 6-3 大部分解


## 警告·注意

- 大部分解時，請小心勿被夾傷。


1. 按下下槍身前插梢，即可向下抽出下槍身。

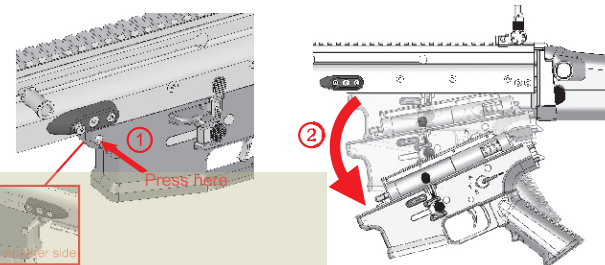


2. 下槍身取下後，可依箭頭下方拆下槍托，並抽出複進簧組。

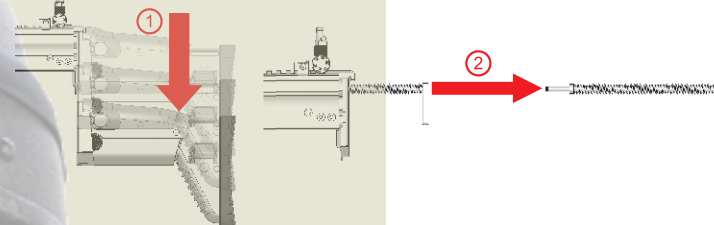

3. 槍托取下後，將槍機拉到最後將槍機拉柄轉出，即可取出槍機總成。

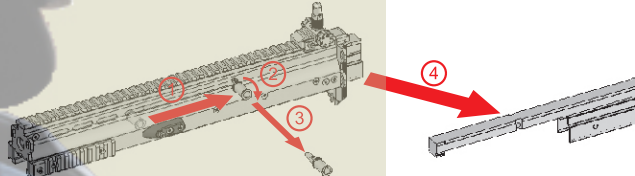

4. 大部分解完成。

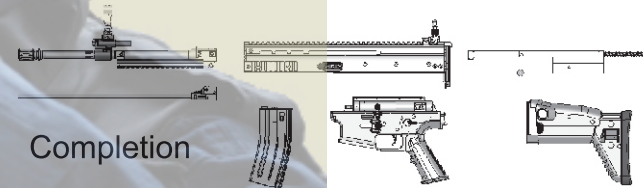

## 6-2 Barrel Exchange

※ Be careful not to catch your fingers in the movable parts.

1. Turn the gas cylinder tuner down, Then take the star screw driver.
2. Use the star screw driver to loose the 3 screws both side on the upper receiver. Then the barrel set can be pulled out.
3. Rotate the flash hider and extended outer barrel clockwise, then replace the 380mm inner barrel with 275mm inner barrel.
4. Install the flash hider, then SCAR-L STD changes into SCAR-L CQC.

## WARNING · CAUTION

- Be careful not to catch your fingers in the movable parts.

## 6-3 Operator Maintenance

## WARNING · CAUTION

- Be careful not to catch your fingers in the movable parts.

※ Be careful not to catch your fingers in the movable parts.


1. Press the lower receiver pin, then pull the lower receiver out.
2. The buttstock can be detached after the lower receiver was taken. The the recoil spring set will
3. Then pull the bolt set out.
4. The operator maintenance completed.



## 7 射擊

※ 確認完全安全的情況下，方可進行射擊。


1. 將射擊選擇鈕設定在全自動位置。

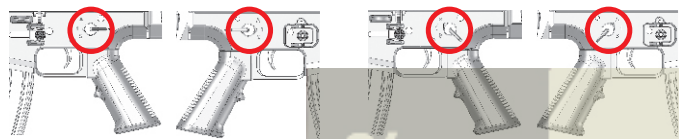

半自動位置  
Semi-Auto

全自動位置  
Automatic

2. 扣扳機即可發射

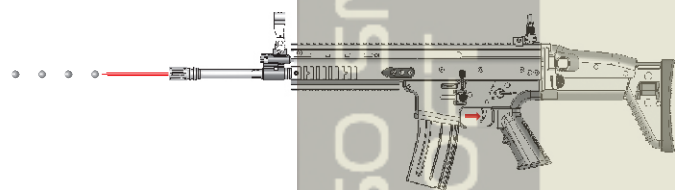

### 注意

- 隨意扣動扳機非常危險。在確認射擊之前，請勿將手指放在扳機上。
- 裝上彈匣後，扣扳機第一發有可能是單發，此並非故障。

### 警告·注意

- 只有在確認完全安全的狀況下，才能進行射擊。
- 關保險時請勿強行扣引扳機，以免造成故障

## 7 射擊

### 警告·注意

- 請勿使用 WD40、CRC556 或其他礦物油。
- 射擊前請注意第二頁的警告事項。

### ◎射擊終了時


- 拔下彈匣，往安全的方向全自動射擊 2~3 發以釋放彈簧，最後切回保險的位置。
- 彈匣雖未裝彈，但須注意槍膛內可能還會有殘彈。

### ◎馬達與電池的注意事項

- 射速減緩時，請將電池取下並予以充電。
- 馬達與電池在連續射擊 500 發之後，為避免過熱，請休息 5~10 分鐘。

### ◎卡彈時的處理

- 當卡彈發生時，將 BB 彈清理掉，並從彈匣進彈口噴入些許矽油，以保持含彈橡皮的潤滑度。

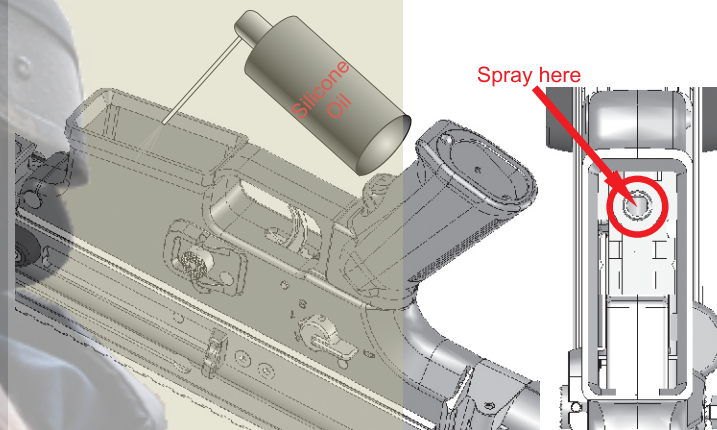

## 7 Firing

### WARNING · CAUTION

- Never use WD40, CRC556 or other mineral oil.
- Please read the warning on page 2 before shooting.

### ◎ After Operation

- Remove the magazine and dry fire the gun in the semi auto mode directing the muzzle to a safe direction. (Otherwise, the spring may be weakened.) Set the selector to the safe position.
- Bullets may remain in the chamber even if the magazine contains no bullets (or if the magazine is not connected).

### ◎ Cautions on Motor and Battery

- Charge the battery if the firing cycle becomes slow.
- give the air gun a rest for 5 to 10 minutes after firing about 500 rounds, in order to ensure long service lives of the motor and battery.

### ◎ When Bullets Are Clogged

- If bullets are clogged, remove them and apply a few drops of silicone oil into the chamber from the magazine entrances or spray silicone oil for 0.5 to 1 sec to obtain smooth continuous firing.

## 7 Firing

※ Confirm safety sufficiently before beginning firing.

1. Set the selector lever to Semi-Auto or Full Auto.
2. Pull the trigger.

### CAUTION

- Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless you are ready to shoot a target.
- A blank firing may occur at triggering after setting the

### WARNING · CAUTION

- Confirm safety sufficiently before beginning firing.
- Pulling the trigger with the selector being set to safe may damage the gun.




## 8 可變 Hop-Up 系統說明

※在拉開槍機座調整 Hop-Up 時，慎防夾手。


所謂的 Hop-Up 是藉由橡皮給 BB 彈特定方向的回轉，使之保持上揚的力道而能增加飛行距離。而可變 Hop-Up 系統則是可微調而讓彈道平整的系統。

1. 先將槍機拉柄向後拉，拋殼口會打開、槍機會自動固定在後。

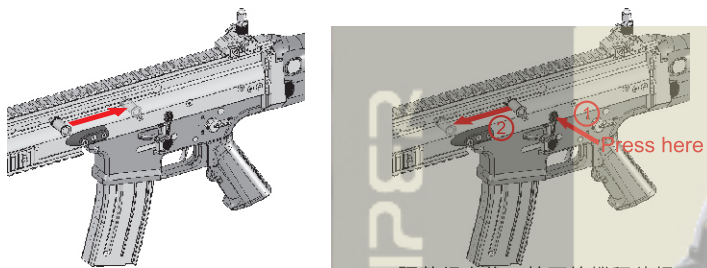

※ Hop-Up 調整好之後，按下槍機釋放桿，即可釋放槍機。

2. 用 Hop-Up 調整工具來調整 Hop-Up 調整鈕位置。

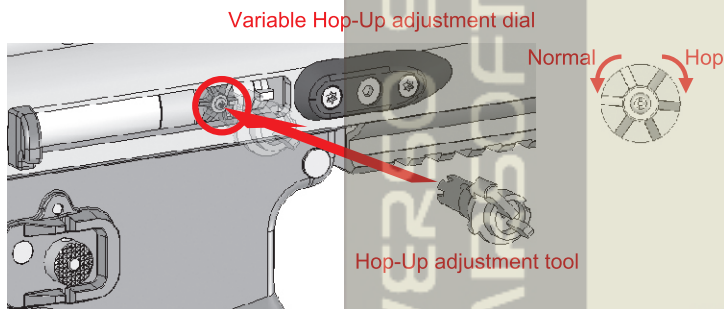

- 拉開槍機時，可以調整 Hop-Up。
- 調整鈕往 Hop 的方向轉動，則可以讓彈道上揚。
- 調整過頭或不足會影響彈道的表現。

### 警告·注意


- Hop-Up 調整過頭會造成卡彈。卡彈時持續擊發則會造成齒輪箱內部零件損毀。所以調整過頭時而造成卡彈時，請停止射擊，並將 Hop-Up 釋放，重新調整。

## 8 可變 Hop-Up 系統說明


### 警告·注意

- Hop-Up 系統會造成彈道彎曲。若槍倒下來射擊時，BB 彈會大幅度往左右邊飛行而造成危險。所以請保持正常的射擊姿勢。
- 當射擊 10000 發以上，可噴少許矽油在 Hop 橡皮以進行保養。(約 0.5 到 1 秒即可)

如下圖所示，BB 彈保持水平彈道為最佳位置，而飛行距離也會增加。

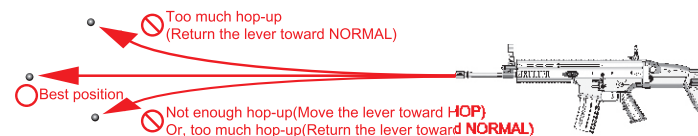

- 將 Hop-Up 往後調整會使彈道上飄。
- 將 Hop-Up 往前調整可使彈道下墜。

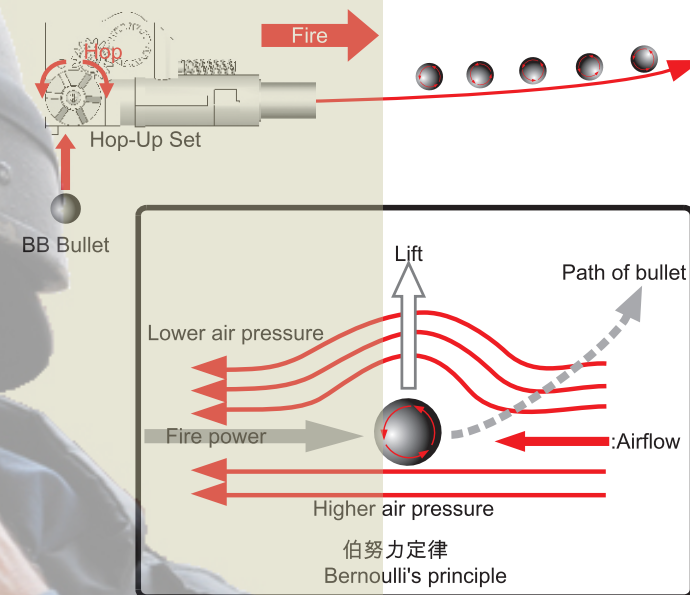

## 8 Variable Hop-Up System

### WARNING · CAUTION

- Never hold the gun sideways as the BB bullets will curve right or left. This is due to the Hop-Up system.
- When about 10,000 rounds are fired, spray silicone oil to the chamber for 0.5 to 1 sec.

1. The best position is where the bullets fly horizontally, and the longest flying distance is obtained.
2. Backward Hop-Up, pellet will float up.
3. Forward Hop-Up, pellet will fall down.

## 8 Variable Hop-Up System

※ Be careful not to catch your fingers in the dummy bolt.

By giving rotation of the fixed direction to BB bullet, a lift is given and it flies horizontally toward a long distance target. Variable Hop-Up system can tune finely that a spin starts.

- Open bolt to adjust the Hop-Up system.
- Gradually turn the adjustment dial towards Hop to give hop up to bullets. (The best setting is where bullets fly horizontally.)
- Turning excessively adversely affects the trajectory. So, stop turning the dial when bullets fly horizontally.
- Press the bolt stop can close the bolt automatically.

### WARNING · CAUTION

- Moving the dial too much towards Hop causes bullets to clog. Adjust again after stopping shooting immediately, returning the dial to the Normal side and canceling hop, since a piston and gears will be damaged, if it continues shooting then.

## 8 Hop-Up 故障排除

狀態	原因	處理方法
彈著上飄	HOP-UP 調整過頭	調整桿往前調整。
BB彈飄不起來 (HOP-UP 無作用)	HOP-UP 調整過頭	調整桿往前調整。
	HOP 橡皮有油污附著	清除油污。
	HOP 橡皮破損	向經銷商或VFC購買維修零件。
無法調整	調整桿或其他零件損壞	向經銷商或VFC購買維修零件。
卡彈	HOP-UP 調整過頭	調整桿向前調整，解除後再度調整。
	BB 彈不良	請使用優質BB彈。
	HOP 橡皮髒汙	清除髒汙。

## 8 When Hop-Up is improper


Symptom	Cause	Action
Bullets flying upwards	Too much hop setting.	Gradually return adjustment lever towards Normal.
Short flying distance of bullets (less hop-up effect)	Too much hop setting.	Gradually return adjustment lever towards Normal.
	Hop packing contaminated by oil or dirt.	Clean using the cleaning rod or consult your dealer or VFC for repair
	Worn or damaged hop packing.	Purchase the replacement part at your dealer or from VFC and replace it.
Can not adjust	Damaged adjustment lever or other parts	Purchase the replacement part at your dealer or from VFC and replace it.
Frequent bullet clogging	Too much hop setting.	After the adjustment lever is returned to normal side, and the hop is released, it adjusts again.
	Improper or too large sized BB bullets.	Use the genuine high quality BB bullets.
	Dirty hop packing	Clean using the cleaning rod or consult your dealer or VFC for repair

## 9 配件的裝著


### 警告·注意

- 本產品的軌道系統符合美軍 MIL-STD1913 規格，可以輕鬆搭配任何符合此規格之光學瞄準具、夜視鏡、雷射標定器、戰術握把等裝備。


※任何符合 MIL-STD1913 規格的配備，皆可安裝在本產品護木以及槍身滑軌上，並任意調整位置。

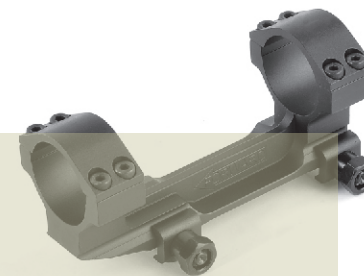


■ Knight One Picco Dual Ring Scope Mount  
FDE / BLK

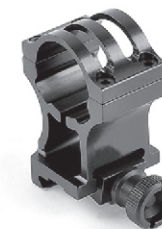

■ Aimpoint Comp-M Mount

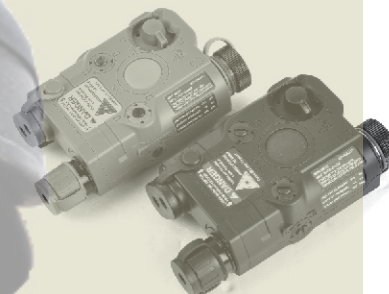

■ AN/PEQ15(ATPIAL)  
FDE / BLK

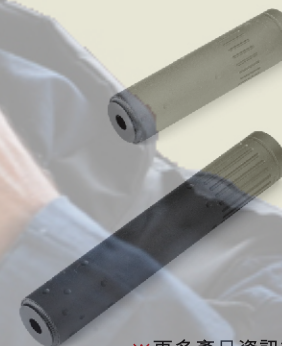

■ AAC type MK16/17  
Quick Detachable  
5.56mm/7.62mm Silencer  
with Flash Hider



■ Extreme Tactical Bipod

※更多產品資訊請上 VFC 官方網站 <http://www.gb-tech.com.tw>

## 8 Setting the option

### WARNING · CAUTION

- Any tactical gear follows the MIL-STD1913 spec can be installed in the rail system easily.

This rail system can unify selection of the apparatus according to various situations, and employment by long upper rail which also bears reinforcement of the whole gun.

※ Get more information visit our website <http://www.gb-tech.com.tw>



## 10 故障排除

狀態	原因	處理方法
無法動作	選擇鈕位於關保險位置	開保險。
	電池未充電	電池充電。
	電池接頭未連接	電池接頭確實連接。
	電池接頭正負極接反	正確連接電極。
	馬達老化 (約 5-6 萬發) 或接點不良	更換馬達或修理接點。
馬達有轉動但 BB 彈無法擊發	彈匣內 BB 彈卡彈	清除彈匣內的卡彈
	槍膛內 BB 彈卡彈	清除槍膛內的卡彈
	齒輪損壞	向經銷商或 VFC 購買零件來維修
無法全自動射擊	電池電力不足	電池充電。
	彈匣給彈不良	清除彈匣內的卡彈。
無法半自動射擊	齒輪未正確歸位	切到全自動射擊 5-6 發後，再切成半自動射擊。

## 10 故障排除

狀態	原因	處理方法
無法半自動射擊	電池電力不足	電池充電。
	接點不良	向經銷商或 VFC 購買零件來維修。
連射速度低落	電池電力不足	電池充電
BB 彈射程變短	槍膛橡皮磨損	向經銷商或 VFC 購買零件來維修
	氣筒 O 環磨損	
	氣筒彈簧彈性疲乏	
	BB 彈不良，太小或太重	請使用 VFC 優質 BB 彈
動作聲音異常	矽油耗盡	在槍膛添加數滴矽油
	空擊太過造成齒輪異常	向經銷商或 VFC 購買零件來維修。
	齒輪損壞	
BB 彈從槍口掉落	空擊太過造成齒輪異常	請使用優質 BB 彈
	槍膛橡皮磨損	
	BB 彈太小	

## 10 Trouble Clinic (Trouble shooting)

Symptom	Cause	Action
No operation at all	Selector lever is set to safety.	Set the selector lever to fire.
	Battery is no charged.	Charge the battery.
	Battery connector is disconnected.	Connect the connector.
	The + and - of battery connector is reversed.	Connect the connector correctly.
	Fuse is blown out.	Replace the fuse.
Although motor is revolving gun does't fire	Bullets are clogged inside the magazine	Insert the charging ord into the magazine and move it up and down a few times to remove clogged bullets.
	Bullets are clogged in the chamber.	Remove clogged bullets using the cleaning rod.
	Faulty gear	Purchase the replacement gear from your dealer or VFC and repair.
Malfunction of full auto operation (automatic firing)	Insufficient battery power	Charge the battery.
	Faulty bullet feed of magazine	Repair clogging of the magazine.
Malfunction of semi-auto operation	Poor electrical connection	Consult your dealer or VFC for overhaul maintenance or repair.

## 10 Trouble Clinic (Trouble shooting)

Symptom	Cause	Action
Malfunction of semi-auto operation (single shot)	Insufficient battery power	Charge the battery.
	Poor electrical connection	Consult your dealer or VFC for overhaul maintenance or repair.
Automatic firing cycles become slow	Insufficient battery power	Charge the battery.
Shooting distance becomes shorter.	Worn or damaged chamber packing	consult your dealer or VFC for overhaul maintenance or repair. Replace the chamber packing., piston packing(O-ring) and piston assembly.
	Worn or damaged piston packing(O-ring)	
	Deteriorated piston spring	Use the genuine VFC BB bullets.
	Faulty BB bullets (too small or heavy)	
Overly loud operating noise	Shortage of Silicone oil	Drop a few drops of silicone oil from under the chamber
	Gear problems caused by excessive blank firing	consult your dealer or VFC for overhaul maintenance or repair. Replace the chamber packing., piston packing(O-ring) and piston assembly.
	Gear problems caused by excessive blank firing	
Bullets falling out from barrel end	Gear problem caused by excessive blank firing	Use the genuine high quality BB bullets.
	Worn or damaged chamber packing	




# 11 MK16 Light 分解圖、零件表 / PARTS LIST

- 01 VF9-GPN-MK16-01 Gas Cylinder Tuner
- 02 VF9-GPN-MK16-02 Hop Adjustment Tool
- 03 VF9-FST-MK16-ZN01 MK16/17 Front sight Set
- 04 VF9-FHR-SCAR-01 MK16 Flash Hider
- 05 VF9-FHR-3Prong-01 AAC Type 3 Plug Flash Hider
- 06 VF9-BRL-MK16E145-ST01 MK16/17 STD 14.5" steel outer barrel
- 07 VF9-WSR-MK16-145 MK16 Peel Washer 145
- 08 VF9-BRL-MK17E65-AL01 MK16/17 Out Barrel
- 09 VF9-CBR-MK17E-AL01 MK16/17 Chamber Holder
- 10 VF9-HGD-MK17D-01 MK16/17 Lower Tactical Rail Set
- 11 VF9-RST-MK17-BK01 MK17 Flip-Up Rear Sight
- 12 VF9-BRL-IN275-01 Inner Barrel 275mm
- 13 VF9-BRL-IN380-01 Inner Barrel 380mm
- 14 VF9-Hop-SCAR-01 MK16/17 Hop Up Set

- 15 VF9-Hop-BUK-01 Hop Bucking
- 16 VF9-MB-MK16U-TN01 MK16 Upper Receiver(Tan)
- 17 VF9-MB-MK16U-BK01 MK16 Upper Receiver(BK)
- 18 VF9-MWS-MK16Side-01 MK16 Side Rail Set
- 19 VF9-BH-MK16-01 MK16 Barrel Holder
- 20 VF9-URC-MK16-01 MK16 Upper Receiver Front Cap
- 21 VF9-URC-MK16-02 MK16 Upper Receiver Rear Cap
- 22 VF9-SPC-MK16-01 MK16 Recoil Spring Set
- 23 VF9-URH-MK16-01 MK16 Stock Hook

- 24 VF9-CLR-MK16-01 MK16 Cocking Handle
- 25 VF9-BLT-MK16-01 MK16 Dummy Bolt Set
- 26 VF9-GBX-V2AR02 MK16 GEAR BOX Set
- 27 VF9-MB-MK16L-TN01 MK16 Lower Receiver Set (Tan)
- 28 VF9-MB-MK16L-BK01 MK16 Lower Receiver Set (BK)

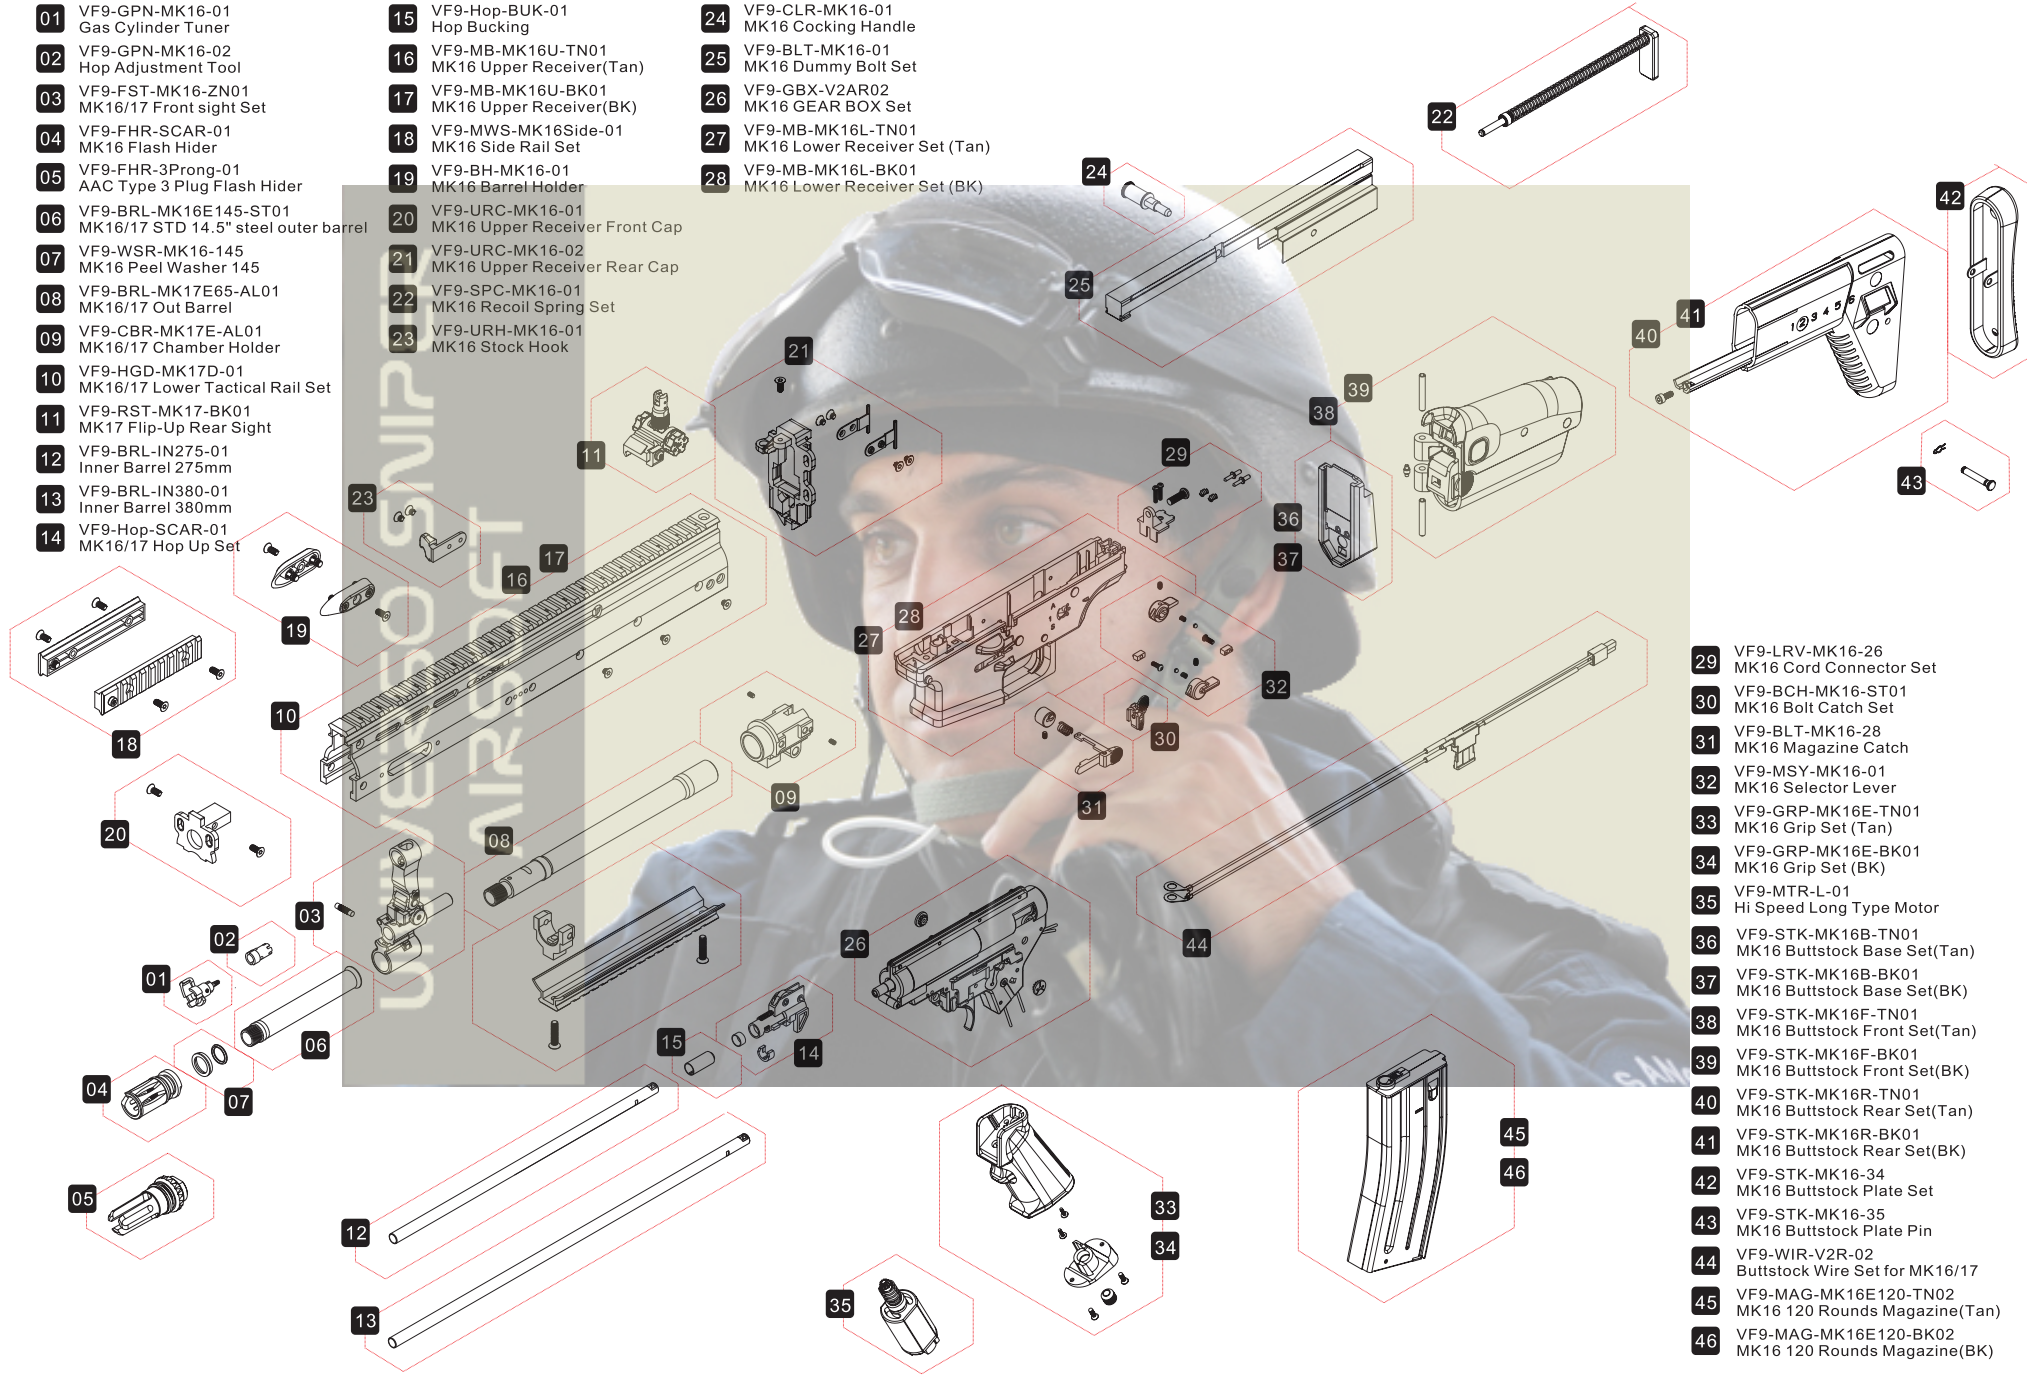


- 29 VF9-LRV-MK16-26 MK16 Cord Connector Set
- 30 VF9-BCH-MK16-ST01 MK16 Bolt Catch Set
- 31 VF9-BLT-MK16-28 MK16 Magazine Catch
- 32 VF9-MSY-MK16-01 MK16 Selector Lever
- 33 VF9-GRP-MK16E-TN01 MK16 Grip Set (Tan)
- 34 VF9-GRP-MK16E-BK01 MK16 Grip Set (BK)
- 35 VF9-MTR-L-01 Hi Speed Long Type Motor
- 36 VF9-STK-MK16B-TN01 MK16 Buttstock Base Set(Tan)
- 37 VF9-STK-MK16B-BK01 MK16 Buttstock Base Set(BK)
- 38 VF9-STK-MK16F-TN01 MK16 Buttstock Front Set(Tan)
- 39 VF9-STK-MK16F-BK01 MK16 Buttstock Front Set(BK)
- 40 VF9-STK-MK16R-TN01 MK16 Buttstock Rear Set(Tan)
- 41 VF9-STK-MK16R-BK01 MK16 Buttstock Rear Set(BK)
- 42 VF9-STK-MK16-34 MK16 Buttstock Plate Set
- 43 VF9-STK-MK16-35 MK16 Buttstock Plate Pin
- 44 VF9-WIR-V2R-02 Buttstock Wire Set for MK16/17
- 45 VF9-MAG-MK16E120-TN02 MK16 120 Rounds Magazine(Tan)
- 46 VF9-MAG-MK16E120-BK02 MK16 120 Rounds Magazine(BK)

# 12 MK17 Heavy 分解圖、零件表 / PARTS LIST

- 01 VF9-GPN-MK16-01 Gas Cylinder Tuner
- 02 VF9-GPN-MK16-02 Hop Adjustment Tool
- 03 VF9-FST-MK16-ZN01 MK16/17 Front sight Set
- 04 VF9-FHR-3PRONG-02 AAC Type Flash Hider
- 05 VF9-BRL-MK17E13-ST01 MK17 CQC steel outer barrel
- 06 VF9-BRL-MK17E65-AL01 MK16/17 Out Barrel
- 07 VF9-CBR-MK17E-AL01 MK16/17 Chamber Holder
- 08 VF9-HGD-MK17D-01 MK16/17 Lower Tactical Rail Set
- 09 VF9-RST-MK17-BK01 MK17 Flip-Up Rear Sight
- 10 VF9-BRL-IN340-01 Inner Barrel
- 11 VF9-Hop-SCAR-01 MK16/17 Hop Up Set
- 12 VF9-Hop-BUK-01 Hop Bucking
- 13 VF9-MB-MK17U-TN01 MK17 Upper Receiver(Tan)
- 14 VF9-MB-MK17U-BK01 MK17 Upper Receiver(BK)
- 15 VF9-MWS-MK16Side-01 MK16 Side Rail Set

- 16 VF9-BH-MK16-01 MK16 Barrel Holder
- 17 VF9-URC-MK16-01 MK16 Upper Receiver Front Cap
- 18 VF9-URC-MK16-02 MK16 Upper Receiver Rear Cap
- 19 VF9-SPC-MK17-01 MK17 Recoil Spring Set
- 20 VF9-URH-MK17-01 MK17 Stock Hook
- 21 VF9-CLR-MK16-01 MK16 Cocking Handle
- 22 VF9-BLT-MK17-01 MK17 Dummy Bolt Set
- 23 VF9-GBX-V2AR03 MK17 GEAR BOX Set

- 24 VF9-MB-MK17L-TN01 MK17 Lower Receiver Set (Tan)
- 25 VF9-MB-MK17L-BK01 MK17 Lower Receiver Set (BK)
- 26 VF9-LRV-MK17-26 MK17 Cord Connector Sert
- 27 VF9-BCH-MK16-ST01 MK16 Bolt Catch Set
- 28 VF9-BLT-MK17-28 MK17 Magazine Catch
- 29 VF9-MSY-MK16-01 MK17 Selector Lever
- 30 VF9-GRP-MK16E-TN01 MK16 Grip Set (Tan)
- 31 VF9-GRP-MK16E-BK01 MK16 Grip Set (BK)

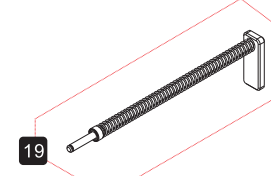


- 32 VF9-MTR-L-01 Hi Speed Long Type Motor
- 33 VF9-STK-MK16B-TN01 MK16 Buttstock Base Set(Tan)
- 34 VF9-STK-MK16B-BK01 MK16 Buttstock Base Set(BK)
- 35 VF9-STK-MK16F-TN01 MK16 Buttstock Front Set(Tan)
- 36 VF9-STK-MK16F-BK01 MK16 Buttstock Front Set(BK)
- 37 VF9-STK-MK16R-TN01 MK16 Buttstock Rear Set(Tan)
- 38 VF9-STK-MK16R-BK01 MK16 Buttstock Rear Set(BK)
- 39 VF9-STK-MK16-34 MK16 Buttstock Front Set
- 40 VF9-STK-MK16-35 MK16 Buttstock Front Pin
- 41 VF9-WIR-V2R-02 Buttstock Wire Set for MK16/17
- 42 VF9-MAG-MK17E160-TN01 MK17 160 Rounds Magazine(Tan)
- 43 VF9-MAG-MK17E160-BK01 MK17 160 Rounds Magazine(BK)



# 13 MK17 SSR 分解圖、零件表 / PARTS LIST

- 01 VF9-GPN-MK16-01 Gas Cylinder Tuner
- 02 VF9-GPN-MK16-02 Hop Adjustment Tool
- 03 VF9-FST-SSR-ZN01 SSR Front sight Set
- 04 VF9-FHR-3PRONG-02 AAC Type Flash Hider
- 05 VF9-BRL-SSRE180-AL01 SSR Out Barrel
- 06 VF9-CBR-MK17E-AL01 MK16/17 Chamber Holder
- 07 VF9-HGD-SSRD-01 SSR Lower Tactical Rail Set
- 08 VF9-BRL-IN509-01 Inner Barrel 509mm
- 09 VF9-Hop-SCAR-01 MK16/17 Hop Up Set
- 10 VF9-Hop-BUK-01 Hop Bucking
- 11 VF9-MB-SSRU-TN01 SSR Upper Receiver(Tan)
- 12 VF9-MB-SSRU-BK01 SSR Upper Receiver(BK)
- 13 VF9-MWS-MK16Side-01 MK16 Side Rail Set
- 14 VF9-BH-MK16-01 MK16 Barrel Holder
- 15 VF9-URC-MK16-01 MK16 Upper Receiver Front Cap
- 16 VF9-URC-MK16-02 MK16 Upper Receiver Rear Cap
- 17 VF9-SPC-MK17-01 MK17 Recoil Spring Set
- 18 VF9-URH-MK17-01 MK17 Stock Hook
- 19 VF9-CLR-MK16-01 MK16 Cocking Handle
- 20 VF9-BLT-MK17-01 MK17 Dummy Bolt Set
- 21 VF9-GBX-V2AR04 SSR GEAR BOX Set
- 22 VF9-MB-MK17L-TN01 MK17 Lower Receiver Set (Tan)
- 23 VF9-MB-MK17L-BK01 MK17 Lower Receiver Set (BK)
- 24 VF9-LRV-MK17-26 MK17 Cord Connector Sert
- 25 VF9-BCH-MK16-ST01 MK16 Bolt Catch Set

- 26 VF9-BLT-MK17-28 MK17 Magazine Catch
- 27 VF9-MSY-MK16-01 MK17 Selector Lever
- 28 VF9-GRP-MK16E-TN01 MK16 Grip Set (Tan)
- 29 VF9-GRP-MK16E-BK01 MK16 Grip Set (BK)
- 30 VF9-MTR-L-02 Hi Torque Long Type Motor
- 31 VF9-STK-MK16B-TN01 MK16 Buttstock Base Set(Tan)
- 32 VF9-STK-MK16B-BK01 MK16 Buttstock Base Set(BK)
- 33 VF9-STK-MK16F-TN01 MK16 Buttstock Front Set(Tan)

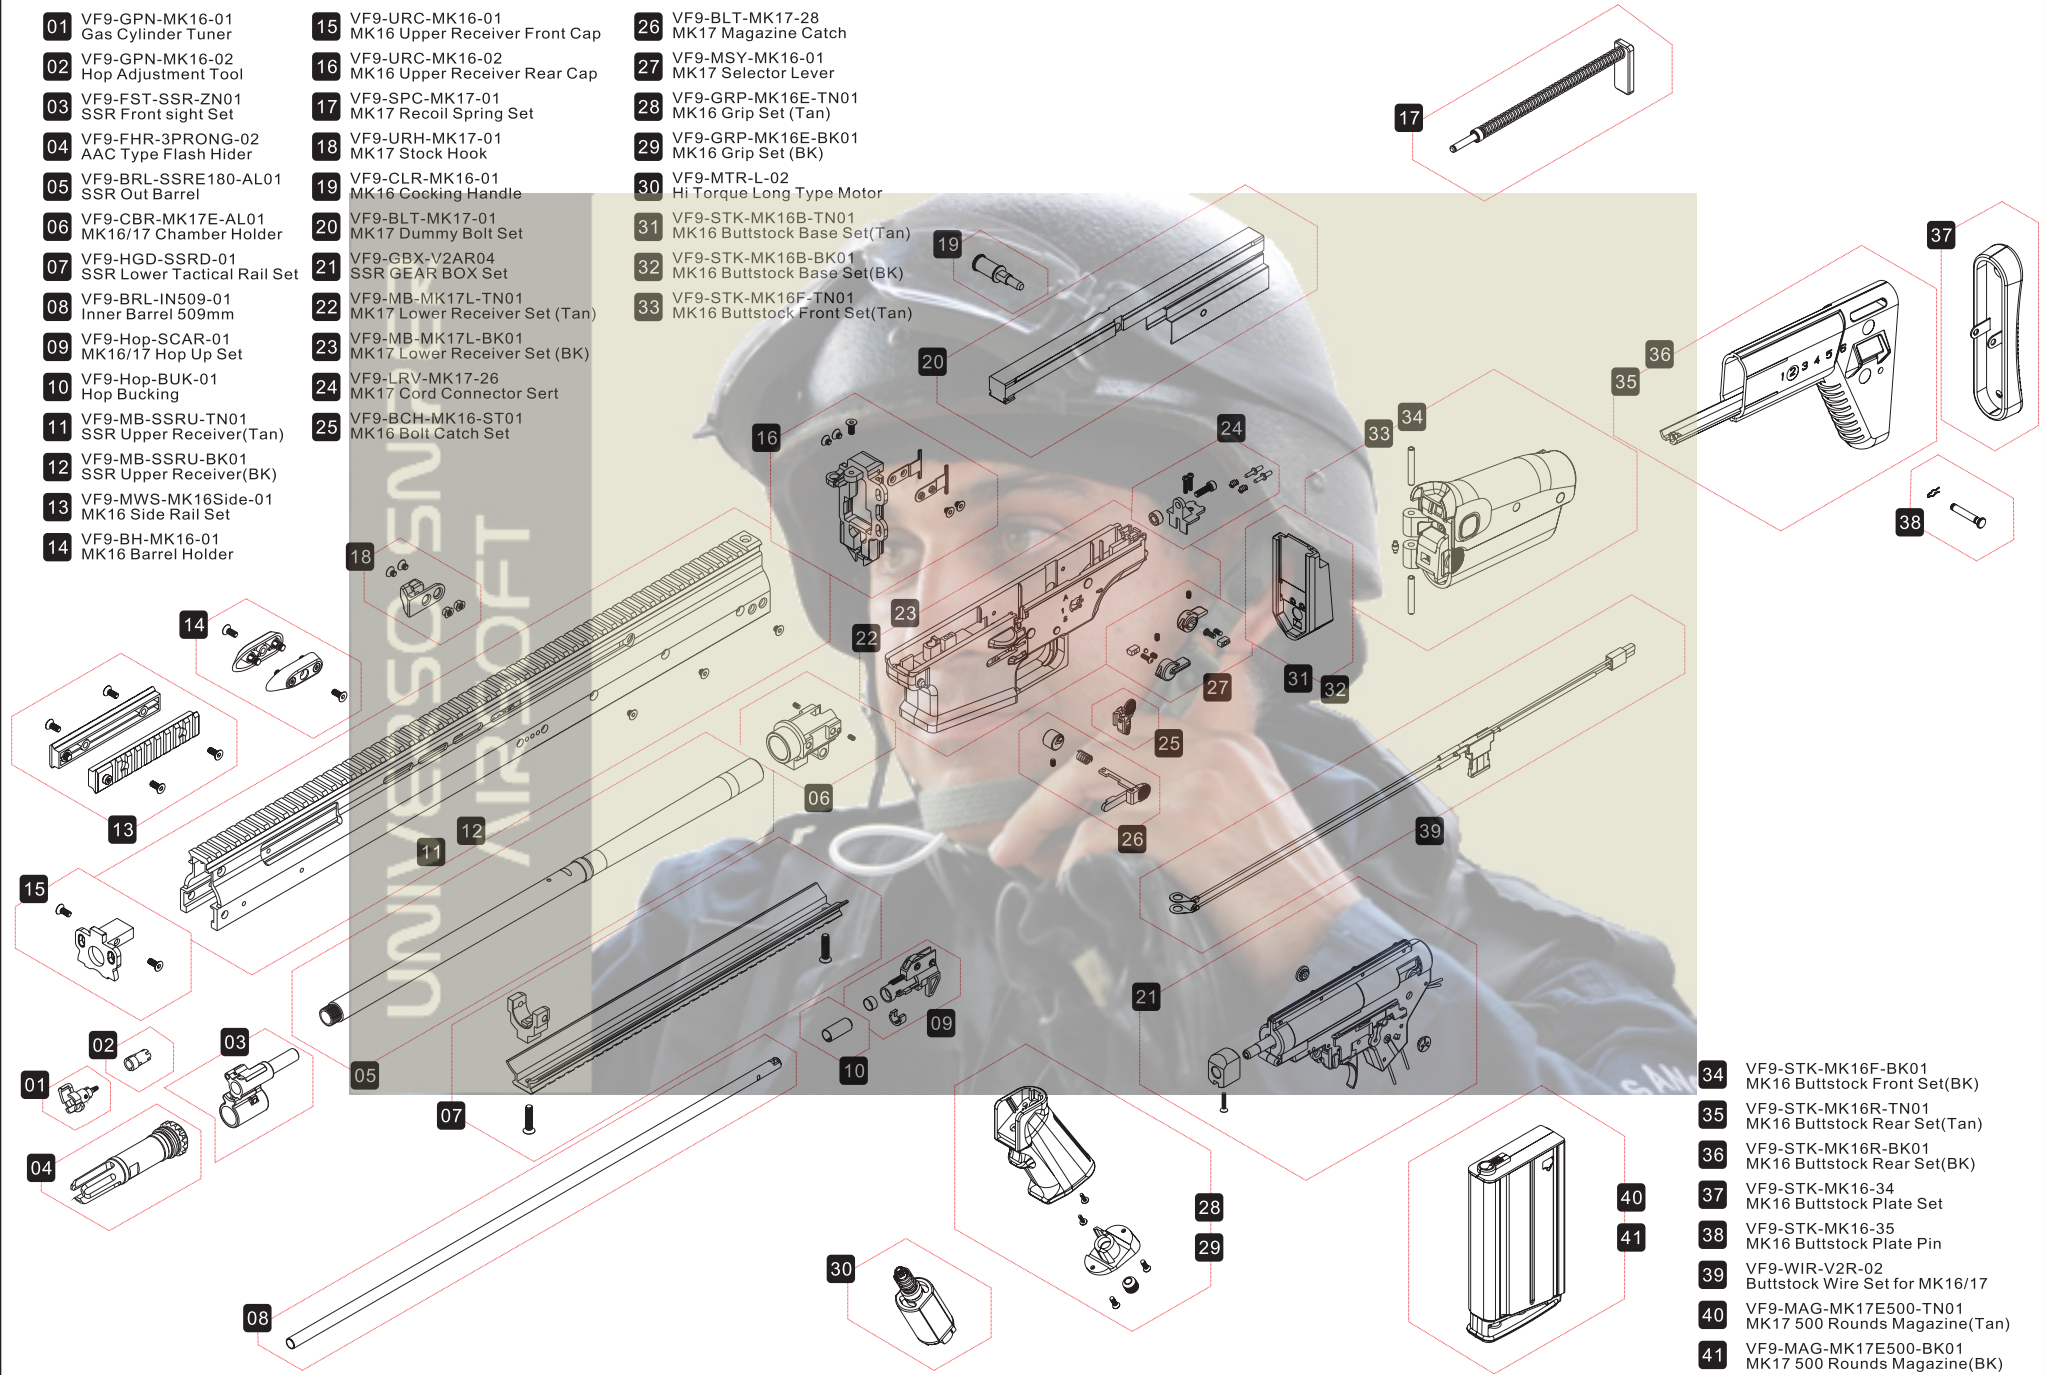

- 34 VF9-STK-MK16F-BK01 MK16 Buttstock Front Set(BK)
- 35 VF9-STK-MK16R-TN01 MK16 Buttstock Rear Set(Tan)
- 36 VF9-STK-MK16R-BK01 MK16 Buttstock Rear Set(BK)
- 37 VF9-STK-MK16-34 MK16 Buttstock Plate Set
- 38 VF9-STK-MK16-35 MK16 Buttstock Plate Pin
- 39 VF9-WIR-V2R-02 Buttstock Wire Set for MK16/17
- 40 VF9-MAG-MK17E500-TN01 MK17 500 Rounds Magazine(Tan)
- 41 VF9-MAG-MK17E500-BK01 MK17 500 Rounds Magazine(BK)



## 14 售後服務

### 【有限保固】

- 本產品自購買日起，本公司提供一個月或 30,000 發的有限保固 ( 以先達到條件者為準 )。
- 保固範圍：齒輪箱內部零件。( 不包含馬達 )
- 本產品經過嚴密之檢查與試驗，在保證期間內產品因正常使用而發生故障，經本公司認證之技術人員確認為製造或材料上之瑕疵時，本公司將負責免費維修。
- 以下情形，本公司將不負責保證責任：
  - 非本公司認證之技術人員修裝而導致之故障。
  - 經查驗非本公司經銷商所銷售之槍型，無法提供註冊卡及經銷商蓋印章者
  - 因火災或其他天災、地變等因素所導致之故障。

### 【零件維修】

- 本產品在正確及適當的使用方法下操作，約 30000 發以後，Hop-Up 橡皮等消耗性零件仍有交換的必要。像是超過保固期限的耗材，或因操作疏失所發生的故障以及保養的場合，可透過經銷商或直接向本公司訂購備用零件。
- 有序列號碼的零件本公司無法提供相同序列號碼的零件。
- 訂購的方法請參考 VFC 網站 <http://www.gb-tech.com.tw>
- 下列行為本公司將不提供保固，亦不提供零件服務：
  - 任何外觀上的改造或變更原來內部構造所發生之故障。

## 14 After Service

### Limited Warranty

- Vega Force Company (VFC) warrants the SCAR-L AEG against defects in materials and workmanship for a period of one month or 30,000 rounds BB bullets shoot from the date of original purchase ( " Warranty Period " ).
- Warranty coverage: Internal parts of gearbox. The cosmetic parts and electric motor are not cover by warranty.
- We inspect and test each product before delivery to customer. In warranty period, the repair service will be provide by ours certify technician after determine the problem or damage defects in materials and workmanship.
- This warranty does not apply: (a) to damage caused by accident, abuse, misuse, misapplication, or non-VFC products; (b) to a product or a part that has been modified without the written permission of VFC or his agent to disassembly or modify by unauthorized person.

### Maintenance & Replacement Parts

- The Hop-Up bucking and few parts will be recommended to change each 30,000 rounds BB bullets shoot.
- We may unable to provide match series number on replacement parts.
- If you unable to obtain locally, Please check <http://www.gb-tech.com.tw> for more information.

## MEMO

