









※警告

-  限使用12kg瓦斯 (R22 / Green gas)
-  請勿接近火源 (Never place it near fire)
-  嚴禁存放於高溫環境 (Never store the Magazine above 40°C)
-  請勿烈日曝曬 (Never place it directly under sunshine)

- Caution! VORSICHT
- PRECAUTION Ausschliesslich für diese Pistole bestimmte Munition verwenden.(5.5mm Kunststoffkugeln)
- NE PAS UTILISER D'AUTRES PROJECTILEE QUE CEUX FOURNIS. Fare attenzione

<p> ★ 射擊時最好戴護目鏡</p> <ul style="list-style-type: none"> <input type="checkbox"/> Be sure to wear shooting glasses or Goggle when shooting. ▲ Toujours porter des lunettes de tir ou de protection quand vous tirez. △ Zum Schiessen stets eine Schutzbrille tragen. ■ Asegurese de llevar puestas las gafas de proteccion cuando dispare. ○ Assicurarsi di indossare lenti di Protezione quando si spara 	<p> ★ 不用時要把槍置於高處 (小孩拿不到的高處)</p> <ul style="list-style-type: none"> <input type="checkbox"/> Put the gun beyond the reach of kids. ▲ Tenir hors de portee des enfants. △ Pistole immer kindersicher aufbewahren. ■ Ponga la pistola fuera del alcance de los niños. ○ Tenere fuori Dalla portata dei bambini.
<p> ★ 不可用眼睛探視槍</p> <ul style="list-style-type: none"> <input type="checkbox"/> Don't peep at the muzzle. ▲ Ne jamais regarder dans le canon. △ Nie in den lauf schauen. ■ Jamas mire por el canon ○ Non guardare mai dentro la canna. 	<p> ★ 不可朝人射擊</p> <ul style="list-style-type: none"> <input type="checkbox"/> Don't aim at people even if it is unloaded. ▲ Ne jamais viser quel'un meme si votre pistolet est vide. △ Auch bei spiel-und Sportwaffen besteht Verletzungsgefahr. Auch ungeladen nie auf einen Menschen oder ein Tier richten! ■ No apunte a personas, incluso descargado. ○ Non puntare mai verso le persone anche se la pistola scarica.
<p> ★ 射擊的瞬間，才把手指接近扳機擊扣</p> <ul style="list-style-type: none"> <input type="checkbox"/> Don't touch the trigger until the moment of shooting. ▲ Ne jamais appuyer sur la gachette le rearmement. △ Abzug erst dann berühren,wenn Sie zum Schiessen bereit sind. ■ No toque el gatillo hasta el momento del disparo. ○ Non toccare il grilletto fino al momento di sparare. 	<p> ★ 確定射擊的方向 均安全後才可以射擊</p> <ul style="list-style-type: none"> <input type="checkbox"/> After making sure that there is nobody nearby. ▲ Toujours etre sur qu'il n y a personne dans la trajectoire de votre tir. △ Vergewissern Sie sich vor dem Schiessen stets, dass niemand getroffen werden kann. ■ Antes de apuntar aseguese que no hay nadie cerca. ○ Assicurarsi semper che non ci sia nessuno sulla traiettoria di tiro.
<p> ★ 避免粗魯的動作，發生危險</p> <ul style="list-style-type: none"> <input type="checkbox"/> Avoid a rough operation. ▲ Ne jamais jeter le pistolet quand il est arme. △ Geladene Waffe stets mit Respekt Behandln. Nicht werfen oder unsanft Jandhaben. ■ No tire ni lance la pistola, se puede disparar. ○ Evitare azioni brusche. 	<p> ★ 不使用時，應將彈匣取出，並取下子彈</p> <ul style="list-style-type: none"> <input type="checkbox"/> When the gun is not in use, remove the magazine and unload BB pellets. ▲ Quand vous ne l'utilisez plus,bien Faire attention de retirer le chargeur et de le desarmer. △ Zum Aufbewahren Magazin entfernen und Kugeln herausnehmen. ■ Cuando no se este utilizando la pistola, saque todas las bolas. ○ Quando l'arma non e in uso, estrarre il caricatore e scaricare i pallini.

INSTRUCTION MANUAL





WE-SCAR

GAS BLOWBACK TYPE


FOR AGE 18 YEARS OR OLDER

MADE IN TAIWAN


① 各部名稱 NAME OF PARTS




② 彈匣裝填 MAGAZINE LOADING

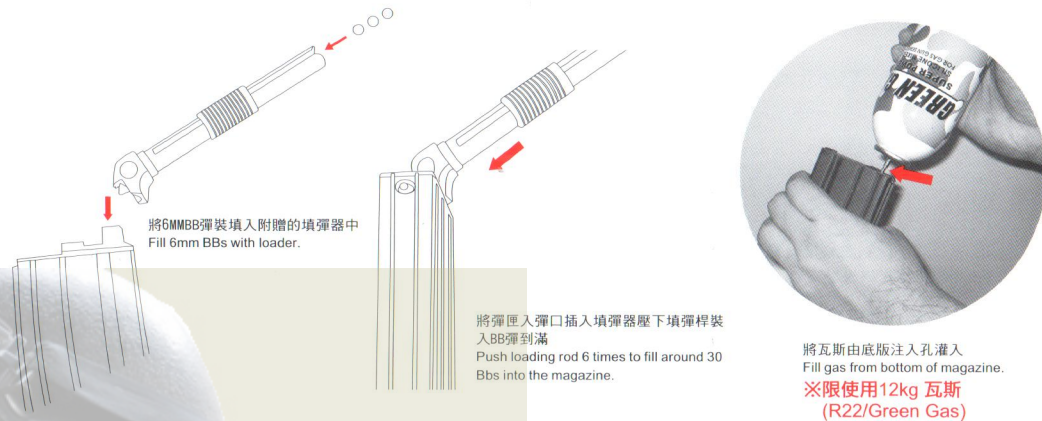

③ 槍枝上膛發射前準備 PREPARE FOR SHOOTING

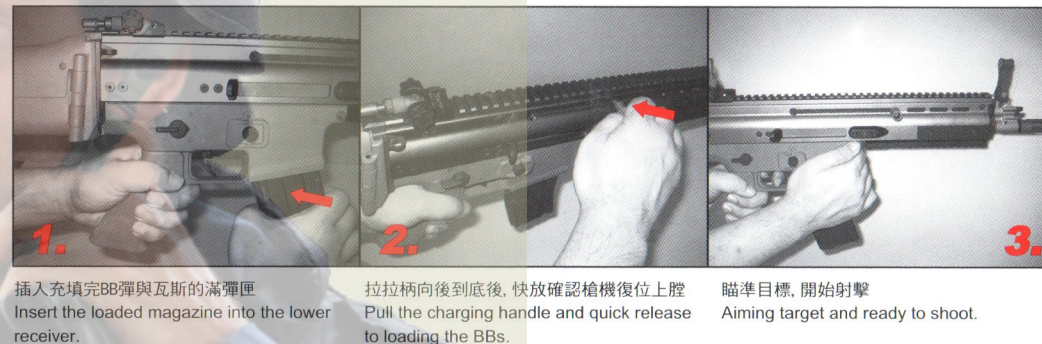

④ 照門使用 Rear Sight Operate

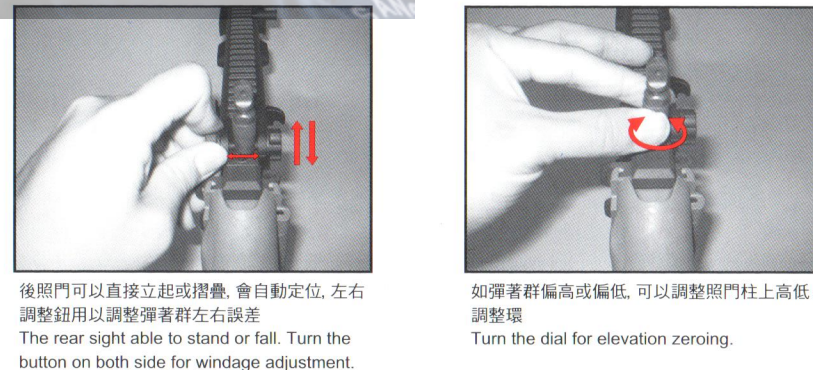

⑤ 槍枝大部分分解 Field Strip



卸除彈匣，拉拉柄確認無殘留BB彈在槍腔內，關保險
Remove the magazine. Pull the charging handle back around 2cm and push to lock the hammer and turn the fire selector to SAFE(S) position.

由左側推出下槍身結合銷
Pull the charging handle back around 2cm and push the lower receiver locking pin out.

向向前拉出下槍身
Pull out the lower receiver from front.



向下方拉下槍托總成
Push the butt stock from top to remove.

取出復進簧連桿
Remove the recoil spring module.

向後拉拉柄至圓孔處向外抽出拉柄
Pull the charging handle to the end.



取出拉柄並倒出槍機
Take the charging handle out.

取出槍機
Remove the bolt carrier module.

使用梅花扳手轉開左右側前結合螺絲
Use the star key tools(Gas regulator) to remove the barrel fixed (star) screw on front of both side rail.




使用梅花扳手轉開左右側槍管結合螺絲
Remove the two barrel fixed (star) screw on both side middle of upper receiver.


向向前上分離槍管總成
Push forward the barrel sets forward 4.5 cm and pull up to take out the barrel sets.

大部分分解完成(反向即可組裝恢復)
Complete.(Please reverse step to complete installation)

槍托收摺 Folding Stock

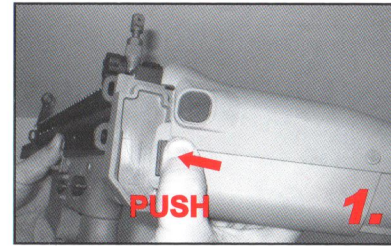


按下固定鈕解除槍托卡筴
Push the stock release button.

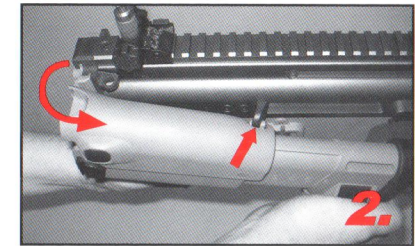


向下收摺槍托卡合於槍身右側卡筴固定
Folding the stock and locking the butt stock.

槍托長度調整 Butt Stock Extent

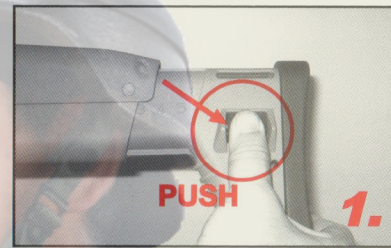


向下壓下槍托調整鈕解除鎖定便可拉出或推入槍托
Push the button on left side of stock.

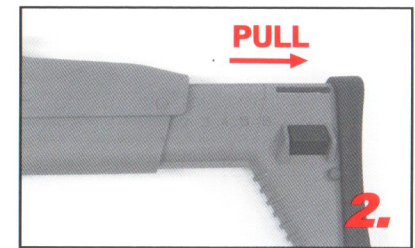

槍托共有六段伸縮段位可以調整
Pull the stock to the 1-6 position and release the button to lock.

準星摺疊 Folding Front Sight

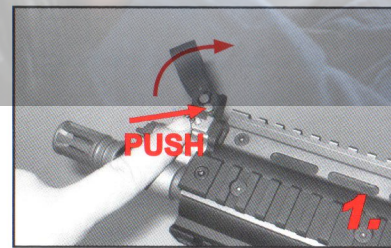

按下左側卡筴鈕，準星方能立起或向前摺疊
Push the button on left of front sight to fall or stand the front sight.



立起或摺疊位置定位正確時，準星卡筴都會自動彈起鎖定準星
The button will be auto-lock when the sight on the position.

PS: The barrel sets disassemble on step 9-12 are for experienced player, not recommend for newbie.

彈匣卡筭 Ambidextrous Magazine Release



左側使用彈匣卡筭(壓下彈匣卡筭,彈匣即脫落)
Push the magazine release button on left side for left hand shooter.




右側使用彈匣卡筭(壓下彈匣卡筭,彈匣即脫落)
Push the magazine release button on right side for right hand shooter.


射擊選擇鈕 Ambidextrous Fire Selector



左側位置
The selector button on left side for left hand shooter.

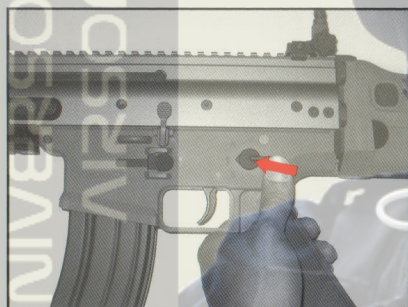

右側位置
The selector button on right side for right hand shooter.

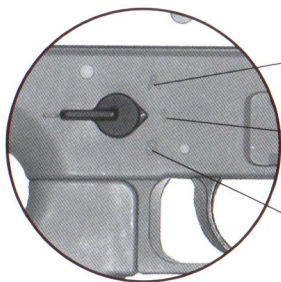

- 全自動射擊模式
Full-Auto Mode
- 半自動射擊模式
SEMI-Auto Mode
- 保險模式
Safty Mode

爆炸圖
EXPLOSION

