

# G.5

AIRSOFT GUN

Users Restricted to  
18 Years of age or older

使用者限制  
年齡18歲以上

AUTOMATIC ELECTRIC GUN SERIES

PERSONAL DEFENSE WEAPON



UNIVERSO SNIPER  
AIRSOFT

說明書

INSTRUCTION MANUAL

ASIAAIRSOFT.COM

在操作之前必需读熟这些说明书  
Always read through this manual before operation.



## 警告 WARNING



18岁以上年龄才能使用  
Only for 18 years  
of age or older

18以上年龄才能利用这支汽枪比赛使用  
Operation of this air gun for competition use is restricted to users of 18 years of age or older.



注意受损伤  
Injury caution

因为BB弹能达到50-60米范围, 不小心的射击将可能导致眼睛受损伤或其它伤害。  
Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.







注意熟读警告指示手册  
Careful reading of  
Handling cautions  
and  
Instruction manual

在操作之前要细心读熟警告手册和指示手册操作汽枪时必须认识好警告指示  
Always read through this HANDLING CAUTION AND INSTRUCTION MANUAL carefully before operation.  
Operate the air gun with full recognition of warnings and cautions.



# 1 各部件名稱 Component Names

總是在儲藏期間帶上保護蓋。  
Always attach the protective cap during storage.

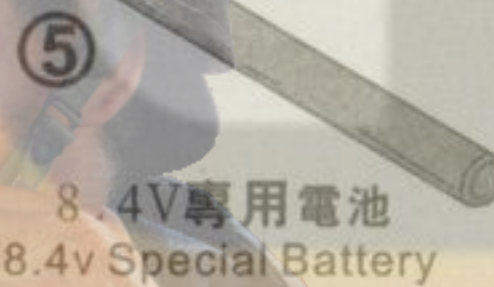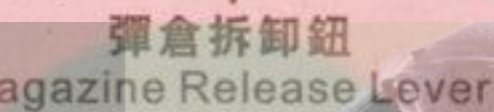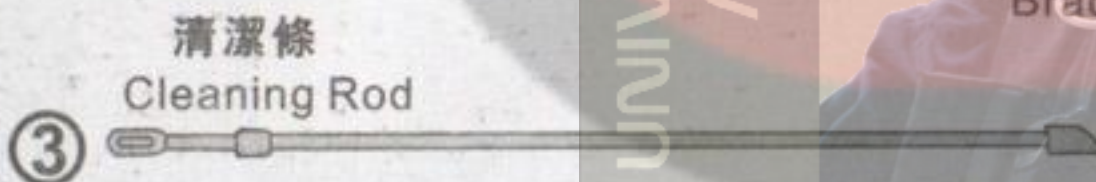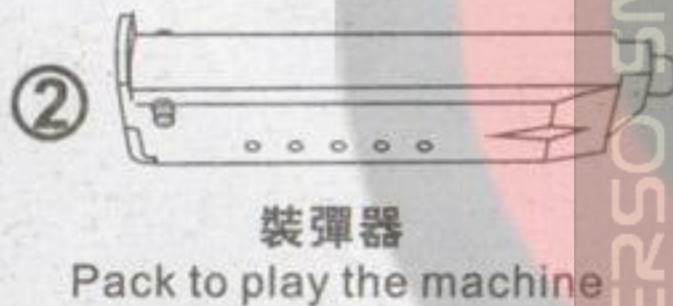


# 2 選擇裝置和安全設置 Selector Lever and Safety Setting

## 安全設置

### 1. Safety Setting


當你在沒有使用槍的時候，總是將拉杆設定為安全位置並且蓋上保護蓋。  
Always set the lever to the Safety position and attach the protective cap when you are not firing the gun or during storage.

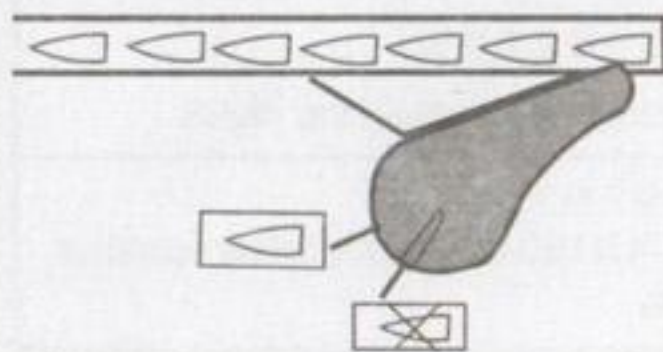

## 半自動 (單發)

### 2. Semi Auto (Single Shot)


每扣扳機一次，發射一發子彈。  
The gun will fire one shot each time the trigger is pulled.

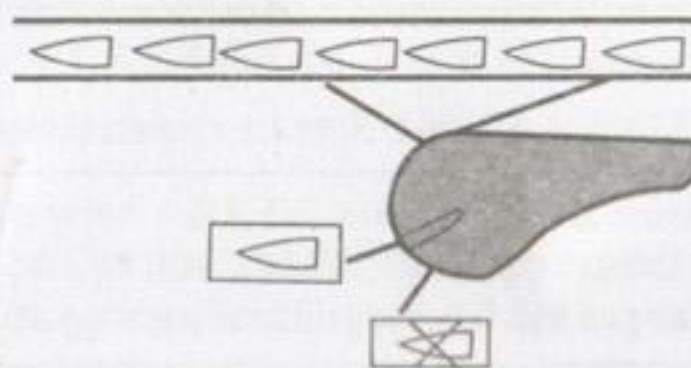

## 全自動 (連發)

### 3. Full Auto (Automatic Firing)


扣住扳機時，將連續發射多發子彈。  
The gun will fire automatically while the trigger remains pulled.

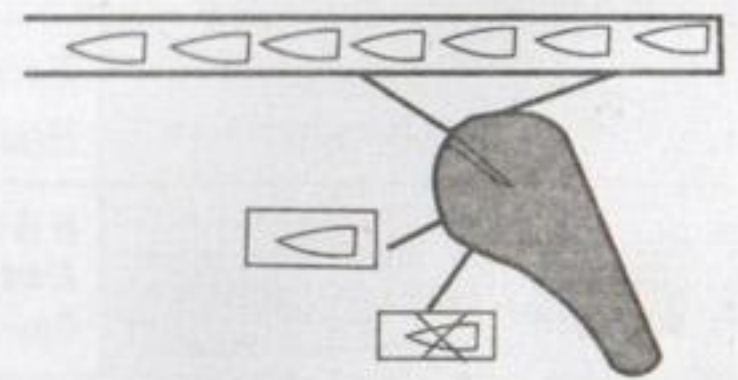



### 3 手把操作 Stock Operation

(G.5 操作是通用的類型而且能被折疊到槍的右邊。)  
(The G.5 stock is the universal type and can be folded to the right side of the gun.)

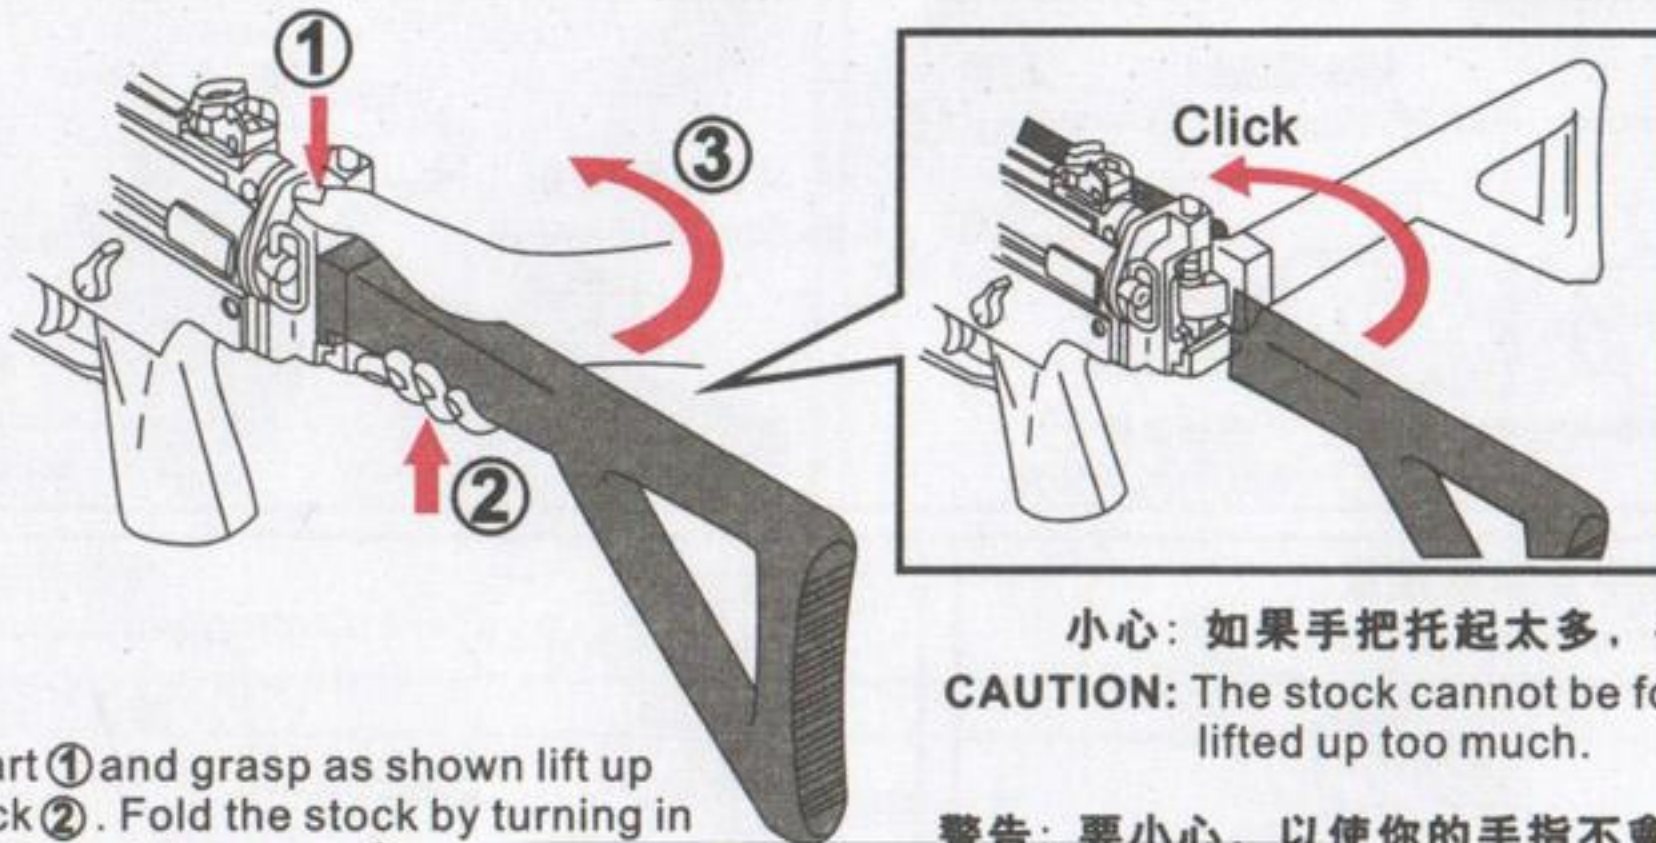

Press part ① and grasp as shown lift up only stock ②. Fold the stock by turning in the direction of the arrow ③.


按操作①握住手把，向上托起手把②，按箭頭方向折疊③。

小心：如果手把托起太多，手把不能折疊。  
CAUTION: The stock cannot be folded if lifted up too much.

警告：要小心，以使你的手指不會在手把和槍之間夾傷。

WARNING: Be careful so that your fingers will not be caught between the stock and gun.

把手把折疊到這個位置上  
Position when stock is folded

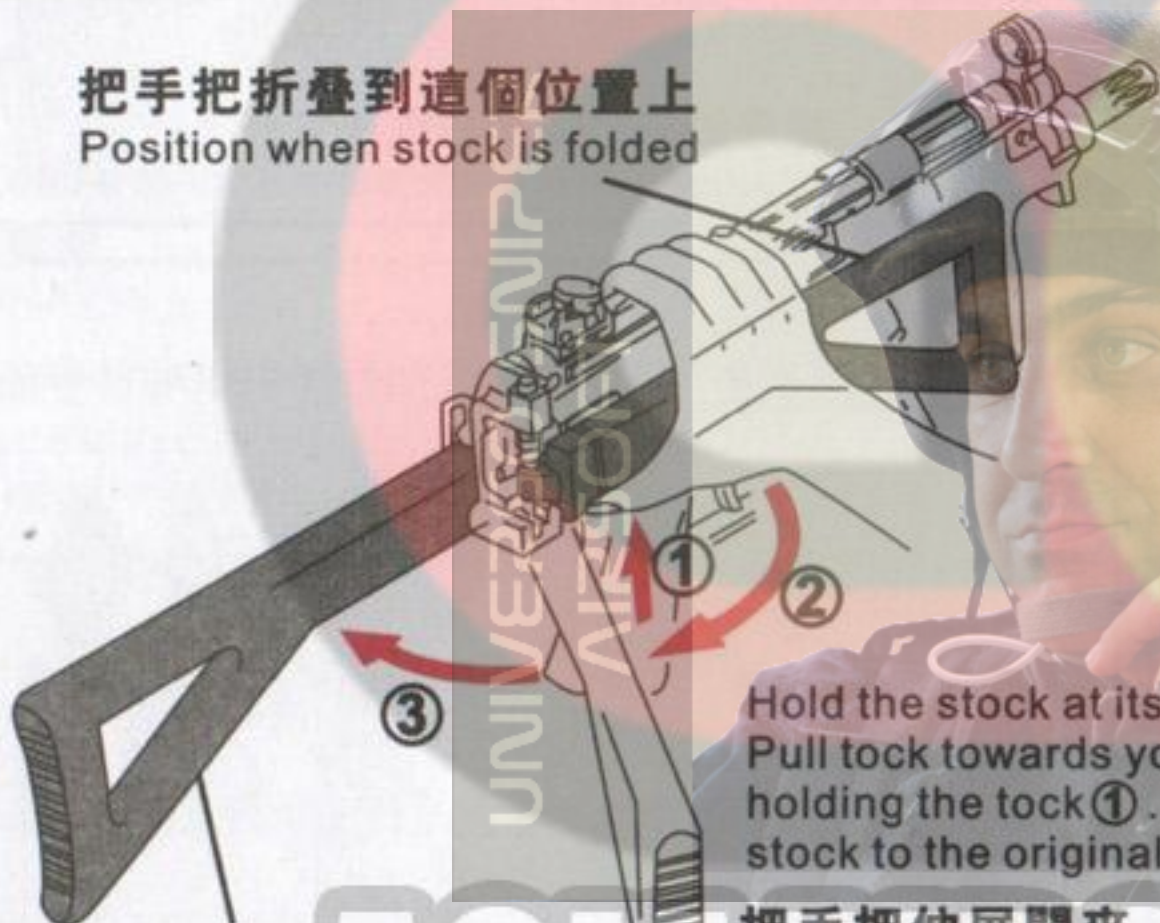

把手把伸展到這個位置上  
Position with stock being extended

Hold the stock at its root as shown. Pull stock towards you ② while holding the stock ①. Extend the stock to the original position ③.

把手把伸展開來。按步驟②方向伸展，步驟①托上手把，伸展到步驟③的位置上。


### 4 調節后准星 Setting the rear sight

螺絲釘  
Set Screw

准星  
Sight




調整螺絲釘  
Adjustment Screw

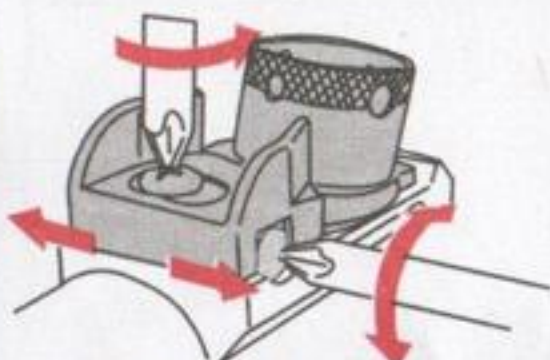

1. 擰開螺絲釘。  
1. Loosen the set screw.

2. 轉動調整准星，擰開螺絲釘。  
2. To move the sight turn the adjustment screw using a screwdriver.

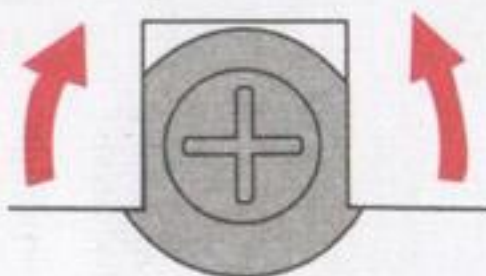

Turning clockwise shifts the sight point to the left.

轉動准星左邊按順時針方向旋轉。

Turning counterclockwise shifts the sight point to the right.

轉動准星右邊按逆時針方向旋轉。

3. 調整完成后，擰緊螺絲釘。  
3. When adjustment is complete, tighten the set screw.



旋轉  
Turn


For precise shooting, turn the sight by hand and use the smaller hole.

對於精確的射擊，旋轉准星到較小的洞。




# 5 安裝電池 Setting the Battery

## ① 電池充電 Battery refresh

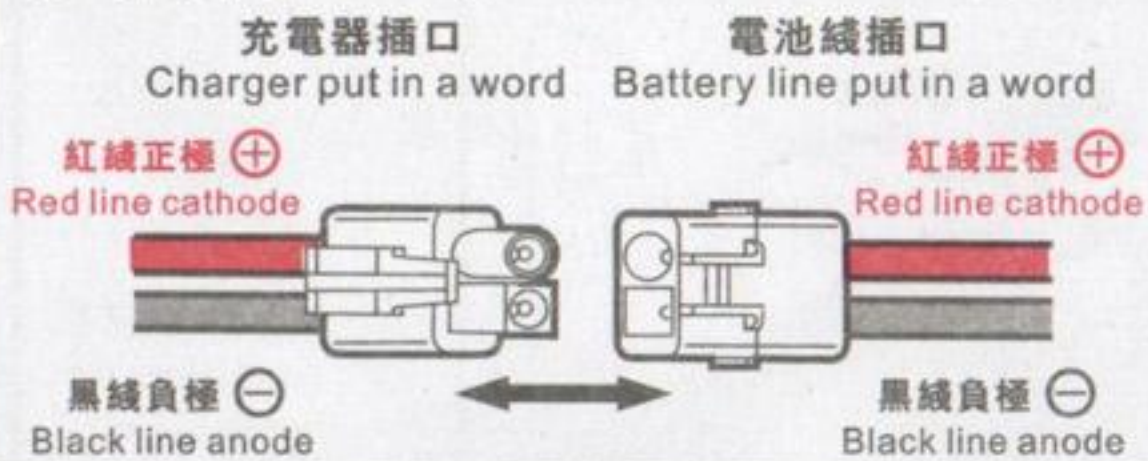

8.4V專用電池  
8.4v Special Battery

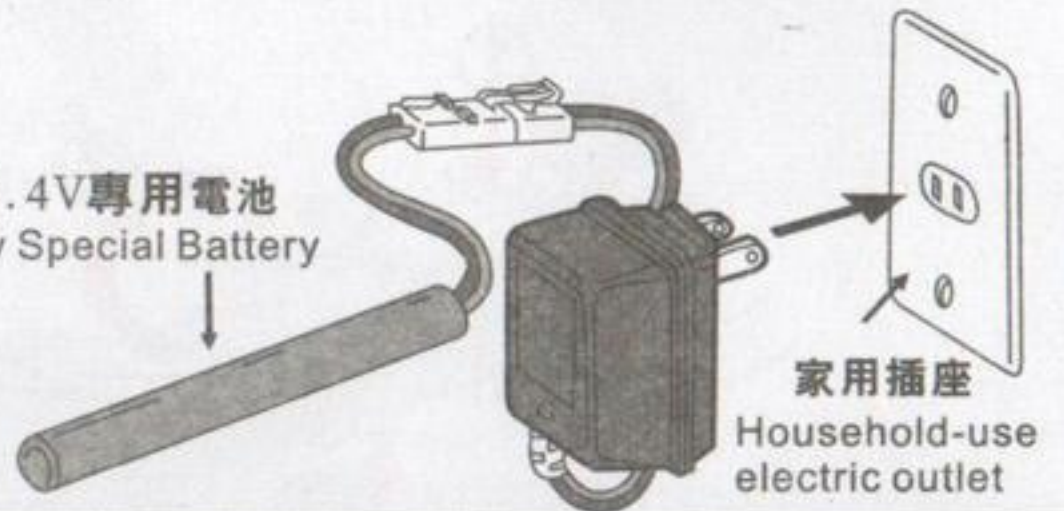


## ② 卸下鎖栓并且移去前手把和保護蓋。

Pull off the lock pin and remove the fore grip and receiver cap.



## ③ 安裝電池。


Insert the battery.

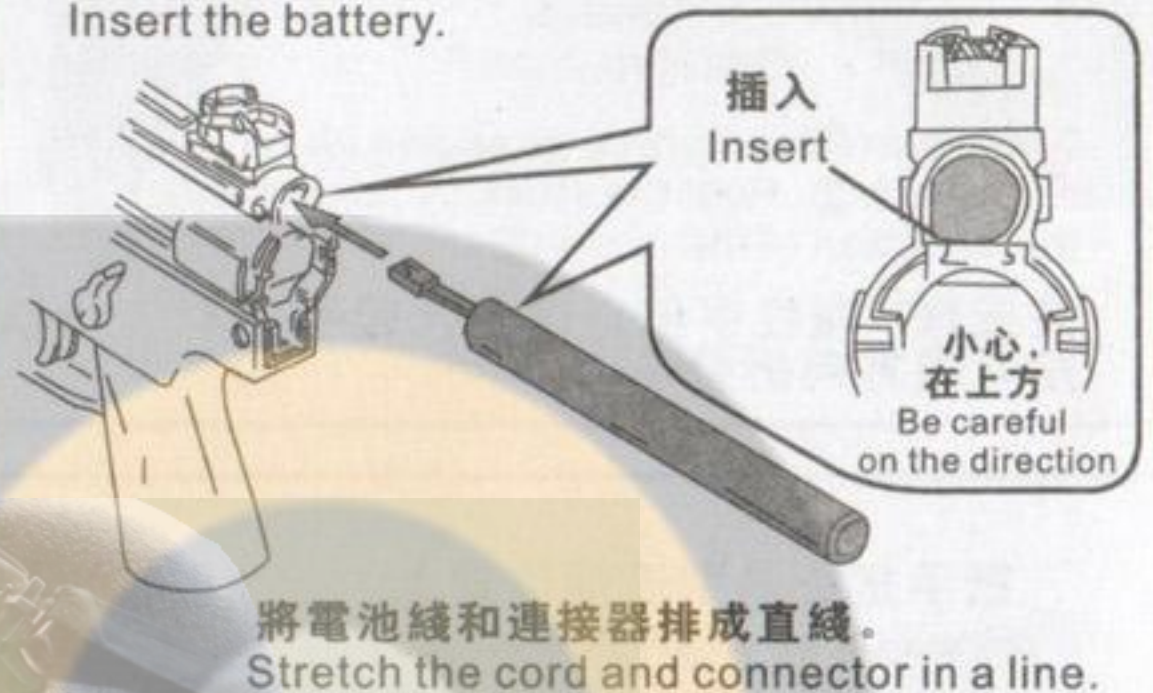

## ④ 連接連接器。（確定保護蓋蓋在槍口上。）


Connect the connectors. (Make sure to attach the protective cap to the muzzle.)

小心：電池連接器可能露出槍體外面。  
CAUTION: Protrude the battery connector as shown.

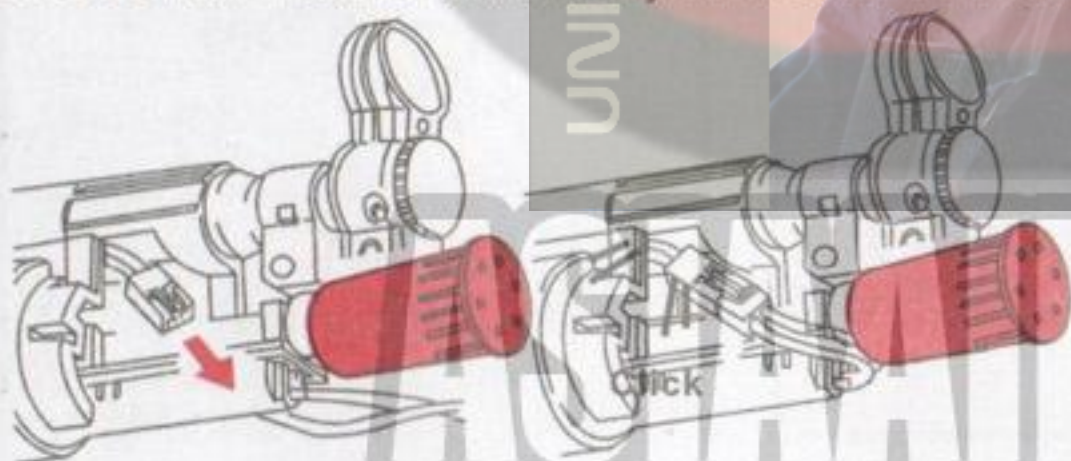

## ⑤ 安裝前手把后蓋上保護蓋。

Attach the fore grip and then the receiver cap.

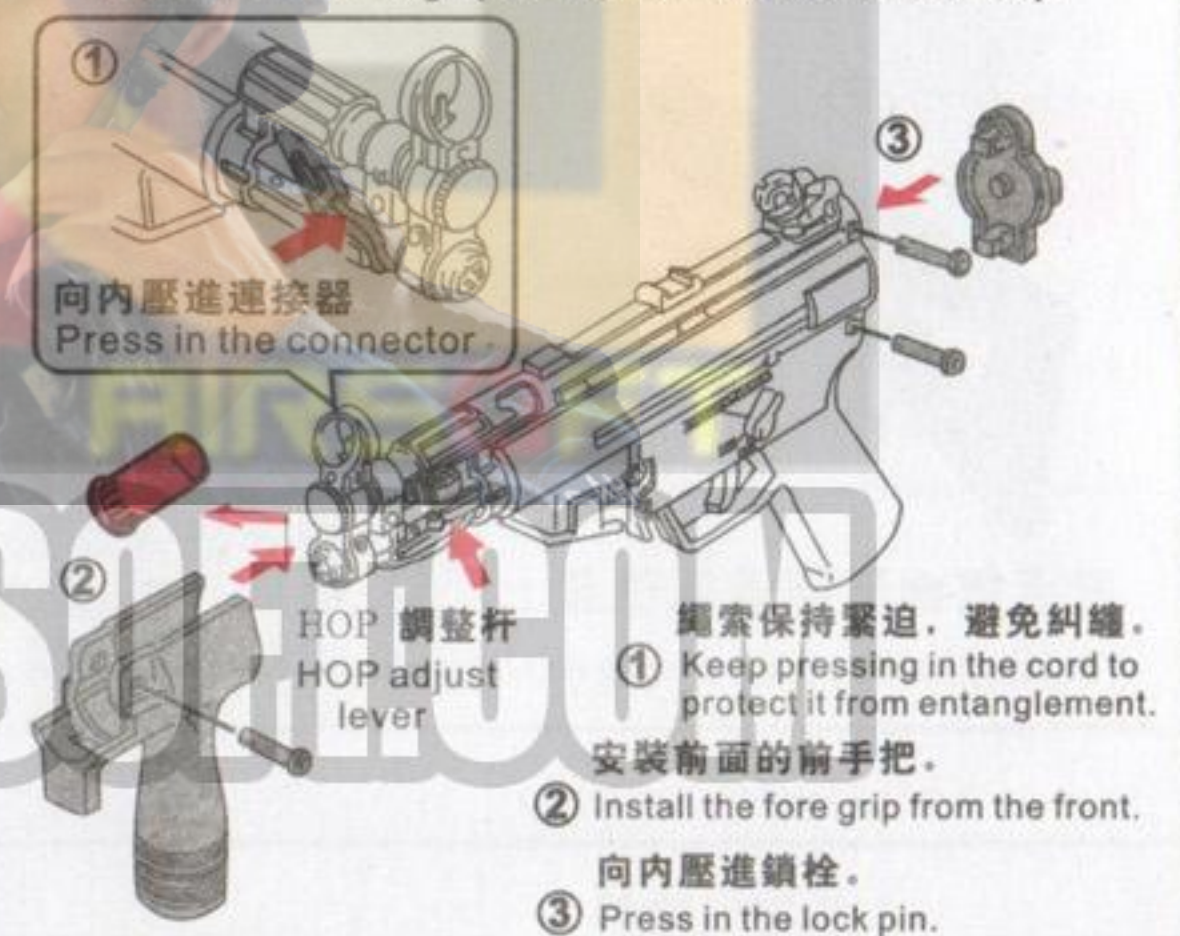


# 6 發射器安裝 Shoot the machine gearing

發射器 / 拆開程序

Flash Suppressor Attachment/  
Detachment Procedure

拆下鎖杆  
Releasing the  
Lock Lever

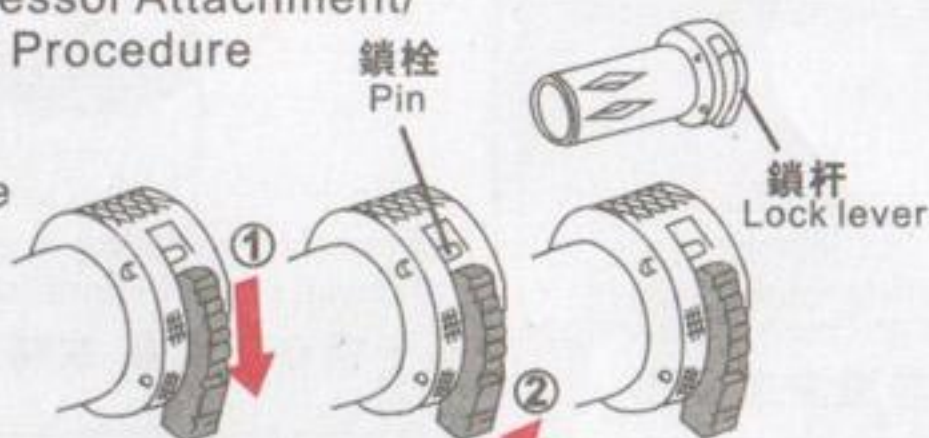

滑動鎖杆向①的方向和向②的位置。  
Slide the lock lever towards the ① direction and press at position ②.



NOTE: At the locked state, the lock lever tip catches the pin.

注意：在被鎖定時，鎖杆頂端夾住鎖栓。



**發射器**  
Flash suppressor

**鎖杆**  
Lock lever

① Release the lock lever. ② Turn it about 60°. ③ Remove by pulling towards the front.

**小心：除非鎖杆被拆下，否則不能設定。**  
CAUTION: It cannot be set unless the lock lever is released.

① Insert ② Turn 60° ③ Lock position

向裏面壓進發射器。  
① Press in the flash suppressor all the way.

旋轉大約60度。  
② Turn it about 60°.

鎖上鎖杆。  
③ Lock the lock lever.

**分離手把**  
Stock Detachment

**鎖栓**  
Lock pin

分離手把必須拆下鎖栓。  
Stock may be detached or attached by removing lock pins as shown.

**分離前手把**  
Front Sling Hook Detachment

壓下鎖栓的阻針  
Press the stopper pin by lock pin

**阻針**  
Stopper pin

壓下鎖栓的阻針，拉出鎖栓。  
Pull out the stopper pin while pressing on it with the lock pin.

壓下阻針時，以向下方式。  
Press in all the way while pressing the stopper pin.

**手防護裝置**  
Hand guard


## 7 設定彈倉 Setting the magazine

1. 按下彈倉拆卸鈕卸下彈倉。  
1. press the magazine release to remove the magazine.

**彈倉拆卸鈕**  
Magazine release Lever

Press 按下

2. 裝入6mm子彈到裝彈器內供應給彈倉。  
2. Insert 6mm BB bullets supplied by Marui into the charger.

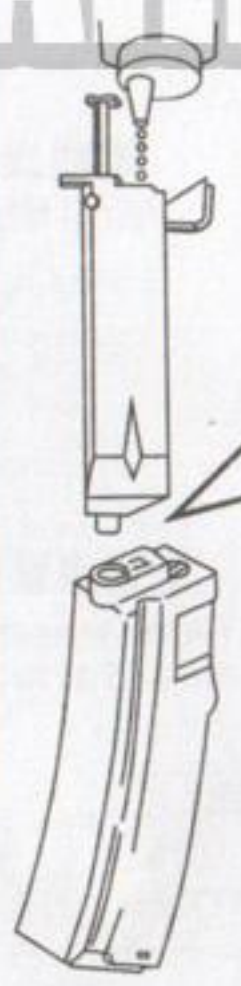

3. 把裝彈器插入到彈倉內。  
3. Insert the charger into the magazine.


**BB彈阻塞口**  
BB bullet stopper

**彈倉阻塞口**  
Magazine stopper

**彈倉阻塞被解除**  
Magazine stopper release rib

按箭頭方向滑動按鈕除去殘余子彈。  
(要小心，子彈將會跳躍出來。)  
Slide the rib in the arrow direction to remove remaining BB bullets.  
(Be careful as they will jump out.)



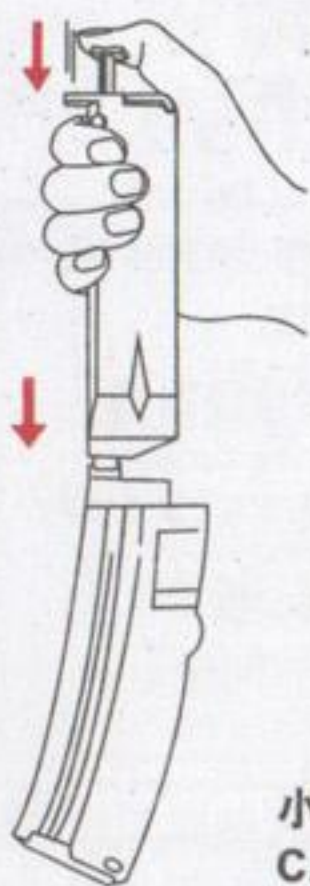

4. 向下壓，使子彈進入彈倉內。
4. Press in bullets using the charging rod.

小心：彈倉能容納28粒子彈。  
**CAUTION:** The magazine is capable of containing 28 rounds.

小心：當安全杆設定在安全位置上，請不要把手指放在扳機上。  
**CAUTION:** Confirm that the safety lever is set to the Safety position and don't place your finger on the trigger.

5. 當聽到聲音時，表示彈倉已被固定安裝上。
5. Make sure to set the magazine upwards and connect it firmly until a click sound is heard.




## 8 使用清潔條夾住布料進行維護 Maintenance Using Cleaning Rod with Cloth Catch

向進料口滴入幾滴樹脂油，滴入時間為0.5到1秒。射擊1至2發子彈，確保安全射擊。

1. Spray silicone oil for 0.5 to 1 sec in the bullet entrance. Then fire 1 or 2 magazine loaded in the magazine to stabilize sound shooting.

使用清潔條（棉花）滴上油，進入槍膛進行維護。

2. Clean oil from the chamber using the cleaning rod (with cotton) to complete the maintenance.

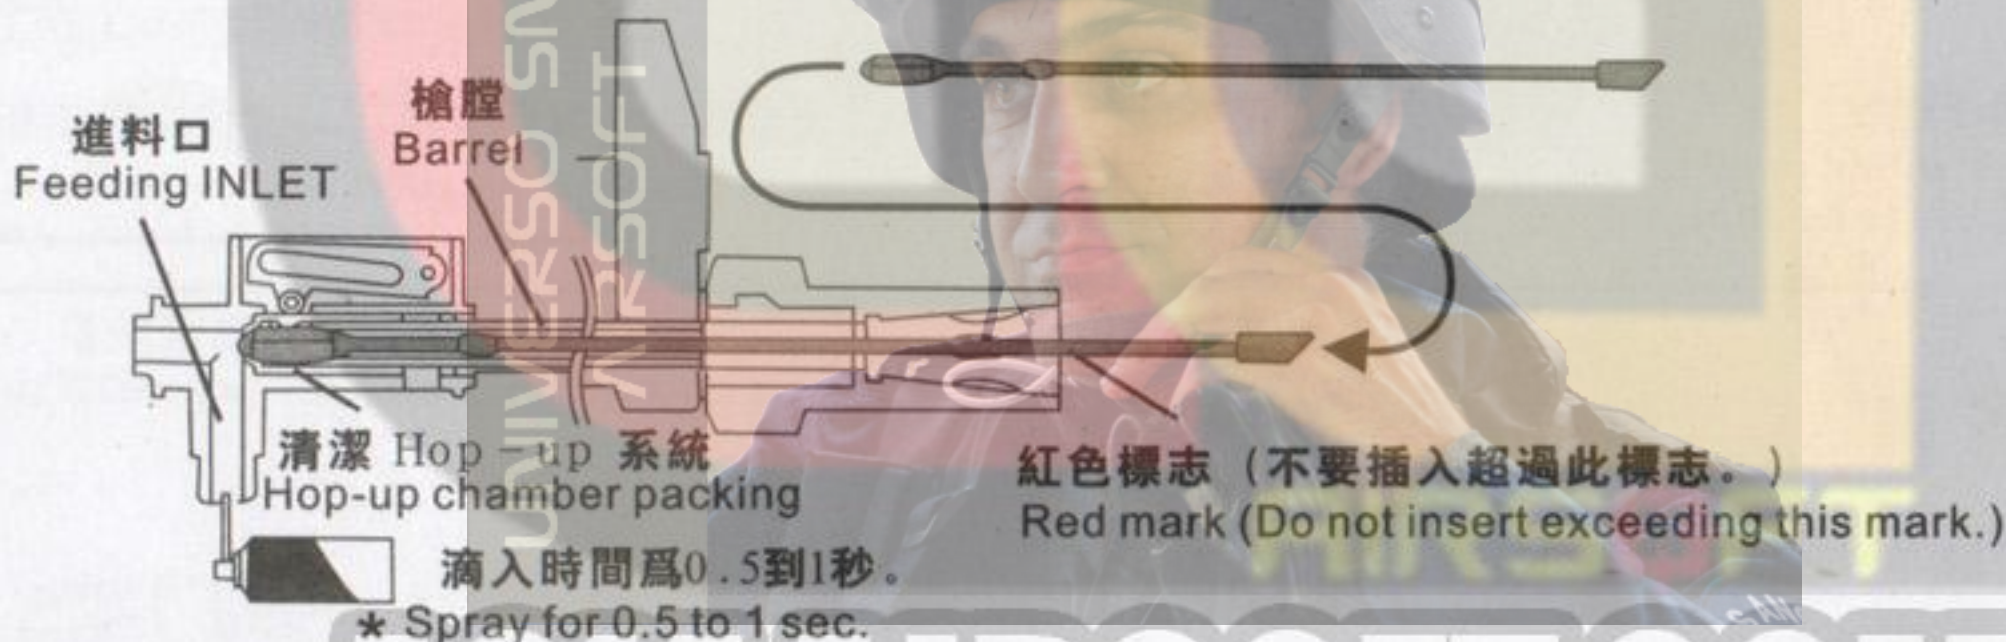

小心：總是在還原 Hop-up 系統后再進行清潔。  
**CAUTION:** Always begin the maintenance after returning the hop adjust lever to NORMAL.

小心：槍膛是一個精密的部件。請不要使用舊子彈。  
**CAUTION:** The chamber is a precision component. Never use any used BB bullets.

棉花布料  
 Cotton cloth

寬：大約為10毫米  
 Width: About 10 mm

長：大約為25到30毫米  
 Length: About 25 to 30 mm

轉動旋緊布料  
 Wind the cut cloth

握住清潔條末端轉動進行清潔。  
 Hold towards the tip of the rod and insert while turning it.


小心：握住清潔條末端，將很難插入。  
**CAUTION:** Inserting the rod will be difficult if you hold the rod at the end.






# 9 可調節 Hop - Up 系統 Variable Hop Up System

調整程序  
Adjustment Procedure

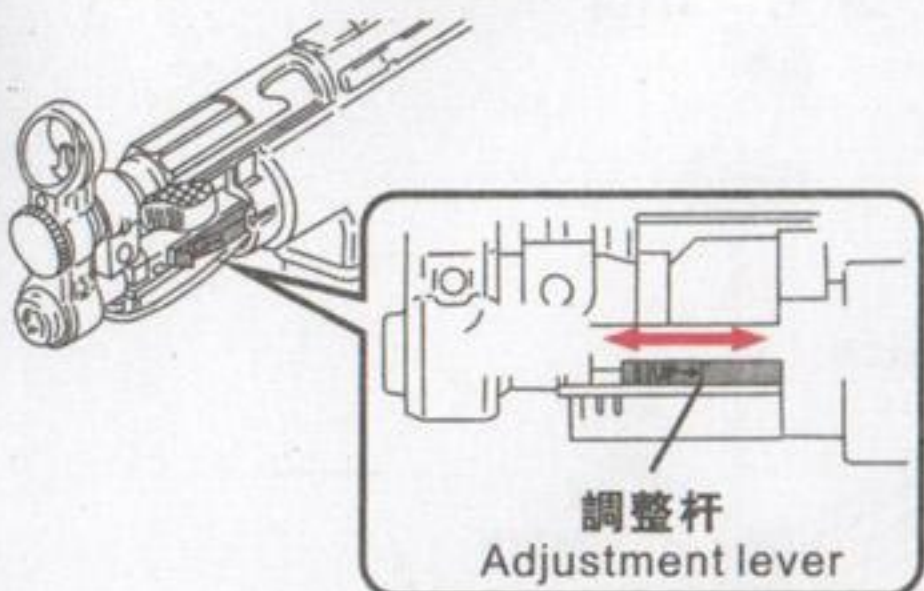

Hop - Up 系統性能  
Variable Hop-up Performance

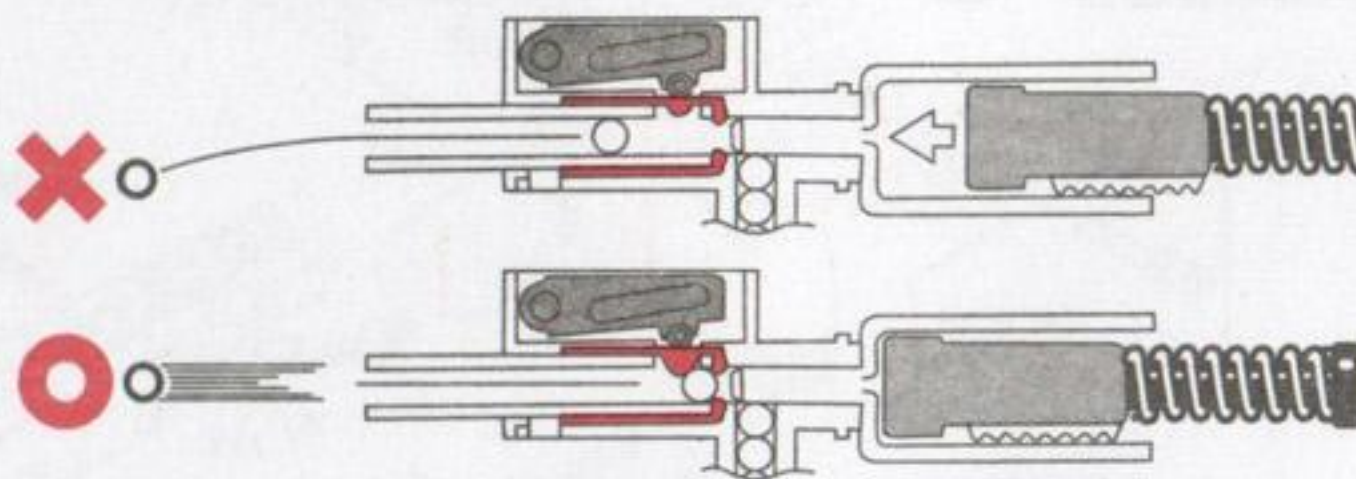


小心：在前手把移除后進行調整。  
CAUTION: Adjust after removal of fore grip.

這支槍的設計，是以最好的表現使Hop - Up操作得到提高效果。  
This gun is designed so that the best performance is obtained when operated with the hop-up effect.


# 10 射擊 Shoot

請記住，準備射擊時才去掉保護帽。  
Remove the protective cap only when you are ready to fire the gun.

Hop - up 調得太高  
Too much hop-up  
 最好的射擊位置  
Best position  
 Hop - up 調得太低  
Not enough hop-up

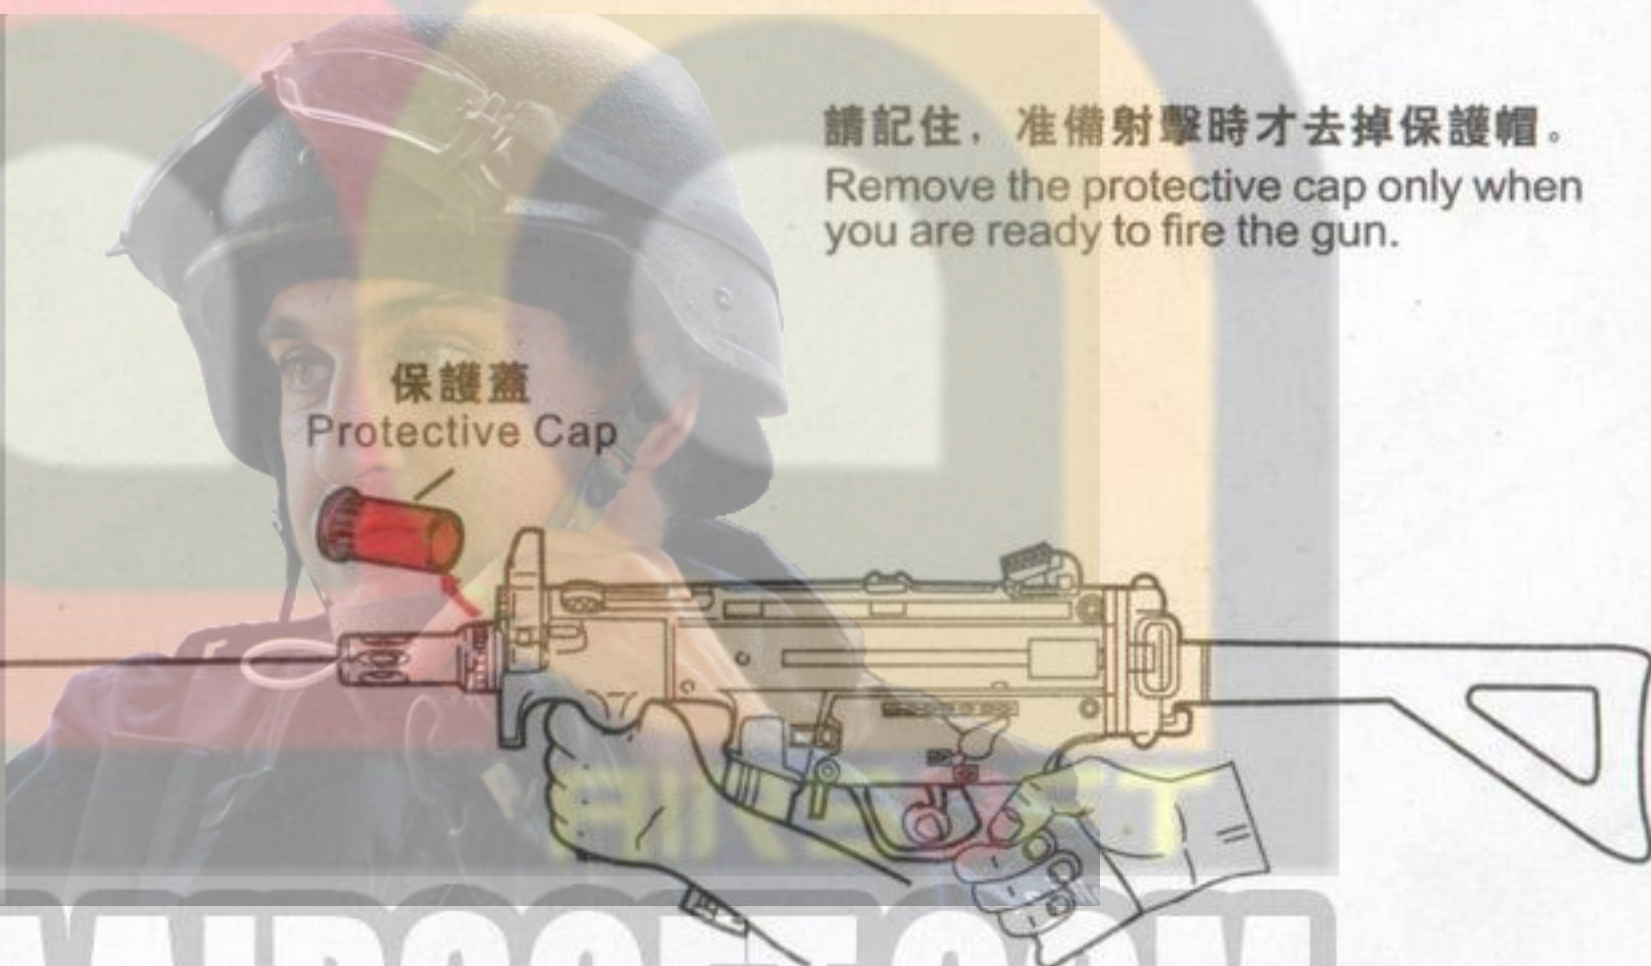


構造圖  
Construction Diagram

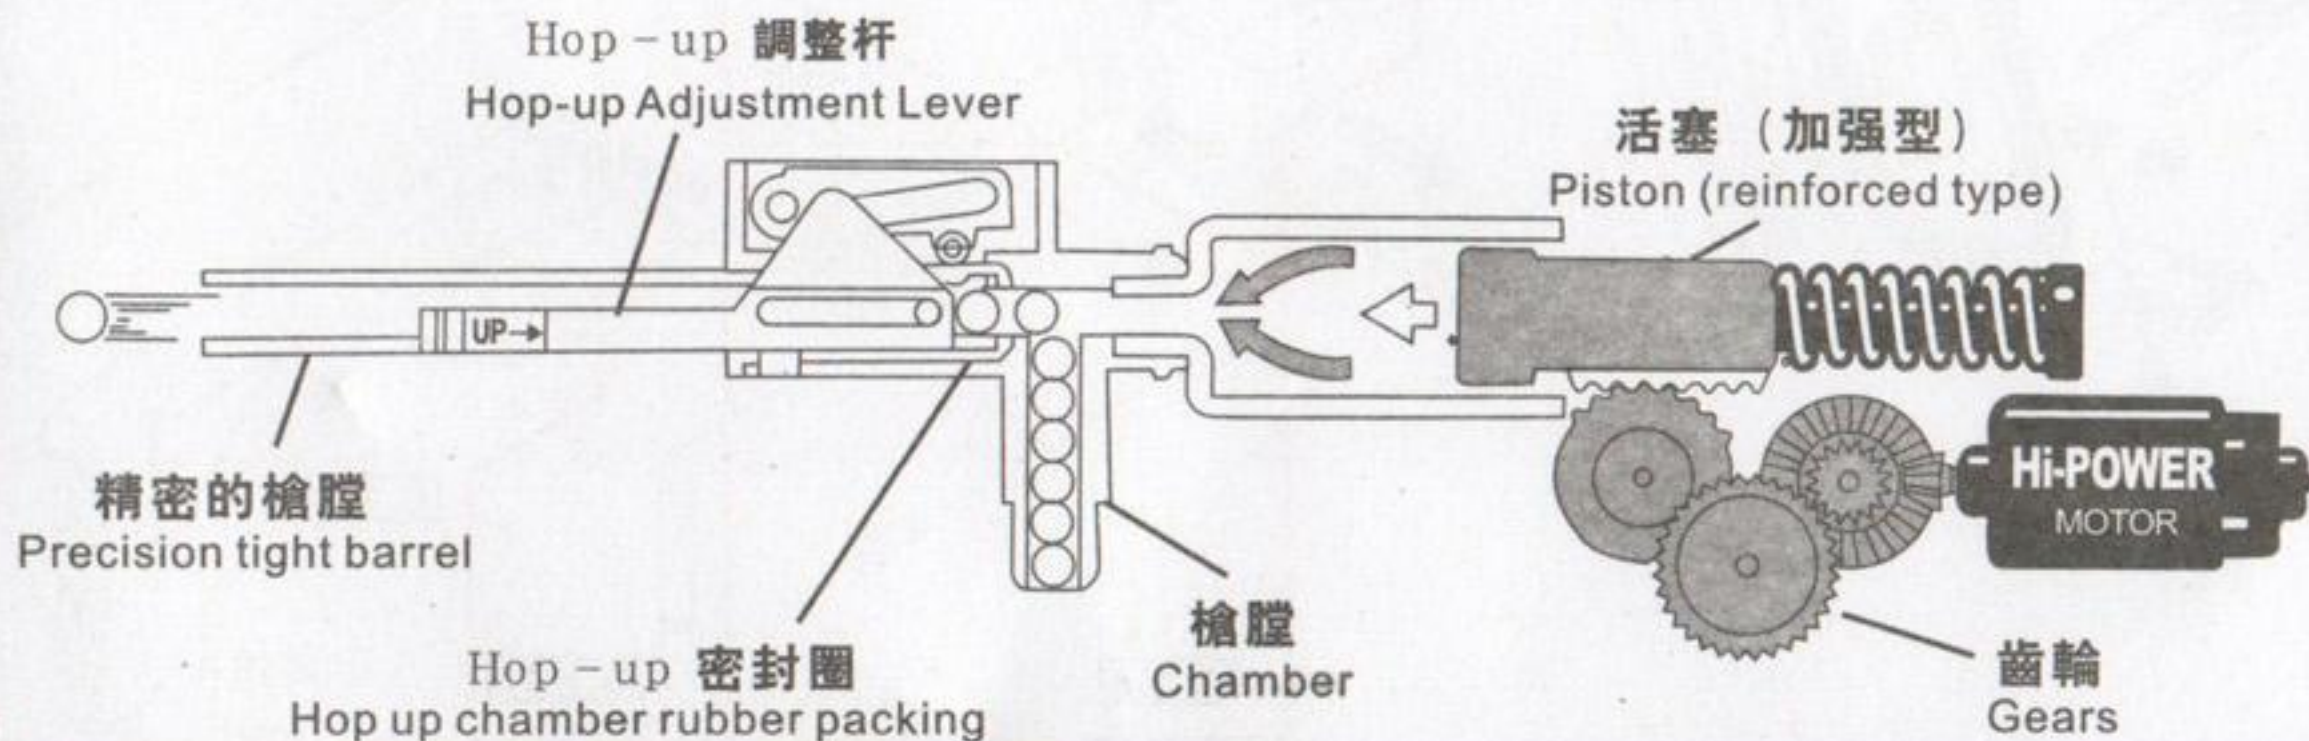



# 11 完全分解說明

## Resolve to explain the diagram completely

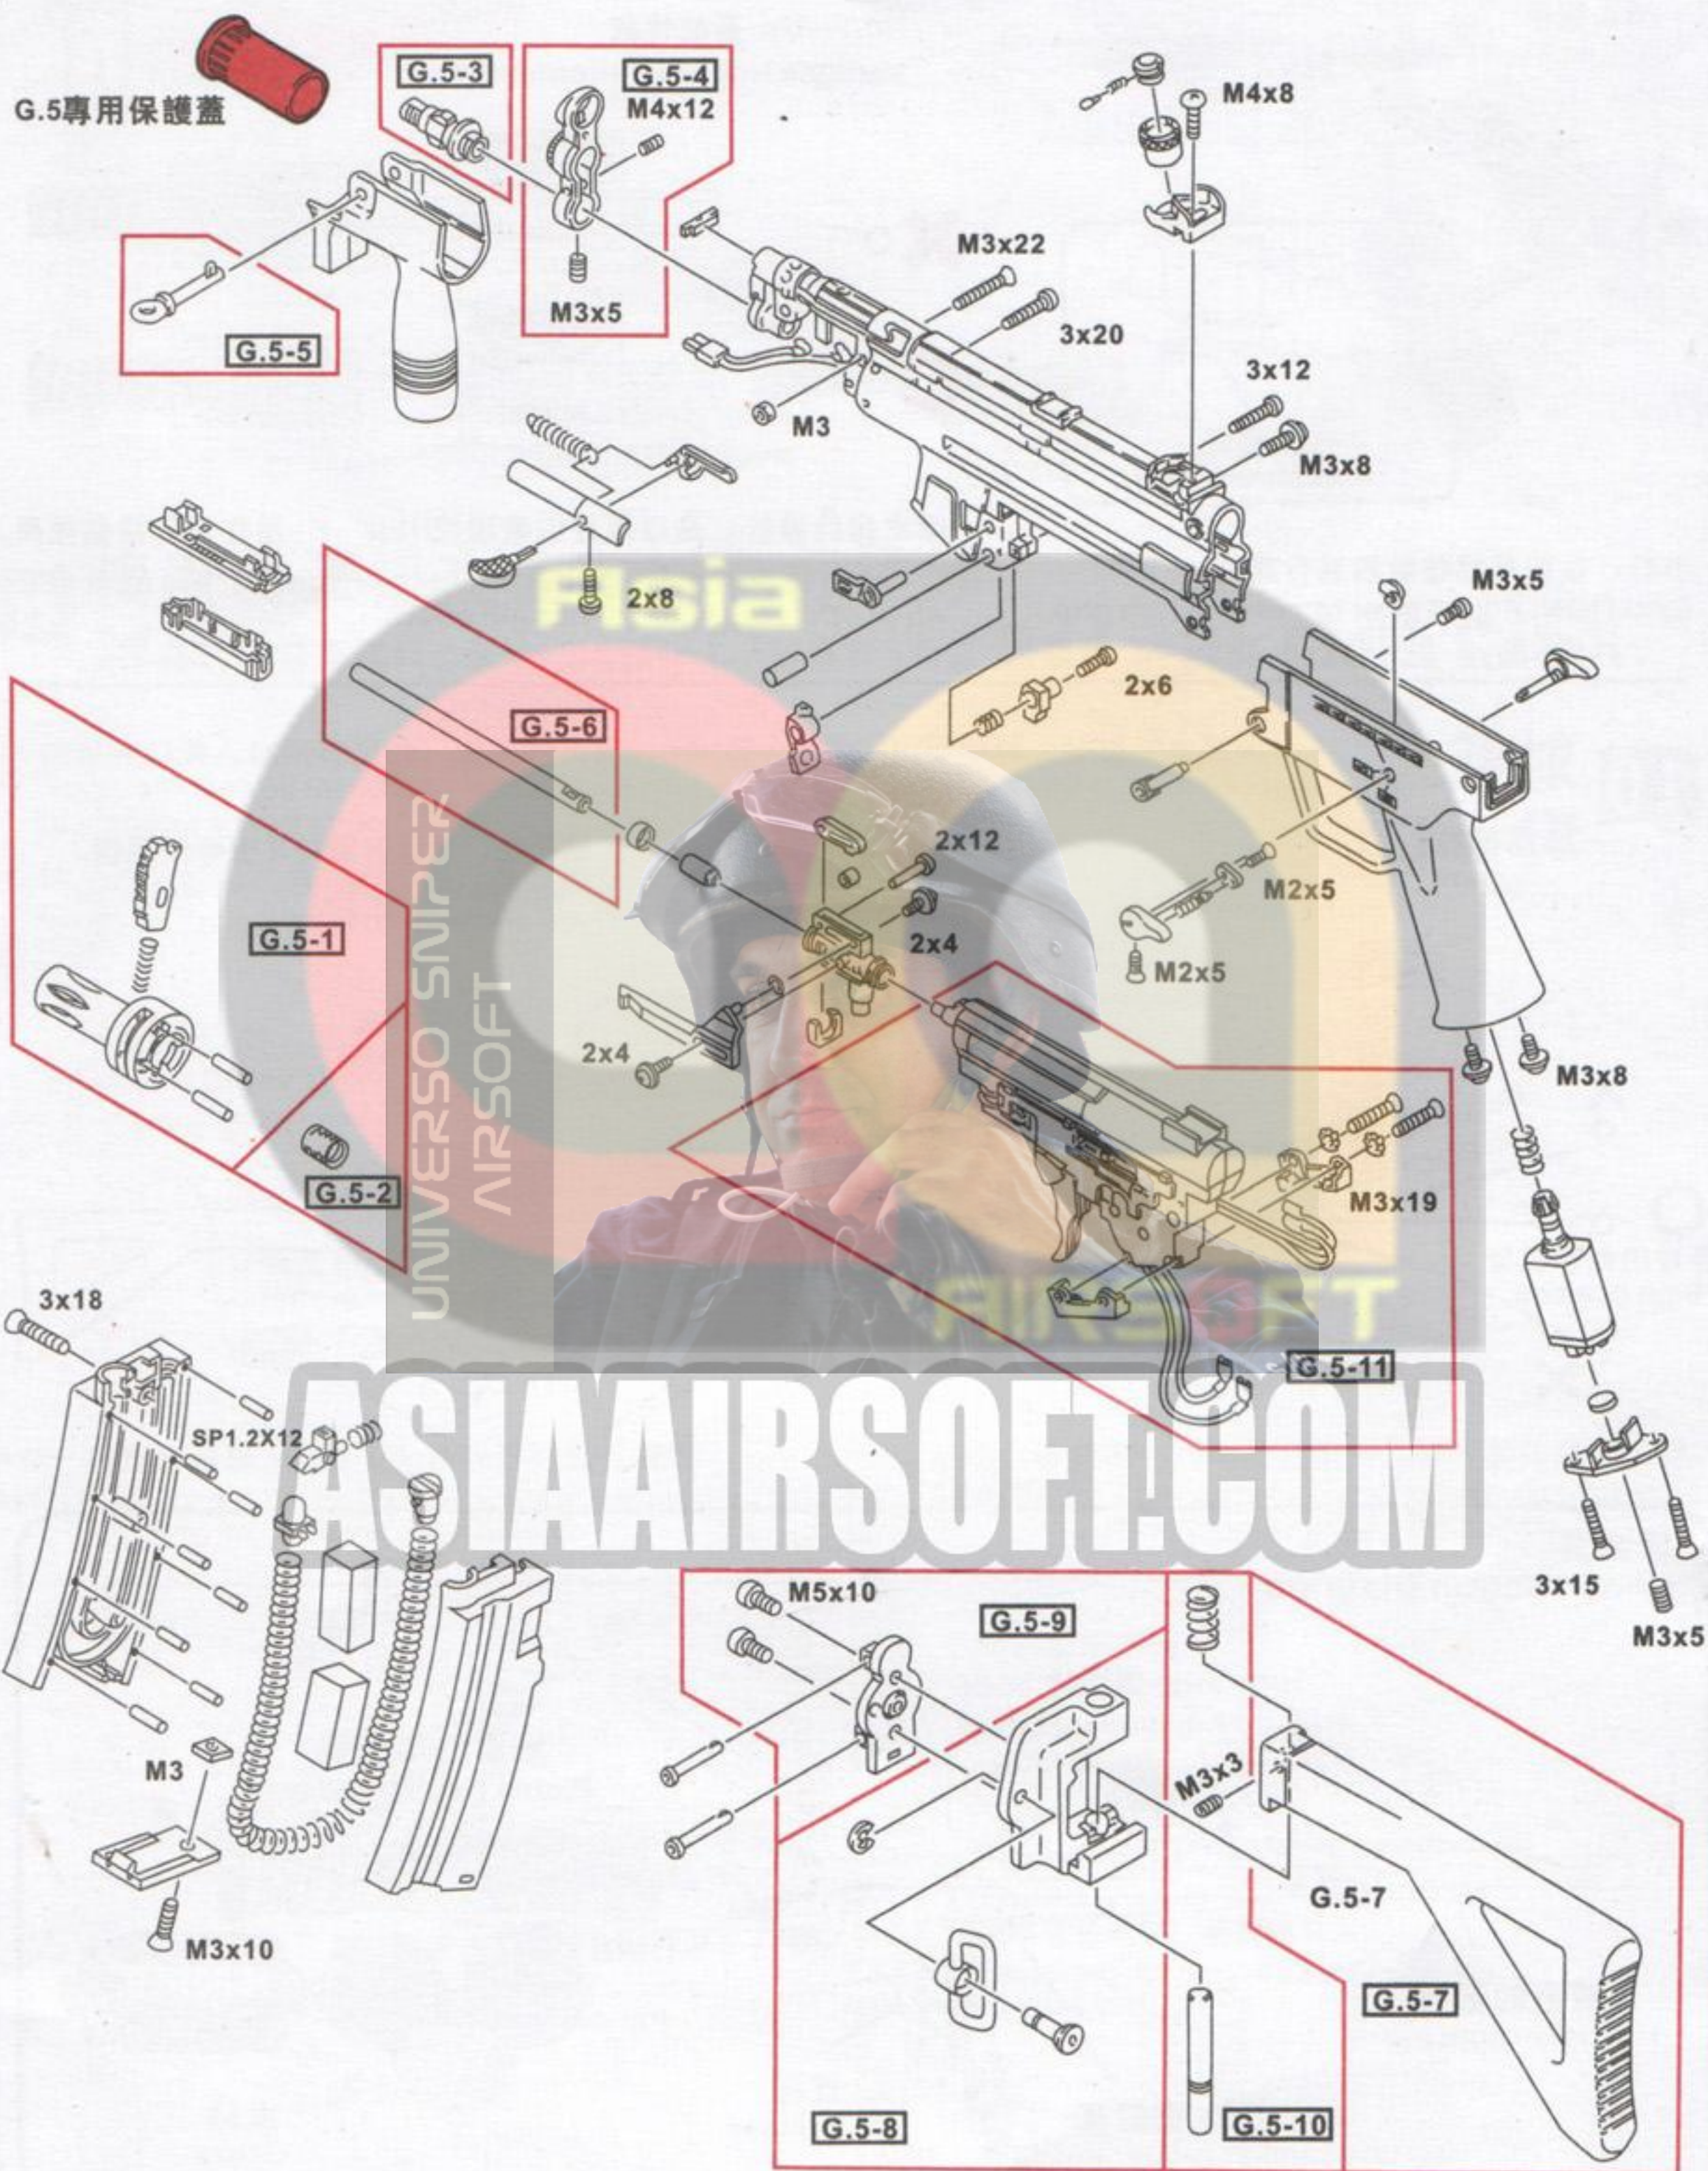

MADE IN CHINA