

对象年龄18岁以上
Users Restricted to
18 Year of age or older

使用说明书
INSTRUCTIONOM



在操作之前必需读熟这些说明书
Always read through this manual before operation.



警告 WARNING



18岁以上年龄才能使用
Only for 18 years
of age or older

18以上年龄才能利用这支汽枪比赛使用
Operation of this air gun for competition use is restricted to users of 18 years of age or older.



注意受损伤
Injury caution

因为BB弹能达到50-60米范围, 不小心的射击将可能导致眼睛受损伤或其它伤害。
Since plastic BB bullets reach 50 to 60 meters, careless shooting may cause eye damage or other injuries.




注意熟读警告指示手册
Careful reading of
Handling cautions
and
Instruction manual

在操作之前要细心读熟警告手册和指示手册操作汽枪时必须认识好警告指示
Always read through this HANDLING CAUTION AND INSTRUCTION MANUAL carefully before operation.
Operate the air gun with full recognition of warnings and cautions.




警告 注意 WARNING ATTENTION

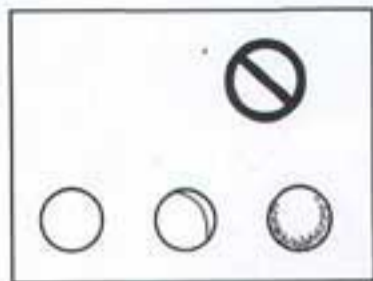


Always use precision BB bullets for this air gun. Never use any used BB bullets.



Never hold the gun sideways as the BB bullets will curve right or left. This is due to the HOP-UP system.

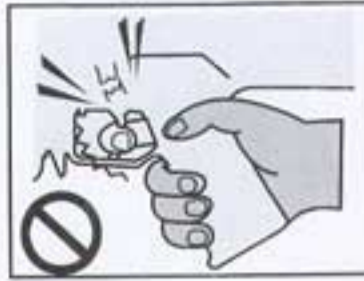

Pulling the trigger with the Safety lever being set to SAFE may damage the gun.

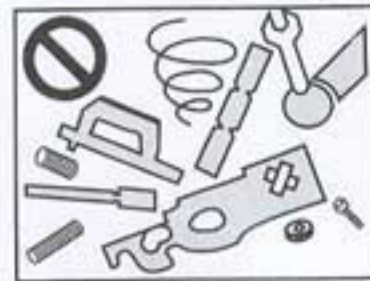

Don't disassemble beyond what is necessary. Or the gun may be damaged.



When bullets are clogged, immediately stop operation. Remove clogged bullets and then restart operation of the air gun.



Do not look directly into the gun barrel to avoid accidental discharge of BB.




Never aim or shoot a person or animal as the target. Always set the selector on SAFE position except when you are ready to shoot a target.



Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.


1. Component Names (For details, see the following pages.)

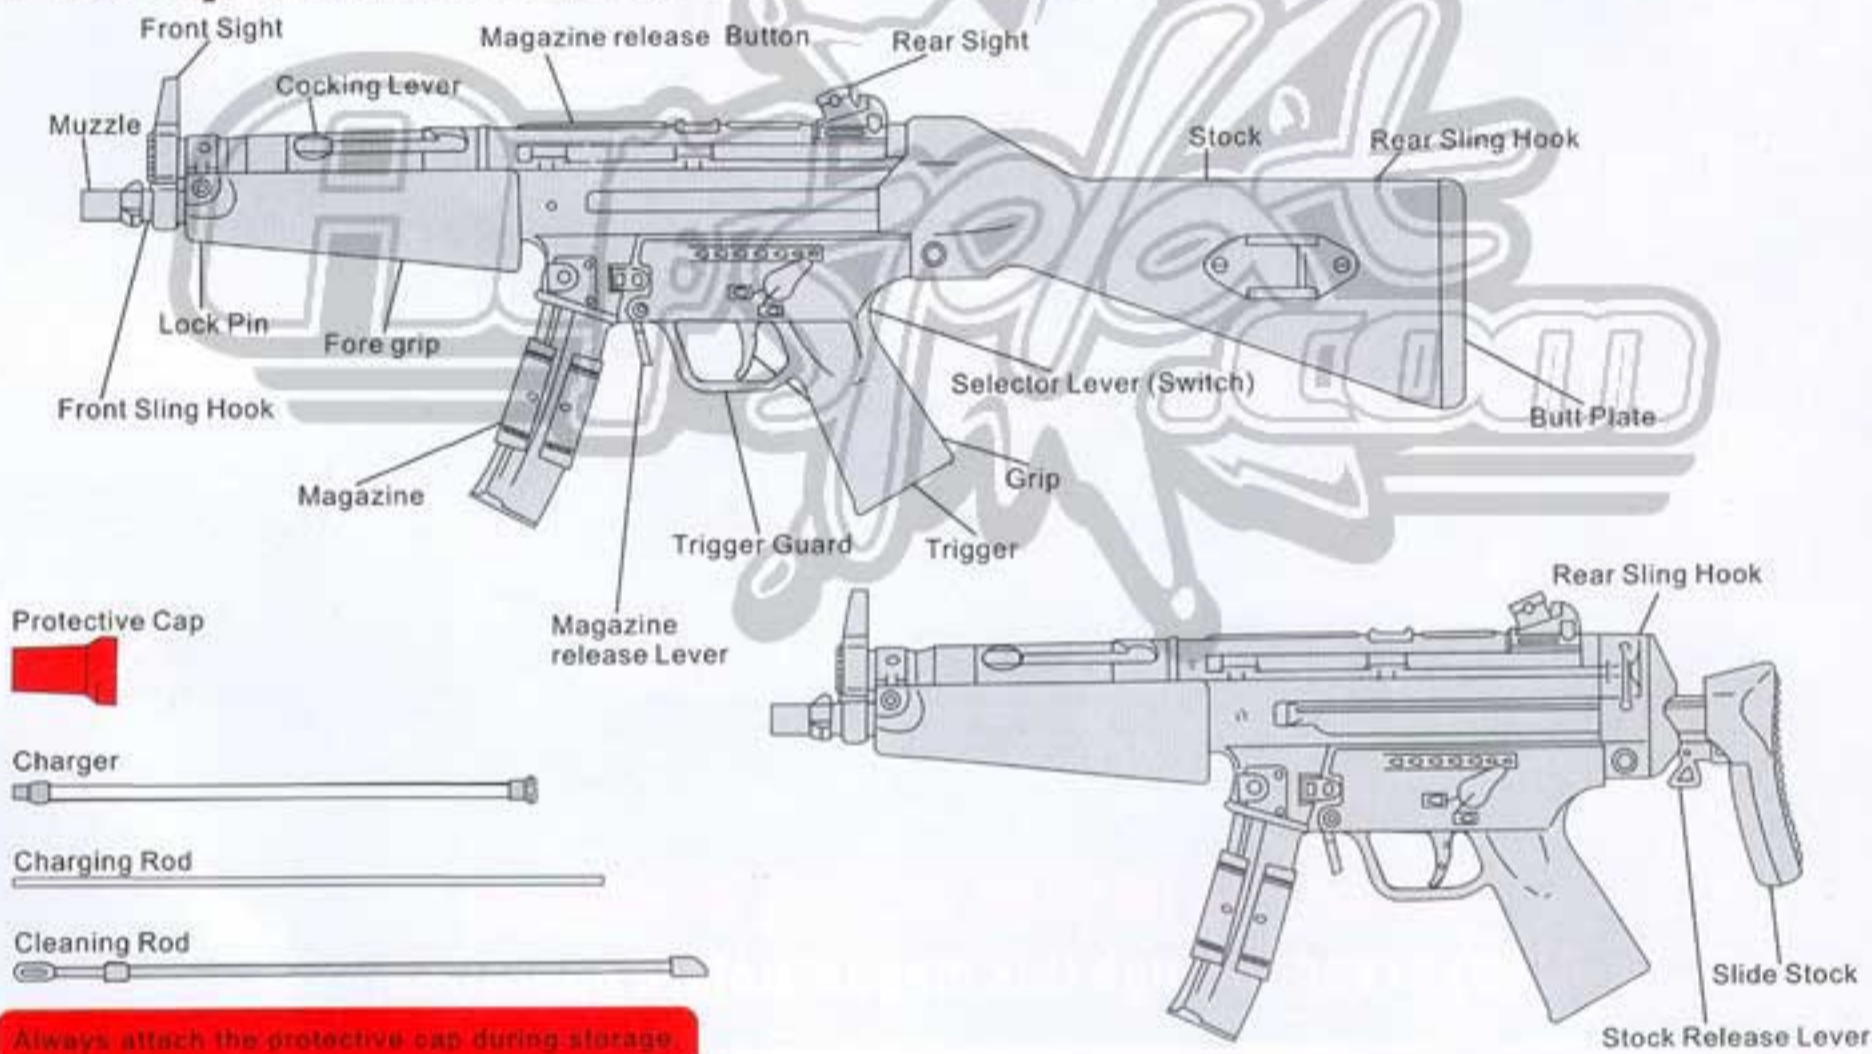

Always attach the protective cap during storage.


2. Selector Lever and Safety Setting

Set the selector lever correctly in position; otherwise, malfunction may occur.

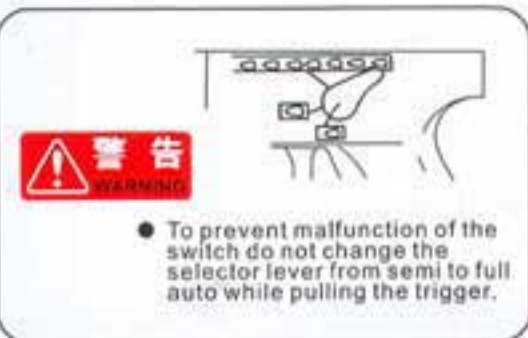


1. Safety Setting

Always set the lever to the Safety position and attach the protective cap when you are not firing the gun or during storage.

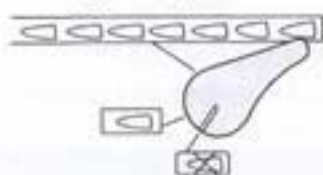


2. Semi Auto (Single Shot)

The gun will fire one shot each time the trigger is Pulled.

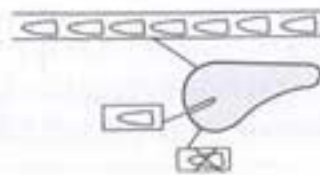


3. Full Auto (Automatic Firing)

The gun will fire automatically while the trigger remains Pulled.

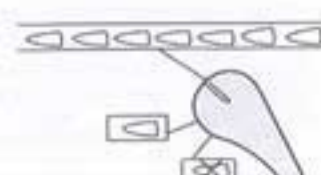

3. Setting the Battery


(Set the battery after charging.)

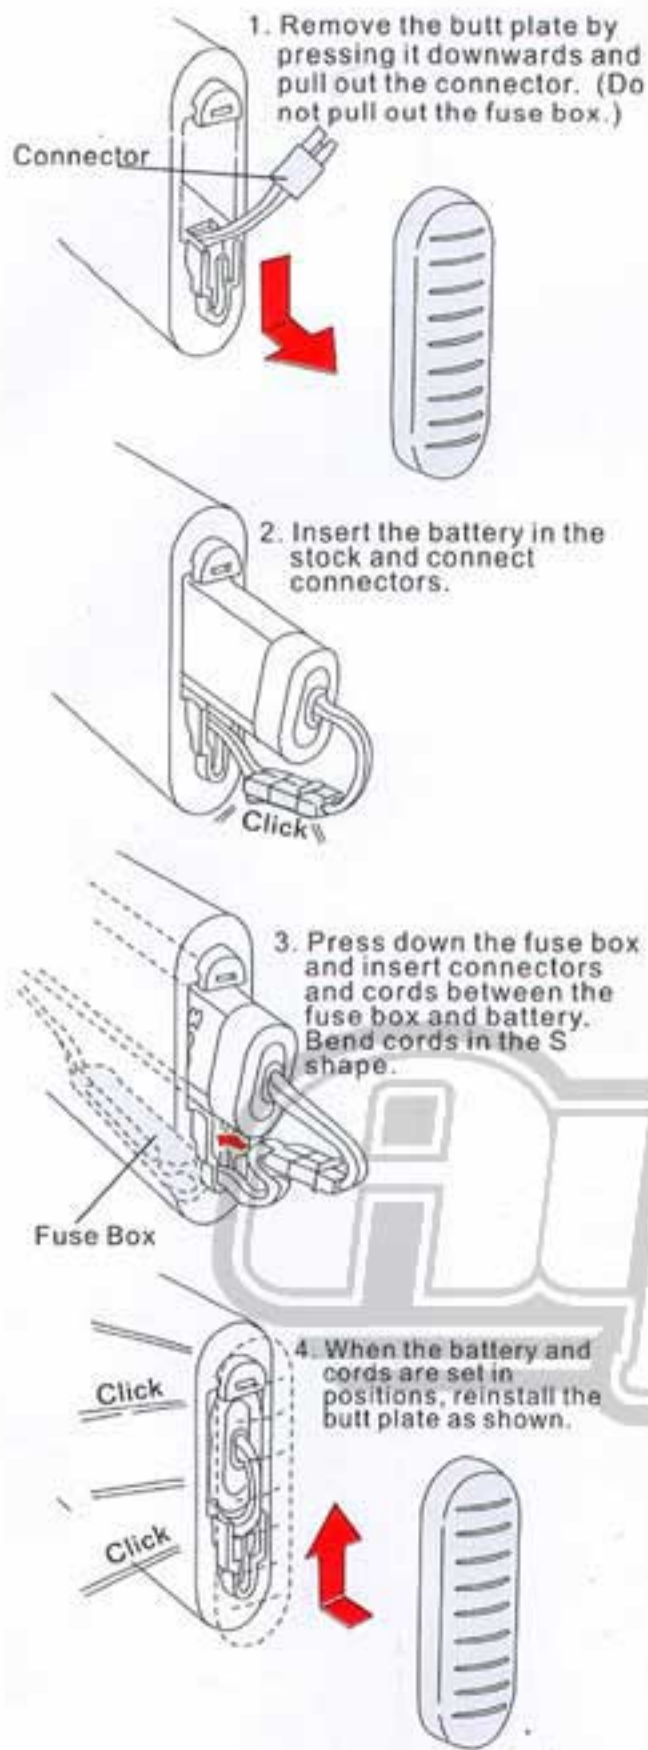

Attach the protective cap to the muzzle and direct the muzzle towards a safe direction. (Always set the selector lever to the Safety position.)



Always use the mini battery (8.4V, 600 mAh) exclusive for the A5.

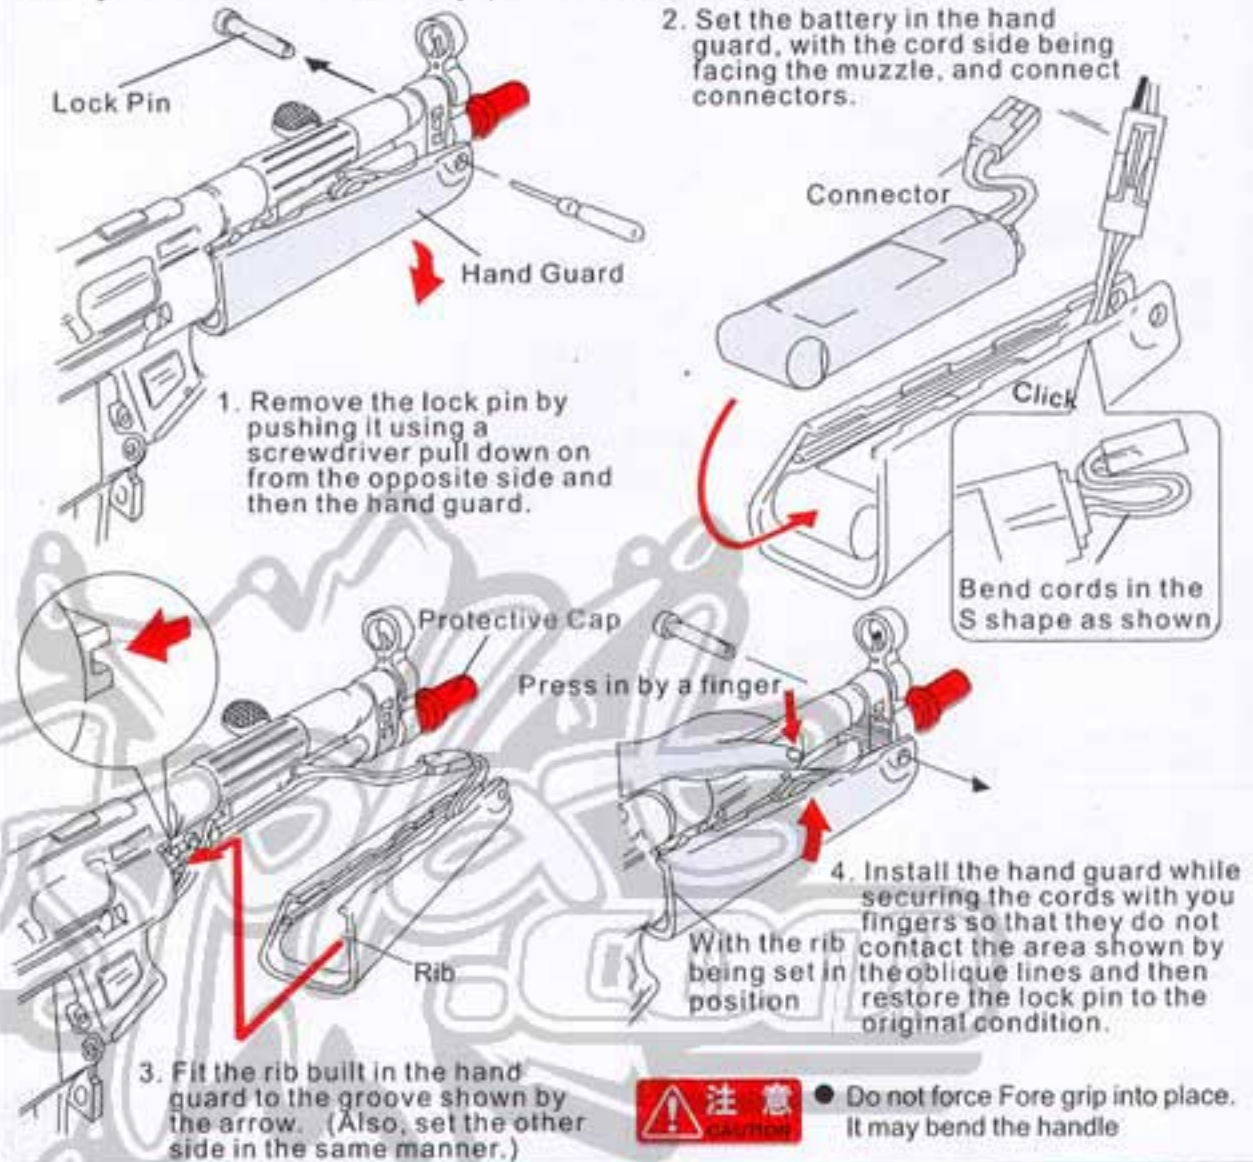


Do not force Fore grip into place. It may bend the handle


When the hand guard doesn't fit correctly.




4. Setting the Magazine

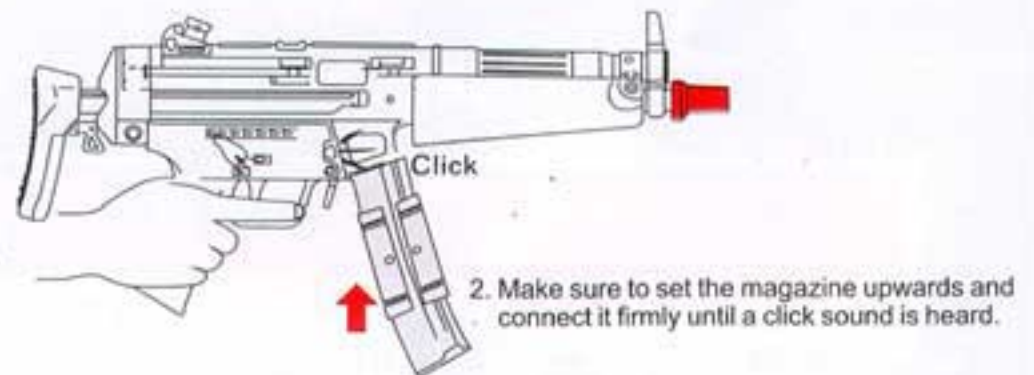


5. Setting the rear sight

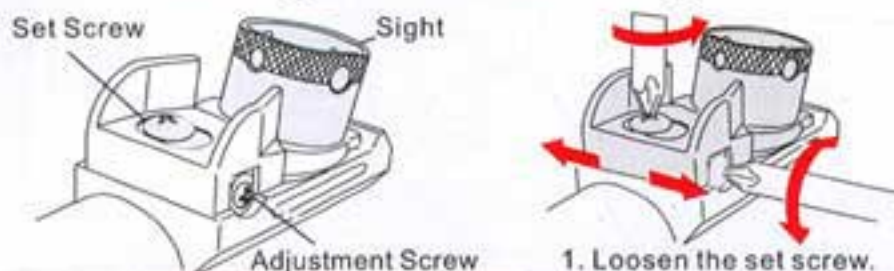

2. To move the sight turn the adjustment screw using a screwdriver.

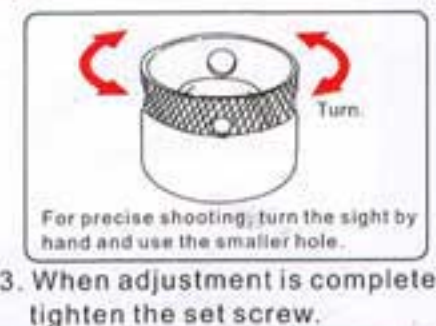

6. Movable Parts

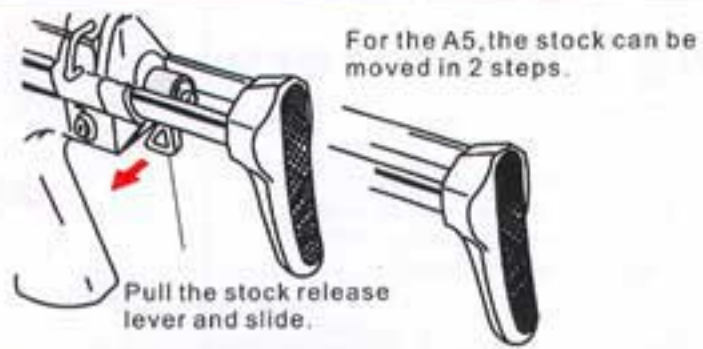

7. FIRING (Confirm safety sufficiently before beginning firing.)



※ A blank firing may occur at triggering after setting the magazine, this is the normal operation of the gun.

Cautions on Motor and Battery

- Charge the battery if the firing cycle becomes slow.
- Give the air gun a rest for 5 to 10 minutes after firing a bout 500 bullets, in order to ensure long service lives of the motor and battery.

When Bullets Are Clogged

- If bullets are clogged, remove them (see **11** 2on page 8) and apply a few drops of silicone oil into the chamber from the magazine entrance as shown or spray silicone oil for 0.5 to 1 sec, to obtain smooth continuous firing. (Never use CRC-556 or other mineral oil)

After Operation

- Remove the magazine and dry fire a the gun in the semi auto mode directing the muzzle to a safe direction. (Otherwise, the spring may be weakened.) Set the selector to the Safe position.
- Bullets may remain in the chamber even if the magazine contains no bullets (or if the magazine is not connected). (Two or three bullets may drop from the magazine, this is the normal operation of the gun.)
- Always disconnect the battery and attach the protective cap whenever you do not operate the air gun.

Always attach the protective cap during storage.



8. The whole knot composition

