

G&G ARMAMENT Complete AEG Series <http://www.guay2.com>



AK
SERIES **104**
G&G ARMAMENT
Complete AEG Series
Instruction
Manual

ЯК 104
SERIES
6mm Electric Semi/Full Auto System

CONTENTS

 
• WARNING	P2.P3. P4. P5
• COMPONENTS	P6.P7
• BATTERY SETTING	P8
• BATTERY TYPE	P9
• MAGAZINE LOADING	P10
• MAGAZINE INSERT	P11
• FIRING MODE	P12
• SIGHT ADJUSTMENT	P13
• HOP-UP AND MOTOR	P14.P15
• FIELD STRIPPING	P16.P17.P18.P19
• OPTION PARTS AND ACCESSORIES	P20
• SPEC. OF GR25 SNIPER	P21
• CAUTION	P23

WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL
Always read through this manual before operation.




G&G ARMAMENT
Complete AEG Series

警告
WARNING

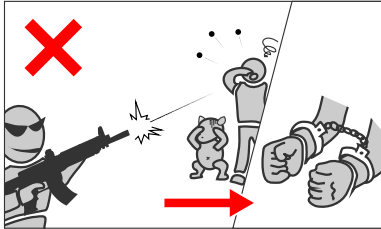


You may be liable for damaging public or personal property or for injuring a person or an animal even if you only meant to shoot as a "practical joke". Always observe good manners and enjoy fun sport shooting.

 警告
WARNING

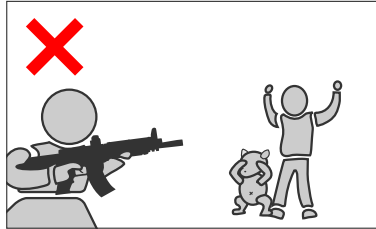


Never direct the muzzle towards a person, and animal or any other dangerous direction.

 警告
WARNING

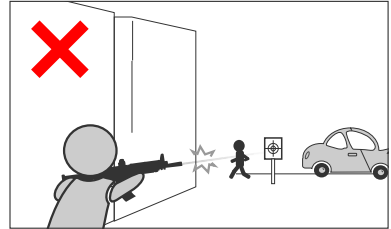


Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.

 警告
WARNING

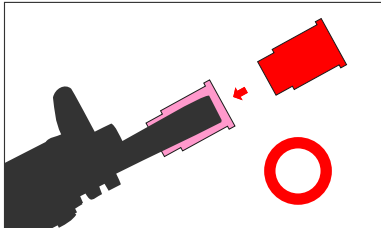


Make sure to attach the barrel and safety cap to the muzzle, except when you are shooting. Do this to prevent accidental, sudden discharge and also for dust protection purposes. NEVER pull the trigger while the barrel and the safety cap is attached.

 警告
WARNING

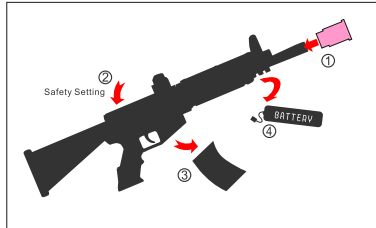

Safety procedure:
1 - Attach the safety cap to the muzzle.
2 - Set the selector lever to the safety position.
3 - Remove the magazine.
4 - Remove the battery.

 警告
WARNING

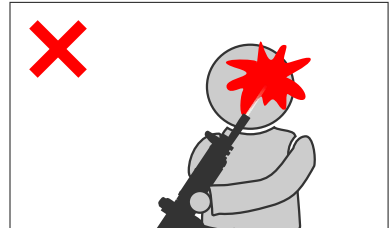


Looking into the muzzle is extremely dangerous regardless of BB's having been installed or not. If you get hit in the eye by a BB bullet, you may in worst case, loose your eye sight.

AK 104
SERIES
6mm Electric Semi/Full Auto System

WARNING HANDLING CAUTIONS & INSTRUCTION MANUAL
Always read through this manual before operation.




 警告
WARNING

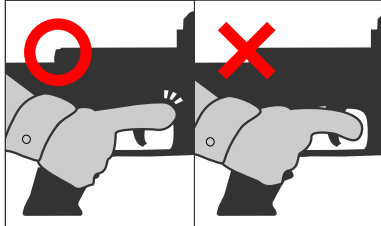


Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless the safety cap is removed and you are ready to shoot a target.

 警告
WARNING

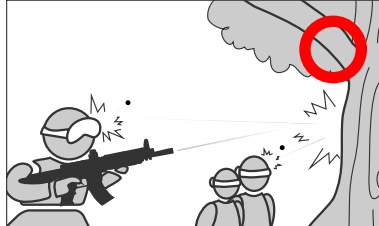

When shooting the air guns for target practice or in a game situation, you and all participants must wear goggles or other eye protective gear. Also, pay attention to ricochets. It is important to pay attention to third parties other than the participants.

 
警告
WARNING

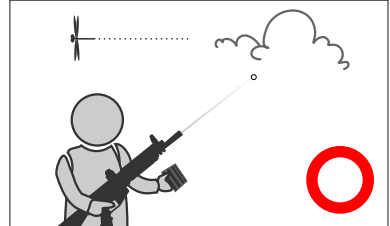

There may be cases where some BBs remain in the gun after the magazine has been disconnected. After removal of the magazine, direct the muzzle towards a safe direction and pull the trigger to confirm that no BBs remain in the gun, then attach the safety cap.


P.04
A.05

 警告
WARNING

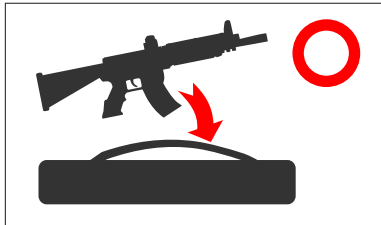


When you carry the air gun, attach the safety cap, set the selector lever to the safety position and always put it in a case or bag.

 警告
WARNING

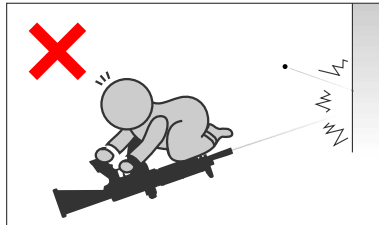

Always attach the safety cap to the muzzle, remove the battery and store the air gun in a case or bag and at a place out of reach by children.

 警告
WARNING

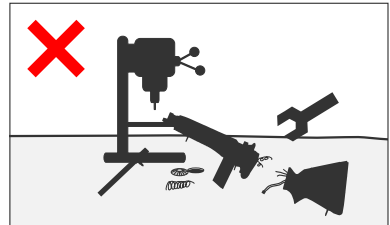


Disassembling or modifying the gun may adversely affect the performance and make it dangerous.


Components



 G&G ARMAMENT
Complete AEG Series

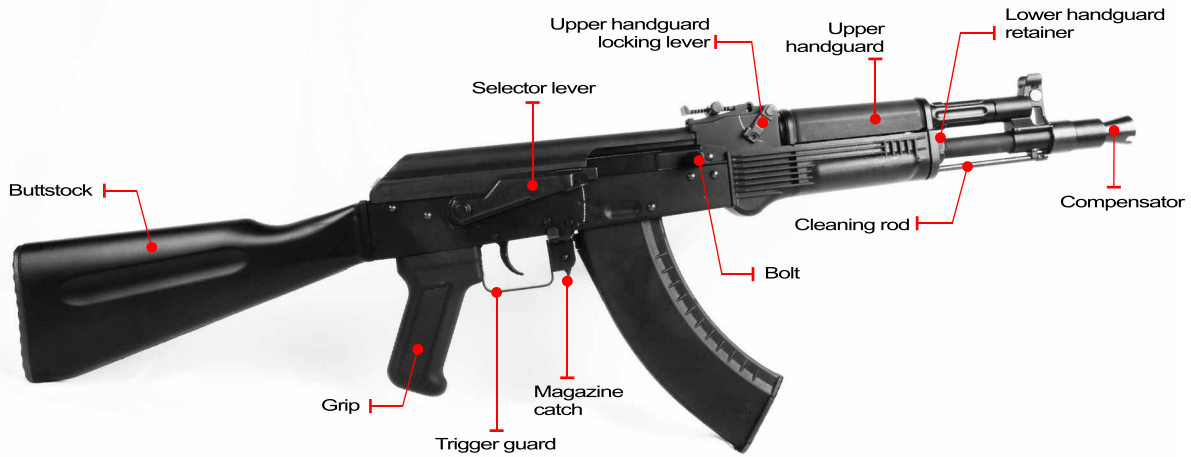

P.06
A.07

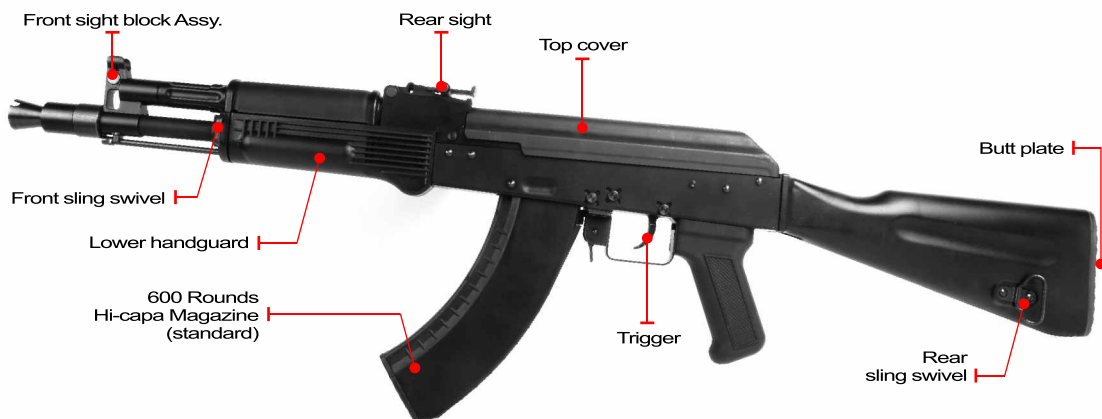 


AK 104
SERIES
6mm Electric Semi/Full Auto System

Components

▪ Battery setting and battery type



 G&G ARMAMENT
Complete AEG Series

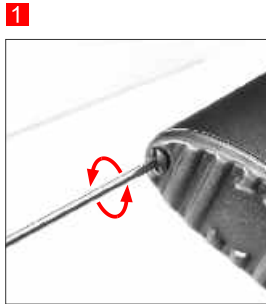

Unscrew the butt plate fixing screws and remove the butt plate.



Insert battery into the buttstock and connecting the connector then close the butt plate.

F.08

A.09



Recommended battery type:



8.4V 1800mAh Ni-Cd rechargeable battery

AK 104
SERIES
6mm Electric Semi/Full Auto System

 
▪ Battery setting and battery type

Magazine loading




G&G ARMAMENT
Complete AEG Series

1

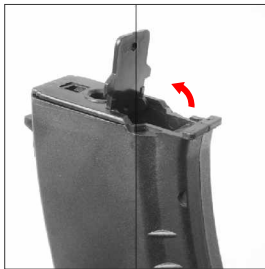

Open the cover on the top of the magazine.

 2

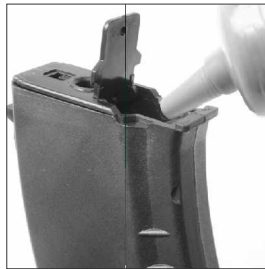


Feed the BBs till it's full.

3



Close the cover and turn the gear at the bottom all the way till the clicking sound changes.

 
1

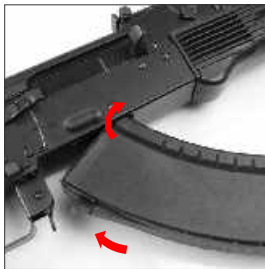

To set the magazine:

Set the magazine upward and connect firmly till a "click" sound is heard.

 2

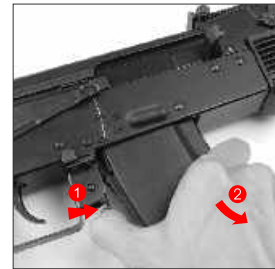

To release the magazine:

hold the magazine then push the magazine catch and pull out the magazine out.

AK 104
SERIES
6mm Electric Semi/Full Auto System

Magazine insert and release

F-10

A-11

▪ Firing mode and safety



G&G ARMAMENT
Complete AEG Series

1



Safety on:
Trigger can not be pulled and gun will not fire.

2



Full auto:
Automatic firing when trigger remains pulled.

3



Semi auto:
One shot each time when the trigger is pulled.

F-12

A-13

1

 


Insert the front sight adjust tool into the front sight block and turn for adjustment.

2



3

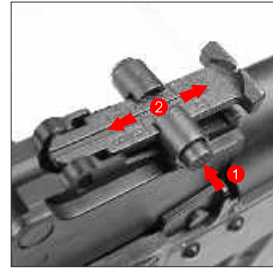

Press the button and slide forward or backward for adjustment.

AK 104
SERIES
6mm Electric Semi/Full Auto System

 
▪ Front sight and rear sight adjustment

▪ HOP-UP adjusting




G&G ARMAMENT
Complete AEG Series

1

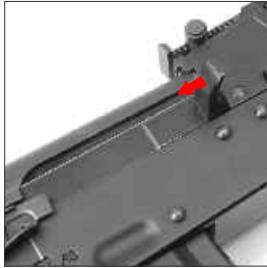


Pull to open the bolt.

 2

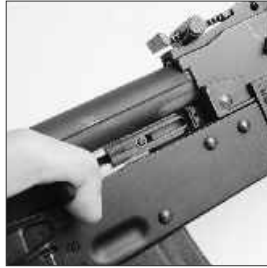


Hold the bolt.

 3

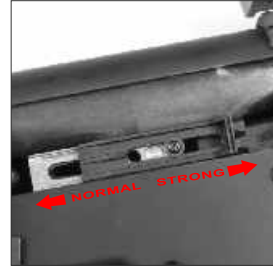

Sliding the Hop-up adjustment piece forward or backward to change the Hop-up effect.

 1

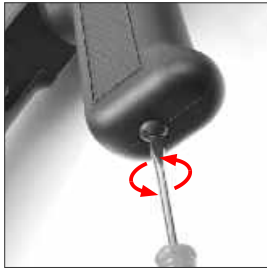


Unscrew the fixing screw on the bottom of the grip.

2



Remove the grip.

 3

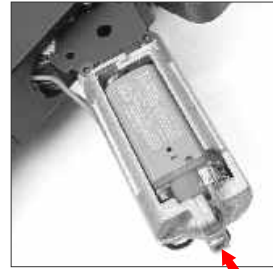

Adjusting with hexagon key.

NOTE: Only when the gear noise become shrilly.


AK 104
SERIES
6mm Electric Semi/Full Auto System

▪ Motor gear engagement adjusting

▪ Field stripping



 
G&G ARMAMENT
Complete AEG Series

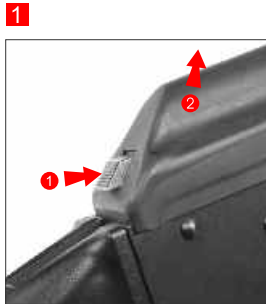


1 Push the rear-end of spring guide to remove the top cover.



 2 Move the spring guide forward and pull up to release the spring.

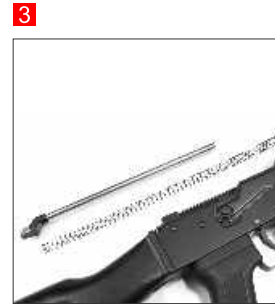

 1 Set the selector lever on full auto position and pull the bolt out.

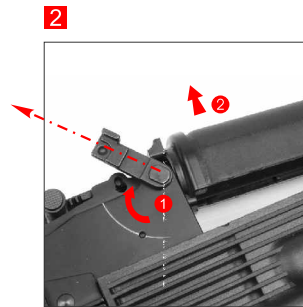

2 Turn the locking lever upward and pull up the upper handguard.



3 Pull the cleaning rod out.

AK 104
SERIES
6mm Electric Semi/Full Auto System

▪ Field stripping

P-16

 
A-17

▪ Field stripping



G&G ARMAMENT
Complete AEG Series

1

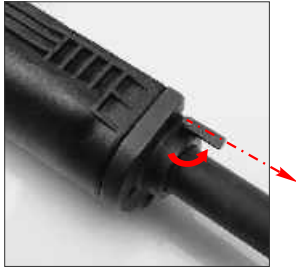

Turn the locking lever.

2



Move the lower handguard
retainer forward.

3



Remove the lower handguard.



WARNING !!

Please be careful, do not catch
your fingers when removing parts.

Always remove the magazine and
battery first when assemble or
disassemble the gun.

AK 104
SERIES
6mm Electric Semi/Full Auto System

▪ Field stripping

P-18

A-19

▪ Option parts and accessories



G&G ARMAMENT
Complete AEG Series

1



1 G-08-037
600R 74 Type Magazine
For AK Series-BRICK

2 G-08-033
600 rounds mag for AK

2



G-03-073
Steel rear sight

3



G-05-003
Tactical Sling

▪ SPEC. for **AK** SERIES **104**

- Built material: *Magnesium / Plastic / Zinc / AL6061*
- Magazine capacity: **600 Rounds (standard)**
- Overall length: **860mm**
- Inner barrel length: **375mm**
- Weight: **3200g**
- Muzzle velocity: **330 fps. with 0.2g BB**





AK
SERIES
104
6mm Electric Semi/Full Auto System
MANUFACTURED BY GUAY GUAY TRADING CO., LTD.
WWW.GUAY2.COM MADE IN TAIWAN

P-22
A-23

CAUTION

Always attach the safety cap and disconnect the magazine to avoid sudden operation upon connecting the battery.

Be careful so as not to catch your fingers in the movable parts.

Always set the lever to "safe" before firing.

Do not disassemble beyond what is necessary, or the gun may be damaged.

Always use "G&G ARMAMENT" BBs for this gun. We shall not be held responsible for any damage or accidents arising from the use of bullets supplied by other manufacturers.

Since a tight barrel is used, use of dirty BBs or those with burrs causes jamming and possible fatal damage to the gear box.

Turning hop-up dial excessively causes clogging of BB.
Keeping pulling the trigger with BB clogged damages the piston and gears.

Never hold the gun sideways as BB will curve right or left.

We shall not be held responsible for any damage or accidents arising from the wrong operation or modification of the gun.

Disassembly is designed for appropriate maintenance, not for modification.

AK 104
SERIES
6mm Electric Semi/Full Auto System