

## 1. Setting the magazine

① Press the magazine catch lever to remove the magazine.  
(Hold the magazine as it may drop.)

② Load 6mm BB bullets into the charger.  
(50 bullets can be loaded.)

③ Press in bullets by using the charging rod.




④ Make sure to set the magazine upwards and connect it firmly until a click sound is heard.



- Be sure that the safety lever is set to the safety position and don't place your finger on the trigger.
- Pushing down the magazine strongly may damage the gun or the magazine.
- Some bullets may fall out when you pull out the magazine.
- You can joint the magazine (pull out the magazine from the gun.)

## 2. Firing (confirm safety sufficiently before beginning firing.)

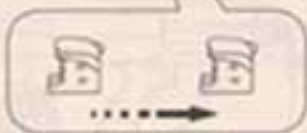

### CAUTION:

- Pressing the trigger carelessly is extremely dangerous. Never put your fingers onto the trigger unless you are ready to shoot. (Bullet field of fire range 35M)

← 35M →



Press the trigger.

### CAUTION:

- A blank firing may occur at triggering after setting the magazine. This is the normal operation of the gun.

### 3. Hop up system

By producing back-spin on the BB bullets, this system allows for straighter and longer shooting distance than normal air guns.

#### CAUTION:

- Never use used and dirty bullets. (Otherwise the chamber becomes dirty and damage Hop Up system.)
- The best position is where the bullets fly horizontally, and the longest shooting distance is obtained.



#### Operational cautions

(Strictly read the following cautions)

- We will not be responsible for any damage or accidents caused by wrong operation, disassembly and remodification of the air gun.

### 4. Setting the rear and the fore sight



#### ● FINISHED PRODUCT

