

# OPERATION MANUAL

## 1 REMOVING THE MAGAZINE:

- Place your hand beneath the magazine, then press the magazine release button (A) on the left side of the grip to release the magazine into your hand. Be careful not to let the magazine drop to the ground.




## 2 LOADING BB:

- Pull the magazine follower (A) downward to And hold it.
- Load BB into magazine until full. (Load no more than 13 BBs into magazine.)




## 3 CHARGING GAS:

- Invert the magazine with the gas valve pointing upward. Insert the valve of your gas canister into the magazine valve then charge gas until overflow occurs. Let the magazine equalize to room temperature before use.
- <NOTICE> Please only use the gas canisters provided by your AirSoft product distributors. use of other types of gases can cause damage to your AirSoft Product.

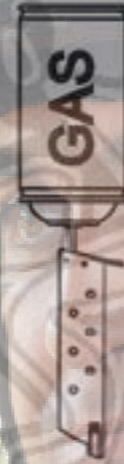


## 4 REAR SIGHT ADJUSTMENT:

- The rear sight is adjustable by elevation adjustment screw.

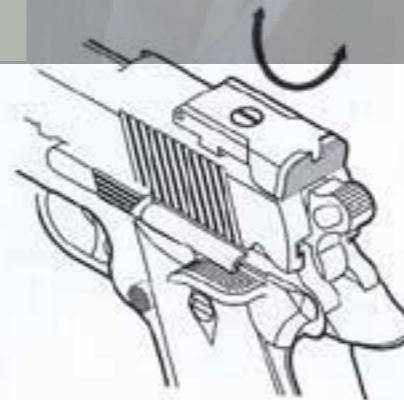

## 5 CHAMBERING THE BB:

- Load the BB into the chamber by pulling the slide back. When the slide has been pulled completely back, release the slide and a BB will be automatically chambered into the barrel.
- <NOTICE> The gun is now cocked and will fire when the trigger is pulled. Be careful not to fire accidentally.

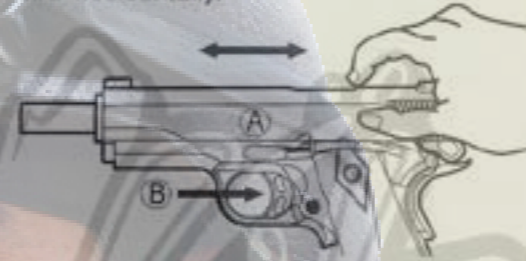

## 6 LOCKED SLIDE:

- When the magazine is emptied, the slide will be locked in the open position. To release the slide, push down on the slide lock level (located above the trigger near the left hand side of the grip) to return the slide to its original position.


## 7 FINISH FIRING:

- please confirm there is not any BB bullet in the chamber, after finished firing. Push safety upward to engage safety after finished firing.



## 8 ASSEMBLE GRIP BASE:

1. Follow arrow direction to take pin (A) out.
2. Loosen the screw of grip. (about half circle.)
3. Place grip base under the grip.
4. insert pin (A) to fix grip base.
5. Drive the screw of grip in until tight to finish.

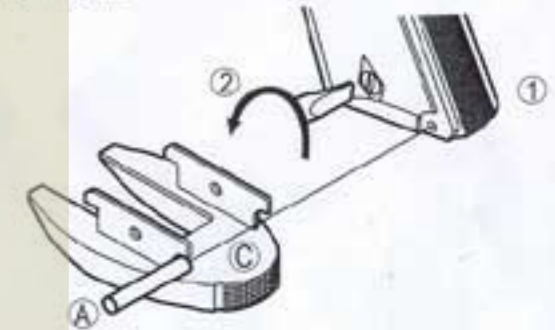

## DISASSEMBLE:

- DISASSEMBLE FRONT CAP OF SLIDE
  1. push FIX ROD inward (At least 6mm)
  2. Turn front cap count-clock wise to 90
  3. Take front cap out.

