


INSTANCTION MANNUAL FORROWS (SERETTA M9/9/92FS)



www.caaairsoft.com

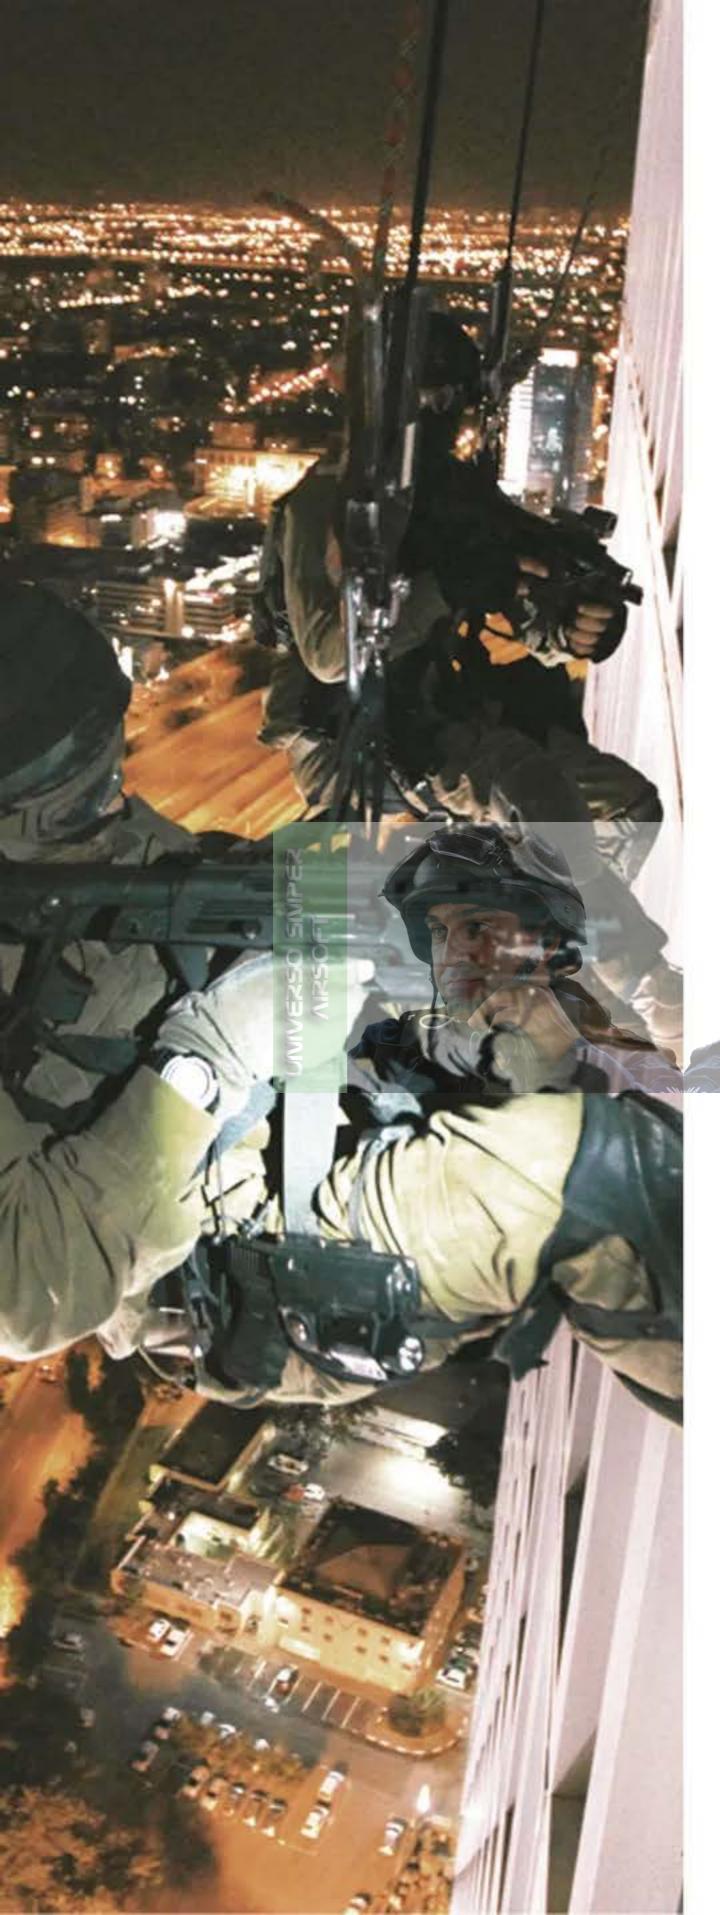



RONI is designed for the Special Forces operator, it has found favor with SWAT and Security Details. The RONI Pistol Carbine Conversion allows you to realize the accuracy inherent in the pistol. The RONI shoulder stock design provides the stability to significantly improve accuracy.

Compatible with:

Tokyo Marui Gas Blowback M92F, M9A1 KSC Gas Blowback M9, M9A1 WE Gas Blowback M92F, M9A1 KJ Works Gas Blowback M9

Main Material:

Nylon Fiber; Aluminum Weight: 1930g Min. Length: 500mm Max. Lenght: 570mm

CAUTION:

Read the instructions before installing this product.

This product is for airsoft only.


User of this product must be over 18 years of age. Ensure that the pistol is not loaded prior to installion.

Always wear eyes protective gear.

CAA is not responsible for any damage due to installing or using this product.



Always wear eyes protective gear.

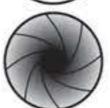

NEVER look into the gun muzzle.



NEVER point the gun or to shoot towards a person or an animal.



Store the air gun at places out of reach by children.



Always put the gun in a case or bag when you are carrying it.



Always put your finger away from the trigger except when you are ready to fire the gun.



Set selector lever at the "SAFE" position and remove the magazine when the rifle is not in use.



Even if the magazine is removed, there might be remaining BB bullet in the gun which still can be shooting.

COMPONENTS NAME

The RONI Pistol-Carbine Conversion is ergonomic designed and equipped with ambidextrous front and rear sling mounts, and large charging handle. Charging the weapon is easy and it is user friendly to both left and right handed operators. It is integrated with a CNC machined Aluminum top and 2 side rails for mounting accessories, and a Nylon Fiber lower rail to mount any forearm grip. The RONI is equipped with an adjustable 5 position buttstock, and features a spare magazine holder for faster reloading. The adjustable cheek rest on the buttstock is removable. The RONI Pistol Carbine Conversion includes a pair of flip-up sights, a detachable folding forearm grip and a charging handle.




- 1. Fore receiver
- 2. Receiver body
- 3. Rear receiver lock
- 4. Compensator
- 5. Left side rail
- 6. Right side rail
- 7. Top rail
- 8. Filp-up front sight


- 9. Flip-up rear sight
- 10. Forearm grip
- 11. Retractable buttstock
- 12. Cheek-rest
- 13. Cheek-rest lock button
- 14. Spare magazine holder
- 15. Buttstock lock button
- 16. Front safety pin

- 17. Rear safety pin
- 18. Front sling swivel slot
- 19. Rear sling swivel slot
- 20. Charging handle
- 21. M9 front spacer
- 22. M9 rear spacer
- 23. M9A1 front spacer
- 24. M9A1 rear spacer

ASSEMBLING INSTRUCTION

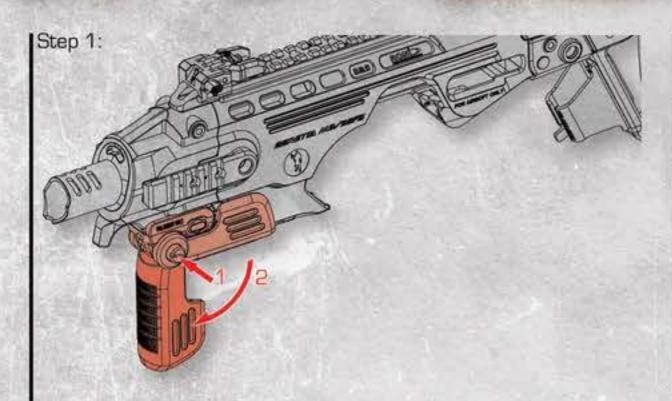

Open forearm-grip to vertical position by pushing release button and swinging grip down into position.

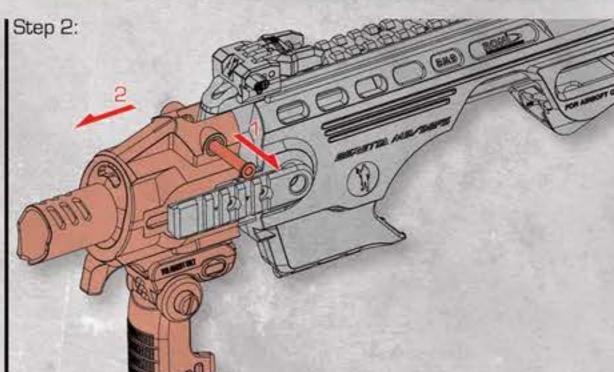

Pull the front safety pin out by pushing it thru the RONI, slide the fore receiver to fully extended position.




Pull the buttstock to full extension by pressing the button on the rear side of the stock.




And then pull the rear safety pin out by pushing it thru the RONI, slide the rear receiver lock to fully extended position.



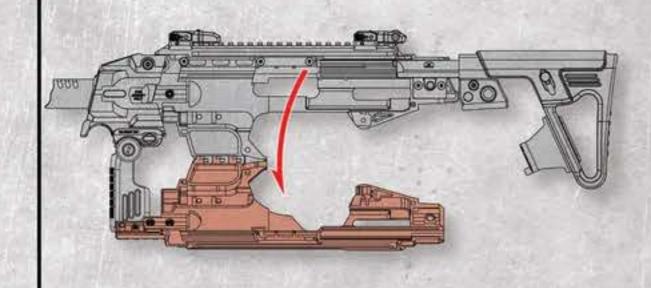

Lay the RONI down with the muzzle is pointing left, then open the body on its bottom hinge.


Step 6:

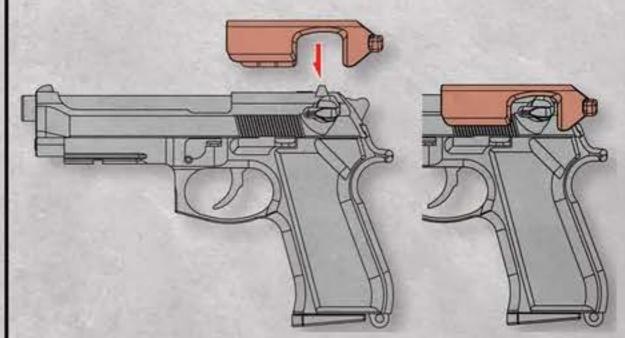

For the pistol, place the charging handle to the rear of the slide as shown.


ASSEMBLING INSTRUCTION

Step 7:

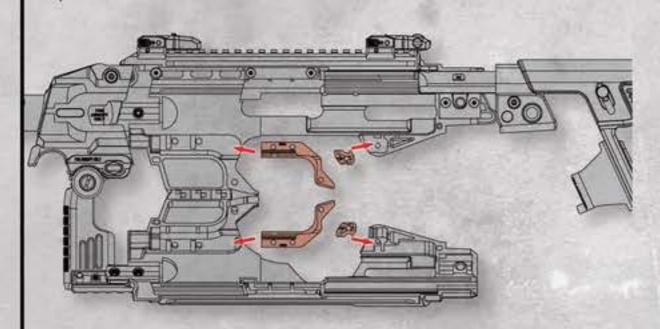


Place the corresponding M9 or M9A1 spacers to the place indicated by arrows.

Step 8:

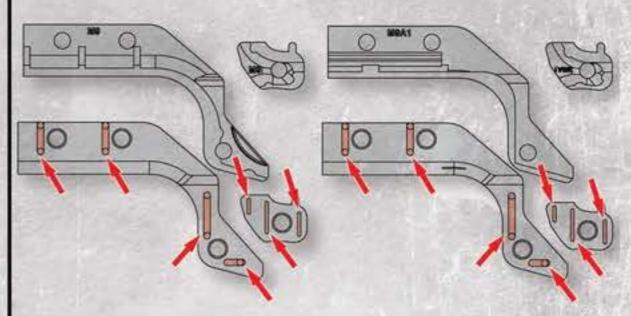


Modification to the areas of spacers indicated by arrows may required if necessary.

Step 9:

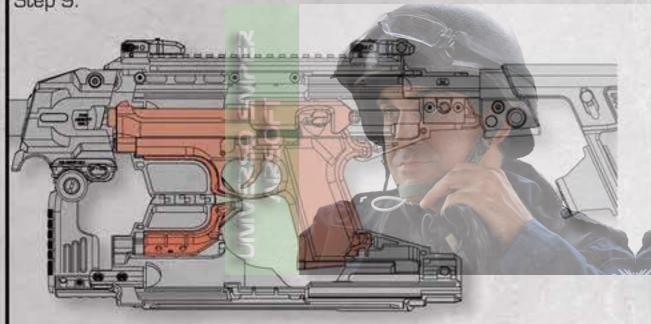


The above picture showing the installation of M9 pistol on the RONI. Make sure the pistol and charging handle are locked into position before folding hinged body back over.

|Step 10:

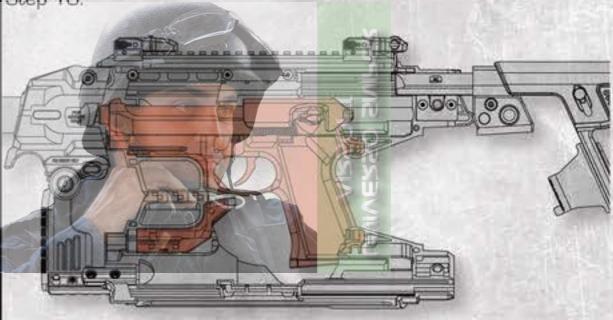


The above picture showing the installation of M9A1 pistol on the RONI. Make sure the under barrel rail slot on the pistol is engaged to the male rail bar on the RONI. Also, make sure the pistol and charging handle are locked into position before folding hinged body back over.

Step 11:

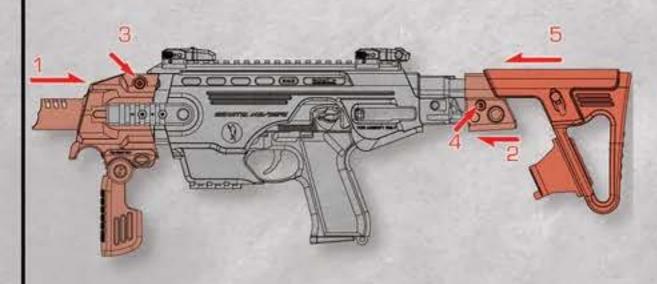


Close the body. Then push the fore and rear receiver lock back together into locking position, then place pins back into place.

OPERATING

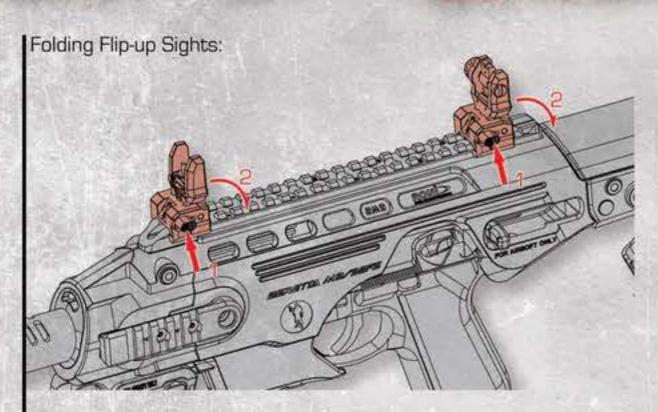


Push the button indicated to raise the sights. The push button can be ambidextrously accessed. Press the sights to lay it down, the sights will be locked automatically.

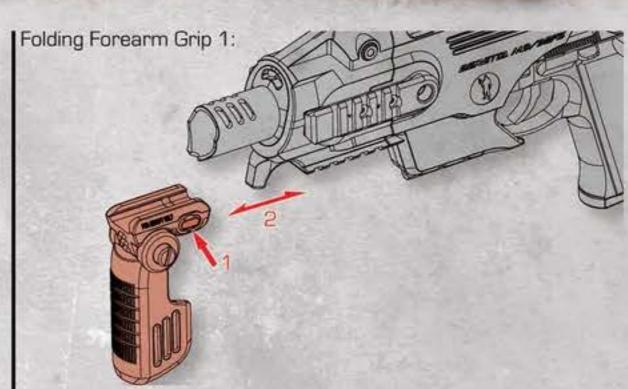


Press the button indicated to install or remove the forearm-grip.



The poistion of the forearm-grip can be changed by pressing the button indicated.

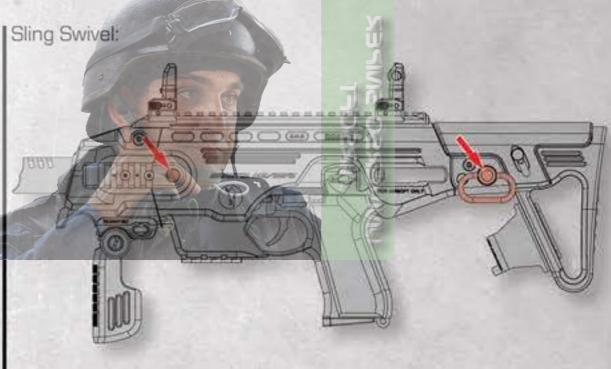

A sling swivel (not included) can be install on the front and rear slots on both sides as shown.

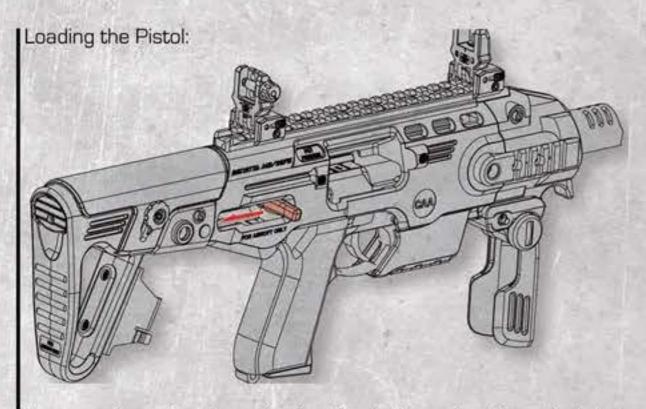

Large charging handle for fast charging the pistol. It can be ambidextrously accessed.

OPERATING



Always set the safety lever to the SAFE position when you are not firing the pistol.




A spare magazine can be installed on the spare magazine holder on the buttstock for quick magazine reload.



Press the release clip to take the magazine out.



Loose the locking button indicated to adjust the height of the cheek-rest. The locking button can be placed on either side of the stock.

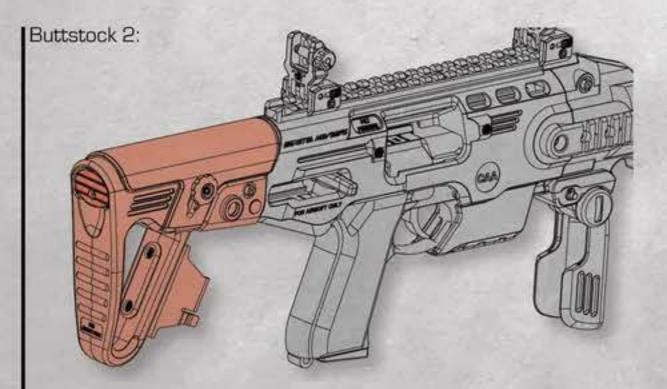

Press the button on the rear side of the stock to extend or retract the buttstock. It can be set in 5 different positions.

