


Item No: GP731

# Installation Guide

Please take out the supplied Special made G&P M20 High Speed motor and install it into the new designed motor housing.

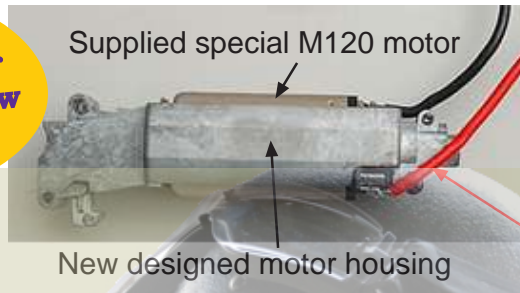


Please note about the black and the red wires positions.



Make sure wires did not block the movement of the selector.

Suggest be wrapped by tape to stop the movement of wires.

Remove the original motor housing and replaced with the new G&P's replacement motor kit. Make sure wires did not block the movement of the selector.

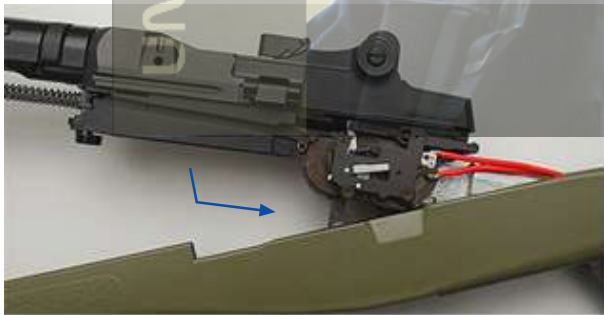

Losen stock screws for cheek pad height adjustment.

Butt pad layers can be removed for length adjustment.

Simplily install the upper part to G&P DMR furniture.

# OOHRRH!



# FINISHED!!