




# AK Dummy Bolt Installing Manual




**1** Open the top cover and remove the bolt carrier parts.

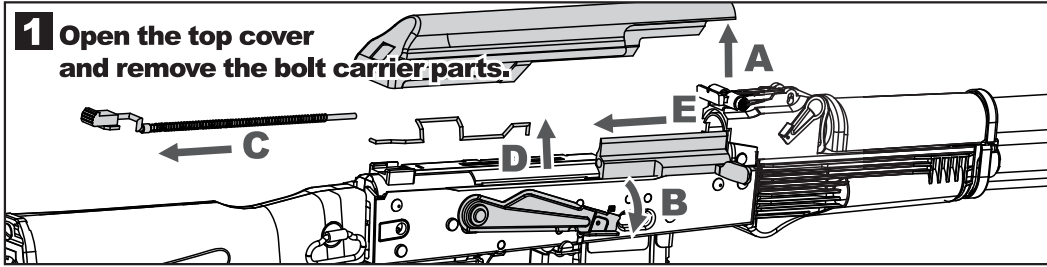


**2** Remove the bolt carrier.

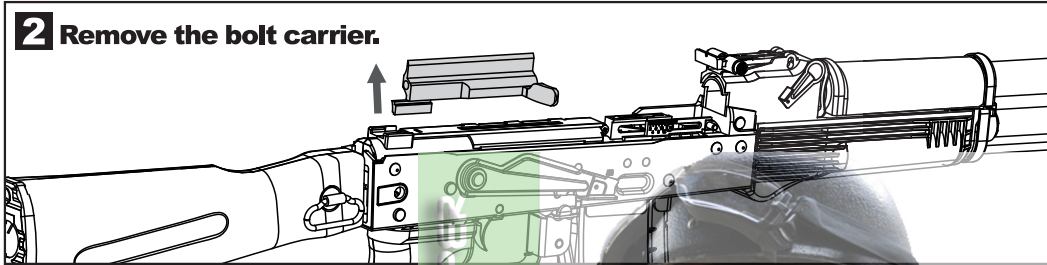


**3** Cut hop-up lever 2mm ~ 3mm off.

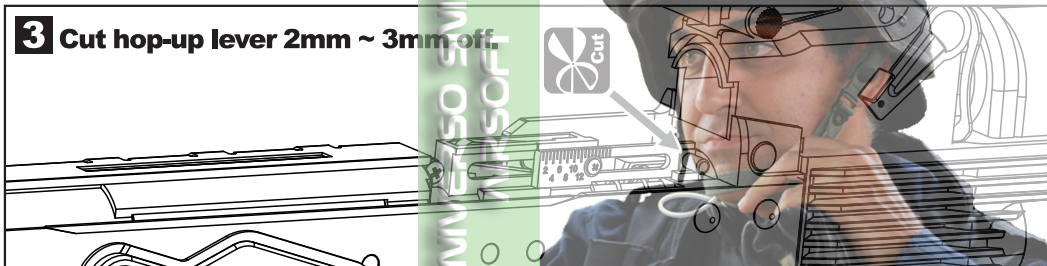

**4** Install the dummy bolt.

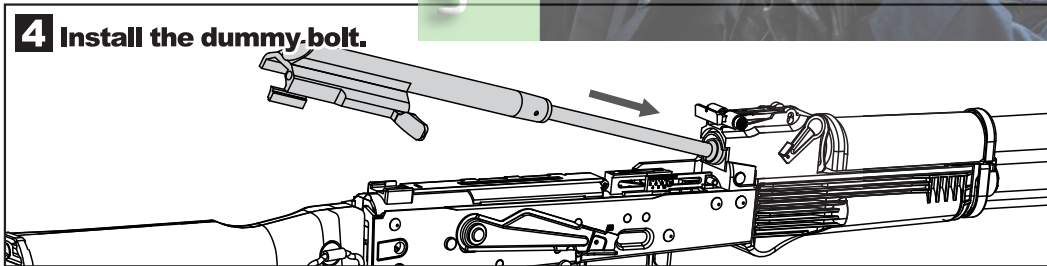

**5** Install the recoil spring set and top cover, then finish.

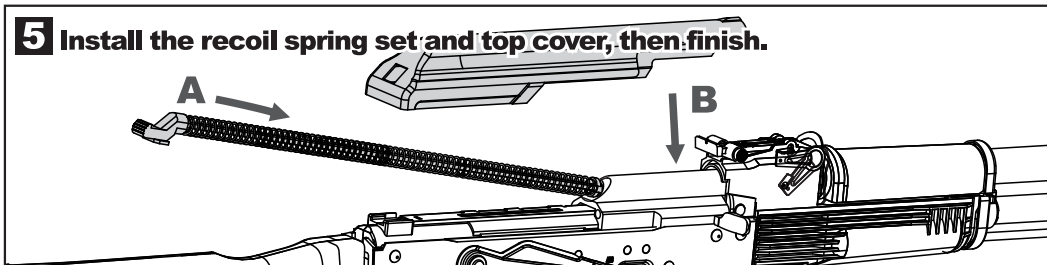

VEGA FORCE COMPANY  
TWO251A