



## OPERATOR MANUAL

FOR THE

AN/PEQ-15

ADVANCED
TARGET POINTER
ILLUMINATOR AIMING LIGHT









- Do not look steadily at laser or LED light.
- Do not use the laser or light illuminate the people and animal's eyes.
- Do not use the laser or light illuminate the moving vehicle .
- Eye damage can occur if the laser is handled carelessly.





# **COMPONENT NAME**









# **BATTERY INSTALLATION**




1. Unscrew the battery cap.



2. Install the battery.



3. Screw the battery cap.



Orient the battery as indicated by the marking on the AN/PEQ-15 body.

#### NOTE:

Do not upside down Install the battery, the AN/PEQ-15 will be damage. Use the rechargeable battery(16340 RCR123A 3.7V, 17335 RCR123A 3V) or the CR123A 3V battery.





# **SWITCH**



#### **Button Switch**

Pressing the button switch to keeps illumine.

Pressing again the button switch operates the AN/PEQ-15 in the operational mode set by the cable switch.

#### NOTE:

When the Button Switch turn on, the cable switch is no function.



#### Cable Switch



The cable switch plug into the remote jack.

Pressing the button or pad at the end of the cable switch causes the AN/PEQ-15 to turn on. When the button is released, the AN/PEQ-15 turn off.


#### CAUTION

The cable switch plug must full insert remote jack, the function of PEQ-15 can operate normally.





# **MODE SELECTOR**

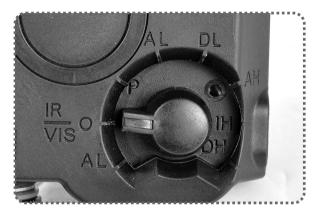

BUTTON SWITCH		CABLE SWITCH	
AL	Keep laser power on	AL	Laser power on
0	Power off	0	Power off
Р	Keep illumination power on	Р	Illumination power on
AL	Keep laser power on	AL	Laser power on
DL	Keep illumination / laser power on	DL	Illumination / laser power on

### NOTE:

Do not turn the Knob to position "AH, IH and DH". When you using the laser or light, please remove the Lens Cap.





# **ADJUSTMENT**

## Laser adjustable



Turn up side the laser point to down. Turn down side the laser point to up.



Turn left side the laser point to right. Turn right side the laser point to left.



#### **CAUTION**

Do not force to turn the LED light adjustable. The LED light can not adjust the focus.





#### NOTE:


When you using the laser or light, please remove the Lens Cap.






# STICK THE LABELS

As the figure, stick the labels on the battery case.

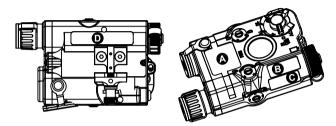

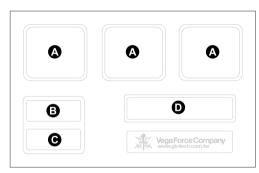



4F-6, No.14, Xiwei St., Sanchoung City, Taipei County 241, Taiwan TEL: 886-2-2287-9427 FAX: 886-2-2287-9450 Email: gb.tech@msa.hinet.net