



**KRYTAC®**

UNIVERSO SNIPER  
AIRSOFT




UNIVERSO SNIPER  
AIRSOFT

**OWNER'S MANUAL**

**ALPHA**

**CRB**

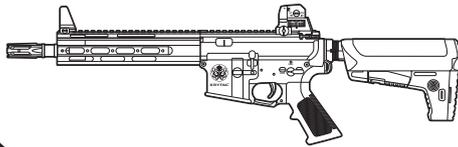

# TABLE OF CONTENTS

---

Firearm Safety Rules .....	2
Specifications .....	4
Meter per Second Diagram .....	5
Package Contents .....	5
Loading the Magazine .....	6
Fire Selector Switch.....	7
Battery Installation .....	8
Hop-Up System .....	9
Clearing Jammed BBs.....	10
Disassembly .....	11
Assembly.....	12
Main Spring Access.....	13
Cleaning and Maintenance.....	16
Operating Under Harsh Conditions .....	18
Trouble Shooting Guide.....	19
Contact Information .....	20
Component Diagrams and Lists .....	21



**WARNING**

**THIS PRODUCT IS NOT INTENDED FOR USE BY UNTRAINED PERSONS (INCLUDING CHILDREN) WITH OR WITHOUT PHYSICAL OR MENTAL HANDICAPS. THESE HANDICAPS INCLUDE REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE OF THE PRODUCT AND SAFETY GUIDELINES. ALL USERS SHOULD HAVE TRAINED SUPERVISION OR INSTRUCTIONS CONCERNING THE USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR HIS OR HER SAFETY.**

# SAFETY RULES

---

Please read the entire KRYTAC manual before operating the airsoft gun. This manual covers important safety, operational, and maintenance topics. It is important that the user reads and understands the manual in order to safely handle and operate the airsoft gun. Failure to follow the safety guidelines and/or operational instructions in this manual may result in serious personal injury or damage to the airsoft gun.

## Safety Guidelines

---

### EYE PROTECTION

Always wear eye protection while shooting, operating, and maintaining your airsoft guns.

### FIREARM SAFETY RULES

**Always assume that the airsoft gun is loaded.** Never assume the chamber is empty based on memory or from someone else's word. An airsoft gun can still fire with the magazine removed.

### KEEP YOUR FINGER OFF THE TRIGGER

Remove your finger from the inside of the trigger guard until your sights are aligned on target and you are ready to fire.

### MUZZLE CONTROL

Always keep the muzzle of the airsoft gun pointed in a safe direction. Never point the airsoft gun towards anything you do not intend to shoot.

### KNOW YOUR TARGET AND ITS SURROUNDINGS (SAFETY DISTANCE)

Take note of objects in front of and beyond your target. Airsoft guns can shoot up to and beyond 150 feet/45.5 meter and may travel further than intended without an adequate backstop. Never shoot an airsoft gun directly at targets such as rocks, glass, water, or other hard surfaces that may ricochet BBs in unpredictable directions.



**WARNING**

## SAFETY IS YOUR RESPONSIBILITY

---

The KRYTAC airsoft gun is designed and manufactured to KRYTAC's high standards. It was carefully inspected before it was packaged and shipped from our factory. It is the sole responsibility of the user for its safe use and handling. This airsoft gun is safe unless handled irresponsibly or misused.

### BEWARE OF BARREL OBSTRUCTIONS

Ensure that the barrel of your airsoft gun is free and clear of any obstructions prior to firing the airsoft gun. Failure to do so may cause a malfunction, and in some cases damage the airsoft gun.

### KEEP THE SAFETY ON

Keep the fire selector set to safe until your sights are aligned on target and you are ready to fire.

# SAFETY RULES

---

## FAILURE TO FIRE

If the airsoft gun fails to fire, misfires, or malfunctions, do not look into/down the barrel of the airsoft gun. BBs can jam in the chamber and can launch suddenly while under pressure causing serious injury.

## FUSE

DO NOT REMOVE OR BYPASS THE FUSE. It is an integral part of the system, alterations to the fuse will void warranty and may result in operational failure and critical damage to internal components.

## MAINTAIN YOUR AIRSOFT GUN PROPERLY

Maintaining your airsoft gun as outlined in the manual ensures that your airsoft gun will be safe to shoot and perform to its designed specifications. Alterations, modifications, or adjustments may damage your airsoft gun, making it unsafe to shoot and/or voiding all warranty claims.

## STORAGE AND TRANSPORT

Keep the fire selector on the airsoft gun set to safe, with the magazine and battery removed when storing your airsoft gun. Always store your airsoft gun in a safe place and out of the reach of children. When transporting your airsoft gun make sure that it is in a designated airsoft gun case. Never brandish your airsoft gun in public.



WARNING

IT IS YOUR RESPONSIBILITY TO SAFELY STORE AND TRANSPORT YOUR AIRSOFT GUN.

---

## ORANGE TIP

Any alteration of the coloration or markings required by state and/or federal law may be deemed illegal in a court of law. All risks and responsibility of any alteration to the product will be assumed by the operators, owners and/or user of the product.



WARNING

THE ORANGE TIP DOES NOT DISTINGUISH YOUR AIRSOFT GUN AS A TOY, ALWAYS TREAT YOUR AIRSOFT GUN AS IF IT IS A REAL FIREARM.

---

## HAZARDS OF BEING MISTAKEN FOR A REAL FIREARM

Due to the nature and design of some airsoft guns, they may be mistaken as a real firearm. It is strongly advised to operate an airsoft gun in the safety and privacy of your own home, or at a legally sanctioned location or game field. Police, Peace Officers, and Law Enforcement Officers are trained to treat objects that resemble a firearm as one. In the event that you are approached by a Law Enforcement Official, completely comply with their instructions. Never point an airsoft gun at a Law Enforcement Official. Confrontation with a Law Enforcement Official may result in serious injury or death.

## ALCOHOL, MEDICATIONS AND DRUGS

Do not handle or operate your airsoft gun while under the influence of alcohol, medication, or drugs that may impair judgment.

# SPECIFICATIONS

## ALPHA CRB



Overall Length	711 mm (28") - 795 mm (31.3")
Overall Height	180 mm (7")
Weight	2.38 kg (5.24 lb)
Outer Barrel Length	267 mm (10.5")
Inner Barrel Length	280 mm
Inner Barrel Diameter	6.05 mm



**CALIBER**  
6 MM

### MECHBOX

Krytac Trident Mechbox  
with 8 mm Bearing

**RATE OF FIRE**  
18+ RPS

PERFORMANCE DETAILS ARE BASED ON U.S. SPECIFICATIONS AND CAN BE MODIFIED TO MEET THE LAWS AND REGULATIONS OF YOUR LOCAL REGION.

### PRODUCT FEATURES

KRYTAC Alpha 9" rail  
KRYTAC metal alloy receivers  
KRYTAC battery stock  
Ambidextrous fire selector  
MIL-STD 1913 Picatinny top rail  
Locking bolt and bolt release  
Adjustable iron sights

Integrated FET system  
Easy maintenance spring guide  
Padded cylinder head  
Relief-cut cylinder window  
Anti-corrosion mechbox coating  
Adjustable rotary Hop-Up  
KRYTAC 20K motor

# METER PER SECOND (MPS) DIAGRAM

Please check the chart below to see what the maximum velocity is for your region. If your region requires you to adjust your airsoft gun's velocity, please see Main Spring Access section for instruction.

Country	Max Velocity	Models
Japan, Italy	99 m/s	Alpha CRB Alpha SDP Trident MK II SPR Trident MK II CRB Trident MK II PDW Trident LMG Enhanced
UK	110 m/s	
Austria, Belgium, Bosnia and Herzegovina, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Hungary, Iceland, Latvia, Liechtenstein, Lithuania, Macedonia, Moldavia, Netherlands, Norway Poland, Portugal, Romania, Serbia, Slovakia, Slovenia, Spain, Sweden, Switzerland, U.S.A.	120 m/s	
Canada	120 m/s	Trident MK II SPR Trident MK II CRB Trident LMG Enhanced



# PACKAGE CONTENTS


- [1] ALPHA CRB airsoft gun
- [1] Magazine
- [1] Set of front and rear sights

- [1] User's manual
- [1] Cleaning rod

# LOADING THE MAGAZINE


## High-Cap

1. Place the hi-cap magazine with the trap door (A) facing upward. Open the trap door and dispense BBs into the BB well.
2. When full, close the trap door and turn the winding wheel (B) forward until the 'clicking' changes tone.

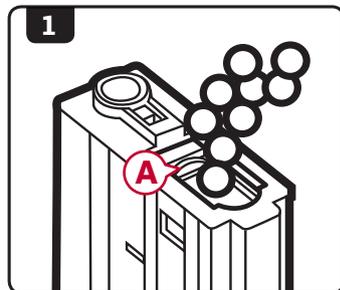

WARNING

DO NOT OVER LOAD THE  
MAGAZINE

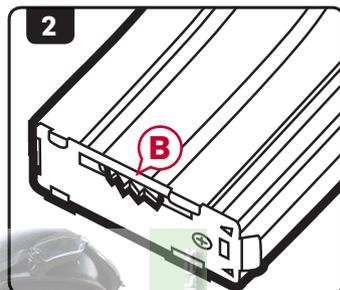


## Mid-Cap

1. Using a speed loader or other magazine loader, insert the nozzle into the opening of the magazine.
2. Press down on the loader plunger to load BBs into the magazine.
3. Stop once the magazine is full, do not force more into the magazine.


# FIRE SELECTOR SWITCH

## SAFE MODE

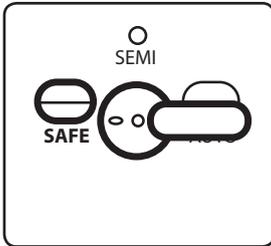


When in safe mode, the trigger will not engage and the airsoft gun will not fire.

## SEMI-AUTO MODE

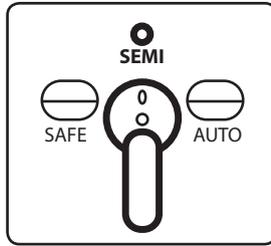

While in semi-auto mode, the airsoft gun will only fire one shot for each time the trigger is engaged.

## FULL-AUTO MODE

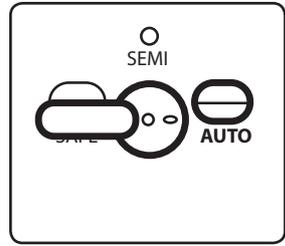

In full-auto mode, the gun will continuously fire as long as the trigger remains engaged.

### SAFETY TIP

It is advised when you are not ready to fire, keep the fire selector switch on the airsoft gun in the safe position.



### WARNING




DO NOT ENGAGE THE TRIGGER WHILE SWITCHING BETWEEN MODES ON THE FIRE SELECTOR.

# BATTERY INSTALLATION




**ENSURE THAT THE STOCK IS IN THE FULLY COLLAPSED POSITION BEFORE OPENING THE STOCK COVER. DO NOT REMOVE THE STOCK COMPLETELY FROM THE GUN.**

1. Set the fire selector to safe mode and depress the stock cover release button **A** on both sides of the stock to lift and remove the cover.
2. Connect a nunchuck style battery to the connector. Push the connector plugs **B** together firmly until they lock into place.
3. Place the nunchuck style batteries **C** down either side of the battery tubes found on the sides of the stock.
3. Replace the stock cover by first placing the tab **D** of the cover into the stock and then rocking the stock cover down into position. Ensure that the stock cover release buttons snap securely into place.

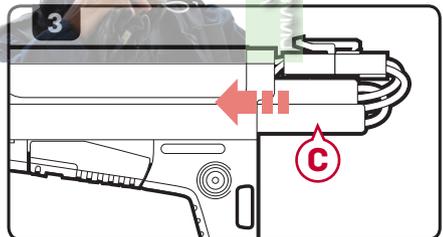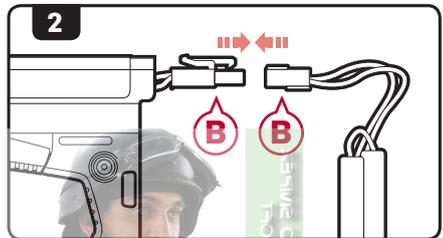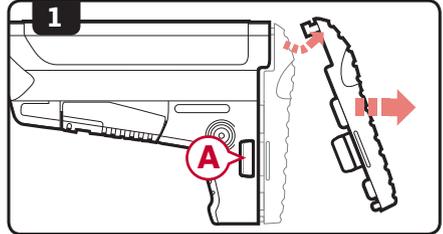

**WARNING**

**EXCESSIVE PULLING OR TUGGING OF THE BATTERY WIRES WHEN INSERTING OR REMOVING THE BATTERY CAN CAUSE THE FUSE HOUSING TO COME LOOSE OR DAMAGE TO THE GUN.**



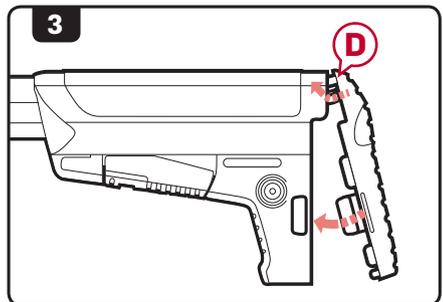


# HOP-UP SYSTEM

The advanced KRYTAC rotary Hop-Up unit is a standard feature in the Alpha series AEGs. Proper adjustment of the Hop-Up will allow the AEGs to fire in a variety of shooting environments to obtain optimal BB trajectory.

## Hop-Up Adjustment

1. Pull the charging handle (A) rearward locking the bolt plate (B). This will provide access to the Hop-Up adjustment dial (C).
2. Turn the dial up or down, an audible click will confirm each adjustment.
3. Increasing the number on the dial will increase the amount of Hop-Up on the BB. Decreasing the number will lower the amount of Hop-Up on the BB.
4. Once the Hop-Up has been set, depress the bolt catch release (D) to return the bolt plate back to its fully seated position.

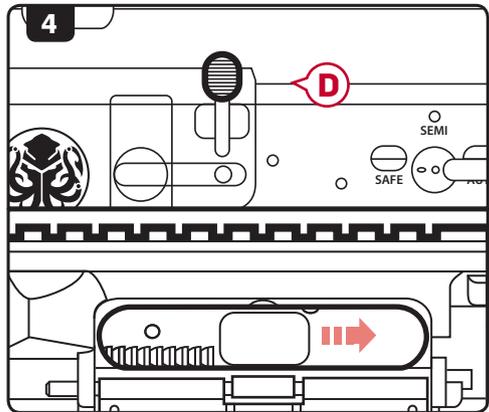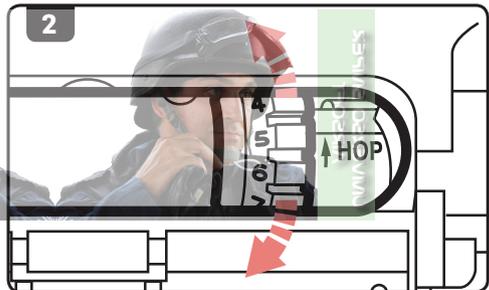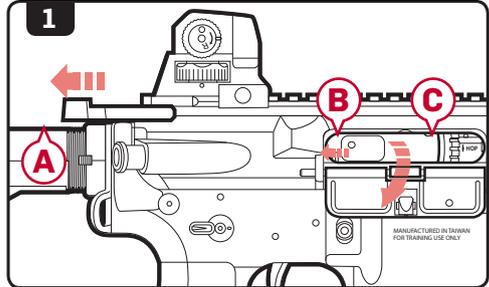

# HOP-UP SYSTEM

## Excessive Hop-Up


Airsoft BB travels in an extreme upward trajectory. Decrease the Hop-Up.

## Ideal Hop-Up

Airsoft BB travels in a long, horizontal flight path.


## Insufficient Hop-Up

Airsoft BB travels a short distance in a downward trajectory. Increase the Hop-Up.

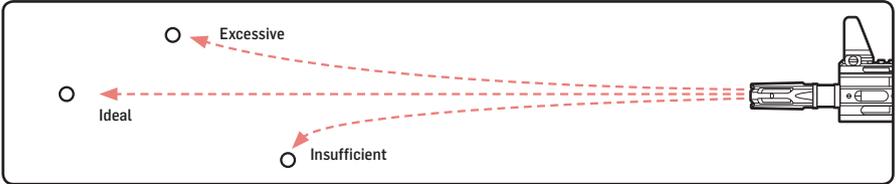

# CLEARING JAMMED BBS

1. Disassemble the airsoft gun and remove the inner barrel assembly (A). (see pg.10 for disassembly instruction).
2. Lift the Hop-up lever (B) from the inner barrel assembly (refer to step 3 of pg.15).
3. Take the cleaning rod (C) and insert the unjamming side from the front of the barrel through to the rear to clear out the jammed BB.
4. Look through the barrel to ensure that it is cleared.
5. Reassemble the airsoft gun. (see pg.11 for assembly instruction).

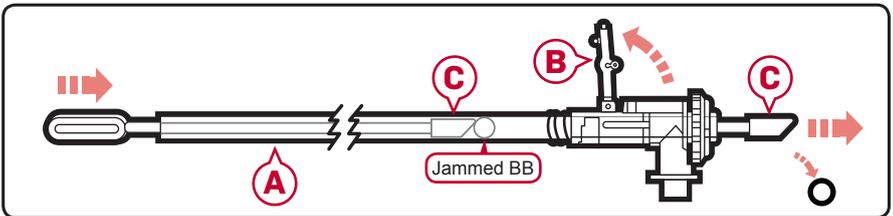


## NOTE

Use only new, quality airsoft BBs. Never use recycled or low quality airsoft BBs, doing so may cause excessive jamming. In most cases, it can severely damage the internal gearbox and/or Hop-Up and inner barrel.






# DISASSEMBLY

- Slide the Hop-Up and inner barrel assembly **C** out of the upper receiver.

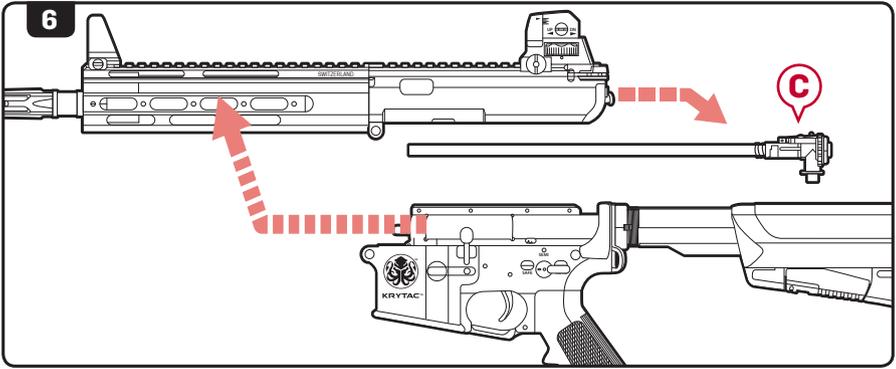

# ASSEMBLY

- Insert the Hop-Up and inner barrel assembly into the upper receiver.
- Ensure that the bolt catch lever is in place, then slide the upper receiver back onto the lower receiver.
- Reinstall and secure the front body pin.


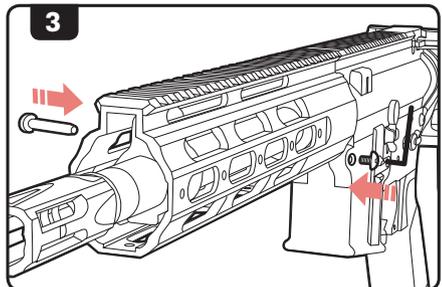
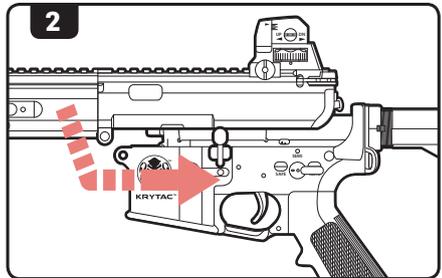
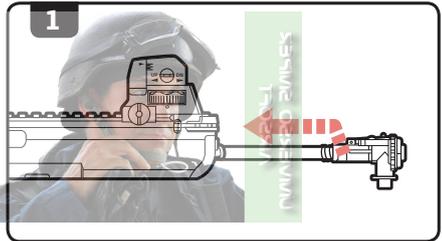


# MAIN SPRING ACCESS




PLEASE REVIEW THE WARRANTY CARD INFORMATION BEFORE OPENING AND/OR MODIFYING THE KRYTAC AIRSOFT GUN.

1. Disassemble the airsoft gun. (see pg.10 for disassembly instruction).
2. Remove the bolt release button **A**.
3. Pull down on the tab of the stock adjustment lever **B**, slide the stock **C** rearward and off the buffer tube **D**.
4. Use a Phillip (P3) screw driver to remove screw **E** and washer **F** from inside the buffer tube **D**.
5. Remove the buffer tube **D**.
6. Remove the sling plate **G**.

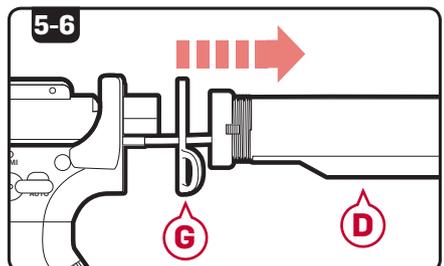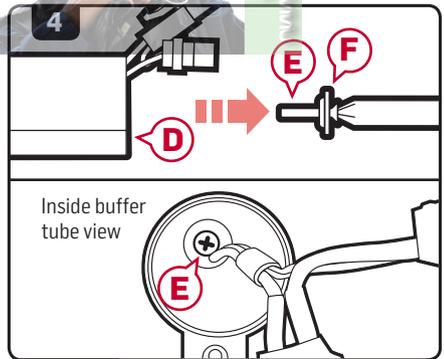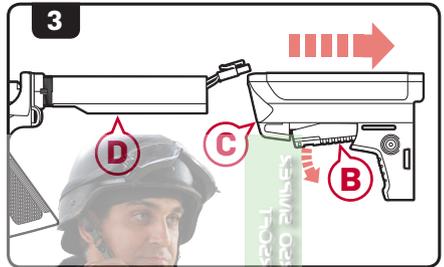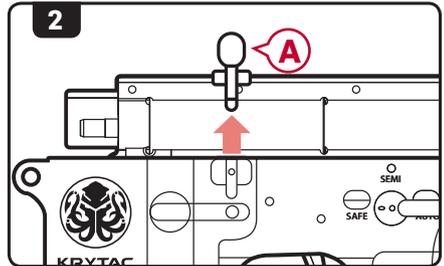

# MAIN SPRING ACCESS





- Remove the screw **H** from the magazine release button **I** using a Phillip screw driver, then remove the magazine release button **I**.
- Use a Phillips screw driver to remove 2 screws **J** on the bottom of the motor plate **K** then remove the motor plate.

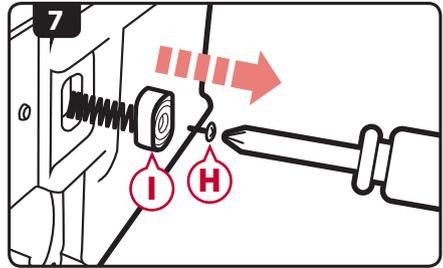

## NOTE


Take note of the wire and motor orientation before disconnecting.

- Disconnect the motor wires **L** and remove the motor **M**.
- Remove 2 Phillips screws **N** at the top of the motor grip interior, then remove the motor grip **O**.
- Remove the right side selector switch **P** using a 1.5 mm hex key.

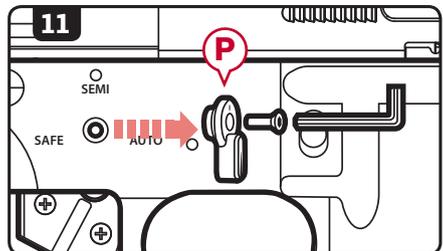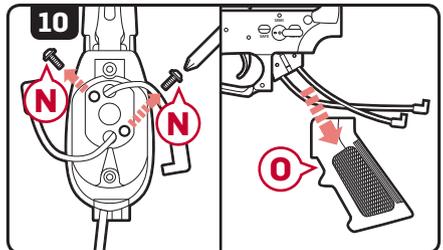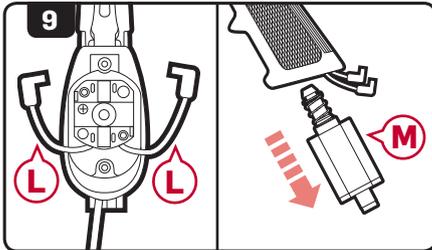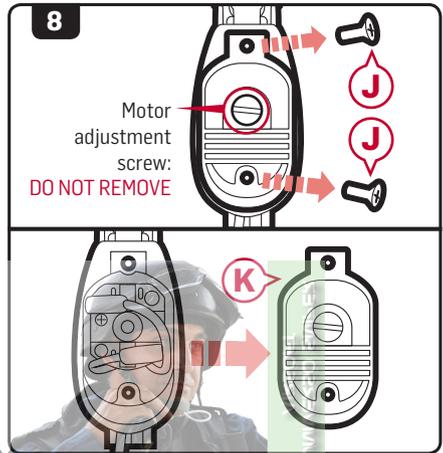


# MAIN SPRING ACCESS


12. Use a 2.5 mm hex key to remove the rear receiver pin screw **Q** then press the rear receiver pin **R** in and remove it from the other side of the airsoft gun.

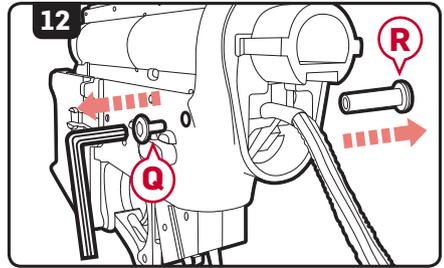

13. Use a 2.5 mm punch **S** and press the body pin **T** in and remove it from the other side of the airsoft gun.

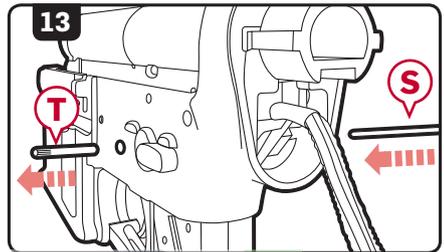



14. Move the selector switch **U** half way between safe mode and semi-automatic mode then slide the gearbox **V** out of the lower receiver.

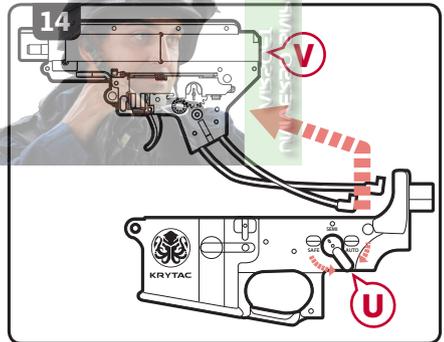

## NOTE

Spring guide is under extreme pressure. Remove with caution.

15. Use a 8 mm hex key **W**, push the spring guide **X** into the gearbox, turn 90° counter clockwise then pull the spring guide and spring **Y** out.



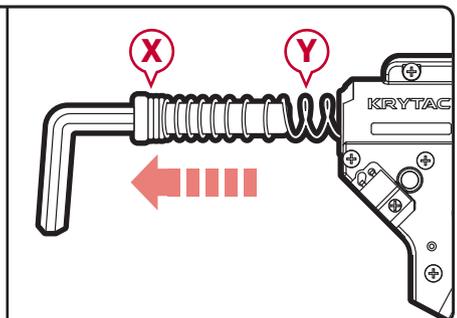
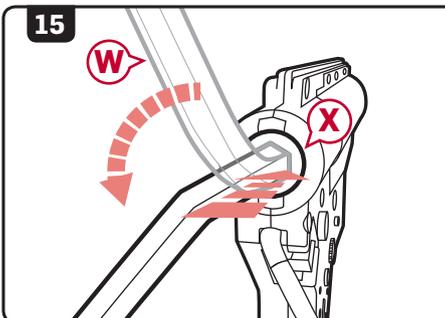


# CLEANING AND MAINTENANCE

## NOTE

WHILE POINTING THE AIRSOFT GUN IN A SAFE DIRECTION, REMOVE THE MAGAZINE AND CYCLE THE GEARBOX UNTIL NO BBS EXIT THE INNER BARREL. PLACE THE AIRSOFT GUN IN SAFE MODE AND DISCONNECT THE BATTERY PRIOR TO ANY CLEANING PROCEDURES.

1. Wipe down the external parts of the gun and remove any dirt and debris.
2. Disassemble the airsoft gun as described in the Disassembly section and pull out the barrel and Hop-Up assembly (A).
3. Pull back on the Hop-Up adjustment wheel (B) and lift the Hop-Up adjustment lever (C) up.
4. Take a lint-free cleaning patch (D) and place it through the looped end of the cleaning rod (E).

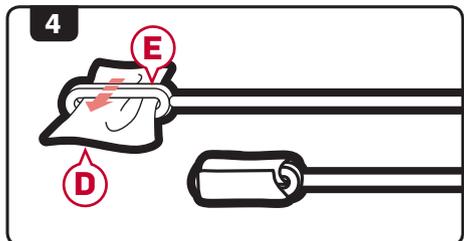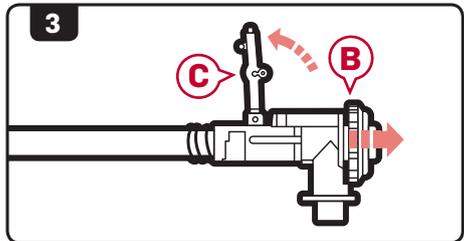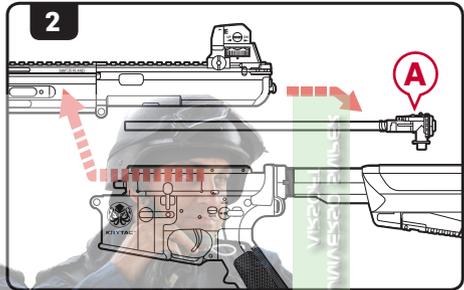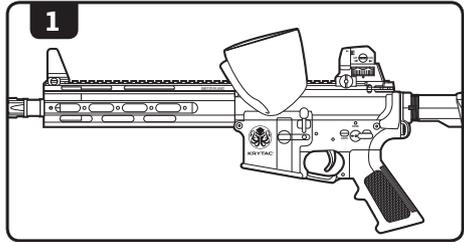


## WARNING

DO NOT ADD OIL TO THE HOP-UP BUCKING. EXCESSIVE OIL ON THE HOP-UP BUCKING MAY NEGATE THE HOP-UP, DECREASING RANGE AND ACCURACY.

# CLEANING AND MAINTENANCE


5. Run the cleaning rod through the barrel from back to front (in the same direction that BBs travel).

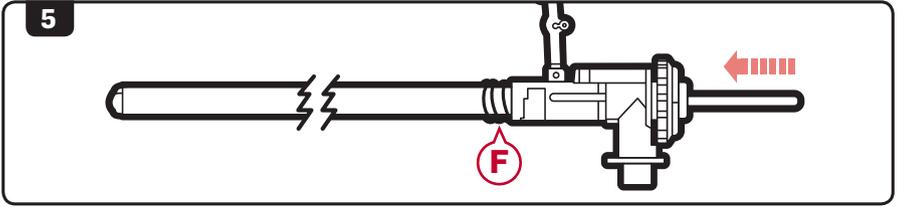


**WARNING**

**KEEP TRACK OF THE BARREL SPRING (F), IT CAN SEPARATE FROM THE BARREL ASSEMBLY.**

6. Pull back on the Hop-Up adjustment wheel and lower the Hop-Up adjustment lever back into position.

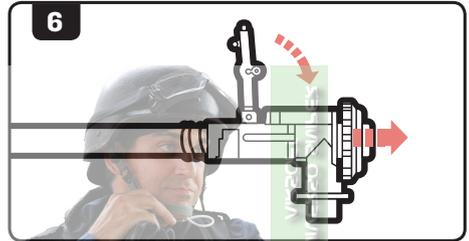

7. Reinsert the Hop-Up barrel assembly into the receiver and reassemble as described in the Assembly section.

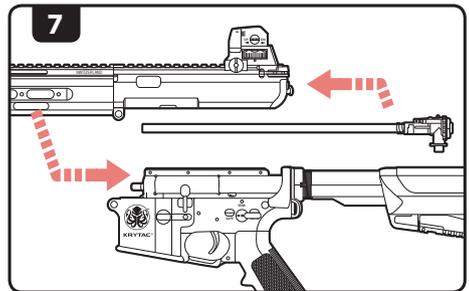

# OPERATING UNDER HARSH CONDITIONS

When operating under harsh conditions, special maintenance may be required to match the climate conditions of a specific operational area.

## Dust and Sand

In harsh dusty or sandy environments, excessive debris can cause malfunctions and/or excessive wear on parts. Keep the gun covered and protected while not in use. When performing maintenance, use lubrication sparingly as it tends to attract dirt and other particles. After use in a dusty or sandy area, always field strip the gun, as outlined in the Disassembly section, cleaning all the areas that can be reached with a soft, clean, lint-free cloth.

## Heavy Rain

Never submerge or expose your gun to extremely wet environments. Exposure to such conditions may cause electrical failure and fluid to build-up inside the gearbox. Dry completely with a clean, lint-free cloth and clean inner barrel when necessary.



# TROUBLE SHOOTING GUIDE



**WARNING**

**WHEN TROUBLESHOOTING, FOLLOW THE SAFETY MEASURES DESCRIBED IN THIS MANUAL.**

<b>SYMPTOMS</b>	<b>CAUSE</b>	<b>SOLUTIONS</b>
Not firing/No sound	Safety is engaged	Change selector to Semi Auto or Full Automatic Mode
	Low power or dead battery	Charge and replace battery
	Blown out fuse	Replace with new fuse
	Loose connection	Contact customer service for professional care
Motor is running but not firing	Inspect magazine	Check if magazine is properly loaded into the gun Ensure magazine is loaded with ammunition Ensure the hi-cap magazine is properly wound
Motor or battery is hot after short use	Damaged battery	Inspect and/or replace battery
	Loose connection terminal	Contact customer service for professional care
Semi-Auto feature not functioning properly	Battery voltage or discharge is too high	Condition or replace battery
Semi-Auto feature not working at all	Disconnecter is not engaged properly	Reset the disconnecter by setting the selector to safe, then to automatic, then to semi
Firing cycle slowing down	Battery is low on power	Charge or replace battery
High pitch or grinding noise	Motor level is not adjusted properly	Contact customer service for professional care
BB travels upward	Hop-Up adjusted too high	Dial down the Hop-Up adjustment
BB travels downward	Hop-Up adjusted too low	Dial up the Hop-Up adjustment
BB double feeding or rolling out of the barrel	Excessive grease or oil in the hopup chamber	Fire at least 200 rounds to eliminate excessive grease from the chamber Clean Hop-Up unit with supplied cleaning rod
	Hop-Up unit is turned off	Turn Hop-Up unit on
Hop-Up unit can't be adjusted	Hop-Up adjustment arm is not set properly	Reset Hop-Up adjustment arm (See page 16, step. 6 for reassembly)
Inner barrel is jammed or jamming	Use of recycled or low quality BBs	Use only KRYTAC branded or other high quality BBs
	Inner Barrel is contaminated with BBs or debris	Clear and/or clean inner barrel with supplied cleaning rod (See page 9 for clearing jam section and page 15 for cleaning and maintenance section)
Hi-Cap magazine not feeding	Magazine has not been wound	Wind wheel underneath magazine
	BBs are lodged inside the magazine	Shake or tap magazine to clear the jam
	Internal obstruction	Contact customer service for professional care

## CONTACT INFORMATION

---

For additional troubleshooting, information, or questions regarding KRYTAC customer service:


**Submit a contact form at: [www.krytac.com](http://www.krytac.com)**

**Email us at: [customerservice@krytac.com](mailto:customerservice@krytac.com)**


Join the KRYTAC Community and visit <http://forums.krytac.com> for any additional technical questions and information about your KRYTAC.




# COMPONENT DIAGRAM: ALPHA CRB

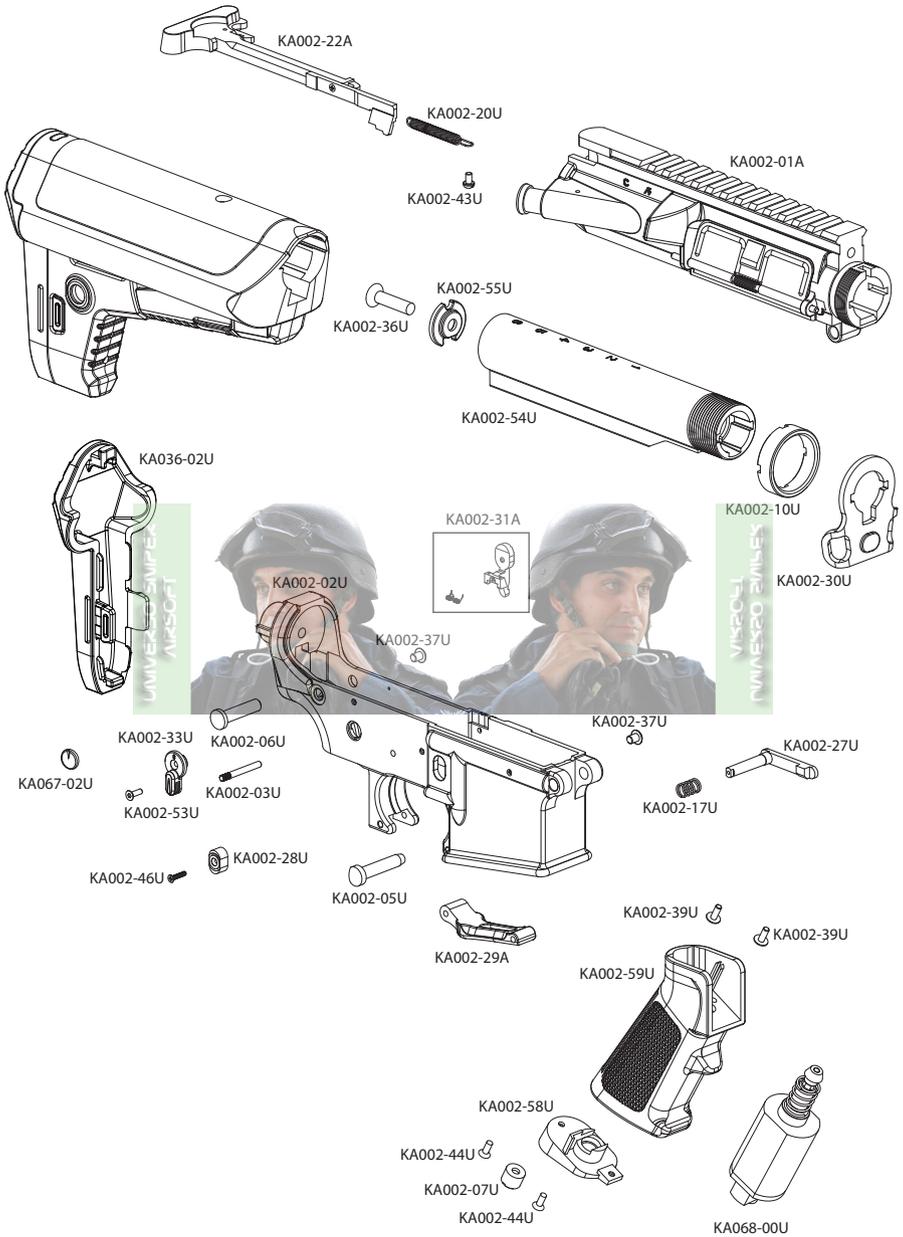


# COMPONENT DIAGRAM: ALPHA CRB

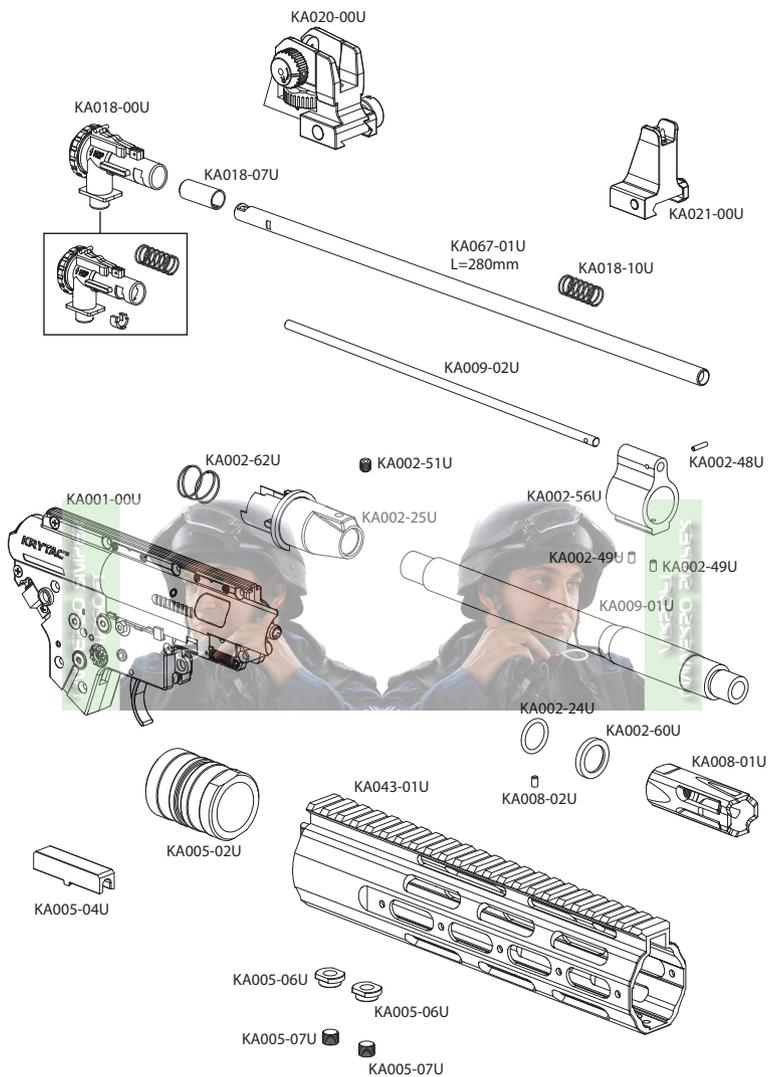

# COMPONENT DIAGRAM: ALPHA SERIES GEARBOX

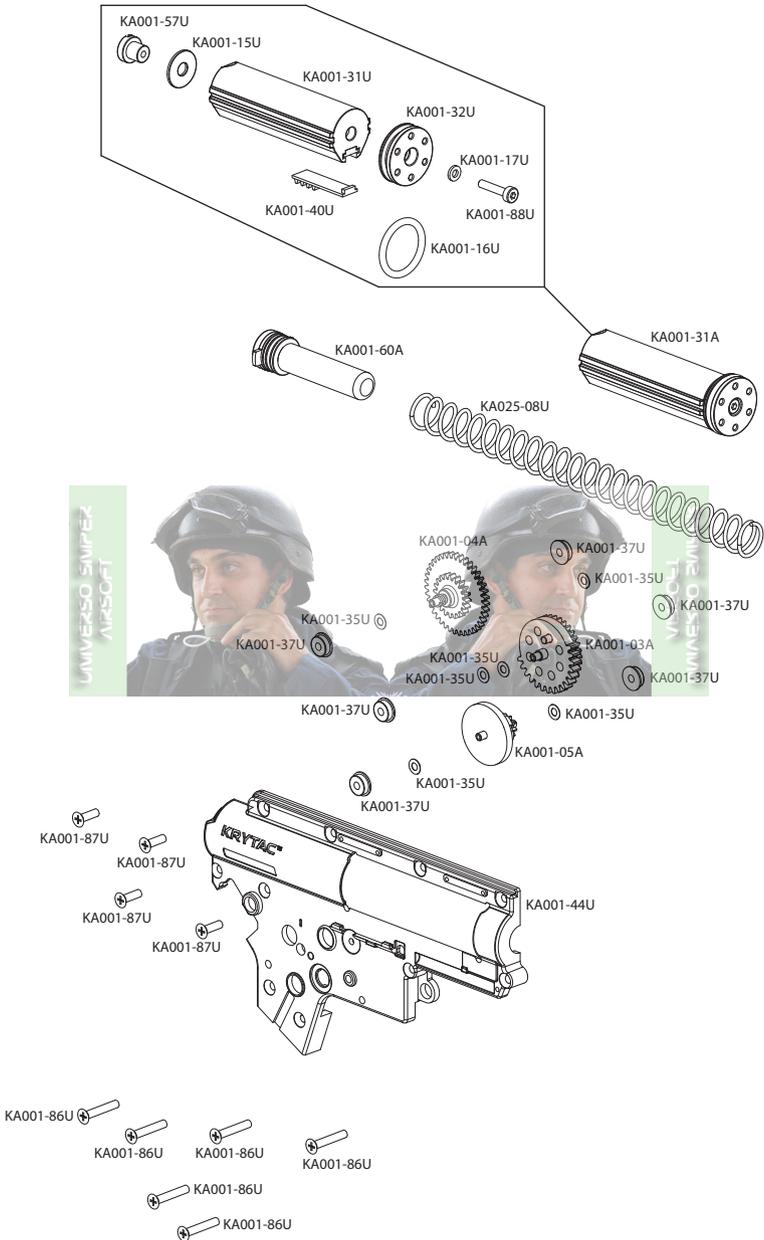

# COMPONENT DIAGRAM: ALPHA SERIES GEARBOX

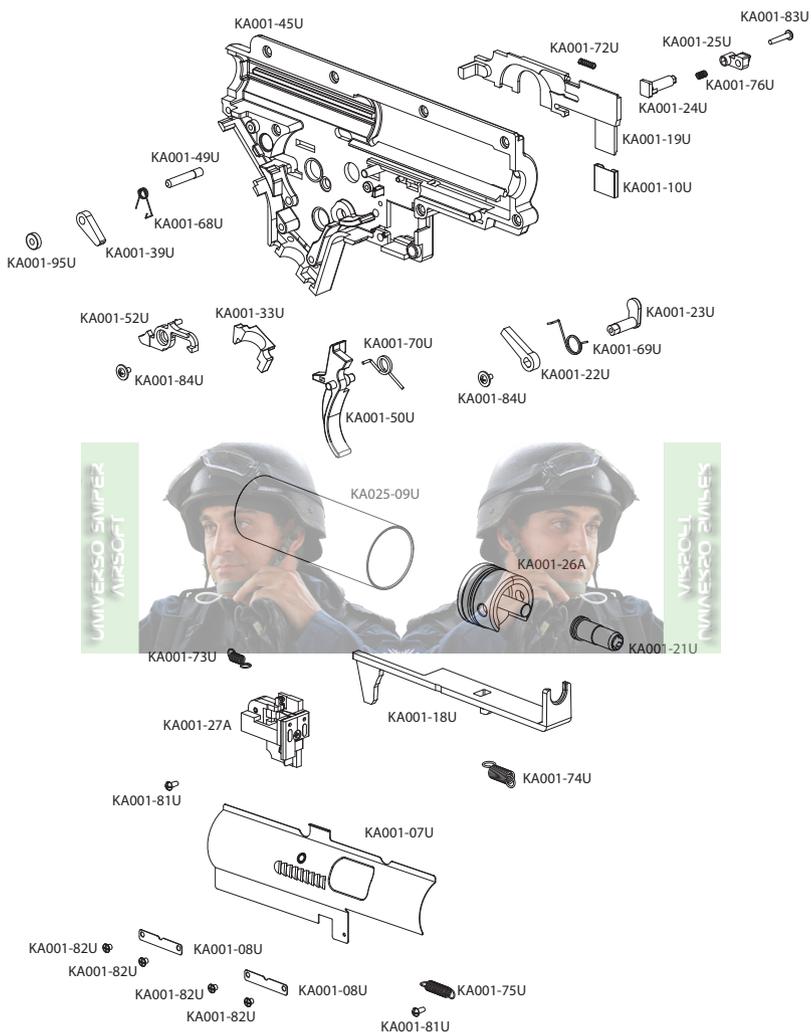

# COMPONENT LIST: ALPHA CRB

<b>PART #</b>	<b>NAME</b>
KA001-00U	GEARBOX
KA001-03A	SECTOR GEAR
KA001-04A	SPUR GEAR
KA001-05A	BEVEL GEAR
KA001-07U	BOLT PLATE
KA001-08U	BOLT PLATE GUIDE (2)
KA001-10U	CONTACT (SELECTOR)
KA001-16U	PISTON HEAD O-RING
KA001-17U	PISTON HEAD SHIM
KA001-18U	TAPPET PLATE
KA001-19U	SELECTOR PLATE
KA001-21U	AIR NOZZLE
KA001-22U	SAFETY BLOCK
KA001-23U	SAFETY BLOCK LEVER
KA001-24U	BOLT PLATE LOCK
KA001-25U	BOLT PLATE LOCK BUTTON
KA001-26A	CYLINDER HEAD ASSEMBLY
KA001-27A	SWITCH ASSEMBLY
KA001-31A	PISTON ASSEMBLY
KA001-31U	PISTON BODY
KA001-32U	PISTON HEAD
KA001-33U	WIRING COVER
KA001-35U	SHIM (6)
KA001-37U	BEARING
KA001-39U	ANTI-REVERSE LATCH
KA001-40U	PISTON TOOTH RACK
KA001-44U	GEARBOX SHELL (RIGHT)
KA001-45U	GEARBOX SHELL (LEFT)
KA001-49U	ANTI-REVERSE LATCH PIN
KA001-50U	TRIGGER
KA001-52U	DISCONNECT LEVER
KA001-57U	PISTON HEAD NUT
KA001-60A	SPRING GUIDE ASSEMBLY
KA001-68U	ANTI-REVERSE LATCH SPRING
KA001-69U	SAFETY BLOCK SPRING
KA001-70U	TRIGGER SPRING
KA001-72U	DISCONNECT SPRING
KA001-73U	SWITCH SPRING
KA001-74U	TAPPET PLATE SPRING
KA001-75U	BOLT RETURN SPRING
KA001-76U	BOLT PLATE LOCK SPRING
KA001-81U	BUTTON MICRO SCREW
KA001-82U	BOLT PLATE SCREW (4)
KA001-83U	BOLT PLATE LOCK SCREW
KA001-84U	FLAT MICRO SCREW (2)
KA001-86U	GEARBOX SHELL SCREW (LONG)(6)
KA001-87U	GEARBOX SHELL SCREW (SHORT)(4)
KA001-88U	PISTON HEAD SCREW
KA001-95U	ANTI-RELEASE LATCH BUSHING
KA002-01U	UPPER RECEIVER
KA002-02U	LOWER RECEIVER
KA002-03U	GEARBOX PIN
KA002-05U	FRONT RECEIVER PIN
KA002-06U	REAR RECEIVER PIN
KA002-10U	CASTLE NUT
KA002-17U	MAGAZINE RELEASE SPRING
KA002-20U	CHARGING HANDLE SPRING
KA002-22A	CHARGING HANDLE ASSEMBLY
KA002-24U	CRUSH WASHER O-RING
KA002-25U	OUTER BARREL BASE
KA002-27U	MAGAZINE RELEASE
KA002-28U	MAGAZINE RELEASE BUTTON

# COMPONENT LIST: ALPHA CRB

KA002-29A	TRIGGER GUARD ASSEMBLY	KA018-00U	HOP-UP CHAMBER ASSEMBLY
KA002-30U	SLING PLATE	KA018-07U	BUCKING
KA002-31A	BOLT STOP ASSEMBLY	KA018-10U	TENSION SPRING
KA002-33U	RIGHT SELECTOR	KA020-00U	REAR SIGHT ASSEMBLY
KA002-36U	BUFFER TUBE SCREW	KA021-00U	FRONT SIGHT ASSEMBLY
KA002-37U	RECEIVER PIN CAP SCREW (2)	KA025-08U	MAIN SPRING
KA002-39U	PISTOL GRIP SCREW (2)	KA025-09U	CYLINDER
KA002-43U	CHARGING HANDLE ANCHOR SCREW	KA036-02U	BUTTPAD
KA002-44U	MOTOR PLATE SCREW (2)	KA043-01U	RAIL
KA002-46U	MAGAZINE RELEASE SCREW	KA067-01U	INNER BARREL (280MM)
KA002-48U	GAS BLOCK PIN	KA067-02U	SELECTOR CAP
KA002-49U	GAS BLOCK SCREWS (2)	KA068-00U	MOTOR
KA002-51U	OUTER BARREL BASE SCREW		
KA002-53U	RIGHT SELECTOR SCREW		
KA002-54U	BUFFER TUBE		
KA002-55U	BUFFER TUBE SCREW CAP		
KA002-56U	GAS BLOCK		
KA002-58A	MOTOR PLATE ASSEMBLY		
KA002-59U	PISTOL GRIP		
KA002-60U	CRUSH WASHER		
KA005-02U	BARREL NUT		
KA005-04U	RAIL KEY		
KA005-06U	RETENSION NUT (2)		
KA005-07U	RETENSION SCREW (2)		
KA008-01U	FLASH HIDER		
KA008-02U	SET SCREW		
KA009-01U	OUTER BARREL		
KA009-02U	GAS TUBE		
KA018-00U	HOP-UP CHAMBER ASSEMBLY		
KA018-07U	BUCKING		
KA018-10U	TENSION SPRING		
KA020-00U	REAR SIGHT ASSEMBLY		
KA021-00U	FRONT SIGHT ASSEMBLY		



UNIVERSO SIMPER  
AIRSOFT



UNIVERSO SIMPER  
AIRSOFT

[www.krytac.com](http://www.krytac.com)

© Copyright 2016  
KRISS INDUSTRIES ASIA  
Subject to change

V.MLTY01 R.2016.05.31

CE